Easy UPS 3S Pro for External Batteries

10-40 kVA 400 V 3:3

Installation

Latest updates are available on the Schneider Electric website 05/2025





Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.

Access to Your Product Manuals Online

Find the UPS Manuals, Submittal Drawings, and Other Documentation for Your Specific UPS Here:

From the main menu on the UPS display, tap **Digital experience** and scan the QR code,

OR

In your web browser, type in https://www.go2se.com/ref= and the commercial reference for your product.

Example: https://www.go2se.com/ref=E3SP10KH

Find the UPS Manuals, Relevant Auxiliary Product Manuals, and Option Manuals Here:

Scan the QR code to go to the Easy UPS 3S Pro online manual portal: https://www.productinfo.schneider-electric.com/easyups3s pro iec/



Here you can find your UPS installation manual, UPS operation manual, and UPS technical specifications, and you can also find installation manuals for your auxiliary products and options.

This online manual portal is available on all devices and offers digital pages, search functionality across the different documents in the portal, and PDF download for offline use.

Learn More About the Easy UPS 3S Pro Here:

Go to https://www.se.com/ww/en/product-range/319433188 to learn more about this product.

Table of Contents

Important Safety Instructions — SAVE THESE	
INSTRUCTIONS	7
Electromagnetic Compatibility	8
Safety Precautions	8
Additional Safety Precautions After Installation	10
Electrical Safety	11
Battery Safety	12
Cybersecurity Recommendations	13
Symbols Used in the Product	14
Specifications	15
Specifications for 10 kVA UPS	15
Specifications for 15 kVA UPS	17
Specifications for 20 kVA UPS	19
Specifications for 30 kVA UPS	21
Specifications for 40 kVA UPS	23
Upstream and Downstream Protection	25
Recommended Cable Sizes	28
Load Sharing in Bypass Operation in a Parallel System	
Recommended Bolt and Lug Sizes	30
Inverter Short Circuit Capabilities (Bypass not Available)	
Leakage Current	
Torque Specifications	
Requirements for a Third Party Battery Solution	
Third Party Battery Breaker Requirements	
Environment	
Compliance	
UPS Weights and Dimensions	
Clearance	
Overview	
Overview of Single UPS	37
Overview of 1+1 Redundant Parallel System with Common Battery	
Bank	
Overview of Parallel System	39
Installation Procedure	41
Position the UPS	42
Connect the Power Cables	47
Connect the Power Cables in the 10-20 kVA UPS	
Connect the Power Cables in the 30-40 kVA UPS	54
Connect the Signal Cables	61
Connect the Signal Cables to the Input Contacts and Output Relays	
Connect the Signal Cables from Switchgear and Third-Party Auxiliary	
Products	64
Connect the Modbus Cables	
Connect the Parallel Cables in Parallel Systems	
Backfeed Protection	
Decommission or Move the UPS to a New Location	72

Important Safety Instructions — SAVE THESE INSTRUCTIONS

Read these instructions carefully and look at the equipment to become familiar with it before trying to install, operate, service or maintain it. The following safety messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a "Danger" or "Warning" safety message indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages with this symbol to avoid possible injury or death.

ADANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

Failure to follow these instructions will result in death or serious injury.

AWARNING

WARNING indicates a hazardous situation which, if not avoided, **could result** in death or serious injury.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

ACAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

Failure to follow these instructions can result in injury or equipment damage.

NOTICE

NOTICE is used to address practices not related to physical injury. The safety alert symbol shall not be used with this type of safety message.

Failure to follow these instructions can result in equipment damage.

Please Note

Electrical equipment should only be installed, operated, serviced, and maintained by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Per IEC 62040-1: "Uninterruptible power systems (UPS) -- Part 1: Safety Requirements," this equipment, including battery access, must be inspected, installed and maintained by a skilled person.

The skilled person is a person with relevant education and experience to enable him or her to perceive risks and to avoid hazards which the equipment can create (reference IEC 62040-1, section 3.102).

Electromagnetic Compatibility

NOTICE

RISK OF ELECTROMAGNETIC DISTURBANCE

This is a product category C3 product. In a residential environment, this product may cause radio inference, in which case the user may be required to take additional measures.

Failure to follow these instructions can result in equipment damage.

Safety Precautions

ADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

All safety instructions in this document must be read, understood and followed.

Failure to follow these instructions will result in death or serious injury.

ADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Read all instructions in the Installation Manual before installing or working on this UPS system.

Failure to follow these instructions will result in death or serious injury.

ADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not install the UPS system until all construction work has been completed and the installation room has been cleaned.

Failure to follow these instructions will result in death or serious injury.

ADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- The product must be installed according to the specifications and requirements as defined by Schneider Electric. It concerns in particular the external and internal protections (upstream disconnect devices, battery disconnect devices, cabling, etc.) and environmental requirements. No responsibility is assumed by Schneider Electric if these requirements are not respected.
- After the UPS system has been electrically wired, do not start up the system.
 Start-up must only be performed by Schneider Electric.

Failure to follow these instructions will result in death or serious injury.

▲ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The UPS system must be installed according to local and national regulations. Install the UPS according to:

- IEC 60364 (including 60364–4–41- protection against electric shock, 60364–4–42 protection against thermal effect, and 60364–4–43 protection against overcurrent), or
- NEC NFPA 70, or
- Canadian Electrical Code (C22.1, Part 1)

depending on which one of the standards apply in your local area.

Failure to follow these instructions will result in death or serious injury.

▲ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Install the UPS system in a temperature controlled indoor environment free of conductive contaminants and humidity.
- Install the UPS system on a non-flammable, level and solid surface (e.g. concrete) that can support the weight of the system.

Failure to follow these instructions will result in death or serious injury.

ADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The UPS is not designed for and must therefore not be installed in the following unusual operating environments:

- Damaging fumes
- Explosive mixtures of dust or gases, corrosive gases, or conductive or radiant heat from other sources
- · Moisture, abrasive dust, steam or in an excessively damp environment
- · Fungus, insects, vermin
- Salt-laden air or contaminated cooling refrigerant
- Pollution degree higher than 2 according to IEC 60664-1
- · Exposure to abnormal vibrations, shocks, and tilting
- Exposure to direct sunlight, heat sources, or strong electromagnetic fields

Failure to follow these instructions will result in death or serious injury.

ADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not drill or cut holes for cables or conduits with the gland plates installed and do not drill or cut holes in close proximity to the UPS.

Failure to follow these instructions will result in death or serious injury.

ADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not make mechanical changes to the product (including removal of cabinet parts or drilling/cutting of holes) that are not described in the Installation Manual.

Failure to follow these instructions will result in death or serious injury.

NOTICE

RISK OF OVERHEATING

Respect the space requirements around the UPS system and do not cover the product's ventilation openings when the UPS system is in operation.

Failure to follow these instructions can result in equipment damage.

NOTICE

RISK OF EQUIPMENT DAMAGE

Do not connect the UPS output to regenerative load systems including photovoltaic systems and speed drives.

Failure to follow these instructions can result in equipment damage.

Additional Safety Precautions After Installation

AADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not install the UPS system until all construction work has been completed and the installation room has been cleaned. If additional construction work is needed in the installation room after this product has been installed, turn off the product and cover the product with the protective packaging bag the product was delivered in.

Failure to follow these instructions will result in death or serious injury.

Electrical Safety

AADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Electrical equipment must be installed, operated, serviced, and maintained only by qualified personnel.
- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- Turn off all power supplying the UPS system before working on or inside the equipment.
- Before working on the UPS system, check for hazardous voltage between all terminals including the protective earth.
- The UPS contains an internal energy source. Hazardous voltage can be
 present even when disconnected from the utility/mains supply. Before
 installing or servicing the UPS system, ensure that the units are OFF and
 that utility/mains and batteries are disconnected. Wait five minutes before
 opening the UPS to allow the capacitors to discharge.
- A disconnection device (e.g. disconnection circuit breaker or switch) must be installed to enable isolation of the system from upstream power sources in accordance with local regulations. This disconnection device must be easily accessible and visible.
- The UPS must be properly earthed/grounded and due to a high touch current/leakage current, the earthing/grounding conductor must be connected first.

Failure to follow these instructions will result in death or serious injury.

ADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

In systems where backfeed protection is not part of the standard design, an automatic isolation device (backfeed protection option or other device meeting the requirements of IEC/EN 62040–1 **or** UL1778 5th Edition – depending on which of the two standards apply to your local area) must be installed to prevent hazardous voltage or energy at the input terminals of the isolation device. The device must open within 15 seconds after the upstream power supply fails and must be rated according to the specifications.

Failure to follow these instructions will result in death or serious injury.

When the UPS input is connected through external isolators that, when opened, isolate the neutral or when the automatic backfeed isolation is provided external to the equipment or is connected to an IT power distribution system, a label must be fitted at the UPS input terminals, and on all primary power isolators installed remote from the UPS area and on external access points between such isolators and the UPS, by the user, displaying the following text (or equivalent in a language which is acceptable in the country in which the UPS system is installed):

ADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Risk of Voltage Backfeed. Before working on this circuit: Isolate the UPS and check for hazardous voltage between all terminals including the protective earth.

Failure to follow these instructions will result in death or serious injury.

ADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Always perform correct Lockout/Tagout before working on the UPS.
- A UPS with autostart enabled will automatically restart when the mains supply returns.
- If autostart is enabled on the UPS, a label must be added on the UPS to warn about this functionality.

Failure to follow these instructions will result in death or serious injury.

Add the label below on the UPS if autostart has been enabled:

ADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Autostart is enabled. The UPS will automatically restart when the mains supply returns.

Failure to follow these instructions will result in death or serious injury.

▲ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

This product can cause a DC current in the PE conductor. Where a residual current-operated protective device (RCD) is used for protection against electrical shock, only an RCD of Type B is allowed on the supply side of this product.

Failure to follow these instructions will result in death or serious injury.

Battery Safety

AA DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery disconnect devices must be installed according to the specifications and requirements as defined by Schneider Electric.
- Servicing of batteries must only be performed or supervised by qualified personnel knowledgeable of batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect charging source prior to connecting or disconnecting battery terminals.
- Do not dispose of batteries in a fire as they can explode.
- Do not open, alter, or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.

Failure to follow these instructions will result in death or serious injury.

AADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Batteries can present a risk of electric shock and high short-circuit current. The following precautions must be observed when working on batteries

- Remove watches, rings, or other metal objects.
- Use tools with insulated handles.
- Wear protective glasses, gloves and boots.
- Do not lay tools or metal parts on top of batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.
- Determine if the battery is inadvertently grounded. If inadvertently grounded, remove source from ground. Contact with any part of a grounded battery can result in electric shock. The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance (applicable to equipment and remote battery supplies not having a grounded supply circuit).

Failure to follow these instructions will result in death or serious injury.

AADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

When replacing batteries, always replace with the same type and number of batteries or battery packs.

Failure to follow these instructions will result in death or serious injury.

ACAUTION

RISK OF EQUIPMENT DAMAGE

- Mount the batteries in the UPS system, but do not connect the batteries until
 the UPS system is ready to be powered up. The time duration from battery
 connection until the UPS system is powered up must not exceed 72 hours or
 3 days.
- Batteries must not be stored more than six months due to the requirement of recharging. If the UPS system remains de-energized for a long period, we recommend that you energize the UPS system for a period of 24 hours at least once every month. This charges the batteries, thus avoiding irreversible damage.

Failure to follow these instructions can result in injury or equipment damage.

NOTE: Always follow the documentation from the battery manufacturer concerning battery storage, battery installation, and battery maintenance.

Cybersecurity Recommendations

- Install the UPS in a location with restricted access.
- Only authorize access to the UPS to maintenance and service personnel.
- Mark the restricted areas with "For authorized personnel only".
- Record the access to restricted areas with either a physical or an electronic audit trail.

Symbols Used in the Product

<u></u>	This is the earthing/ground symbol.
	This is the protective earth/equipment grounding conductor symbol.
	This is the direct current symbol. It is also referred to as DC.
\sim	This is the alternating current symbol. It is also referred to as AC.
+	This is the positive polarity symbol. It is used to identify the positive terminal(s) of equipment which is used with, or generates direct current.
_	This is the negative polarity symbol. It is used to identify the negative terminal(s) of equipment which is used with, or generates direct current.
	This is the battery symbol.
	This is the static switch symbol. It is used to indicate switches that are designed to connect or disconnect the load to or from the supply respectively without the existence of moving parts.
	This is the AC/DC converter (rectifier) symbol. It is used to identify an AC/DC converter (rectifier) and, in case of plug-in devices, to identify the relevant receptacles.
	This is the DC/AC converter (inverter) symbol. It is used to identify an DC/AC converter (inverter) and, in case of plug-in devices, to identify the relevant receptacles.

Specifications

Specifications for 10 kVA UPS

	Voltage (V)	380	400	415	
	Connections	4-wire (L1, L2, L3, N	, PE) ¹		
	Input voltage range (V)	304-477	320-477	332-477	
	Frequency range (Hz)	40-70			
	Nominal input current (A)	16	16	15	
	Maximum input current (A)	21	20	19	
Input	Input current limitation (A)	21	20	19	
dul	Minimum short circuit rating	Dependent on upstream protection. See Upstream and Downstream Protection, page 25 for details.			
	Maximum short circuit rating	16 kA			
	Total harmonic distortion (THDI)	<3% at full linear load ≤ 4% (full non-linear load)			
	Input power factor	0.99 at load > 75%			
	Protection	Fuse			
	Connections	4-wire (L1, L2, L3, N	, PE) ¹		
	Bypass voltage range (V)	342-418	360-440	373-457	
	Frequency (Hz)	50 or 60			
SS	Frequency range (Hz)	Selectable, ±1, ±3, ±5			
Bypass	Nominal bypass current (A)	16	15	15	
	Minimum short circuit rating	Dependent on upstream protection. See Upstream and Downstream Protection, page 25 for details.			
	Maximum short circuit rating	16 kA			
	Backfeed protection	Dry contact (with 24 VDC source)			

^{1.} Note: Refer to the earthing diagrams for your specific earthing system requirements concerning the N connection.

10-40 kVA 400 V 3:3 Specifications

	Voltage (V)	380	400	415
	Connections ²	4-wire (L1, L2, L3, N,	PE) ³	
	Output voltage regulation	Symmetrical load ± 1 Asymmetrical load ±	% 3%	
	Overload capacity	Normal operation: 110% for 60 minutes, 125% for 10 minutes 150% for 1 minute Battery operation: 110% for 60 minutes, 125% for 10 minutes, 150% for 1 minute Bypass operation: 150% for 1 minute, 125% for 10 minutes, 110% continuous		
	Output power factor	1		
	Nominal output current (A)	16	15	14
	Maximum short circuit rating	16 kA		
Output	Inverter output short circuit capabilities	Varies with time. See graph and table values in Inverter Short Circuit Capabilities (Bypass not Available), page 31		
	Output short circuit current (inverter) (A) ⁴	34		
	Output frequency (Hz)	50/60 Hz bypass synchronized; 50/60 Hz ±0.1% free running		
	Synchronized slew rate (Hz/sec)	Programmable: 0.5, 1.0, 1.5, or 2.0. Default is 2.0.		
	Total harmonic distortion (THDU)	<1% for 100% balanced linear load <5% for non-linear load		
	Output voltage compensation	± 10 V		
	Output performance classification (according to IEC/ EN62040-3)	VFI SS 11		
	Load crest factor	Maximum crest facto	r 3:1	
	Load power factor	From 0.7 leading to 0.7 lagging without any derating		
	Charging power in % of output power	Programmable from 1% to 20% of UPS capacity. Default is 10%.		
	Maximum charging power (kW) (at 100% load)	2		
	Maximum charging power (kW) (at 0% load)	2		
	Number of battery blocks	32-40 blocks		
	Nominal battery voltage (VDC)	384-480		
	Nominal float voltage (VDC)	436-545		
	Maximum boost voltage (VDC)	457-572		
Battery	Maximum charge current (A)	3.7		
Ba	Temperature compensation (per cell) at temperature over 25 °C	Programmable from	0-5 mV. Default is 0 m\	<i>J</i> .
	End of discharge voltage (full load) (VDC)	308-384		
	End of discharge voltage (no load) (VDC)	336-420		
	Battery current at full load and nominal battery voltage (A)	27-22		
	Battery current at full load and minimum battery voltage (A)	34-27		
	Ripple current	< 5% C10		
	Battery test	Manual/automatic (se	electable)	
	Maximum short circuit rating	16 kA		

NOTE: Battery specifications are based on VRLA batteries.

The number of output connections must match the number of input connections in a single mains system. The number of output connections must match the number of bypass connections in a dual mains system.

Note: Refer to the earthing diagrams for your specific earthing system requirements concerning the N connection.

The output short circuit current (inverter) is based on IK1 at 10 ms. 2.

Specifications for 15 kVA UPS

	Voltage (V)	380	400	415		
	Connections	4-wire (L1, L2, L	_3, N, PE) ⁵	1		
	Input voltage range (V)	304-477	320-477	332-477		
	Frequency range (Hz)	40-70	40-70			
	Nominal input current (A)	24	23	22		
	Maximum input current (A)	31	29	28		
Input	Input current limitation (A)	31	29	28		
dul	Minimum short circuit rating		Dependent on upstream protection. See Upstream and Downstream Protection, page 25 for details.			
	Maximum short circuit rating	16 kA	16 kA			
	Total harmonic distortion (THDI)		<3% at full linear load ≤ 4% (full non-linear load)			
	Input power factor	0.99 at load > 7	0.99 at load > 75%			
	Protection	Fuse	Fuse			
	Connections	4-wire (L1, L2, L	_3, N, PE) ⁵			
	Bypass voltage range (V)	342-418	360-440	373-457		
	Frequency (Hz)	50 or 60				
SS	Frequency range (Hz)	Selectable, ±1,	Selectable, ±1, ±3, ±5			
Bypass	Nominal bypass current (A)	24	22	22		
ш	Minimum short circuit rating	Dependent on u Downstream Pr	Dependent on upstream protection. See Upstream and Downstream Protection, page 25 for details.			
	Maximum short circuit rating	16 kA				
	Backfeed protection	Dry contact (wit	h 24 VDC source)			

^{5.} Note: Refer to the earthing diagrams for your specific earthing system requirements concerning the N connection.

10-40 kVA 400 V 3:3 Specifications

	Voltage (V)	380	400	415
	Connections ⁶	4-wire (L1, L2, L3, N,	PE) ⁷	
	Output voltage regulation	Symmetrical load ± 1 Asymmetrical load ±	% 3%	
	Overload capacity	Normal operation: 110% for 60 minutes, 125% for 10 minutes, 150% for 1 minute Battery operation: 110% for 60 minutes, 125% for 10 minutes, 150% for 1 minute Bypass operation: 150% for 1 minute, 125% for 10 minutes, 110% continuous		
	Output power factor	1		
	Nominal output current (A)	23	22	21
	Maximum short circuit rating	16 kA		
Output	Inverter output short circuit capabilities		graph and table value Bypass not Available),	
	Output short circuit current (inverter) (A) ⁸	52		
	Output frequency (Hz)	50/60 Hz bypass synchronized; 50/60 Hz ±0.1% free running		
	Synchronized slew rate (Hz/sec)	Programmable: 0.5, 1.0, 1.5, or 2.0. Default is 2.0.		
	Total harmonic distortion (THDU)	<1% for 100% baland <5% for non-linear lo		
	Output voltage compensation	± 10 V		
	Output performance classification (according to IEC/ EN62040-3)	VFI SS 11		
	Load crest factor	Maximum crest facto	r 3:1	
	Load power factor	From 0.7 leading to 0.7 lagging without any derating		
	Charging power in % of output power	Programmable from	1% to 20% of UPS cap	acity. Default is 10%.
	Maximum charging power (kW) (at 100% load)	3		
	Maximum charging power (kW) (at 0% load)	3		
	Number of battery blocks	32-40 blocks		
	Nominal battery voltage (VDC)	384-480		
	Nominal float voltage (VDC)	436-545		
	Maximum boost voltage (VDC)	457-572		
ery	Maximum charge current (A)	5.5		
Battery	Temperature compensation (per cell) at temperature over 25 $^{\circ}$ C	Programmable from	0-5 mV. Default is 0 m\	<i>I.</i>
	End of discharge voltage (full load) (VDC)	308-384		
	End of discharge voltage (no load) (VDC)	336-420		
	Battery current at full load and nominal battery voltage (A)	41-33		
	Battery current at full load and minimum battery voltage (A)	51-41		
	Ripple current	< 5% C10		
	Battery test	Manual/automatic (se	electable)	
	Maximum short circuit rating	16 kA		

NOTE: Battery specifications are based on VRLA batteries.

The number of output connections must match the number of input connections in a single mains system. The number of output connections must match the number of bypass connections in a dual mains system.

Note: Refer to the earthing diagrams for your specific earthing system requirements concerning the N connection.

The output short circuit current (inverter) is based on IK1 at 10 ms. 6.

Specifications for 20 kVA UPS

	Voltage (V)	380	400	415		
	Connections	4-wire (L1, L2, L	-3, N, PE) ⁹			
	Input voltage range (V)	304-477	320-477	332-477		
	Frequency range (Hz)	40-70	40-70			
	Nominal input current (A)	32	31	29		
	Maximum input current (A)	41	39	38		
Input	Input current limitation (A)	41	39	38		
dul	Minimum short circuit rating		Dependent on upstream protection. See Upstream and Downstream Protection, page 25 for details.			
	Maximum short circuit rating	16 kA	16 kA			
	Total harmonic distortion (THDI)		<3% at full linear load ≤ 4% (full non-linear load)			
	Input power factor	0.99 at load > 7	0.99 at load > 75%			
	Protection	Fuse	Fuse			
	Connections	4-wire (L1, L2, L	_3, N, PE) ⁹			
	Bypass voltage range (V)	342-418	360-440	373-457		
	Frequency (Hz)	50 or 60				
SS	Frequency range (Hz)	Selectable, ±1,	Selectable, ±1, ±3, ±5			
Bypass	Nominal bypass current (A)	31	30	29		
ш	Minimum short circuit rating	Dependent on u Downstream Pr	Dependent on upstream protection. See Upstream and Downstream Protection, page 25 for details.			
	Maximum short circuit rating	16 kA				
	Backfeed protection	Dry contact (wit	Dry contact (with 24 VDC source)			

^{9.} Note: Refer to the earthing diagrams for your specific earthing system requirements concerning the N connection.

10-40 kVA 400 V 3:3 Specifications

	Voltage (V)	380	400	415
	Connections ¹⁰	4-wire (L1, L2, L3, N,	PE) ¹¹	
	Output voltage regulation	Symmetrical load ± 1 Asymmetrical load ±		
	Overload capacity	Normal operation: 110% for 60 minutes, 125% for 10 minutes, 150% for 1 minute Battery operation: 110% for 60 minutes, 125% for 10 minutes, 150% for 1 minute Bypass operation: 150% for 1 minute, 125% for 10 minutes, 110% continuous		
	Output power factor	1		
	Nominal output current (A)	31	29	28
	Maximum short circuit rating	16 kA		
Output	Inverter output short circuit capabilities		graph and table value Bypass not Available),	
	Output short circuit current (inverter) (A) ¹²	74		
	Output frequency (Hz)	50/60 Hz bypass synchronized; 50/60 Hz ±0.1% free running		
	Synchronized slew rate (Hz/sec)	Programmable: 0.5, 1.0, 1.5, or 2.0. Default is 2.0.		
	Total harmonic distortion (THDU)	<1% for 100% balanced linear load <5% for non-linear load		
	Output voltage compensation	± 10 V		
	Output performance classification (according to IEC/ EN62040-3)	VFI SS 11		
	Load crest factor	Maximum crest facto	r 3:1	
	Load power factor	From 0.7 leading to 0	.7 lagging without any	derating
	Charging power in % of output power	Programmable from	1% to 20% of UPS cap	acity. Default is 10%.
	Maximum charging power (kW) (at 100% load)	4		
	Maximum charging power (kW) (at 0% load)	4		
	Number of battery blocks	32-40 blocks		
	Nominal battery voltage (VDC)	384-480		
	Nominal float voltage (VDC)	436-545		
	Maximum boost voltage (VDC)	457-572		
ery S	Maximum charge current (A)	7.4		
Battery	Temperature compensation (per cell) at temperature over 25 $^\circ$ C	Programmable from	0-5 mV. Default is 0 m\	<i>I</i> .
	End of discharge voltage (full load) (VDC)	308-384		
	End of discharge voltage (no load) (VDC)	336-420		
	Battery current at full load and nominal battery voltage (A)	55-44		
	Battery current at full load and minimum battery voltage (A)	68-55		
	Ripple current	< 5% C10		
	Battery test	Manual/automatic (se	electable)	
	Maximum short circuit rating	16 kA		

NOTE: Battery specifications are based on VRLA batteries.

The number of output connections must match the number of input connections in a single mains system. The number of output connections must match the number of bypass connections in a dual mains system.
 Note: Refer to the earthing diagrams for your specific earthing system requirements concerning the N connection.
 The output short circuit current (inverter) is based on IK1 at 10 ms.

Specifications for 30 kVA UPS

	Voltage (V)	380	400	415		
	Connections	4-wire (L1, L2, I	_3, N, PE) ¹³			
	Input voltage range (V)	304-477	320-477	332-477		
	Frequency range (Hz)	40-70	40-70			
	Nominal input current (A)	48	46	44		
	Maximum input current (A)	60	57	55		
Input	Input current limitation (A)	60	57	55		
<u>ri</u>	Minimum short circuit rating		Dependent on upstream protection. See Upstream and Downstream Protection, page 25 for details.			
	Maximum short circuit rating	16 kA	16 kA			
	Total harmonic distortion (THDI)		<3% at full linear load ≤ 4% (full non-linear load)			
	Input power factor	0.99 at load > 7	0.99 at load > 75%			
	Protection	Fuse	Fuse			
	Connections	4-wire (L1, L2, I	_3, N, PE) ¹³			
	Bypass voltage range (V)	342-418	360-440	373-457		
	Frequency (Hz)	50 or 60				
SS	Frequency range (Hz)	Selectable, ±1,	Selectable, ±1, ±3, ±5			
Bypass	Nominal bypass current (A)	47	44	43		
ш	Minimum short circuit rating	Dependent on u Downstream Pr	Dependent on upstream protection. See Upstream and Downstream Protection, page 25 for details.			
	Maximum short circuit rating	16 kA				
	Backfeed protection	Dry contact (wit	h 24 VDC source)			

^{13.} Note: Refer to the earthing diagrams for your specific earthing system requirements concerning the N connection.

10-40 kVA 400 V 3:3 Specifications

	Voltage (V)	380	400	415
	Connections ¹⁴	4-wire (L1, L2, L3, N,	PE) ¹⁵	
	Output voltage regulation	Symmetrical load ± 1 Asymmetrical load ±		
	Overload capacity	Normal operation: 110% for 60 minutes, 125% for 10 minutes, 150% for 1 minute Battery operation: 110% for 60 minutes, 125% for 10 minutes, 150% for 1 minute Bypass operation: 150% for 1 minute, 125% for 10 minutes, 110% continuous		
	Output power factor	1		
	Nominal output current (A)	46	44	42
	Maximum short circuit rating	16 kA		
Output	Inverter output short circuit capabilities		graph and table value Bypass not Available),	
	Output short circuit current (inverter) (A) ¹⁶	104		
	Output frequency (Hz)	50/60 Hz bypass synchronized; 50/60 Hz ±0.1% free running		
	Synchronized slew rate (Hz/sec)	Programmable: 0.5, 1.0, 1.5, or 2.0. Default is 2.0.		
	Total harmonic distortion (THDU)	<1% for 100% balanced linear load <5% for non-linear load		
	Output voltage compensation	± 10 V		
	Output performance classification (according to IEC/ EN62040-3)	VFI SS 11		
	Load crest factor	Maximum crest facto	r 3:1	
	Load power factor	From 0.7 leading to 0	.7 lagging without any	derating
	Charging power in % of output power	Programmable from	1% to 20% of UPS cap	acity. Default is 10%.
	Maximum charging power (kW) (at 100% load)	6		
	Maximum charging power (kW) (at 0% load)	6		
	Number of battery blocks	32-40 blocks		
	Nominal battery voltage (VDC)	384-480		
	Nominal float voltage (VDC)	436-545		
	Maximum boost voltage (VDC)	Programmable from	0-5 mV. Default is 0 m\	<i>I</i> .
ery.	Maximum charge current (A)	11.1		
Battery	Temperature compensation (per cell) at temperature over 25 $^\circ$ C	Programmable from	0-5 mV. Default is 0 m\	<i>I</i> .
	End of discharge voltage (full load) (VDC)	308-384		
	End of discharge voltage (no load) (VDC)	336-420		
	Battery current at full load and nominal battery voltage (A)	82-65		
	Battery current at full load and minimum battery voltage (A)	102-82		
	Ripple current	< 5% C10		
	Battery test	Manual/automatic (se	electable)	
	Maximum short circuit rating	16 kA		

NOTE: Battery specifications are based on VRLA batteries.

The number of output connections must match the number of input connections in a single mains system. The number of output connections must match the number of bypass connections in a dual mains system.
 Note: Refer to the earthing diagrams for your specific earthing system requirements concerning the N connection.
 The output short circuit current (inverter) is based on IK1 at 10 ms.

Specifications for 40 kVA UPS

	Voltage (V)	380	400	415					
	Connections	4-wire (L1, L2, L	-3, N, PE) ¹⁷	1					
	Input voltage range (V)	304-477	320-477	332-477					
	Frequency range (Hz)	40-70							
	Nominal input current (A)	64	61	58					
	Maximum input current (A)	81	77	74					
Input	Input current limitation (A)	81	77	74					
du	Minimum short circuit rating		ipstream protection. S otection, page 25 for c						
	Maximum short circuit rating	16 kA							
	Total harmonic distortion (THDI)		<3% at full linear load ≤ 4% (full non-linear load)						
	Input power factor	0.99 at load > 7	0.99 at load > 75%						
	Protection	Fuse	Fuse						
	Connections	4-wire (L1, L2, I	_3, N, PE) ¹⁷						
	Bypass voltage range (V)	342-418	360-440	373-457					
	Frequency (Hz)	50 or 60							
SS	Frequency range (Hz)	Selectable, ±1,	±3, ±5						
Bypass	Nominal bypass current (A)	62	59	57					
_	Minimum short circuit rating	Dependent on u Downstream Pr	ipstream protection. S otection, page 25 for c	ee Upstream and details.					
	Maximum short circuit rating	16 kA	16 kA						
	Backfeed protection	Dry contact (wit	h 24 VDC source)						

^{17.} Note: Refer to the earthing diagrams for your specific earthing system requirements concerning the N connection.

10-40 kVA 400 V 3:3 Specifications

	Voltage (V)	380	400	415			
	Connections ¹⁸	4-wire (L1, L2, L3, N,	PE) ¹⁹				
	Output voltage regulation	Symmetrical load ± 1 Asymmetrical load ±					
	Overload capacity	Normal operation: 110% for 60 minutes, 125% for 10 minutes, 150% for 1 minute Battery operation: 110% for 60 minutes, 125% for 10 minutes, 150% for 1 minute Bypass operation: 150% for 1 minute, 125% for 10 minutes, 110% continuous					
	Output power factor	1					
	Nominal output current (A)	61	58	56			
	Maximum short circuit rating	16 kA					
Output	Inverter output short circuit capabilities		graph and table value Bypass not Available),				
	Output short circuit current (inverter) (A) ²⁰	140					
	Output frequency (Hz)	50/60 Hz bypass syn	chronized; 50/60 Hz ±0	0.1% free running			
	Synchronized slew rate (Hz/sec)	Programmable: 0.5,	1.0, 1.5, or 2.0. Default	is 2.0.			
	Total harmonic distortion (THDU)	<1% for 100% baland <5% for non-linear lo					
	Output voltage compensation	± 10 V					
	Output performance classification (according to IEC/ EN62040-3)	VFI SS 11					
	Load crest factor	Maximum crest facto	r 3:1				
	Load power factor	From 0.7 leading to 0	.7 lagging without any	derating			
	Charging power in % of output power	Programmable from	1% to 20% of UPS cap	acity. Default is 10%.			
	Maximum charging power (kW) (at 100% load)	8					
	Maximum charging power (kW) (at 0% load)	8					
	Number of battery blocks	32-40 blocks					
	Nominal battery voltage (VDC)	384-480					
	Nominal float voltage (VDC)	436-545					
	Maximum boost voltage (VDC)	457-572					
ery .	Maximum charge current (A)	14.8					
Battery	Temperature compensation (per cell) at temperature over 25 $^\circ$ C	Programmable from	0-5 mV. Default is 0 m\	<i>I.</i>			
	End of discharge voltage (full load) (VDC)	308-384					
	End of discharge voltage (no load) (VDC)	336-420					
	Battery current at full load and nominal battery voltage (A)	109-87					
	Battery current at full load and minimum battery voltage (A)	136-109					
	Ripple current	< 5% C10					
	Battery test	Manual/automatic (se	electable)				
	Maximum short circuit rating	16 kA					

NOTE: Battery specifications are based on VRLA batteries.

The number of output connections must match the number of input connections in a single mains system. The number of output connections must match the number of bypass connections in a dual mains system.
 Note: Refer to the earthing diagrams for your specific earthing system requirements concerning the N connection.
 The output short circuit current (inverter) is based on IK1 at 10 ms.

Upstream and Downstream Protection

NOTE: For local directives which require 4-pole circuit breakers: If neutral conductor is expected to carry a high current, due to line-neutral non-linear load, the circuit breaker must be rated according to expected neutral current.

NOTE: For local directives which require 4-pole circuit breakers: Refer to the earthing diagrams for details about neutral connection.

The bypass/output breakers are sized based on the nominal current +10%. This is to accommodate either low grid voltage or deviation in length between parallel UPSs. The battery breakers are sized based on end-of-discharge voltage which has been defined as 308 VDC.

Required Upstream Protection for 380/400/415 V (IEC) and Minimum Prospective Phase-To-Earth Short Circuit at the UPS Input/Bypass Terminals

AADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The upstream overcurrent protective device (and its settings) must be sized to ensure a disconnecting time within 0.07 seconds in case of a short circuit between the input/bypass phase and the UPS.

Failure to follow these instructions will result in death or serious injury.

Compliance is assured with the recommended breaker (and its settings) from the table below.

Required 3-Pole Upstream Protection

NOTE: Ir must be set on the breakers during start-up.

UPS rating	10 kVA									
	Input			Bypass/Ou	tput		Battery			
Voltage (V)	380	400	415	380	400	415	380-415			
Breaker type	NSX100B TM25D 3P3D, C10B3TM025		NSX100B TM25D 3P3D, C10B3TM025			ComPacT NSX100F DC 3P3D+TM40G, C10F3D+C103MG040				
In	25	25	25	25	25	25	40			
Ir	0.8 x ln	0.8 x ln	0.8 x In	0.7 x ln	0.7 x ln	0.7 x ln	0.9 x In			
lm	300	300	300	300	300	300	100			

UPS rating	15 kVA	5 kVA									
	Input			Bypass/Out	tput		Battery				
Voltage (V)	380 400 415			380	400	415	380-415				
Breaker type	NSX100B NSX TM32D 3P3D, C10B3TM032		NSX100B TM32D 3P3D, C10B3TM032			ComPacT NSX100F DC 3P3D+TM63G, C10F3D+C103MG063					
In	32	32	32	32	32	32	63				
Ir	In	In	In	0.9 x In	0.8 x ln	0.8 x ln	0.8 x In				
lm	400	400	400	400	400	400	150				

10-40 kVA 400 V 3:3 Specifications

UPS rating	20 kVA	20 kVA									
	Input			Bypass/Ou	tput		Battery				
Voltage (V)	380	400	415	380	400	415	380-415				
Breaker type	NSX100B TM40D 3P3D, C10B3TM040		NSX100B TM40D 3P3D, C10B3TM040			ComPacT NSX100F DC 3P3D+TM80G, C10F3D+C103MG080					
In	40	40	40	40	40	40	80				
Ir	In	In	In	0.9 x ln	0.9 x ln	0.8 x ln	0.9 x ln				
lm	500	500	500	500	500	500	250				

UPS rating	30 kVA	30 kVA									
	Input			Bypass/Out	tput		Battery				
Voltage (V)	380 400 415			380	400	415	380-415				
Breaker type	NSX100B TM63D 3P3D, C10B3TM063		NSX100B TM63D 3P3D, C10B3TM063			ComPacT NSX160F DC 3P3D+TM125G, C16F3D+C163MG125D					
In	63	63	63	63	63	63	125				
Ir	In	In	In	0.9 x In	0.8 x In	0.8 x ln	0.8 x ln				
lm	500	500	500	500	500	500	530				

UPS rating	40 kVA	0 kVA									
	Input			Bypass/Output			Battery				
Voltage (V)	380 400 415			380	400	415	380-415				
Breaker type	NSX100B TM63D 3P3D, C10B3TM080		NSX100B TM63D 3P3D, C10B3TM080			ComPacT NSX160F DC 3P3D+TM160G, C16F3D+C163MG160D					
In	80	80	80	80	80	80	160				
Ir	In	In	In	0.9 x In	0.9 x ln	0.8 x In	0.9 x In				
Im	640	640	640	640	640	640	530				

Required 4-Pole Upstream Protection

NOTE: Ir must be set on the breakers during start-up.

UPS rating	10 kVA									
	Input			Bypass/Ou	tput		Battery			
Voltage (V)	e (V) 380 400 415		380	400	415	380-415				
Breaker type	NSX100B TM25D 4P3D, C10B6TM025		NSX100B TM25D 4P3D, C10B6TM025			ComPacT NSX100F DC 3P3D+TM40G, C10F3D+C103MG040				
In	25	25	25	25	25	25	40			
Ir	0.8 x ln	0.8 x In	0.8 x In	0.7 x ln	0.7 x ln	0.7 x ln	0.9 x In			
lm	300	300	300	300	300	300	100			

UPS rating	15 kVA	15 kVA									
	Input			Bypass/Ou	tput		Battery				
Voltage (V)	380 400 415			380	400	415	380-415				
Breaker type	NSX100B TM40D 4P3D, C10B6TM040			NSX100B TM40D 4P3D, C10B6TM040			ComPacT NSX100F DC 3P3D+TM63G, C10F3D+C103MG063				
In	40	40	40	40	40	40	63				
Ir	0.8 x ln	0.8 x ln	0.8 x ln	0.7 x In	0.7 x ln	0.7 x ln	0.8 x ln				
lm	500	500	500	500	500	500	150				

UPS rating	20 kVA	20 kVA									
	Input			Bypass/Ou	itput		Battery				
Voltage (V)	age (V) 380 400 415		380	400	415	380-415					
Breaker type	NSX100B TM63D 4P3D, C10B6TM063		NSX100B TM63D 4P3D, C10B6TM063			ComPacT NSX100F DC 3P3D+TM80G, C10F3D+C103MG080					
In	63	63	63	63	63	63	80				
Ir	0.7 x ln	0.7 x ln	0.7 x ln	0.7 x ln	0.7 x ln	0.7 x ln	0.9 x ln				
lm	500	500	500	500	500	500	250				

UPS rating	30 kVA	30 kVA									
	Input			Bypass/Out	tput		Battery				
Voltage (V)	380 400 415			380	400	415	380-415				
Breaker type	NSX100B TM80D 4P3D, C10B6TM080		NSX100B TM80D 4P3D, C10B6TM080			ComPacT NSX160F DC 3P3D+TM125G, C16F3D+C163MG125D					
In	80	80	80	80	80	80	125				
Ir	0.8 x ln	0.8 x In	0.8 x ln	0.7 x ln	0.7 x ln	0.7 x ln	0.8 x ln				
lm	640	640	640	640	640	640	530				

UPS rating	40 kVA	0 kVA									
	Input			Bypass/Out	put		Battery				
Voltage (V)	380 400 415			380	400	415	380-415				
Breaker type	NSX100B TM100D 4P3D, C10B6TM100		NSX100B TM100D 4P3D, C10B6TM100			ComPacT NSX160F DC 3P3D+TM160G, C16F3D+C163MG160D					
In	100	100	100	100	100	100	160				
Ir	0.8 x ln	0.8 x ln	0.8 x ln	0.7 x ln	0.7 x ln	0.7 x ln	0.9 x ln				
lm	800	800	800	800	800	800	530				

Recommended Downstream Protection for 380/400/415 V (IEC)

UPS rating	Breaker type
10 kVA	IC65N-4P-C 4A / IC65H-4P-C 4A
15 kVA	IC65N-4P-C 4A / IC65H-4P-C 4A
20 kVA	IC65N-4P-C 6A / IC65H-4P-C 6A
30 kVA	IC65N-4P-C 6A / IC65H-4P-C 6A
40 kVA	IC65N-4P-C 10A / IC65H-4P-C 10A

10-40 kVA 400 V 3:3 Specifications

Recommended Cable Sizes

AADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- All wiring must comply with all applicable national and/or electrical codes.
- The maximum allowable cable size is 6 mm² (10 -15 kVA UPS), 16 mm² (20 kVA UPS), 25 mm² (30 kVA UPS), or 35 mm² (40 kVA UPS).
- Shrink sleeves must be fitted over the cable lug crimped zone and must overlap with the cable insulation on all power cables.

Failure to follow these instructions will result in death or serious injury.

NOTE: Overcurrent protection is to be provided by others.

Cable sizes in this manual are based on the minimum requirements in table B.52.3 and table B.52.5 of IEC 60364-5-52 with the following assertions:

- · 90 °C conductors
- An ambient temperature of 30 °C
- Use of copper conductors
- PE cable size is based on table 54.2 of IEC 60364-5-54
- Installation method C
- Specific to AC cables: Maximum length 70 m with a line voltage drop <3% installed on perforated cable trays, XLPE-type insulation, single layer trefoil formation, THDI between 15% and 33%.
- Specific to DC cables: Maximum length 15 m with a line voltage drop <1%

NOTE: If the ambient temperature is greater than 30 °C, larger conductors are to be selected in accordance with the correction factors of the IEC.

NOTE: Recommended cable sizes and maximum allowable cable size may vary for the auxiliary products. Refer to the installation manual provided with the auxiliary product.

NOTE: The DC cable sizes given here are recommendations – Always follow the specific instructions in the battery solution documentation for DC cable sizes and DC PE cable sizes and ensure that the DC cable sizes match the battery disconnect device rating.

Copper

UPS rating	10 kVA			15 kVA			20 kVA		
Voltage (V)	380	400	415	380	400	415	380	400	415
Input phases (mm²)	6	6	6	6	6	6	10	10	10
Input PE (mm²)	6	6	6	6	6	6	10	10	10
Bypass/output phases (mm²)	6	6	6	6	6	6	10	10	10
Bypass PE/output PE (mm²)	6	6	6	6	6	6	10	10	10
Neutral (mm²)	6	6	6	6	6	6	16	16	16
DC+/DC-/DCN (mm ²)	6	6	6	6	6	6	16	16	16
DC PE (mm ²)	6	6	6	6	6	6	16	16	16

Copper

UPS rating	30 kVA	30 kVA			40 kVA		
Voltage (V)	380	400	415	380	400	415	
Input phases (mm²)	16	16	16	25	25	25	
Input PE (mm²)	16	16	16	16	16	16	
Bypass/output phases (mm²)	16	16	16	25	25	25	
Bypass PE/output PE (mm²)	16	16	16	16	16	16	
Neutral (mm²)	25	25	25	35	35	35	
DC+/DC-/DCN (mm ²)	25	25	25	35	35	35	
DC PE (mm ²)	16	16	16	16	16	16	

Load Sharing in Bypass Operation in a Parallel System

NOTICE

RISK OF EQUIPMENT DAMAGE

To ensure correct load sharing in bypass operation in a parallel system, the following recommendations apply:

- The bypass cables must be the same length for all UPSs.
- · The output cables must be the same length for all UPSs.
- The input cables must be the same length for all UPSs in a single mains system.
- · Cable formation recommendations must be followed.
- The reactance of busbar layout in the bypass/input and output switchgear must be the same for all UPSs.

If the above recommendations are not followed the result can be uneven load sharing in bypass and overload of individual UPSs.

Failure to follow these instructions can result in equipment damage.

The impedance of the bypass paths needs to be controlled in a parallel UPS system. When operating in bypass mode, the parallel load sharing is determined by the total impedance of the bypass path comprising cables, switchgear, static bypass switch, and cable formation.

10-40 kVA 400 V 3:3 Specifications

Recommended Bolt and Lug Sizes

Cable size mm ²	Bolt size	Cable lug type
6	M6	KST TLK6-6
8	M6	KST RNBS8-6
10	M6	KST TLK10-6
16	M6	KST TLK16-6
25	M6	KST DRNB6-25
35	M6	KST TLK35-6

Inverter Short Circuit Capabilities (Bypass not Available)

IK1 - Short Circuit between a Phase and Neutral

IK1 400 V

S [kVA]	10 ms	10 ms		20 ms		30 ms	
	I[A]	I²t [A²s]	I[A]	I²t [A²s]	I[A]	I2t [A2s]	
10	34	12	34	23	34	35	
15	52	27	52	54	52	81	
20	74	55	74	110	74	164	
30	104	108	104	216	104	324	
40	140	196	140	392	140	588	

IK1 400 V

S [kVA]	50 ms	50 ms		100 ms		200 ms	
	I[A]	I2t [A2s]	I[A]	I ² t [A ² s]	I[A]	I²t [A²s]	
10	34	58	34	116	34	231	
15	52	135	52	270	52	541	
20	74	274	74	548	74	1095	
30	104	541	104	1082	104	2163	
40	140	980	140	1960	140	3920	

IK2 - Short Circuit between Two Phases

IK2 400 V

S [kVA]	10 ms	10 ms		20 ms		30 ms	
	I[A]	I²t [A²s]	I[A]	I²t [A²s]	I[A]	I2t [A2s]	
10	33	11	33	22	33	33	
15	49	24	49	48	49	72	
20	70	49	70	98	70	147	
30	101	102	101	204	101	306	
40	138	190	138	381	138	571	

IK2 400 V

S [kVA]	50 ms	50 ms		100 ms		200 ms	
	I[A]	l²t [A²s]	I[A]	l²t [A²s]	I[A]	I2t [A2s]	
10	33	54	33	109	33	218	
15	49	120	49	240	49	480	
20	70	245	70	490	70	980	
30	101	510	101	1020	101	2040	
40	138	952	138	1904	138	3809	

10-40 kVA 400 V 3:3 Specifications

IK3 - Short Circuit between Three Phases

IK3 400 V

S [kVA]	10 ms		20 ms		30 ms	
	I[A]	l²t [A²s]	I[A]	I2t [A2s]	I[A]	I²t [A²s]
10	37	14	37	27	37	41
15	53	28	53	56	53	84
20	80	64	80	128	80	192
30	110	121	110	242	110	363
40	146	213	146	426	146	639

IK3 400 V

S [kVA]	50 ms		100 ms		200 ms	
	I[A]	I²t [A²s]	I[A]	l²t [A²s]	I[A]	I²t [A²s]
10	37	68	37	137	37	274
15	53	140	53	281	53	562
20	80	320	80	640	80	1280
30	110	605	110	1210	110	2420
40	146	1066	146	2132	146	4263

Leakage Current

UPS rating	Leakage current at 100% load (mA)
10 kVA	250
15 kVA	250
20 kVA	250
30 kVA	100
40 kVA	100

 $\mbox{{\bf NOTE:}}$ As per IEC 62477-1, the leakage current should not exceed 5% of the rated input current.

Torque Specifications

Bolt size	Torque
M5	4 Nm
M6	5 Nm
M8	12 Nm

Requirements for a Third Party Battery Solution

Battery breaker boxes from Schneider Electric are recommended for the battery interface. Please contact Schneider Electric for more information.

Third Party Battery Breaker Requirements

AADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- All selected battery breakers must be equipped with instantaneous trip functionality with an undervoltage release coil or a shunt trip release coil.
- Trip delay must be set to zero on all battery breakers.

Failure to follow these instructions will result in death or serious injury.

NOTE: There are more factors to consider when selecting a battery breaker than the requirements listed below. Please contact Schneider Electric for more information.

Design Requirements for a Battery Circuit Breaker

Battery circuit breaker rated DC voltage > Normal battery voltage	The normal voltage of the battery configuration is defined as the highest nominal occurring battery voltage. This can be equivalent to the float voltage which may be defined as number of battery blocks x number of cells x cell float voltage.		
Battery circuit breaker rated DC current > Rated discharge battery current	This current is controlled by the UPS and must include maximum discharge current. This will typically be the current at the end of discharge (minimum operation DC voltage or in overload condition or a combination).		
DC landings	Three DC landings (+, -, N) for DC cables are required.		
AUX switches for monitoring	One AUX switch must be installed in the battery breaker and connected to the UPS. The UPS can monitor one battery breaker.		
Short-circuit breaking capability	The short-circuit breaking capability must be higher than the short-circuit DC current of the (largest) battery configuration.		
Minimum trip current	The minimum short-circuit current to trip the battery circuit breaker must match the (smallest) battery configuration, to make the breaker trip in case of a short circuit, up to the end of its life time.		

10-40 kVA 400 V 3:3 Specifications

Environment

	Operating	Storage			
Temperature	0 °C to 40 °C without load derating.	-25 °C to 55 °C for systems without batteries.			
Relative humidity	0-95% non-condensing	0-95% non-condensing			
Elevation	Designed for operation in 0-1000 m elevation at 100% load.				
	Derating required from 1000-2000 m with forced air cooling:				
	Up to 1000 m: 1.000				
	Up to 1500 m: 0.975				
	Up to 2000 m: 0.950				
Audible noise one meter from unit	10 kVA UPS: 46 dB at 70% load; 55 dB at 100% load 15 kVA UPS: 48 dB at 70% load; 56 dB at 100% load 20 kVA UPS: 50 dB at 70% load; 58 dB at 100% load 30 kVA UPS: 60 dB at 70% load; 64 dB at 100% load 40 kVA UPS: 63 dB at 70% load; 66 dB at 100% load				
Protection class	IP20				
Color	RAL 9003, gloss level 85%				

Compliance

Safety	IEC 62040-1: 2017, Edition 2.0, Uninterruptible Power Systems (UPS) - Part 1: Safety requirements IEC62040-1/A1: 2021+A2: 2022 Amendment 1 + Amendment 2			
EMC/EMI/RFI	FI IEC 62040-2: 2005, 2nd edition Uninterruptible Power Systems (UPS) - Part 2: Electromagnetic compatibility (EMC) requirements C3			
	IEC 62040-2: 2016, 3rd edition Uninterruptible Power Systems (UPS) - Part 2: Electromagnetic compatibility (EMC) requirements C3			
Performance	Performance in accordance with: IEC 62040-3: 2021-04, 3rd edition Uninterruptible Power Systems (UPS) - Part 3: Method of specifying the performance and test requirements. Output performance classification (according to IEC 62040-3, Clause 5.3.4): VFI SS 11			
Transportation	ISTA 2B 2011			
Earthing system	Supports TN, TT ²¹ , IT ²²			
Overvoltage category	OVC III			
Protective class	I			
Pollution degree	2			

^{21.} Neutral connection is mandatory for supported TT earthing system.22. Neutral connection is mandatory for supported IT earthing system.


UPS Weights and Dimensions

UPS rating	Weight kg	Height mm	Width mm	Depth mm
10 kVA (E3SP10KH)	35	629	250	660
15 kVA (E3SP15KH)	36	629	250	660
20 kVA (E3SP20KH)	37	629	250	660
30 kVA (E3SP30KH)	56	796	250	916
40 kVA (E3SP40KH)	59	796	250	916
15 kVA (E3SP15KHIN)	37	629	250	660
20 kVA (E3SP20KHIN)	38	629	250	660
30 kVA (E3SP30KHIN)	57	796	250	916
40 kVA (E3SP40KHIN)	60	796	250	916

10-40 kVA 400 V 3:3 Specifications

Clearance

NOTE: Clearance dimensions are published for airflow and service access only. Consult with the local safety codes and standards for additional requirements in your local area.

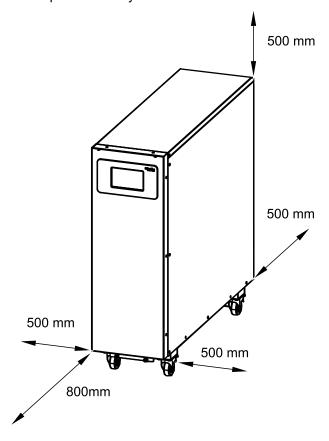


Overview 10-40 kVA 400 V 3:3

Overview

Overview of Single UPS

UIB	Unit input disconnect device	
SSIB	Static switch input disconnect device	
UOB	Unit output disconnect device	
МВВ	Maintenance bypass disconnect device	
ВВ	Battery disconnect device	

NOTE: In Schneider Electric literature, 'disconnect device' is used as a generic term covering circuit breakers or switches as their position may vary depending on configuration. Details about the individual configuration are found in the electrical diagram and/or by reading the symbol on the front of each disconnect device.

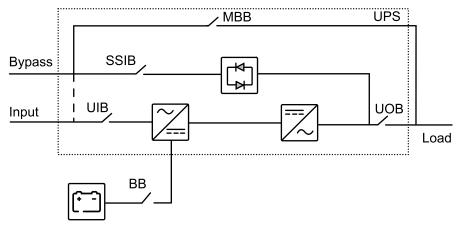


10-40 kVA 400 V 3:3 Overview

Overview of 1+1 Redundant Parallel System with Common Battery Bank

MIB	Main input disconnect device	
BIB	Bypass input disconnect device	
UIB	Unit input disconnect device	
SSIB	Static switch input disconnect device	
UOB	Unit output disconnect device	
Ext. UOB	External unit output disconnect device	
MBB	Maintenance bypass disconnect device	
Ext. MBB	External maintenance bypass disconnect device	
BB1	Battery disconnect device 1	
BB2	Battery disconnect device 2	

NOTE: In Schneider Electric literature, 'disconnect device' is used as a generic term covering circuit breakers or switches as their position may vary depending on configuration. Details about the individual configuration are found in the electrical diagram and/or by reading the symbol on the front of each disconnect device.

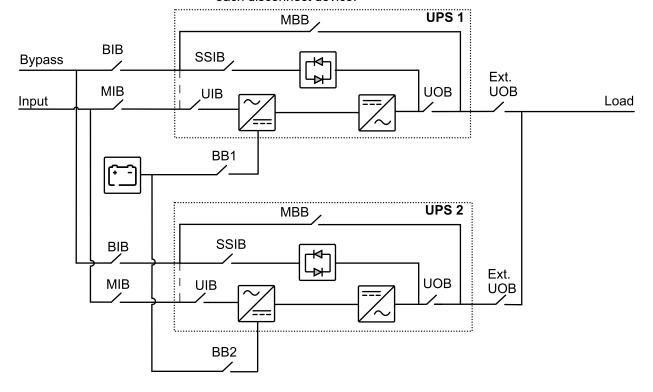

Overview 10-40 kVA 400 V 3:3


Overview of Parallel System

MIB	Main input disconnect device	
BIB	Bypass input disconnect device	
UIB	Unit input disconnect device	
SSIB	Static switch input disconnect device	
UOB	Unit output disconnect device	
Ext. UOB	External unit output disconnect device	
МВВ	Maintenance bypass disconnect device	
Ext. MBB	External maintenance bypass disconnect device	
SIB	System isolation disconnect device	
ВВ	Battery disconnect device	

NOTE: In Schneider Electric literature, 'disconnect device' is used as a generic term covering circuit breakers or switches as their position may vary depending on configuration. Details about the individual configuration are found in the electrical diagram and/or by reading the symbol on the front of each disconnect device.

NOTE: In parallel systems with an external maintenance bypass disconnect device Ext. MBB, the internal maintenance bypass disconnect devices MBB* must be padlocked in the open (OFF) position.

10-40 kVA 400 V 3:3 Overview

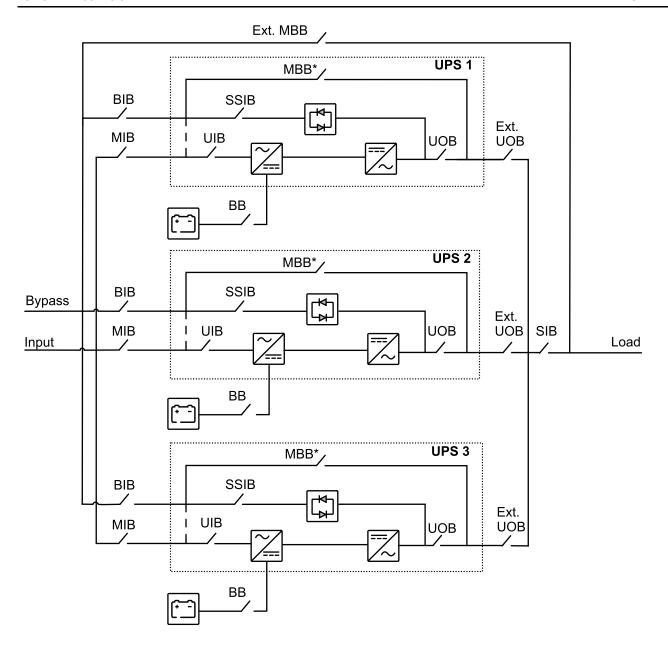

Installation Procedure 10-40 kVA 400 V 3:3

Installation Procedure

- 1. Move the UPS to the final location by rolling it over the floor on the casters.
- 2. Position the UPS, page 42.
- 3. Connect the Power Cables, page 47.
- 4. Connect the Signal Cables, page 61.
- 5. Connect the Modbus Cables, page 66.
- 6. Only for parallel systems: Connect the Parallel Cables in Parallel Systems, page 67.

For moving or decommissioning the UPS after installation has been completed, see Decommission or Move the UPS to a New Location, page 72.

10-40 kVA 400 V 3:3 Position the UPS

Position the UPS


AADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH


The UPS must be secured against movement. Once the UPS is in its final position, reinstall the front and rear transportation brackets on the UPS and mount them to the floor.

Failure to follow these instructions will result in death or serious injury.

1. Move the UPS to its final location and lock the casters.

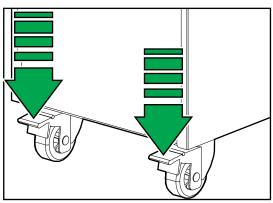


2. Reinstall the front transportation bracket (marked (B) in the illustration - removed during receiving and unpacking of the UPS) on the UPS.

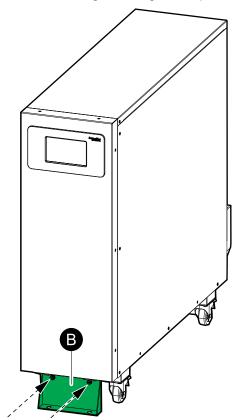


Position the UPS 10-40 kVA 400 V 3:3

3. Reinstall the rear transportation bracket (marked (B) in the illustration - removed during receiving and unpacking of the UPS) on the UPS.

Rear View

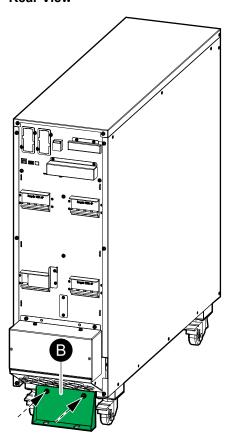


- 4. Mark the anchoring hole locations on the floor according to the front and rear transportation brackets.
- 5. Move the UPS to the side and cover the UPS with the packaging bag (marked (A) in the illustration).

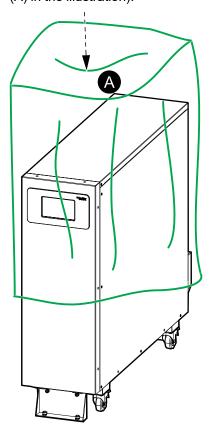


10-40 kVA 400 V 3:3 Position the UPS

6. Drill the anchoring holes according to national and local requirements. The hole diameter for the front and rear transportation bracket is ø10 mm.

- 7. Move the UPS to the final position.
- 8. Roll up the front side of the packaging bag (marked (A) in the illustration), so the front bottom part of the UPS is free.

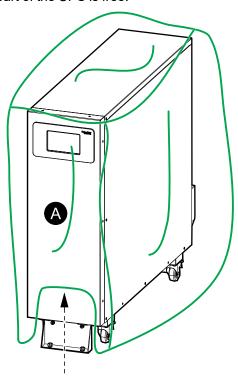


9. Mount the front transportation bracket (marked (B) in the illustration) to the floor. Use appropriate hardware for the floor type – the hole diameter in the bracket is ø10 mm. The requirement is M8 strength grade 8.8 hardware.

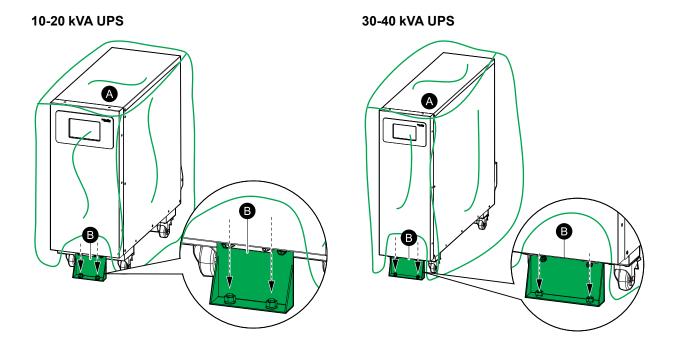


Position the UPS 10-40 kVA 400 V 3:3

10. Roll up the rear side of the packaging bag (marked (A) in the illustration), so the rear bottom part of the UPS is free.

Rear View

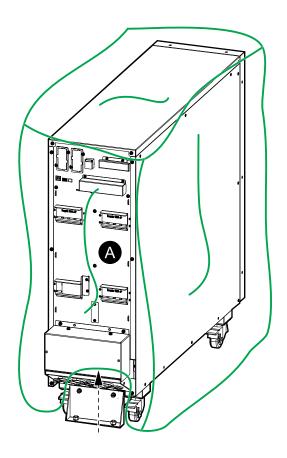


11. Mount the rear transportation bracket (marked (B) in the illustration) to the floor. Use appropriate hardware for the floor type – the hole diameter in the bracket is ø10 mm. The requirement is M8 strength grade 8.8 hardware.

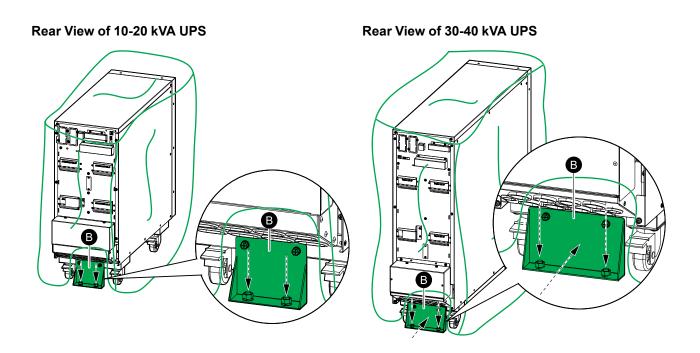

10-40 kVA 400 V 3:3 Position the UPS

12. Remove the packaging bag (marked (A) in the illustration) and save for future use.

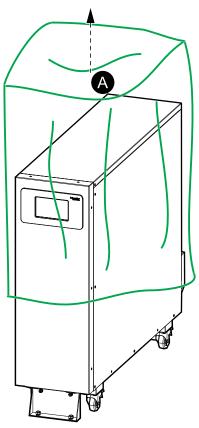


Connect the Power Cables 10-40 kVA 400 V 3:3

Connect the Power Cables

Connect the Power Cables in the 10-20 kVA UPS

- 1. Ensure that all disconnect devices are in the OFF (open) position.
- 2. Remove the conduit box cover.


Rear View

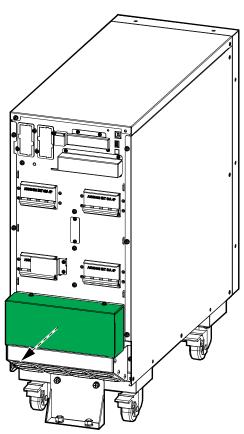

10-40 kVA 400 V 3:3 Connect the Power Cables

3. Remove the transparent protective cover from the terminal blocks.


Rear View

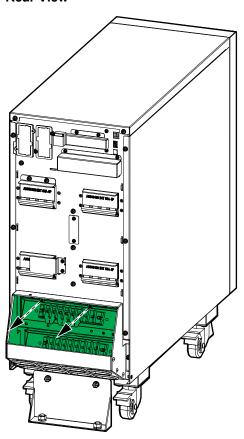

Connect the Power Cables 10-40 kVA 400 V 3:3

- 4. **In single mains systems**: Perform one of the following to prepare for the earthing system:
 - For TN-C earthing system: The L-shaped jumper is provided in the paper bag attached to the installation manual. Remove the fourth V-shaped jumper from the terminal blocks and replace it with the provided L-shaped jumper in the same position.

Rear View - TN-C Earthing System (Single Mains)

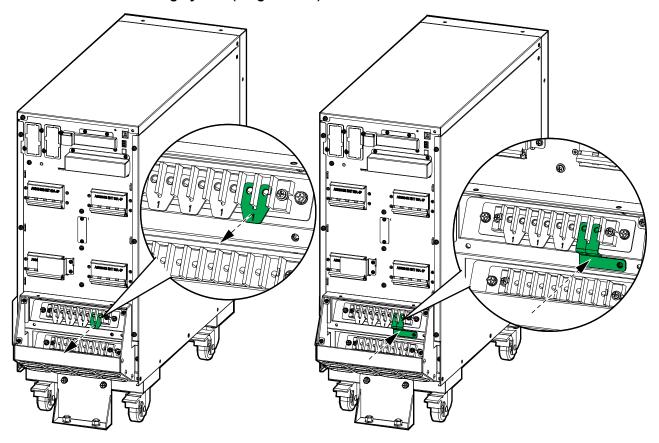


 For non TN-C earthing system: No action is needed to prepare for the earthing system.

10-40 kVA 400 V 3:3 Connect the Power Cables

- 5. **In dual mains systems**: Perform one of the following to prepare for the earthing system:
 - For TN-C earthing system: The L-shaped jumper is provided in the paper bag attached with the installation manual. Remove the four V-shaped jumpers from the terminal blocks and install the provided L-shaped jumper in the fourth position in the terminal blocks.


Rear View - TN-C Earthing System (Dual Mains)

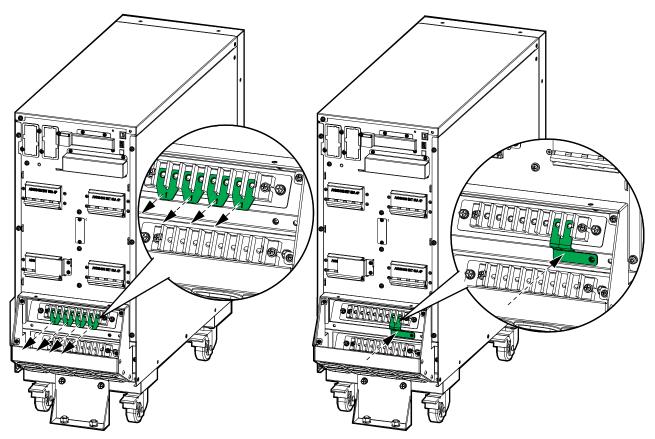

 For non TN-C earthing system: Remove the four V-shaped jumpers from the terminal blocks.


Connect the Power Cables 10-40 kVA 400 V 3:3

Rear View - Non TN-C Earthing System (Dual Mains)

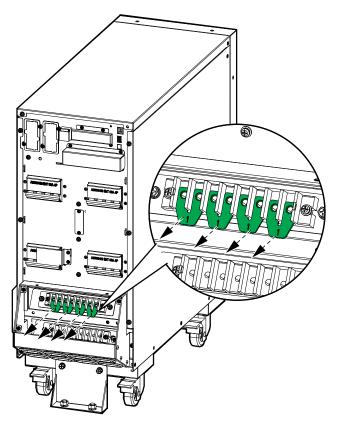

6. Cut the cable brush holes.



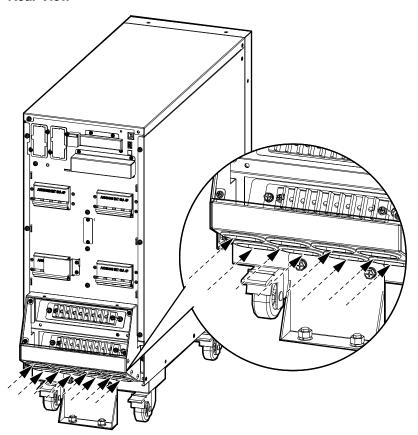


7. Route the power cables through the bottom of the conduit box.

10-40 kVA 400 V 3:3 Connect the Power Cables

8. Connect the PE cable to the PE terminal.

Rear View

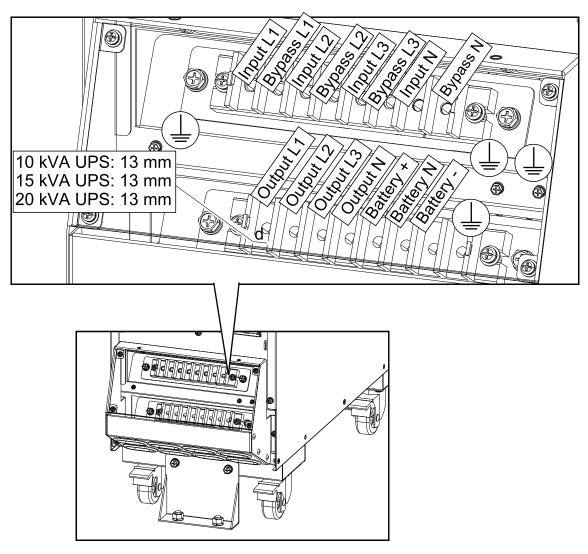


- 9. Connect the battery cables (+, N, -) and the output cables (L1, L2, L3, N).
- 10. Connect the input cables (L1, L2, L3, N) and the bypass cables (L1, L2, L3, N) (in dual mains systems).

Connect the Power Cables 10-40 kVA 400 V 3:3


11. Reinstall the transparent protective cover over the terminal blocks.

Rear View

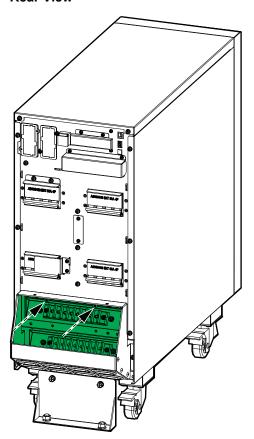

12. Reinstall the conduit box cover.

Rear View

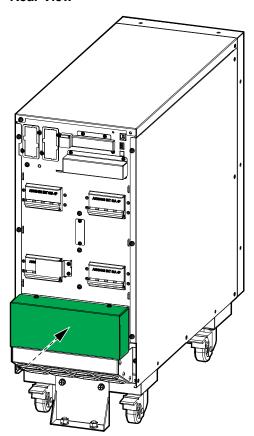


10-40 kVA 400 V 3:3 Connect the Power Cables

Connect the Power Cables in the 30-40 kVA UPS

- 1. Ensure that all disconnect devices are in the OFF (open) position.
- 2. Remove the conduit box cover.


Rear View

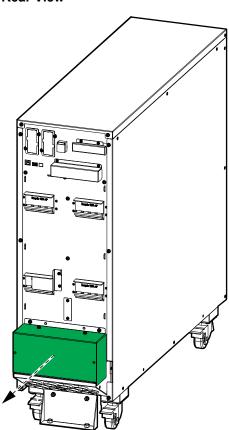

Connect the Power Cables 10-40 kVA 400 V 3:3

3. Remove the transparent protective cover from the terminal blocks.

Rear View

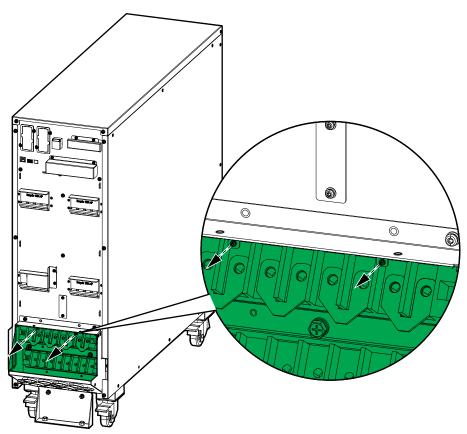


10-40 kVA 400 V 3:3 Connect the Power Cables

4. **In single mains systems**: Perform one of the following to prepare for the earthing system:

 For TN-C earthing system: The L-shaped jumper is provided in the paper bag attached to the installation manual. Remove the fourth V-shaped jumper from the terminal blocks and replace it with the provided L-shaped jumper in the same position.

Rear View - TN-C Earthing System (Single Mains)

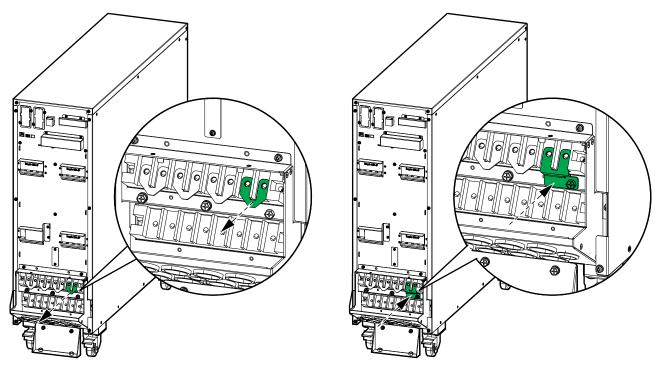


 For non TN-C earthing system: No action is needed to prepare for the earthing system.

Connect the Power Cables 10-40 kVA 400 V 3:3

- 5. **In dual mains systems**: Perform one of the following to prepare for the earthing system:
 - For TN-C earthing system: The L-shaped jumper is provided in the paper bag attached to the installation manual. Remove the four V-shaped jumpers from the terminal blocks and install the provided L-shaped jumper in the fourth position in the terminal blocks.


Rear View - TN-C Earthing System (Dual Mains)

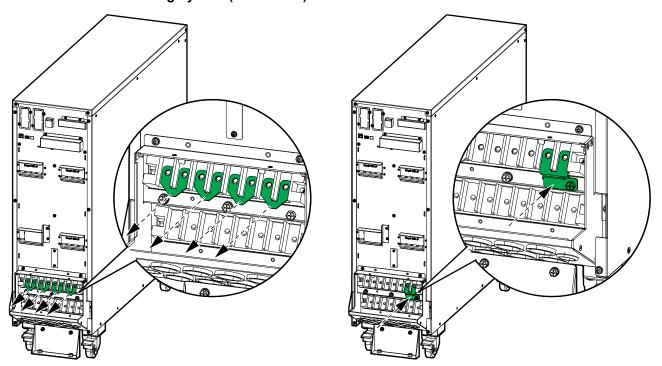

 For non TN-C earthing system: Remove the four V-shaped jumpers from the terminal blocks.


10-40 kVA 400 V 3:3 Connect the Power Cables

Rear View - TN-C Earthing System (Dual Mains)

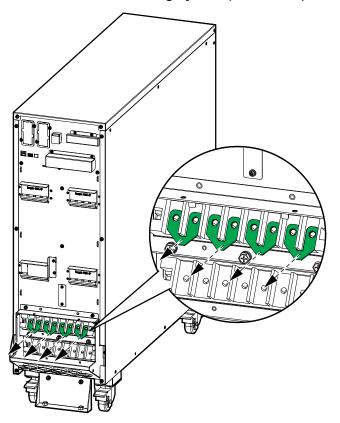


6. Cut holes on the cable brush plate.

Rear View for 30 kVA UPS

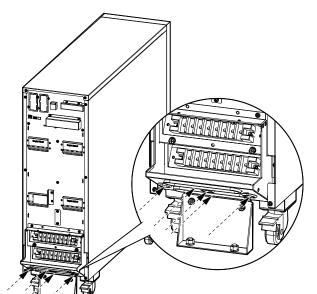

Rear View for 40 kVA UPS

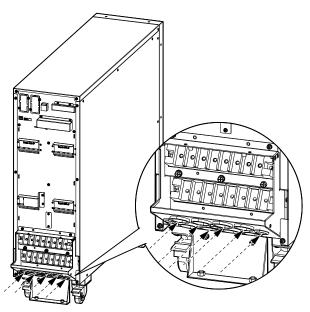


7. Route the power cables through the conduit box.

Connect the Power Cables 10-40 kVA 400 V 3:3

8. Connect the PE cable to the PE terminals.

Rear View

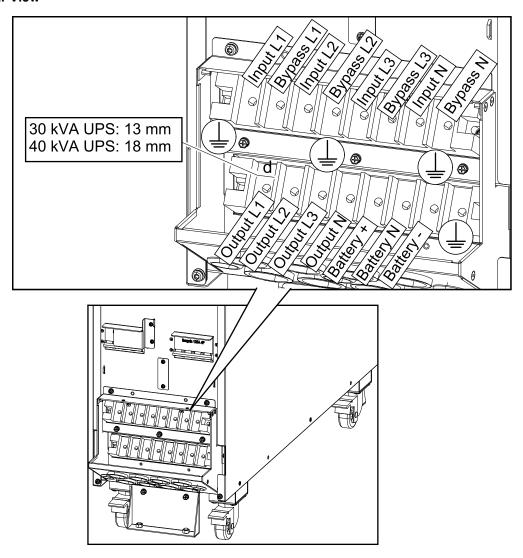


- 9. Connect the battery cables and the output cables.
- 10. Connect the input cables and the bypass cables (in dual mains systems).

10-40 kVA 400 V 3:3 Connect the Power Cables


11. Reinstall the transparent protective cover over the terminal blocks.

Rear View

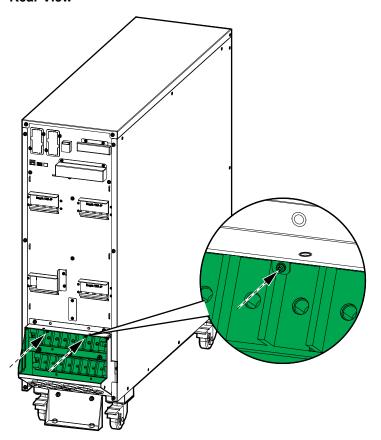


12. Reinstall the conduit box cover.

Rear View

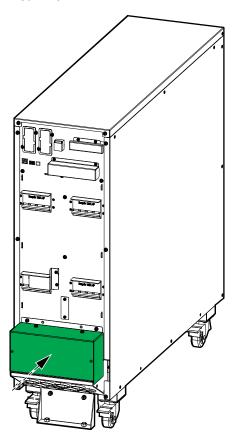


Connect the Signal Cables

Overview of Signal Connection Terminals in the 10-20 kVA UPS

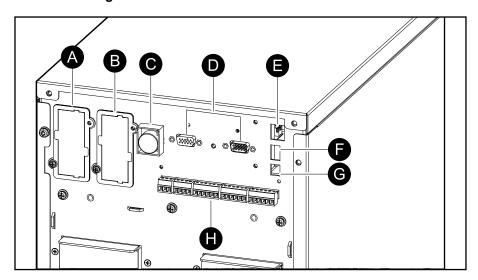

Overview of Signal Connection Terminals in the 30-40 kVA UPS

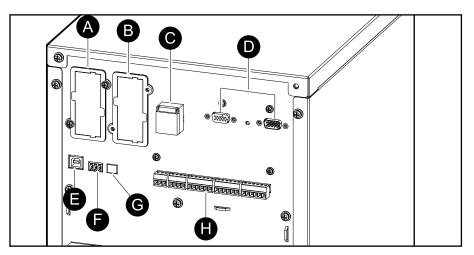

- A. Slot for network management card (NMC)
- B. Slot for optional dry contacts board
- C. Cold start button (optional)
- D. Parallel connection ports
- E. USB port (for service)
- F. RS485 port
- G. CAN
- H. Input contacts and output relays (dry contacts)

NOTE: Route the signal cables separately from the power cables and route the Class 2/SELV cables (A to C, E to H) separately from the non-Class 2/non-SELV cables. Non-Class 2/non-SELV cables (D) should be rated for 300 V.


NOTE: The recommended cable size for the signal cables is 0.5 mm².


NOTE: The maximum length for Modbus cables is 80 m.

NOTE: Please refer to the following illustrations for the SELV and non-SELV cable routing.

SELV and Non-SELV Cable Routing for 10 - 20 kVA UPS


SELV and Non-SELV Cable Routing for 30 - 40 kVA UPS

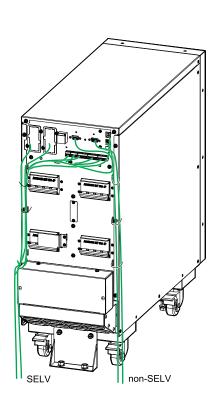

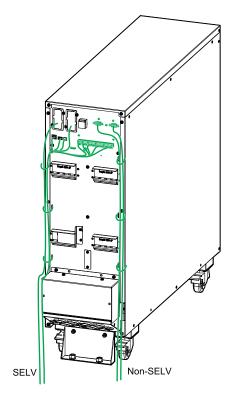

Connect the Signal Cables to the Input Contacts and Output Relays

- 1. Connect the Class 2/SELV signal cables from the building EPO to terminal J2-3 and J2-4 in the UPS. The EPO circuit is considered Class 2/SELV. Class 2/SELV circuits must be isolated from the primary circuitry. Do not connect any circuit to the EPO terminal block unless it can be confirmed that the circuit is Class 2/SELV.
- 2. Connect the Class 2/SELV signal cables to the input contacts and output relays in the UPS. Do not connect any circuit to the input contacts unless it can be confirmed that the circuit is Class 2/SELV.
- 3. Connect the signal cables from the auxiliary products to the UPS. Follow the instructions in the auxiliary product manuals.

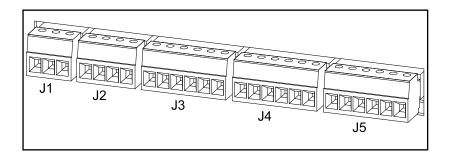

Terminal	Function		Diagram
J1-1	Configurable output (30 VDC / 3 A)	NC	J1-1 NC J1-2 NO
J1-2		NO	
J1-3		СОМ	J1-2 NO COM
J2-1	Configurable input (24 VDC / 1 mA)	Input_3	J2-1 Input_3 J2-2 GND J2-3 EPO_NC J2-4 +24V
J2-2		GND	
J2-3	EPO normally closed	EPO NC	
J2-4	(24 VDC / 1 mA)	+24 V	
J3-1	Configurable output	+24_DRY	
J3-2	(24 VDC / 400 mA)	GND	J3-1
J3-3	Configurable input	Input_2	J3-2 GND J3-3 Input_2 J3-4 GND J3-5 temp2 J3-6 temp_com
J3-4	- (24 VĎC / 1 mA)	GND	
J3-5	Ambient temperature signal	Temp 2	
J3-6		Temp_COM	
J4-1	External battery temperature signal	Temp 1	
J4-2		Temp_COM	J4-1 temp1 J4-2 temp_com J4-3 Input_1 J4-4 +24V J4-5 +24V J4-6 GND
J4-3	Configurable input ²³ / (24 VDC / 1 mA)	Input_1	
J4-4	— (24 VDC / 400 mA)	+24 V	
J4-5	— (24 VDC / 400 mA)	+24 V	
J4-6	_	GND	
J5-1	Configurable output (30 VDC / 3 A)	NC	J5-1 NC J5-2 NO J5-3 COM J5-4 NC J5-5 NO J5-6 COM
J5-2		NO	
J5-3		СОМ	
J5-4	Bypass backfeed trip (30 VDC / 3 A)	NC	
J5-5		NO	
J5-6		COM	

^{23.} For E3SP15KHIN, E3SP20KHIN, E3SP30KHIN, or E3SP40KHIN, the default function for J4-3 is surge protection abnormal.

Connect the Signal Cables from Switchgear and Third- Party Auxiliary Products

NOTE: Route the signal cables separately from the power cables and route the Class 2/SELV cables separately from the non-Class 2/non-SELV cables.

NOTE: Battery temperature sensor (E3SOPT003) is available as an option kit.

 Optional: Install the battery temperature sensor in the battery solution. In battery cabinets, install the battery temperature sensor in the top corner of the battery cabinet.


AWARNING

HAZARD OF FIRE

Position the battery temperature sensor as described to ensure correct temperature measurements.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

2. Route the battery temperature sensor cables from the battery solution to the UPS and connect as shown.

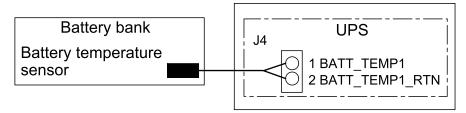


NOTE: The battery temperature sensor cables are considered Class 2/ SELV. Class 2/SELV circuits must be isolated from the primary circuitry.

- 3. Connect the signal cables from the battery disconnect device(s) in your battery solution for shunt trip connection to the UPS. Follow the illustration for connection with internal 24 VDC supply. The UPS can connect to and monitor one battery disconnect device.
 - a. Connect the battery disconnect device to terminal J3 in the UPS.

NOTE: The following diagram and table demonstrate the battery disconnect device trip connection with internal 24 VDC supply and pin connections.


Battery Disconnect Device Trip Connection with Internal 24 VDC Supply

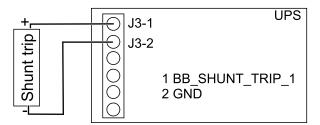

J3 Pin Connections for Battery Disconnect Device

The cables shall be sized taking the cable voltage drop and the recommendation of the shunt trip manufacturer into consideration.

4. Connect signal cables from the auxiliary contacts in your switchgear to the UPS input contacts.

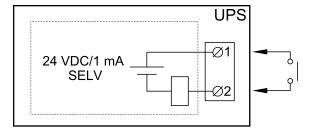


10-40 kVA 400 V 3:3 Connect the Modbus Cables

Connect the Modbus Cables

NOTE: For cyber security protection, strict access control to the installation room must be exerted at all times.

- 1. Connect the Modbus cables to the terminal RS485 of the UPS(s). Use a 2-wire connection.
 - All Modbus signal cables shall be double insulated/jacket cable and minimum rated for 30 VDC.
 - Wiring should be done in accordance with local wiring codes.
 - Route signal cables separately from power cables to ensure sufficient isolation.

2-Wire Connection with Two UPSs

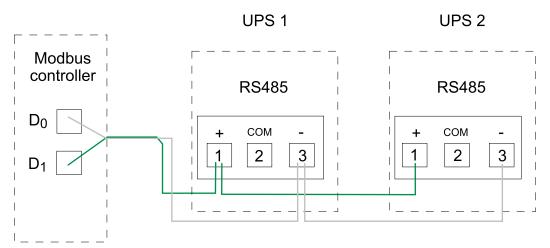


2. Install 150 Ohm termination resistors at each end of each bus if the buses are very long and operate at high data rates. Buses under 610 meters at 9600 baud or under 305 meters at 19200 baud should not require termination resistors.

Connect the Parallel Cables in Parallel Systems


1. Connect the parallel cables (option kit) between all the UPSs of the parallel system.

Top View of the Parallel Board

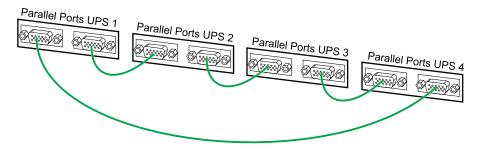


2. Remove the top plate from the UPS.

Rear View of 10-20 kVA UPS

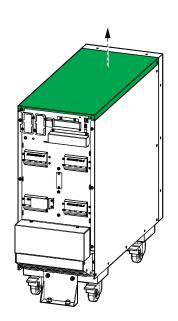


Rear View of 30-40 kVA UPS

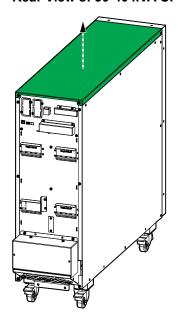


3. The parallel board is exposed.

Rear View of 10-20 kVA UPS

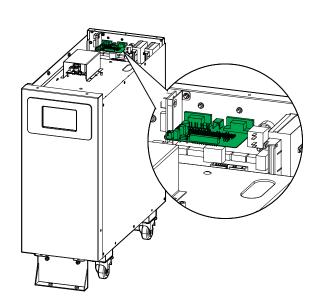


Rear View of 30-40 kVA UPS

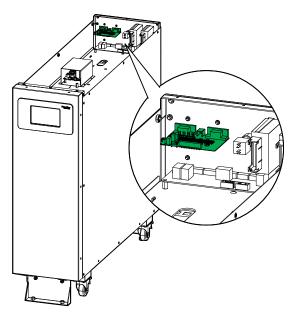

- 4. Remove the jumpers from the parallel board according to your system:
 - In parallel systems with two UPSs, remove the jumpers from J34, J36, J38, J40, J42 on both parallel boards.
 - In parallel systems with three or four UPSs, remove the jumpers from J33, J34, J35, J36, J37, J38, J39, J40, J41, J42 on all parallel boards.

Overview of the Parallel Board

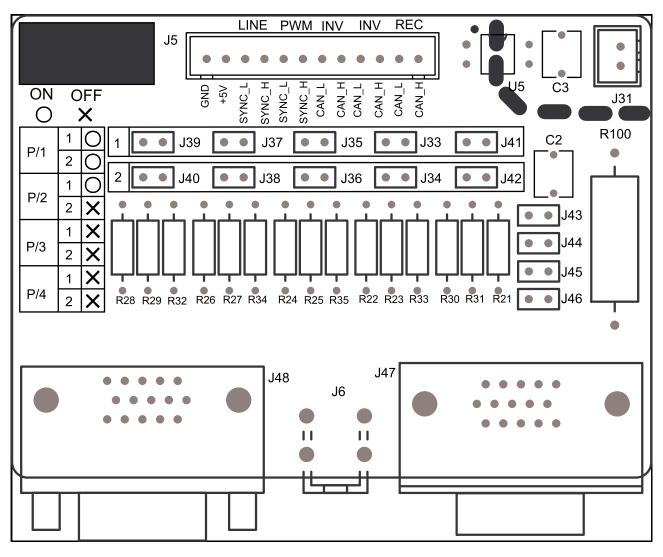

5. Reinstall the top plate on the UPS.

10-40 kVA 400 V 3:3 Backfeed Protection

Backfeed Protection

AADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

In systems where backfeed protection is not a part of the standard design, an automatic isolation device (such as a breaker, switch, or contactor with trip function, meeting the requirements of IEC62040-1 or UL1778 5th edition – depending on which standard apply to your local area), is required to be installed to prevent hazardous voltage or energy at the input terminals of the isolation device. The device must be rated and controlled according to the specifications in this manual.

Failure to follow these instructions will result in death or serious injury.

When the UPS input is connected through external isolators that, when opened, isolate the neutral or when the automatic backfeed isolation is provided external to the equipment or is connected to an IT power distribution system, a label must be fitted at the UPS input terminals, and on all primary power isolators installed remote from the UPS area and on external access points between such isolators and the UPS, by the user, displaying the following text (or equivalent in a language which is acceptable in the country in which the UPS system is installed):

A A DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Risk of Voltage Backfeed. Before working on this circuit: Isolate the UPS and check for hazardous voltage between all terminals including the protective earth.

Failure to follow these instructions will result in death or serious injury.


An additional external isolation device must be installed in the UPS system. A magnetic contactor or a disconnect device with shunt trip functionality can be used for this purpose.

The isolation device must be able to withstand the electrical characteristics as described in Specifications, page 15.


NOTE: Shunt trip coil can be supplied by external 24 V DC source or by UPS itself as shown in the following diagrams. Connect J4-4 to J5-6 to provide 24 V source for the shut trip coil from the UPS. For dual mains, connect J4-5 to J5-3 to provide 24 V source for the mains backfeed shut trip coil from the UPS and configure J5-2 as the main backfeed trip via the display.

Backfeed Protection 10-40 kVA 400 V 3:3

Single Mains with Backfeed Box

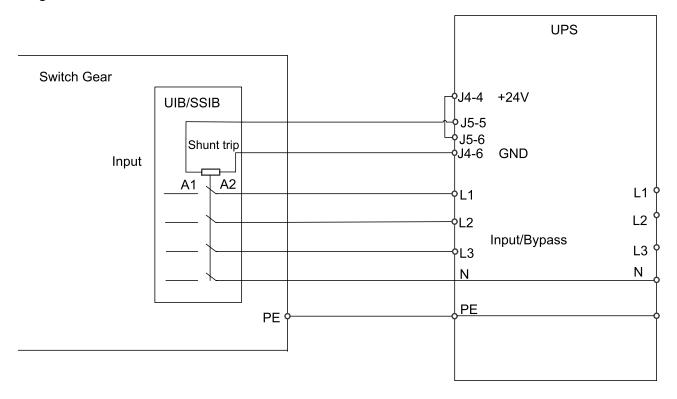


Dual Mains with Backfeed Box

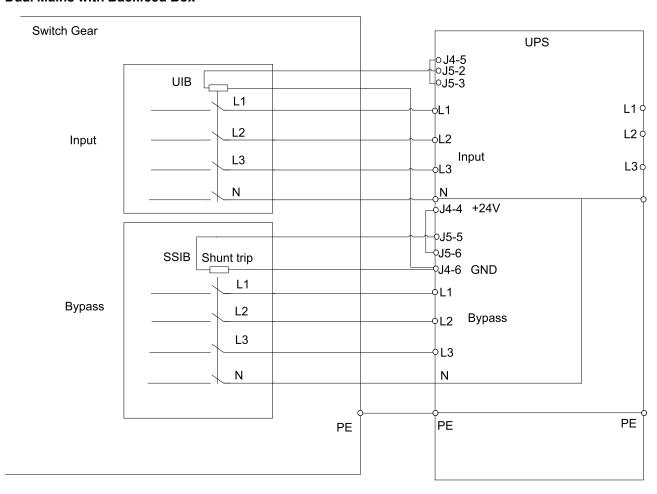


Decommission or Move the UPS to a New Location

- Shut down the UPS completely follow the instructions in the UPS operation manual.
- 2. Lockout/Tagout all disconnect devices on the UPS in the OFF (open) position.
- 3. Lockout/Tagout all disconnect devices in the switchgear in the OFF (open) position.
- 4. Lockout/Tagout all battery disconnect devices in the switchgear/battery solution in the OFF (open) position.
- 5. Remove the conduit box cover. Save it for reinstallation.

Rear View of 10-20 kVA UPS

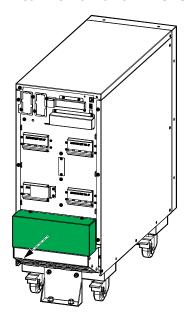

Rear View of 30-40 kVA UPS

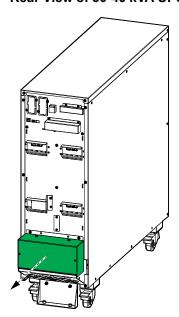

6. Measure for and verify ABSENCE of voltage on each input/bypass/output/ neutral/battery busbar before continuing.


AADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH


Measure for and verify ABSENCE of voltage on each input/bypass/output/neutral/battery busbar before continuing.

Failure to follow these instructions will result in death or serious injury.

Rear View of 10-20 kVA UPS

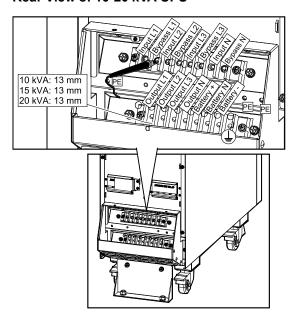

Rear View of 30-40 kVA UPS

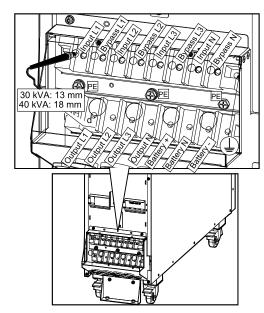

- 7. Remove the transparent protective cover from the terminal blocks.
- 8. Disconnect and remove all power cables from the UPS. See Connect the Power Cables, page 47 for details.
- 9. Disconnect and remove all signal cables from the UPS. See Connect the Signal Cables, page 61 for details.
- 10. Reinstall the transparent protective cover on the terminal blocks.
- 11. Reinstall the conduit box cover on the UPS.
- 12. Remove the front and rear transportation brackets from the UPS and the floor. Save for reinstallation. See Position the UPS, page 42 for details.
- 13. You can now move the UPS by rolling it over the floor on the casters.

▲WARNING

TIPPING HAZARD

- The casters of the UPS are exclusively for transport on flat, even, hard, and horizontal surfaces.
- The casters of the UPS are intended for transport over short distances (i.e. inside the same building).
- Move at a slow pace and pay close attention on the floor conditions and the balance of the UPS.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

14. For transport over longer distances or in conditions that are not suitable for the casters of the UPS:

▲WARNING

TIPPING HAZARD

For transport over longer distances or in conditions that are not suitable for the casters of the UPS, ensure:

- that personnel performing the transport have necessary skill and have received adequate training;
- to use appropriate tools to safely lift and transport the UPS;
- to protect the product against damage by using appropriate protection (like wrapping or packaging).

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Transportation requirements:

- Schneider Electric recommends to reuse the original shipping pallet in combination with the original transportation brackets for long-distance transportation, if in undamaged condition. If the original shipping pallet and original transportation brackets are not available or are damaged, use an appropriate pallet suitable for the weight of the UPS with appropriate dimensions.
 - Weight for 10-20 kVA UPS: 37 kg
 - Weight for 30-40 kVA UPS: 58 kg
 - Appropriate pallet dimension for 10-20 kVA UPS: minimum 780 mm x 380 mm
 - Appropriate pallet dimension for 30-40 kVA UPS: minimum 982 mm x 380 mm
- Use appropriate means of fixation to mount the UPS to the pallet. Follow
 the procedures in the receiving and unpacking manual to fix the UPS to
 the pallet when using the original pallet and transportation brackets.

A DANGER

TIPPING HAZARD

- The UPS must be appropriately fixed to the pallet immediately after being placed on the pallet.
- The fixation hardware must be strong enough to withstand vibrations and shocks during loading, transport, and unloading.

Failure to follow these instructions will result in death or serious injury.

AWARNING

UNEXPECTED EQUIPMENT BEHAVIOR

Do not lift the UPS with a forklift/pallet truck directly on the frame as it may bend or damage the frame.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

- 15. Perform one of the following:
 - Decommission the UPS, OR
 - Move the UPS to a new location to install it.

16. **Only for installing the UPS in a new location**: Follow the installation manual to install the UPS in the new location. See Installation Procedure, page 41 for installation overview. Start-up must only be performed by Schneider Electric.

AADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Start-up must only be performed by Schneider Electric.

Failure to follow these instructions will result in death or serious injury.

Schneider Electric 35 rue Joseph Monier 92500 Rueil Malmaison France

+ 33 (0) 1 41 29 70 00



As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2024 – 2025 Schneider Electric. All rights reserved.

990-66229A-001