

eMobility Infrastructure

Commissioning Guide

EVSOLCG001EN-01
01/2026



Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.

Table of Contents

Safety Information.....	5
Before You Begin.....	6
Start-up and Test.....	7
About the Document.....	8
Presentation of EV Infrastructure	12
Applications for Buildings	13
Key Variables	16
Supported Architectures.....	17
Specific Functions and Configurations.....	18
Offers and Products.....	19
EV Charging Station Ranges Compatible with EcoStruxure EV Charging Expert.....	20
Offers and Commissioning Tools.....	22
Other Products	25
Prerequisites.....	28
EcoStruxure EV Charging Expert User Interface.....	30
Commissioning EV Infrastructure Systems	33
Description of System Architectures.....	34
System Architecture 1.....	35
System Architecture 1: Presentation.....	36
System Architecture 1: Commissioning Procedure	37
System Architecture 2.....	38
System Architecture 2: Presentation.....	39
System Architecture 2: Commissioning Procedure	40
System Architecture 3.....	41
System Architecture 3: Presentation.....	42
System Architecture 3: Commissioning Procedure	43
System Architecture 4.....	44
System Architecture 4: Presentation.....	45
System Architecture 4: Commissioning Procedure	46
System Architecture 5.....	47
System Architecture 5: Presentation.....	48
System Architecture 5: Commissioning Procedure	49
Procedures	50
Introduction	51
Configuring the 4G Cellular Modem with DHCP.....	52
Configuring the 4G Cellular Modem without DHCP	56
Configuring the PC to Connect to EcoStruxure EV Charging Expert.....	58
Connecting to EcoStruxure EV Charging Expert.....	59
Checking the Installed Firmware Version	60
Creating an Installer Account	61
Starting a New Configuration	62
Updating Network Settings	63
Rebooting EcoStruxure EV Charging Expert.....	65
Reconnecting to EcoStruxure EV Charging Expert Web Page	66
Configuring Charge Point Operator Supervisions	67

Managing Basic Authentication and Charge Point Operator	
Certificates	70
Setting the Date and Time	72
Setting Energy Management.....	73
Installing and Configuring the Charging Stations	76
If Installing EVlink Pro AC or Schneider Charge Pro.....	85
Relaunching the Discovery Process	86
Updating the Charging Station Settings	87
Finishing the Installation of the Selected Charging Stations.....	88
Configuring Power Meters	89
Creating Zones and Sub-Zones	91
Assigning Charging Stations	93
Configuring Time of Use and Digital Inputs.....	95
Managing Authentication	98
Finalizing the Commissioning	100
Saving and Exporting Configuration	101
Commissioning EVlink Pro AC Charging Stations One by One by Using eSetup Application.....	102
Commissioning Schneider Charge Pro Charging Stations One by One by Using eSetup Application	103
Specific Functions and Configurations	104
Importing EcoStruxure EV Charging Expert Configuration	105
Updating EcoStruxure EV Charging Expert Firmware.....	106
Setting Up a Ring Topology for EVlink Pro AC Range	107
Prerequisites	108
Using eSetup to Enable RSTP on EVlink Pro AC Charging Stations.....	109
Configuring the Switch	110
Example of a Configuration Using a Schneider Electric Modicon Managed Switch	111
Setting up the Ring Network	118

Safety Information

What's in This Part

Before You Begin	6
Start-up and Test.....	7

Important Information

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

Before You Begin

Electrical monitoring and control equipment, and related software are used in a variety of buildings. The type or model of electrical monitoring and control equipment suitable for each application varies, depending on factors such as the system dependability level, unusual conditions and government regulations.

Only the user can be aware of all the conditions and factors present during setup, operation, and maintenance of the solution. Therefore, only the user can determine the electrical monitoring and control equipment and the related safeties and interlocks which can be appropriately used. When selecting electrical monitoring and control equipment, and related software for a particular application, the user should refer to the applicable local and national standards and regulations. The National Safety Council's Accident Prevention Manual (nationally recognized in the United States of America) also provides much useful information.

Ensure that appropriate safeties and mechanical/electrical interlocks protection have been installed and are operational before placing the equipment into service. All mechanical/electrical interlocks and safeties must be coordinated with the related automation equipment and software programming.

Start-up and Test

Before using electrical control and automation equipment for regular operation after installation, the system should be given a start-up test by qualified personnel to verify correct operation of the equipment. It is important that arrangements for such a check are made and that enough time is allowed to perform complete and satisfactory testing.

Follow all start-up tests recommended in the equipment documentation. Store all equipment documentation for future reference.

Test the software in both simulated and real environments.

Verify that the completed system is free from all short circuits and temporary grounds that are not installed according to local regulations (according to the National Electrical Code in the U.S.A, for example). If high-potential voltage testing is necessary, follow recommendations in equipment documentation to prevent accidental equipment damage.

About the Document

Document Scope

The purpose of this guide is to provide installers, maintenance personnel and users with the technical information necessary to commission EV infrastructure systems.

Validity Note

This document is applicable to the following charging stations:

- Pro AC charging stations
- Pro AC Metal charging stations
- Schneider Charge Pro charging stations

This document is applicable to EcoStruxure™ EV Charging Expert with HMIBSCEA53D1E** and HMIBX1A0NEVB100SCP licenses.

HMIBX1A0NEVB100SCP license for EcoStruxure EV Charging Expert does not enable the digital inputs function.

The characteristics of the products described in this document are intended to match the characteristics that are available on www.se.com. As part of our corporate strategy for constant improvement, we may revise the content over time to enhance clarity and accuracy. If you see a difference between the characteristics in this document and the characteristics on www.se.com, consider www.se.com to contain the latest information.

Online Information

The information contained in this guide is likely to be updated at any time. Schneider Electric strongly recommends that you have the most recent and up-to-date version available on www.se.com/ww/en/download.

The technical characteristics of the devices described in this guide also appear online. To access the information online, go to the Schneider Electric home page at www.se.com.

Product Related Information

▲ WARNING
UNGUARDED EQUIPMENT
<ul style="list-style-type: none">• Do not use this product on equipment lacking effective point-of-operation guarding. Lack of effective point-of-operation guarding on a machine can result in serious injury to the operator of that machine.• Do not use this software and related automation equipment on equipment which does not have point-of-operation protection.• Do not reach into machinery during operation.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

⚠ WARNING**EQUIPMENT OPERATION HAZARD**

- Remove tools, meters, and debris from equipment.
- Close the equipment enclosure door.
- Perform all start-up tests recommended by the manufacturer.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

NOTICE**HAZARD OF LOSS OF DATA AND CYBERSECURITY WARNING**

- Activate product and component licenses prior to the expiry of the trial license.
- Activate sufficient licenses for the servers and devices in your system.
- Back up or archive any SQL Server database data before adjusting any database memory options.
- Only personnel with advanced knowledge of SQL Server databases must make database parameter changes.
- Change default passwords at first use to help prevent unauthorized access to device settings, controls, and information.
- Disable unused ports/services and default accounts to help minimize pathways for malicious attackers.
- Place networked devices behind multiple layers of cyber defenses (such as firewall, network segmentation, and network intrusion detection and protection).
- Use cybersecurity best practices (for example, least privilege, separation of duties) to help prevent unauthorized exposure loss, modification of data and logs or interruption of services.

Failure to follow these instructions can result in equipment damage.

NOTICE**HAZARD OF NETWORK INOPERABILITY**

Do not make unauthorized changes in the network configuration.

Failure to follow these instructions can result in equipment damage.

See in this guide:

- Before You Begin, page 6
- Start-up and Test, page 7

General Cybersecurity Information

In recent years, the growing number of networked machines and production plants has seen a corresponding increase in the potential for cyber threats, such as unauthorized access, data breaches, and operational disruptions. You must, therefore, consider all possible cybersecurity measures to help protect assets and systems against such threats.

To help keep your Schneider Electric products secure and protected, it is in your best interest to implement the cybersecurity best practices as described in the *Cybersecurity Best Practices* document.

Schneider Electric provides additional information and assistance:

- Subscribe to the Schneider Electric security newsletter.
- Visit the *Cybersecurity Support Portal* web page to:
 - Find Security Notifications.
 - Report vulnerabilities and incidents.
- Visit the *Schneider Electric Cybersecurity and Data Protection Posture* web page to:
 - Access the cybersecurity posture.
 - Learn more about cybersecurity in the cybersecurity academy.
 - Explore the cybersecurity services from Schneider Electric.

Related Documents

Title of documentation	Reference number
<i>Cybersecurity Best Practices</i>	Refer to <i>General Cybersecurity Information</i> , page 10.
<i>EcoStruxure™ EV Charging Expert User Guide with HMIBSCEA53D1EDB Device</i>	DOCA0358EN
<i>EcoStruxure EV Charging Expert User Guide with HMIBX1 Device</i>	DOCA0429EN
<i>eMobility Solutions - Catalog</i>	E-MOBILITY-EVL-CAT051_EN
<i>eMobility Infrastructure Design Guide for Building Applications</i>	EVSOL1DG001EN
<i>EVlink Pro AC Troubleshooting Guide</i>	NNZ1940301 (EN/FR)
Modicon Networking Catalog 2024	DIA6ED2140903EN
eSetup EVlink Pro AC Charging Stations - a playlist of videos to help you install and commission EVlink Pro AC	 https://youtube.com/playlist?list=PLa7UGrWOTyjIFktxGii8yNkYOQaMJuzX
Video showing how to configure Ethernet parameters to commission a ring topology for EVlink Pro AC	 https://www.youtube.com/watch?v=Sg7sAeqko_w&t=89s

Title of documentation	Reference number
Video showing how to configure Schneider Charge Pro with eSetup	 https://www.youtube.com/playlist?list=PLa7UGrWOTyjm3P7KDND99fPZNO85UVNk9
EcoStruxure EV Charging Expert video showing how to configure load management parameters	 https://youtu.be/c3FBqzF1Aww

To find documents online, visit the Schneider Electric download center (www.se.com/ww/en/download/).

Information on Non-Inclusive or Insensitive Terminology

As a responsible, inclusive company, Schneider Electric is constantly updating its communications and products that contain non-inclusive or insensitive terminology. However, despite these efforts, our content may still contain terms that are deemed inappropriate by some customers.

Trademarks

QR Code is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

Presentation of EV Infrastructure

What's in This Part


Applications for Buildings	13
Key Variables	16
Supported Architectures	17
Specific Functions and Configurations	18
Offers and Products.....	19

Applications for Buildings

The EV infrastructure supports the following applications for buildings:


- New office building with local load management system (EcoStruxure EV Charging Expert), page 13
- Ethernet architecture for multi-unit residential buildings with local load management system (EcoStruxure EV Charging Expert), page 14
- Depot for a fleet of electric light commercial vehicles (eLCV) managed by a charging point operator, page 14
- Local solar energy production integrated into an EV architecture, page 15

New Office Building with Local Load Management System (EcoStruxure EV Charging Expert)

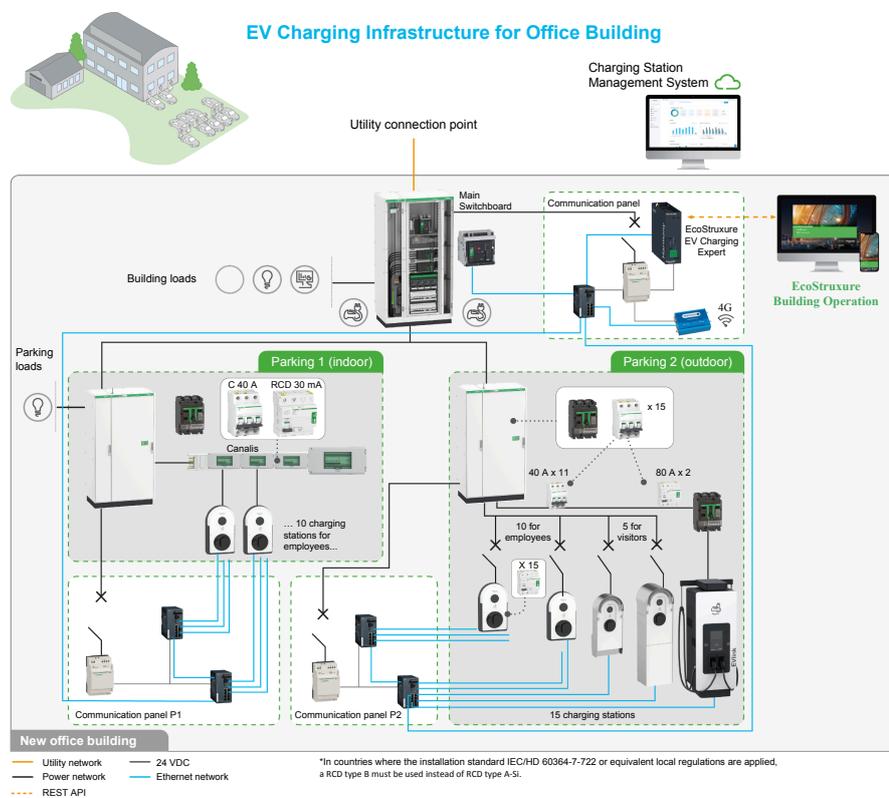

NOTE: For DC fast charging station and for Schneider Electric legacy ranges of charging stations, contact your local front office.


Ethernet Architecture for Multi-Unit Residential Buildings with Local Load Management System (EcoStruxure EV Charging Expert)

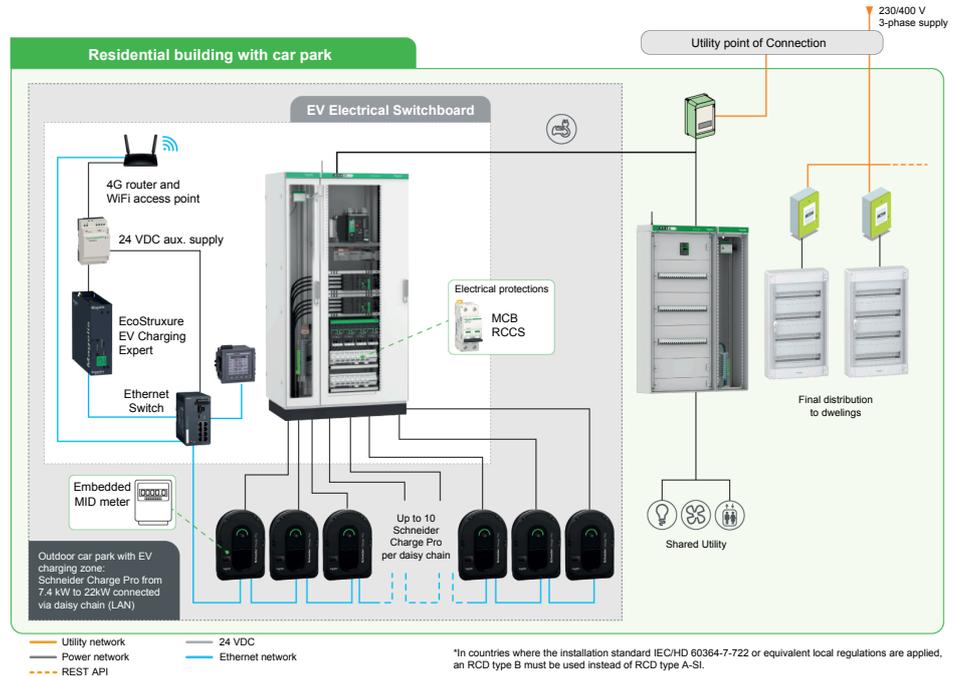

Depot for a Fleet of Electric Light Commercial Vehicles (eLCV) Managed by a Charging Point Operator




Charging Infrastructure for a Depot with AC and Fast DC Chargers

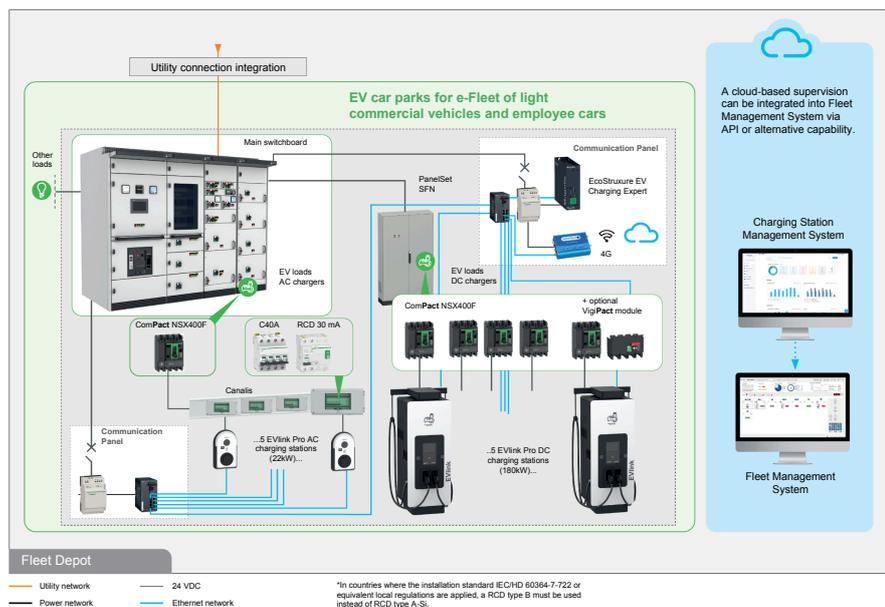

NOTE: For DC fast charging station and for Schneider Electric legacy ranges of charging stations, contact your local front office.

Local Solar Energy Production Integrated into an EV Architecture

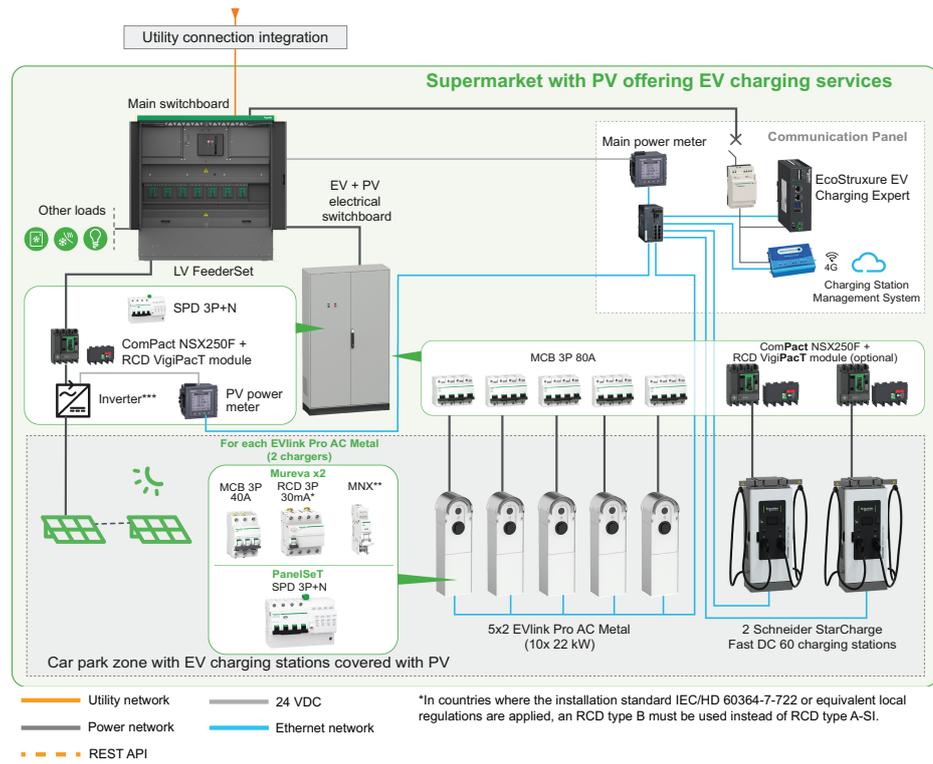

Key Variables


The commissioning of the EV infrastructure depends on the following key variables:

- Ranges and models of charging station: AC and/or DC charging stations
- EV load management system:
 - Installation of EcoStruxure™ EV Charging Expert
 - Definition of the load management mode (static or dynamic)
- Operational requirements:
 - Local operation only
 - Connection to a remote charging station management system (Schneider Electric or third party)
- IT/Network configuration
 - With or without DHCP server from customer site
 - Internet connectivity and network topologies (star, daisy chain, or ring)

Supported Architectures

This guide explains the commissioning procedure for the following system architectures:

- System Architecture 1, page 35: Full architecture: supervision - edge load management - charging stations. IT including DHCP server is managed by the customer.
- System Architecture 2, page 38: No supervision. Edge load management and charging stations operated locally by the customer.
- System Architecture 3, page 41: With supervision - charging stations. No edge load management. A 4G cellular modem as an internet gateway and DHCP server.
- System Architecture 4, page 44: Full architecture: supervision - edge load management - charging stations. A 4G cellular modem as an internet gateway and DHCP server .
- System Architecture 5, page 47: Full architecture: supervision - edge load management - charging stations. A 4G cellular modem as an internet gateway limited to the connection to the supervision, and without DHCP server.

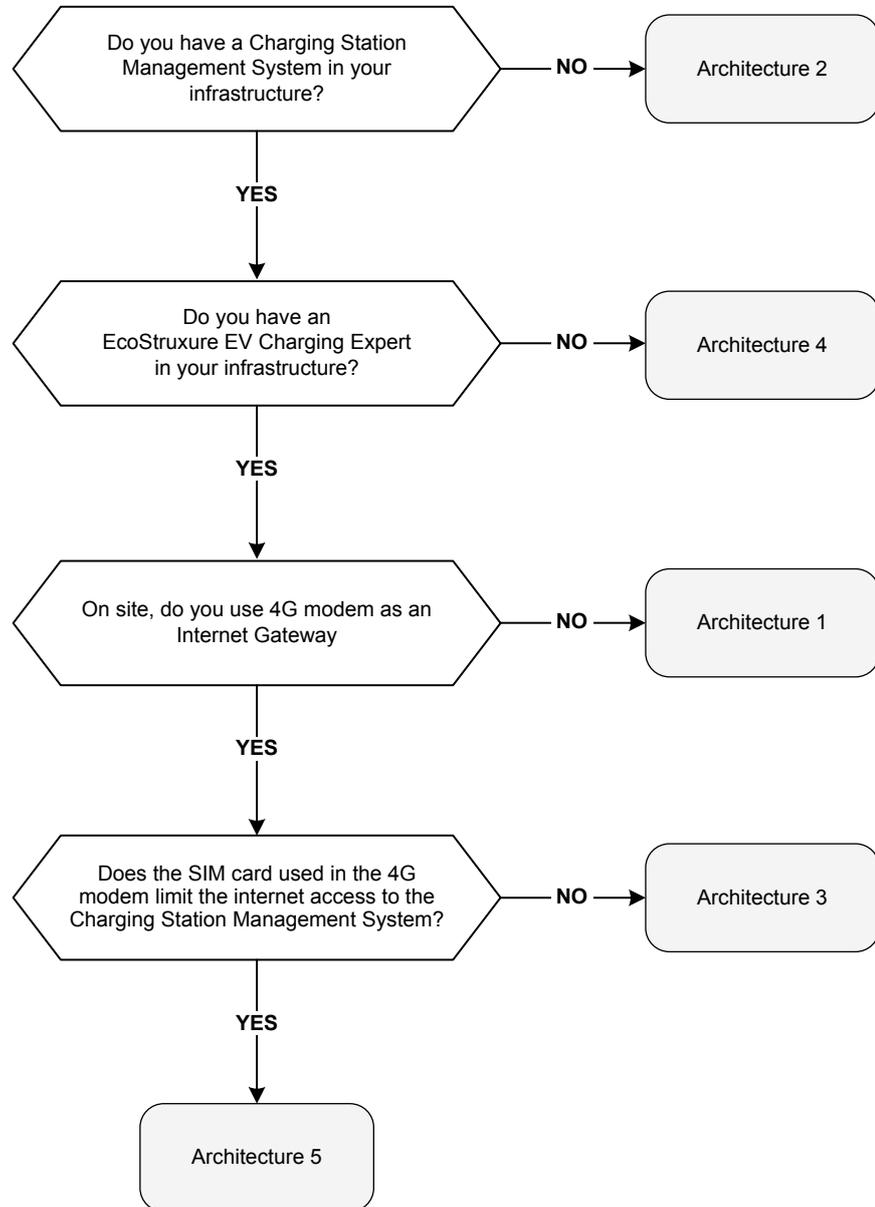

Specific Functions and Configurations

This guide additionally describes how to:

- Import EcoStruxure EV Charging Expert configuration, page 105
- Update EcoStruxure EV Charging Expert firmware, page 106
- Set up a ring topology for EVlink Pro AC range, page 107

Offers and Products

What's in This Chapter

EV Charging Station Ranges Compatible with EcoStruxure EV Charging Expert	20
Offers and Commissioning Tools	22
Other Products.....	25

For detailed information about Schneider Electric eMobility offers and products, refer to *eMobility Solutions - Catalog*, page 10.

EV Charging Station Ranges Compatible with EcoStruxure EV Charging Expert

The following sections indicate how to find support for commissioning each EV charging station range.

EV Charging Station Ranges Covered in this Guide

The following table indicates the characteristics of each EV charging station range covered in this guide.

Charging station range	Power rate and phases availability	Minimum firmware version for compatibility with EV Charging Expert	Charging station commissioning
EVlink Pro AC 	From 7.1 kW to 22 kW 1P or 3P	1.3.8	See Procedure to Update EVlink Pro AC Charging Station Firmware, page 77. Refer to the video showing how to commission EVlink Pro AC charging station with eSetup:  https://youtube.com/playlist?list=PLa7UGrWOTyjlFkx-Gia8yNkYOQaMJuzX
Schneider Charge Pro (AC) 	From 7.4 kW to 22 kW 1P or 3P	1.18.1	See Updating EVlink Schneider Charge Pro Charging Station Firmware, page 84. Refer to the video showing how to configure Schneider Charge Pro with eSetup:  https://www.youtube.com/playlist?list=PLa7UGrWO-Tyjm3P7KDND99fPZ-NO85UVNk9

Other EV Charging Station Ranges not Covered in this Guide

- EVlink Smart Wallbox (legacy range)
- EVlink Parking (legacy range)
- EVlink Pro DC 60 kW
- EVlink Pro DC 60 V2
- Schneider StarCharge Fast 60 kW
- EVlink Pro DC 180 kW
- EVlink Pro DC 180 V2
- Schneider StarCharge Fast 180 kW
- EVlink Pro DC 320 kW

- Schneider StarCharge Fast 320 kW

For EV charging station ranges not covered in this guide, contact your local Schneider Electric front office.

Offers and Commissioning Tools

Schneider Electric offers and commissioning tools are as follows:

- EcoStruxure EV Charging Expert charging load management system, page 22
- Schneider Electric energy and building management systems, page 23
- eSetup commissioning application for electricians, page 24

EcoStruxure EV Charging Expert



HMIBSCEA53D1E•• licenses



HMIBX1A0NEVB100SCP license

EcoStruxure EV Charging Expert 6 is a load management system that helps control EV infrastructure and distribute available power to the charging stations.

It allows EV charging to be monitored, controlled, and maximized based on the real-time available power in the building.

It helps to ensure the respect of cost and energy efficiency constraints of a set of charging stations by controlling their operation. The controller runs its management program according to the selected parameters and data received from the charging stations.

The main functions performed by EcoStruxure EV Charging Expert charging load management system are the following:

Access management	Commissioning	Operation	Connectivity
Add, modify, delete, and supervise badges	Commission all charging stations directly	Supervision through real-time dashboard and remote actions on charging stations	Connection with charge point operators supervision (OCPP 1.6Json)
	Save and restore commissioned configuration	Charge data report export	Connection with EcoStruxure supervision (web services). This function may require specific development.
		Maintenance report export	3G/4G modem (optional)
			Commissioning by Ethernet cable

For more information, refer to:

- www.se.com

- The video explaining the benefits of load management in EV Infrastructure with EcoStruxure EV Charging Expert:



<https://youtu.be/aYEEemJeRaYc>

Schneider Electric Energy and Building Management Systems

EV load can be integrated into a facility management system, with the following features:

- All-in-one monitoring of the electrical distribution:
 - A single interface to supervise and monitor the EV charging infrastructure integrated into the building electrical distribution network
 - Detailed alarms to make quick and informed decisions if something happens
 - Detailed view of circuit capacity to optimize the electrical distribution and to forecast EV infrastructure evolution
- Power demand and power quality monitoring:
 - EV charging station status and usage continuous monitoring
 - Monitoring and EV charging stations power output to control the peak demand
 - Power quality view to analyze the impact of DC charging on the electrical distribution network and anticipate adverse effects
- Energy consumption trends and KPIs:
 - Identification of the charging stations with the highest consumption
 - Consumption comparison per zone, time period, or parking usage



EcoStruxure Building Operation software

EcoStruxure Building Operation is a building management software that delivers the right information when, where and how you want it. Operations are simplified with drag-and-drop trending, calendar-like schedules and one-click reporting. Native open protocols provide the freedom to choose the right equipment for your application. EcoStruxure Building Operation software provides up to 30 % energy savings. It helps create a healthy and sustainable environment.

For more information, refer to www.se.com.

eSetup Commissioning Application for Electricians



eSetup is a dedicated application to configure and commission Schneider Electric products. It can be used to commission EVlink Pro AC and Schneider Charge Pro charging stations manually.

Download eSetup:

- From Apple Store: 
- From Google Play: 
- Via your mySchneider account

Other Products

For information about other products compatibility, recommendations and limitations, refer to:

- DOCA0358E *EcoStruxure EV Charging Expert User Guide*, page 10
- EVSOL1DG001EN *eMobility Infrastructure Design Guide for Building Applications*, page 10
- Schneider Electric Customer Care Center

Schneider Electric Power Meters

NOTE: Power metering is required when EcoStruxure EV Charging Expert is used in dynamic mode and to monitor photovoltaic production.

The following table lists the power meters from Schneider Electric that are compatible with EcoStruxure EV Charging Expert.

Refer to DOCA0358E *EcoStruxure EV Charging Expert User Guide*, page 10.

Name	Pole description	Input type	Comment
A9MEM3250 (PAS600 + Acti 9 iEM3000) 	3P / 3P + N	External current transformer (CT): 1 A or 5 A	–
METSEPM5320 (PowerLogic™ PM5000) 	3P / 3P + N	–	–
A9XMWD20 (PowerTag Link + PowerTag sensors) 	3P / 3P + N	PowerTag wireless energy sensor up to 630 A	–

Name	Pole description	Input type	Comment
ComPact NSX circuit breaker with embedded metering (with Enerlin'X IFE gateway) 	3P / 4P	Modbus TCP	For 3P, if you want to have power per phase with NSX 3-poles, you must add external neutral voltage tap.
MasterPacT™ MTZ circuit breaker with embedded metering (with embedded Enerlin'X EIFE module) 	3P / 4P	Modbus TCP	For 3P, if you want to have power per phase with MTZ 3-poles, you must add external neutral voltage tap.

The following table shows the Modbus registers to get data, according to the type of power meter or circuit breaker.

	PM5320, IEM3x5x, PowerTag A	ComPact NSX legacy	ComPacT NSX	MasterPacT MTZ
Register for current Ph1	3000	12016	32028	32028
Register for current Ph2	3002	12017	32030	32030
Register for current Ph3	3004	12018	32032	32032
Register for power Ph1	3054	12038	32077	32077
Register for power Ph2	3056	12039	32074	32074
Register for power Ph3	3058	12040	32076	32076
Register for total active power	3060	12041	32078	32078
Register for total active energy delivered	3204	12050	32096	32096

Other power meters that are not part of this selection are compatible with EcoStruxure EV Charging Expert as well.

When commissioning the power meter, select from the drop-down list on **Model** field, the corresponding model of power meter matching the appropriate registers list.

Modems



Use a 4G cellular modem (EVP3MM) with EcoStruxure EV Charging Expert. It is connected on the same network as EcoStruxure EV Charging Expert.

NOTE: Other modems with router function can be used.

Recommended Switches

Use Modicon Networking switch to integrate Ethernet solutions into your operation.

Unmanaged switch for star topology	
	
Four ports for copper MCSESU053FN0	Eight ports for copper MCSESU083FN0
Managed switch for ring and daisy chain topologies	
	
Four ports for copper MCSESM043F23F0	Eight ports for copper MCSESM083F23F0

For more information about communication network definition, refer to EVSOL1DG001EN *eMobility Infrastructure Design Guide for Building Applications*, page 10.

Prerequisites

Before starting the commissioning procedure, gather the following information:

- Project, page 28
- Electrical environment, page 28
- IT plan and network, page 28
- EV charging infrastructure, page 28
- Usage and user, page 28
- Other useful information, page 29

Project information	
Before scheduling the commissioning of the EV infrastructure, evaluate with the facility manager of the building the impact of the commissioning regarding the building activities:	<ul style="list-style-type: none"> • Consider whether the building is occupied or not by residents, employees, or customers during the operation. • Consider whether there is any specific safety plan to consider. • Check that the power is on, tested, and running on site. • Check that the access to electrical switchboards of the site and to the EV infrastructure is approved. • Check that the IT manager and/or technical team are available. • Check that there is 4G connectivity available in the technical room or from the EV switchboard where EcoStruxure EV Charging Expert is installed.
Electrical environment information	
Before going on site, get the electrical distribution plan and wiring diagram of the site with all information regarding:	<ul style="list-style-type: none"> • Power supply • Earthing system • Electrical protections • Number, location and details of main and subsidiary switchboards dedicated to the EV Supply Equipment (EVSE) • Overall power allocated to the EVSE • Installed or to be installed power meters (number, monitoring zone, model, location, IP address)
IT plan and network information	
Check the following information with the IT manager:	<ul style="list-style-type: none"> • IP address range • DHCP server available on site or not • 4G modem available on site with remote access allowed • Detailed wiring diagrams and typology of the EV infrastructure network • IP address, mask, gateway • Domain Name System (DNS) • 4G modem settings and SIM card ready
EV charging infrastructure information	
Establish the composition of the infrastructure:	<ul style="list-style-type: none"> • Power range and model of charging stations • For each charging station: name, location, serial number, phase wiring, derating, OCPP box ID, and OCPP authorization key if required • Definition of the EV zones • Supervision system (local or remote)
Usage and user information	
Gather all relevant specifications you need to commission and configure EcoStruxure EV Charging Expert:	<ul style="list-style-type: none"> • Device location • Load management system (LMS) mode (static or dynamic) • Power meter models with ID and configuration settings if needed • Maximum current • Degraded mode (load shedding duration and priority: IEC or EV/ZE ready) • Time of use • Digital inputs • Authentication patterns: free, via RFID (list of badges available, RFID tags known and ready), VIP and offline strategy

Other useful information	
Before scheduling the commissioning of the EV infrastructure:	<ul style="list-style-type: none">• Create a list of stakeholder contacts.• Prepare all relevant product documentation (user manual, installation guide, commissioning guide).• Check that all products are updated to their latest firmware version (charging stations, load management system, modem, switch).• For EVlink Pro AC and Schneider Charge Pro charging stations, check that you have the latest version of eSetup application installed on your mobile phone.• The SIM card is needed for wireless installation. Not all charging stations have embedded modem where you can insert a SIM card. Depending on the network architecture, the 4G modem can refer to an external modem or router (4G cellular modem). Before going on site, install all embedded or external SIM cards.

EcoStruxure EV Charging Expert User Interface

EcoStruxure EV Charging Expert monitoring dashboard displays the following information:


- Ongoing status of all the charge points (connectors)
- Load transaction
- Zone configuration

Monitoring dashboard also allows you to manage charging stations:

- Reboot the charging stations
- Start and stop remotely a charging station
- Publish a diagnostic report

Monitoring dashboard is the following screen.


Monitoring dashboard

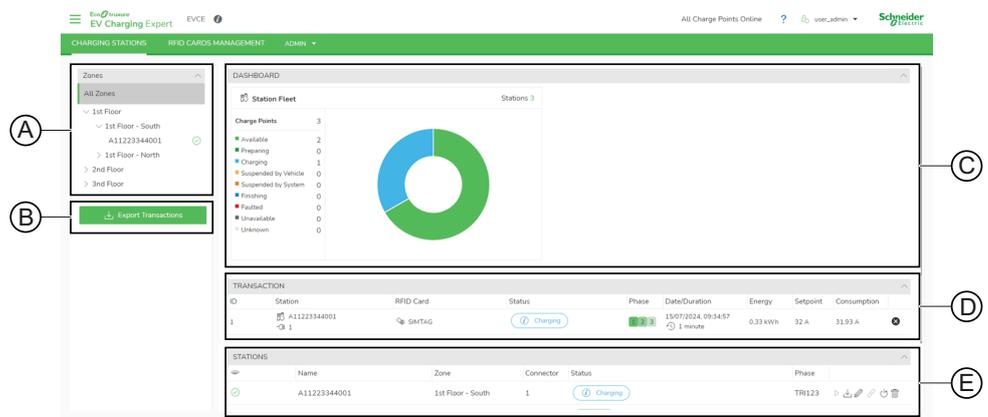

- Zone panel
- Export Transactions** button
- Dashboard giving information about zones and charging stations
- Transaction information and management
- Charging stations assignment and management

Zone Screen


When you select a zone in the zone panel, the following zone screen is displayed.

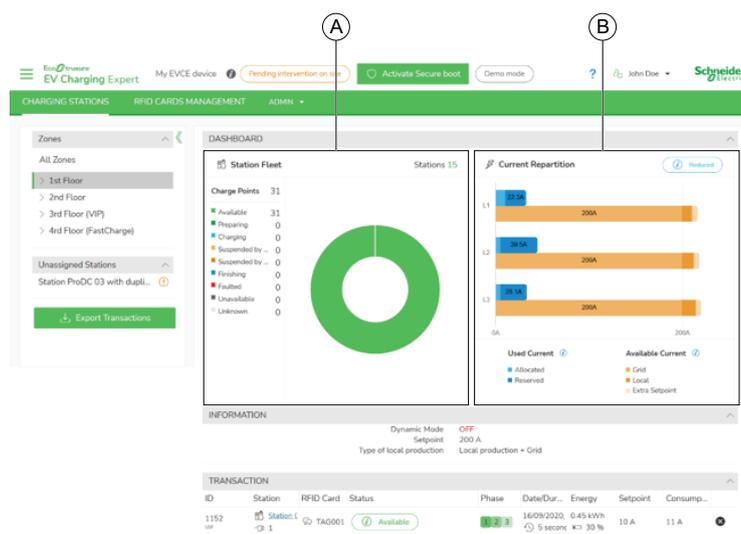

- A. **Station Fleet:** status of the charging stations assigned to the selected zone
- B. **Current Repartition** describes the charging setpoint available according to the active zone maximum current, zone consumption and transactions information:
 - **Allocated:** allocated current to charging stations during transaction
 - **Reserved:** reserved current for building consumptions and disconnected stations (degraded setpoint applies to charging station).
 - **Grid:** available current from grid (with reduction)
 - **Local:** available current from local production
 - **Extra Setpoint:** reallocated setpoint from suspended transactions

Transaction Information and Management

The following transaction information is displayed.

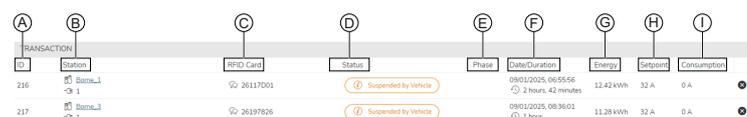

- A. **ID:** unique identifier of the transaction
- B. **Station:** station name and connector used for the charging session
- C. **RFID Card:** RFID card which launches the transaction
- D. **Status:** status of the transaction according to OCPP standard:
 - **Charging**
 - **Suspended by Vehicle**
 - **Suspended by System**
 - **Finishing**
 - **Available**
 - **Preparing**
 - **Faulted**
 - **Unavailable**
 - **Unknown**
- E. **Phase:** phases selected by EV (mono-phase or tri-phased)


- F. **Date/Duration:** transaction start date and effective charging duration (time spent in charging state)
- G. **Energy:** energy consumed by the ongoing transaction
- H. **Setpoint:** current setpoint (current intensity or power allocated to the ongoing transaction)
- I. **Consumption:** actual consumption of the vehicle (current or power)

Station Screen

When you select a charging station in the zone panel, the station screen provides the following information.

- Name
- Charge box identity: used for remote supervision
- VIP status: option to enable VIP access to the charging station
- Electrical phase configuration of the charging station
- Vendor of the charging station
- Firmware version and management
- Current allocated to the charging station in degraded mode

In the station screen, the following log section displays all OCPP commands received by EcoStruxure EV Charging Expert from the selected charging station.

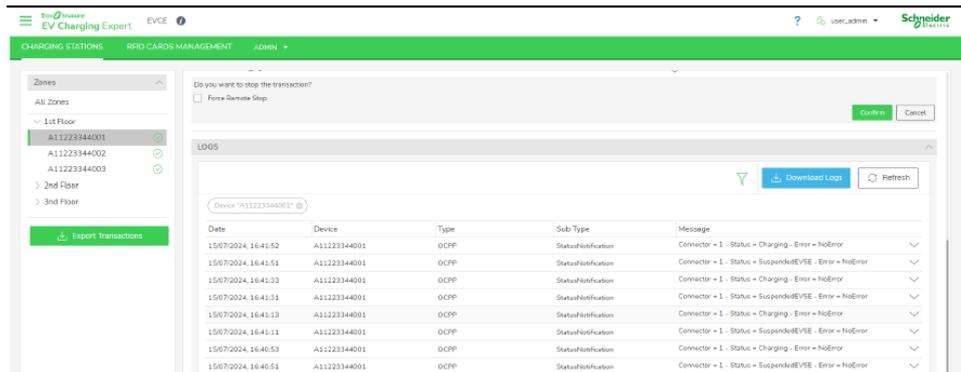

Commissioning EV Infrastructure Systems


What's in This Part

Description of System Architectures	34
System Architecture 1.....	35
System Architecture 2.....	38
System Architecture 3.....	41
System Architecture 4.....	44
System Architecture 5.....	47
Procedures.....	50

Description of System Architectures

The five system architectures are the following:

- System Architecture 1, page 35: Full architecture: supervision - edge load management - charging stations. IT including DHCP server is managed by the customer.
- System Architecture 2, page 38: No supervision. Edge load management and charging stations operated locally by the customer.
- System Architecture 3, page 41: With supervision - charging stations. No edge load management. A 4G cellular modem as an internet gateway and DHCP server.
- System Architecture 4, page 44: Full architecture: supervision - edge load management - charging stations. A 4G cellular modem as an internet gateway and DHCP server .
- System Architecture 5, page 47: Full architecture: supervision - edge load management - charging stations. A 4G cellular modem as an internet gateway limited to the connection to the supervision, and without DHCP server.

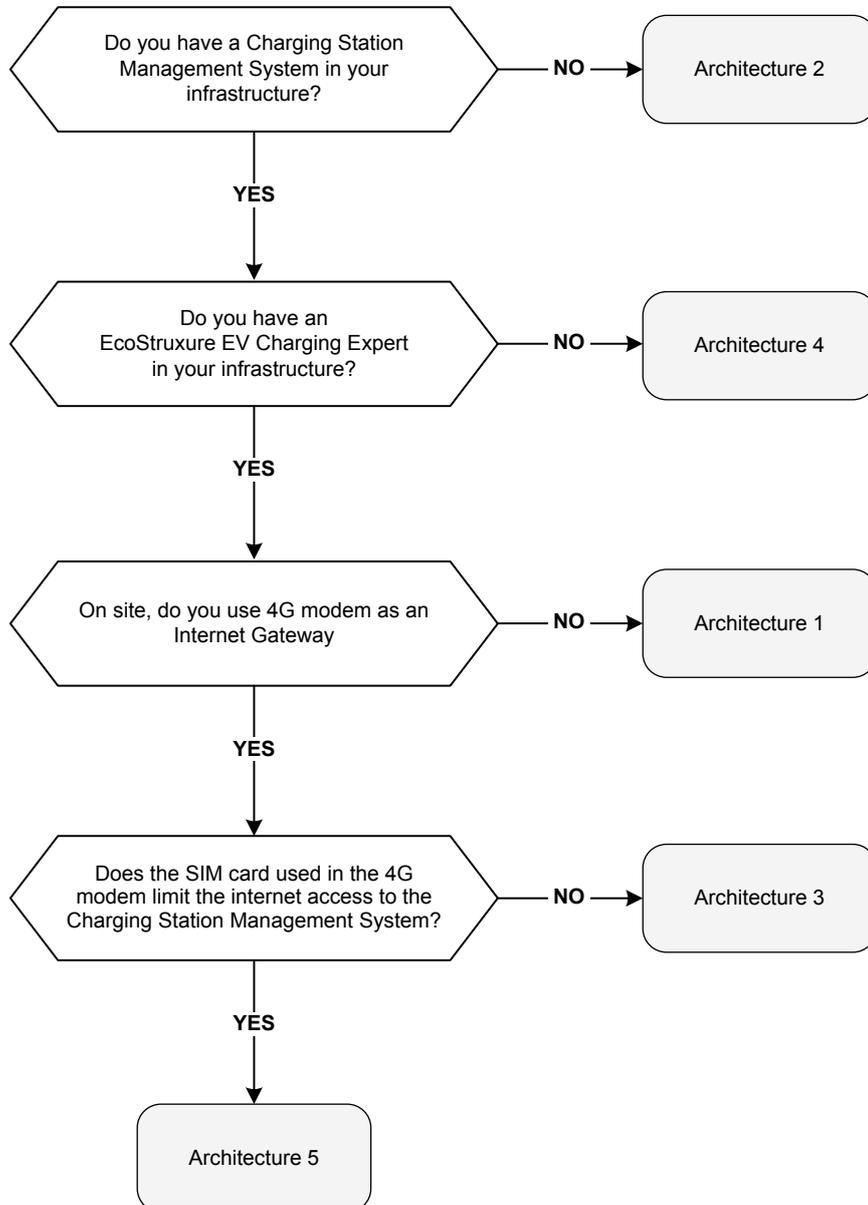

System Architecture 1


What's in This Chapter

System Architecture 1: Presentation	36
System Architecture 1: Commissioning Procedure	37

System Architecture 1: Presentation

The main characteristics of system architecture 1 are the following:

- Compatible with EcoStruxure EV Charging Expert 6.0 and up to 6.2 for local energy production integration
- Load management system mode: dynamic
- DHCP server and gateway managed by the customer
- Digital network: star or daisy chain using managed switches
- EV infrastructure operated by an external charging point operator, no need for authentication or badges
- Greenfield architecture

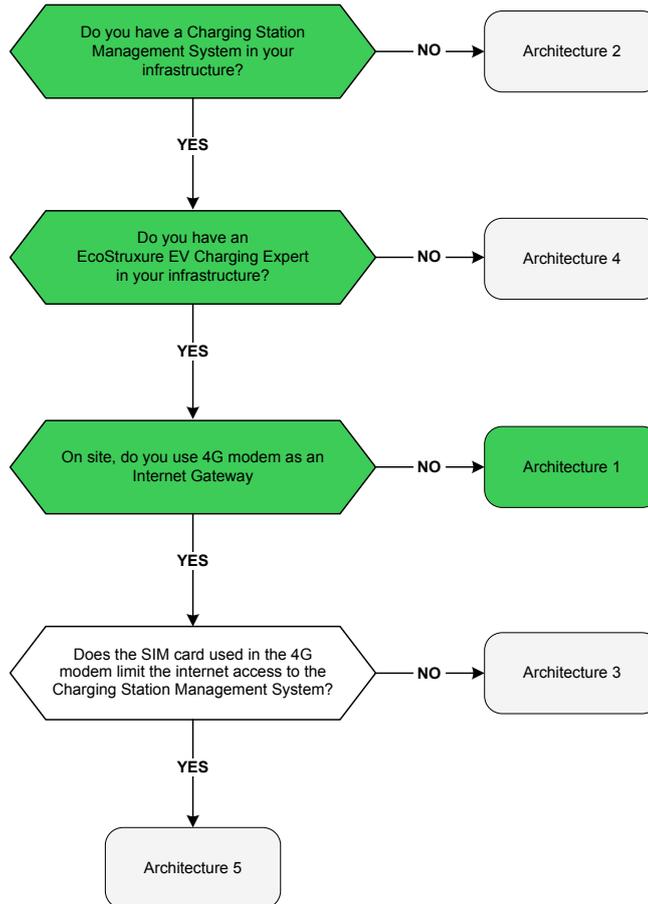

System architecture 1 can be implemented for the following models of charging stations:

Charging station	Minimum version
Schneider Charge Pro	1.18.1
EVlink Pro AC	1.3.8

NOTE: For DC fast charging station and for Schneider Electric legacy ranges of charging stations, contact your local front office.

System Architecture 1: Commissioning Procedure

Follow these steps to commission an EV infrastructure using architecture 1.

1. Configuring the PC to connect to EcoStruxure EV Charging Expert, page 58
2. Connecting to EcoStruxure EV Charging Expert, page 59
3. Checking the installed firmware version, page 60
4. Creating an installer account, page 61
5. Starting a new configuration, page 62
6. Updating network settings, page 63
7. Rebooting EcoStruxure EV Charging Expert, page 65
8. Reconnecting to EcoStruxure EV Charging Expert web page, page 66
9. Configuring charge point operator supervisions, page 67
10. Managing basic authentication and charge point operator certificates, page 70
11. Setting the date and time, page 72
12. Setting energy management, page 73
13. Installing and configuring the charging stations, page 76
14. Relaunching the discovery process, page 86
15. Updating the charging station settings, page 87
16. Finishing the installation of the selected charging stations, page 88
17. Configuring power meters, page 89
18. Creating zones and sub-zones, page 91
19. Assigning charging stations, page 93
20. Configuring time of use and digital inputs, page 95
21. Managing authentication, page 98
22. Finalizing the commissioning, page 100
23. Saving and exporting configuration, page 101

System Architecture 2


What's in This Chapter

System Architecture 2: Presentation	39
System Architecture 2: Commissioning Procedure	40

System Architecture 2: Presentation

The main characteristics of system architecture 2 are the following:

- Compatible with EcoStruxure EV Charging Expert 6.0 and up to 6.2 for local energy production integration
- Load management system mode: dynamic
- DHCP server hosted by EcoStruxure EV Charging Expert
- Digital network: star or daisy chain using managed switches
- No supervision: EV infrastructure operated locally by the customer via EcoStruxure EV Charging Expert, including authentication and RFID badges
- Greenfield architecture

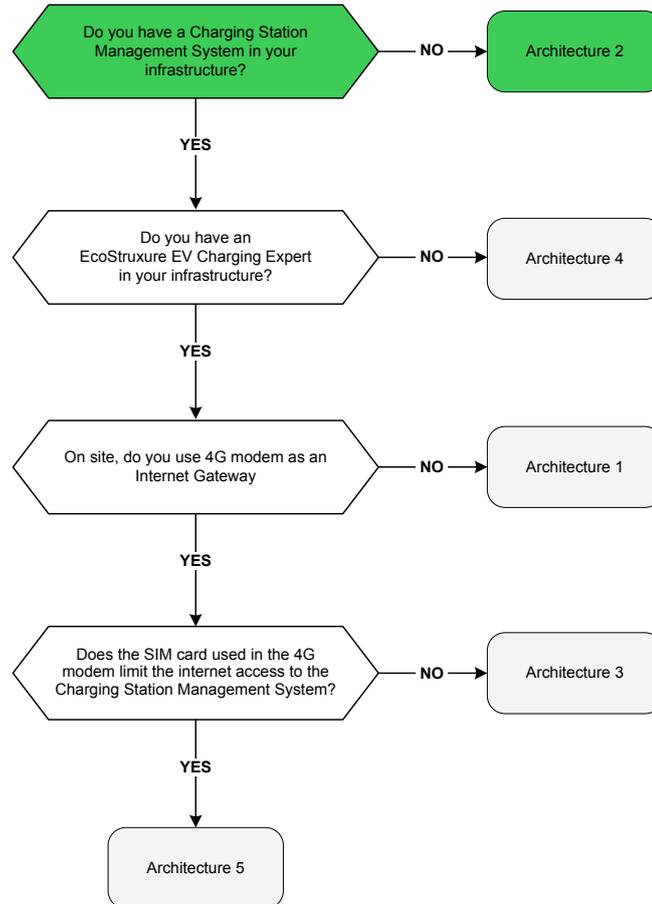

System architecture 2 can be implemented for the following model of charging stations:

Charging station	Minimum version
Schneider Charge Pro	1.18.1
EVlink Pro AC	1.3.8

NOTE: For DC fast charging station and for Schneider Electric legacy ranges of charging stations, contact your local front office.

System Architecture 2: Commissioning Procedure

Follow these steps to commission an EV infrastructure using architecture 2.

1. Configuring the PC to connect to EcoStruxure EV Charging Expert, page 58
2. Connecting to EcoStruxure EV Charging Expert, page 59
3. Checking the installed firmware version, page 60
4. Creating an installer account, page 61
5. Starting a new configuration, page 62
6. Updating network settings, page 63
7. Rebooting EcoStruxure EV Charging Expert, page 65
8. Reconnecting to EcoStruxure EV Charging Expert web page, page 66
9. Setting the date and time, page 72
10. Setting energy management, page 73
11. Installing and configuring the charging stations, page 76
12. Relaunching the discovery process, page 86
13. Updating the charging station settings, page 87
14. Finishing the installation of the selected charging stations, page 88
15. Configuring power meters, page 89
16. Creating zones and sub-zones, page 91
17. Assigning charging stations, page 93
18. Configuring time of use and digital inputs, page 95
19. Managing authentication, page 98
20. Finalizing the commissioning, page 100
21. Saving and exporting configuration, page 101

System Architecture 3


What's in This Chapter

System Architecture 3: Presentation	42
System Architecture 3: Commissioning Procedure	43

System Architecture 3: Presentation

The main characteristics of system architecture 3 are the following:

- Compatible with EcoStruxure EV Charging Expert 6.0 and up to 6.2 for local energy production integration
- Load management system mode: dynamic
- DHCP server hosted by 4G cellular modem, internet connectivity provided via the SIM card supplied by the charge point operator
- Digital network: star or daisy chain using managed switches
- EV infrastructure operated by an external charging point operator
- Greenfield architecture

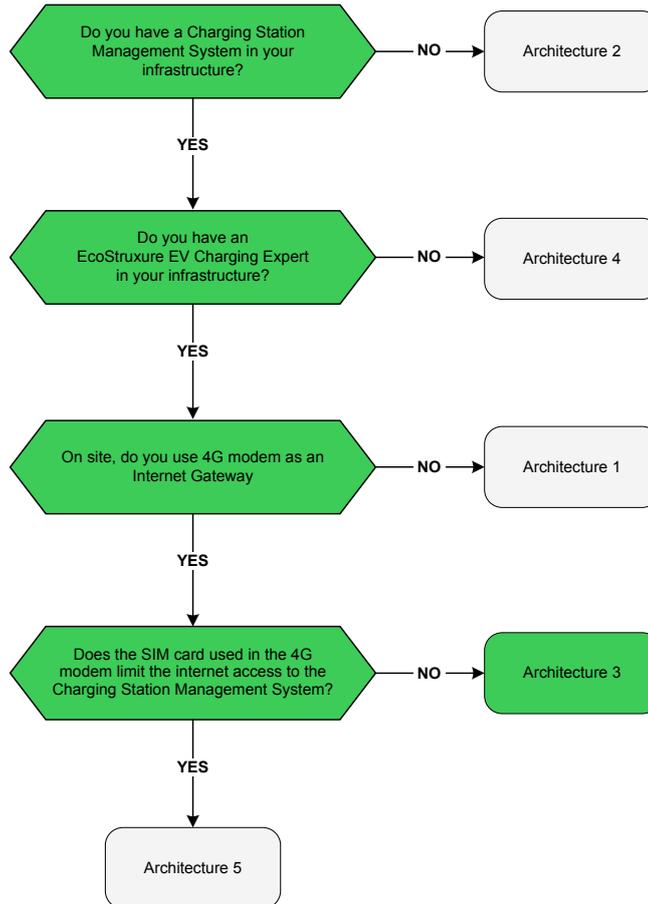

System architecture 3 can be implemented for the following models of charging stations:

Charging station	Minimum version
Schneider Charge Pro	1.18.1
EVlink Pro AC	1.3.8

NOTE: For DC fast charging station and for Schneider Electric legacy ranges of charging stations, contact your local front office.

System Architecture 3: Commissioning Procedure

Follow these steps to commission an EV infrastructure using architecture 3.

1. Configuring the 4G cellular modem with DHCP, page 52
2. Configuring the PC to connect to EcoStruxure EV Charging Expert, page 58
3. Connecting to EcoStruxure EV Charging Expert, page 59
4. Checking the installed firmware version, page 60
5. Creating an installer account, page 61
6. Starting a new configuration, page 62
7. Updating network settings, page 63
8. Rebooting EcoStruxure EV Charging Expert, page 65
9. Reconnecting to EcoStruxure EV Charging Expert web page, page 66
10. Configuring charge point operator supervisions, page 67
11. Managing basic authentication and charge point operator certificates, page 70
12. Setting the date and time, page 72
13. Setting energy management, page 73
14. Installing and configuring the charging stations, page 76
15. Relaunching the discovery process, page 86
16. Updating the charging station settings, page 87
17. Finishing the installation of the selected charging stations, page 88
18. Configuring power meters, page 89
19. Creating zones and sub-zones, page 91
20. Assigning charging stations, page 93
21. Configuring time of use and digital inputs, page 95
22. Managing authentication, page 98
23. Finalizing the commissioning, page 100
24. Saving and exporting configuration, page 101

System Architecture 4


What's in This Chapter

System Architecture 4: Presentation	45
System Architecture 4: Commissioning Procedure	46

System Architecture 4: Presentation

The main characteristics of system architecture 4 are the following:

- EcoStruxure EV Charging Expert is not used
- DHCP server hosted by 4G cellular modem, internet connectivity provided via the SIM card supplied by the charge point operator
- Digital network: star or daisy chain using managed switches
- EV infrastructure operated by an external charging point operator
- Greenfield architecture

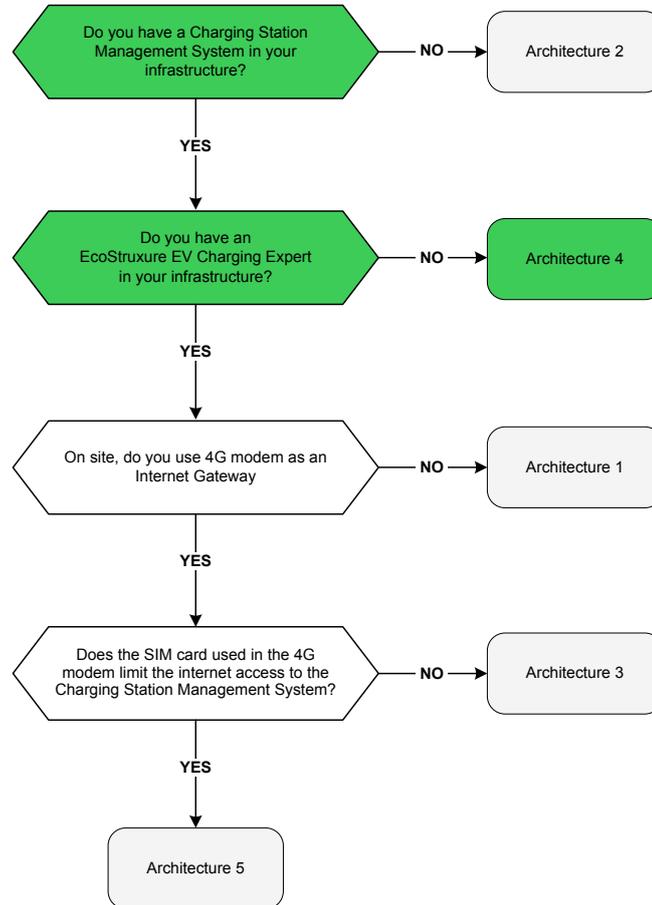

System architecture 4 can be implemented for the following models of charging stations:

Charging station	Minimum version
Schneider Charge Pro	1.18.1
EVlink Pro AC	1.3.8

NOTE: For DC fast charging station and for Schneider Electric legacy ranges of charging stations, contact your local front office.

System Architecture 4: Commissioning Procedure

Follow these steps to commission an EV infrastructure using architecture 4.

1. Configuring the 4G cellular modem with DHCP, page 52
2. Commissioning EVlink Pro AC charging stations one by one by using eSetup application, page 102
3. Commissioning Schneider Charge Pro charging stations one by one by using eSetup application, page 103

System Architecture 5


What's in This Chapter

System Architecture 5: Presentation	48
System Architecture 5: Commissioning Procedure	49

System Architecture 5: Presentation

The main characteristics of system architecture 5 are the following:

- Compatible with EcoStruxure EV Charging Expert 6.0 and up to 6.2 for local energy production integration
- Load management system mode: dynamic
- No DHCP server
- Internet connectivity limited to the local charging station management system
- Digital network: star or daisy chain using managed switches and 4G cellular modem
- EV infrastructure operated by a charging point operator
- Greenfield architecture

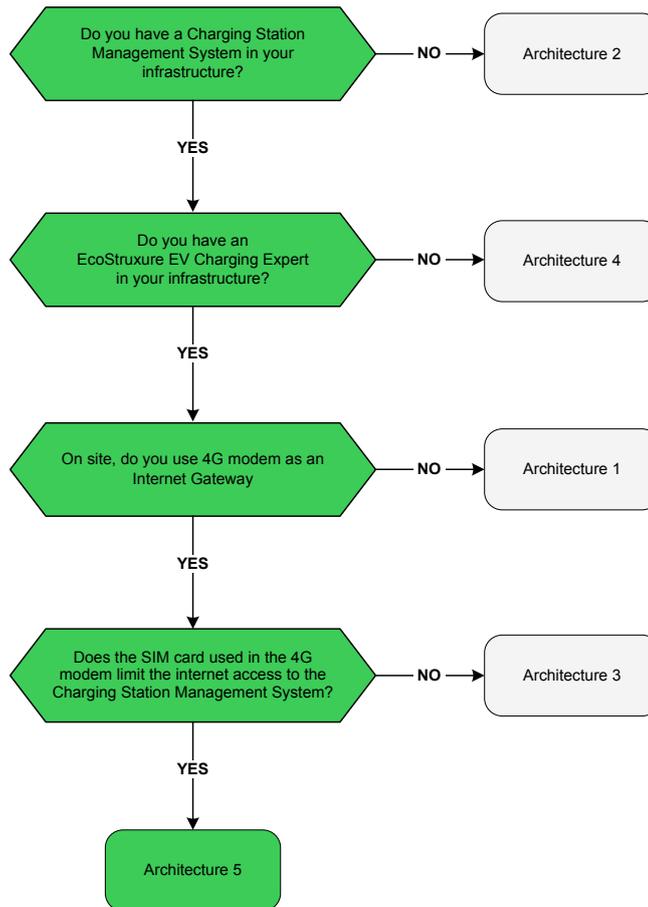

System architecture 5 can be implemented for the following models of charging stations:

Charging station	Minimum version
Schneider Charge Pro	1.18.1
EVlink Pro AC	1.3.8

NOTE: For DC fast charging station and for Schneider Electric legacy ranges of charging stations, contact your local front office.

System Architecture 5: Commissioning Procedure

Follow these steps to commission an EV infrastructure using architecture 5.

1. Configuring the 4G cellular modem without DHCP, page 56
2. Configuring the PC to connect to EcoStruxure EV Charging Expert, page 58
3. Connecting to EcoStruxure EV Charging Expert, page 59
4. Checking the installed firmware version, page 60
5. Creating an installer account, page 61
6. Starting a new configuration, page 62
7. Updating network settings, page 63
8. Rebooting EcoStruxure EV Charging Expert, page 65
9. Reconnecting to EcoStruxure EV Charging Expert web page, page 66
10. Configuring charge point operator supervisions, page 67
11. Managing basic authentication and charge point operator certificates, page 70
12. Setting the date and time, page 72
13. Setting energy management, page 73
14. Installing and configuring the charging stations one by one, page 102
15. Relaunching the discovery process, page 86
16. Updating the charging station settings, page 87
17. Finishing the installation of the selected charging stations, page 88
18. Configuring power meters, page 89
19. Creating zones and sub-zones, page 91
20. Assigning charging stations, page 93
21. Configuring time of use and digital inputs, page 95
22. Managing authentication, page 98
23. Finalizing the commissioning, page 100
24. Saving and exporting configuration, page 101

Procedures

What's in This Chapter

Introduction.....	51
Configuring the 4G Cellular Modem with DHCP	52
Configuring the 4G Cellular Modem without DHCP	56
Configuring the PC to Connect to EcoStruxure EV Charging Expert	58
Connecting to EcoStruxure EV Charging Expert	59
Checking the Installed Firmware Version.....	60
Creating an Installer Account	61
Starting a New Configuration.....	62
Updating Network Settings.....	63
Rebooting EcoStruxure EV Charging Expert.....	65
Reconnecting to EcoStruxure EV Charging Expert Web Page	66
Configuring Charge Point Operator Supervisions	67
Managing Basic Authentication and Charge Point Operator Certificates	70
Setting the Date and Time	72
Setting Energy Management	73
Installing and Configuring the Charging Stations	76
If Installing EVlink Pro AC or Schneider Charge Pro	85
Relaunching the Discovery Process	86
Updating the Charging Station Settings.....	87
Finishing the Installation of the Selected Charging Stations	88
Configuring Power Meters.....	89
Creating Zones and Sub-Zones	91
Assigning Charging Stations	93
Configuring Time of Use and Digital Inputs	95
Managing Authentication	98
Finalizing the Commissioning.....	100
Saving and Exporting Configuration	101
Commissioning EVlink Pro AC Charging Stations One by One by Using eSetup Application	102
Commissioning Schneider Charge Pro Charging Stations One by One by Using eSetup Application	103

Introduction

This part explains all the individual commissioning steps for the five system architectures.

Configuring the 4G Cellular Modem with DHCP


Prerequisites

Before starting the configuration of the EVP3MM 4G cellular modem:

1. Locate the SIM card slot marked SIM on the side of the 4G cellular modem.



2. Push the SIM card into the slot until it snaps into place.
3. Connect to the network according to the IT connectivity map.
4. Open a web browser.
5. Type `https://192.168.0.254/` in the URL field.
6. Select the **Advanced** button to authorize the non-secure connection.
7. Select **Proceed to 192.168.0.254**.
8. On the login page, enter the following:
 - Username: **admin**
 - Password: **EVlink4EV!**

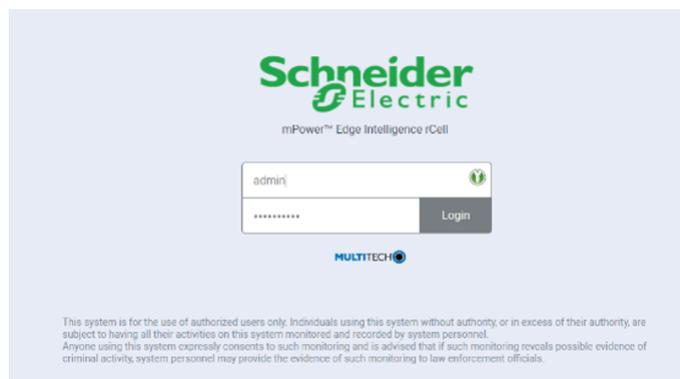


Configuration Procedure

Download the latest firmware of your device from the factory website.

To configure the 4G cellular modem:


1. In the left panel, select **Administration > Firmware Upgrade**.

2. Browse the downloaded binary and select it.
3. Select **Start Upgrade**.

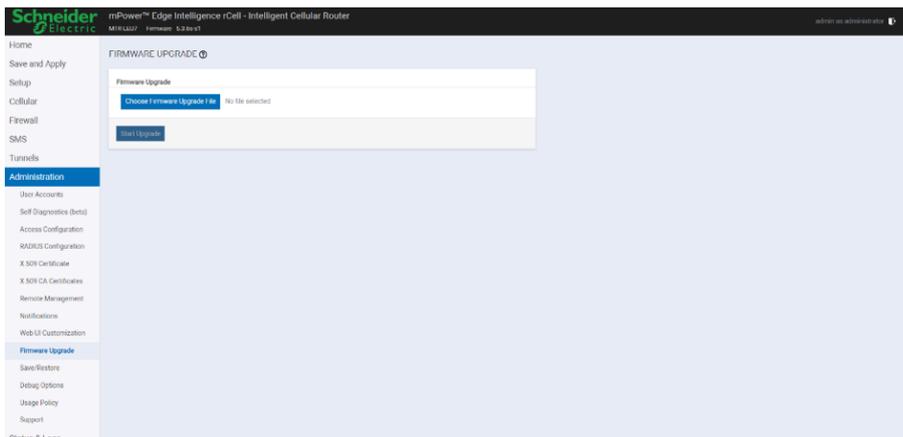


Upgrade can take up to 10 minutes. When upgrade is complete, the modem reboots automatically.

4. Check on the following screen that the cellular radio firmware is updated.

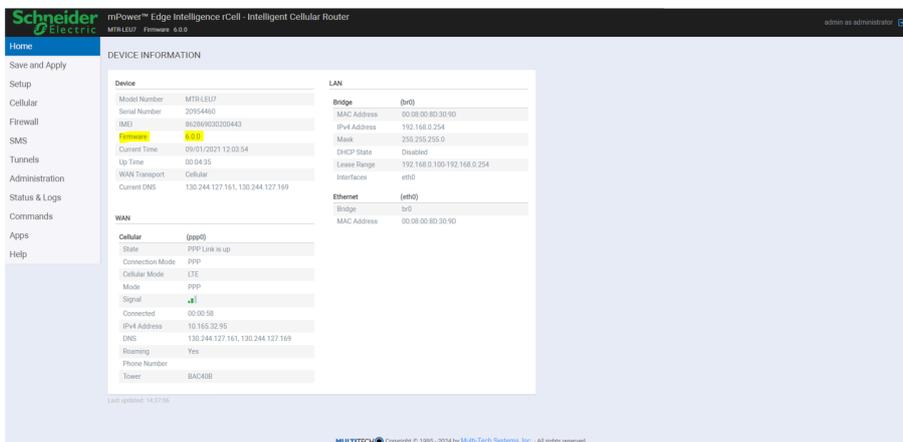

5. In the left panel, select **Cellular > Cellular Configuration**.
6. In **General Configuration**, set the **Mode** to **PPP**.

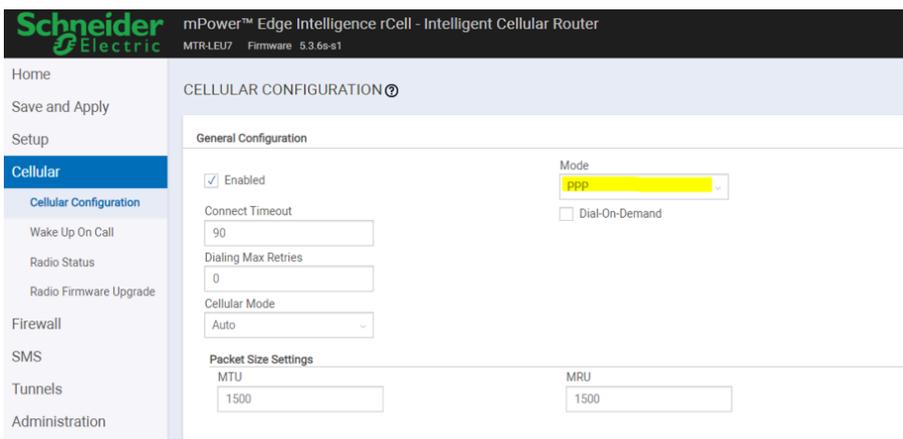

- In **Modem Configuration**, from **Cellular > Cellular Configuration > Modem Configuration**, set the **APN** to **mbb.mobi-data.com**.

Modem Configuration

Dial Number <input type="text" value="*99***1#"/>	Init String 1 <input type="text" value="AT+CSQ"/>
Connect String <input type="text" value="CONNECT"/>	Init String 2 <input type="text"/>
Dial Prefix <input type="text" value="ATDT"/>	Init String 3 <input type="text"/>
SIM Pin <input type="text"/>	Init String 4 <input type="text"/>
PDP Context Mode Auto	
APN <input type="text" value="mbb.mobi-data.com"/>	

- In **Authentication**, from **Cellular > Cellular Configuration > Authentication**, set the **Authentication Type** to **NONE**.

Authentication

Authentication Type

- Select the **Submit** button at the bottom left of the screen.

Data Receive Monitor

Enabled

Window (minutes)

Network Registration Reset Timeout

Enabled

Timeout (minutes)

Current SIM

IMSI <input type="text" value="525053099500468"/>	MCC/MNC <input type="text" value="52505"/>
--	---

- In the left panel, select **Save and Apply**.

Schneider Electric mPower™ Edge Intelligence rCell - Intelligent Cellular Router
MTR-LEU7 Firmware 5.3.6a-s1

Home
Save and Apply
Setup
Cellular
Cellular Configuration
Wake Up On Call
Radio Status
Radio Firmware Upgrade
Firewall
SMS
Tunnels
Administration

CELLULAR CONFIGURATION ⓘ

General Configuration

Enabled Mode
 Dial-On-Demand

Connect Timeout

Dialing Max Retries

Cellular Mode

Packet Size Settings


MTU <input type="text" value="1500"/>	MRU <input type="text" value="1500"/>
--	--

- Select **OK** to apply the changes. The 4G cellular modem reboots.


Checking the Configuration

To check the configuration of the 4G cellular modem:

1. On the **Home** page, in the **WAN** section, check that the **State** is the following: **PPP Link is up**.

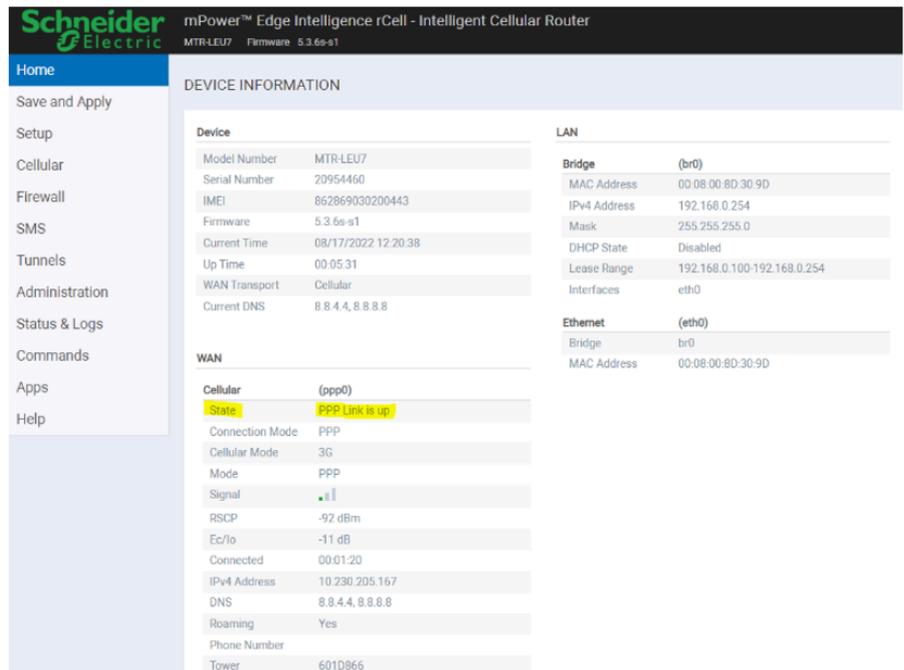

2. Check that the **CD** green LED on the 4G cellular modem is on.

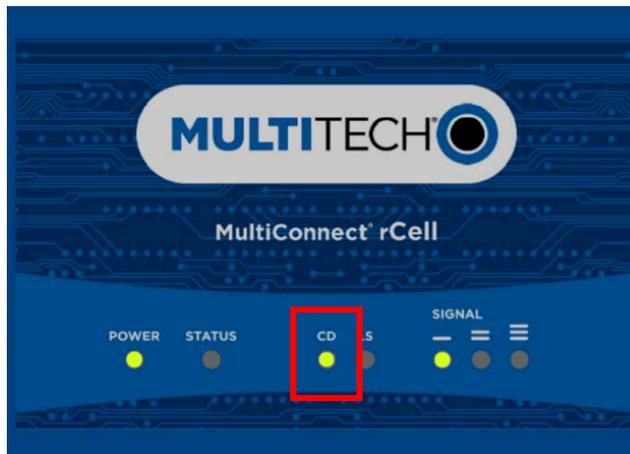

3. Check that DHCP server is set up according to the customer IT inputs (in the correct address ranges) in EcoStruxure EV Charging Expert.
4. Check the internet connectivity.

Architecture	Next step
Architecture 3, page 43	Configuring PC to connect to EcoStruxure EV Charging Expert, page 58
Architecture 4, page 46	Commissioning EVlink Pro AC charging stations one by one by using eSetup application, page 102
Refer to Description of System Architectures, page 34.	

Configuring the 4G Cellular Modem without DHCP

If you do not need the DHCP server, you can disable the 4G cellular modem as a DHCP server.

Prerequisites


Before starting the configuration of the EVP3MM 4G cellular modem:

1. Locate the SIM card slot marked SIM on the side of the 4G cellular modem.
2. Push the SIM card into the slot until it snaps into place.
3. Connect to the network according to the IT connectivity map.
4. Open a web browser.
5. Type `https://192.168.0.254/` in the URL field.
6. Select the **Advanced** button.
7. Select **Proceed to 192.168.0.254**.
8. On the login page, enter the following:
 - Username: **admin**
 - Password: **EVlink4EV!**

Configuration Procedure

To configure the 4G cellular modem:

1. In the left panel, select **Setup**.
2. Select the **DHCP Configuration** tab.
3. In the displayed list, identify the DHCP server used.
4. In the **Options** column, select the pen to edit the parameters.

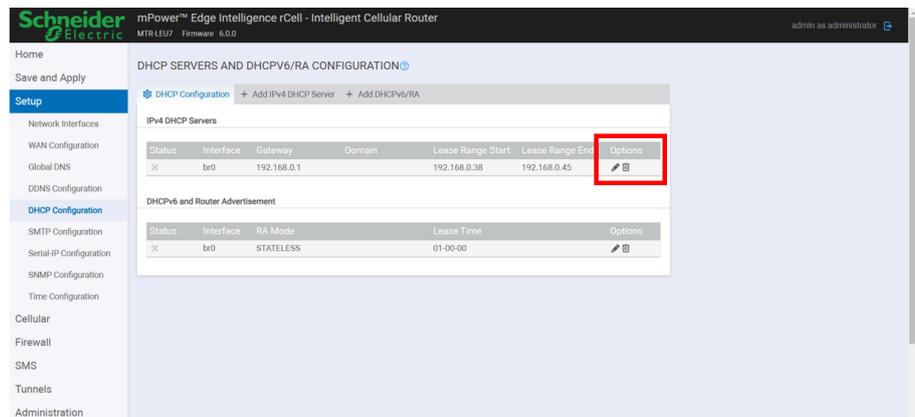


The screenshot shows the configuration page for the Schneider Electric mPower Edge Intelligence rCell. The page title is "DHCP SERVERS AND DHCPV6/RA CONFIGURATION". The left sidebar shows the "Setup" menu. The main content area displays two tables: "IPv4 DHCP Servers" and "DHCPv6 and Router Advertisement".


Status	Interface	Gateway	Domain	Lease Range Start	Lease Range End	Options
X	br0	192.168.0.1		192.168.0.38	192.168.0.45	

Status	Interface	RA Mode	Lease Time	Options
X	br0	STATELESS	01-00-00	

5. Deselect the **Enabled** check box.

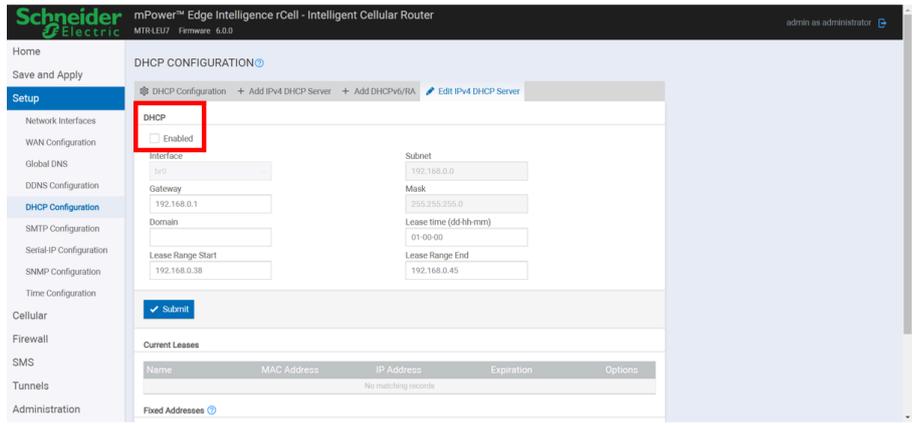

On the **Home** screen, the **DHCP State** indicates **Disabled**.

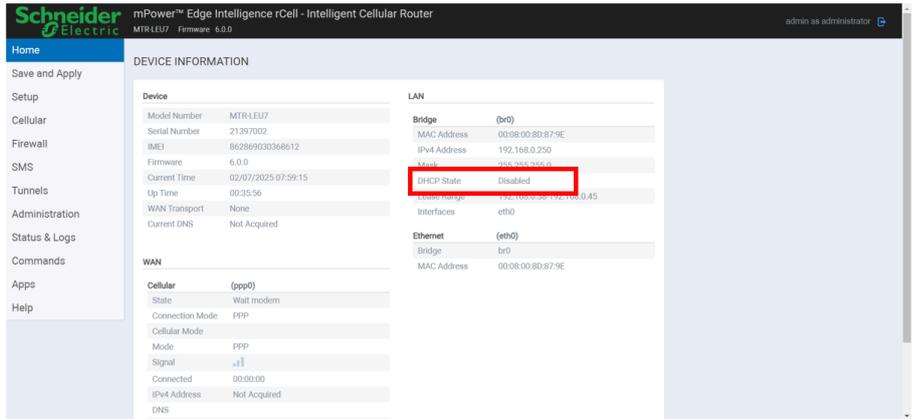

Architecture	Next step
Architecture 5, page 49	Configuring PC to connect to EcoStruxure EV Charging Expert, page 58
Refer to Description of System Architectures, page 34.	

Configuring the PC to Connect to EcoStruxure EV Charging Expert

1. Connect your PC to the EcoStruxure EV Charging Expert Ethernet network.
2. Open the local network properties menu on your PC.
3. Open the Internet protocol TCP/IP v4 properties.
4. Set the static IP address properties as follows:
 - IP address: 192.168.0.x (where x is a number between 50 and 100)
 - Subnet mask: 255.255.255.0
 - No default gateway
 - No DNS server
 - No proxy

Architecture	Next step
Architecture 1, page 37	Connecting to EcoStruxure EV Charging Expert, page 59
Architecture 2, page 40	Connecting to EcoStruxure EV Charging Expert, page 59
Architecture 3, page 43	Connecting to EcoStruxure EV Charging Expert, page 59
Architecture 4, page 46	Connecting to EcoStruxure EV Charging Expert, page 59
Architecture 5, page 49	Connecting to EcoStruxure EV Charging Expert, page 59
Refer to Description of System Architectures, page 34.	

Connecting to EcoStruxure EV Charging Expert

1. Open a web browser.
2. Type **192.168.0.128** in the URL field.

NOTE: A message may be displayed. If this occurs:

1. Select the **Advanced** button to authorize the non-secure connection.
2. Select **Proceed to 192.168.0.128 (unsafe)**.


Architecture	Next step
Architecture 1, page 37	Checking the installed firmware version, page 60
Architecture 2, page 40	Checking the installed firmware version, page 60
Architecture 3, page 43	Checking the installed firmware version, page 60
Architecture 4, page 46	Checking the installed firmware version, page 60
Architecture 5, page 49	Checking the installed firmware version, page 60
Refer to Description of System Architectures, page 34.	

Checking the Installed Firmware Version

1. Check the installed firmware version for:
 - EcoStruxure EV Charging Expert
 - the charging stations (supported baseline)

Use the latest release note of EcoStruxure EV Charging Expert and of the charging station that are available on se.com.


2. If necessary, select **Update Firmware** to download the latest EcoStruxure EV Charging Expert firmware available from www.se.com.

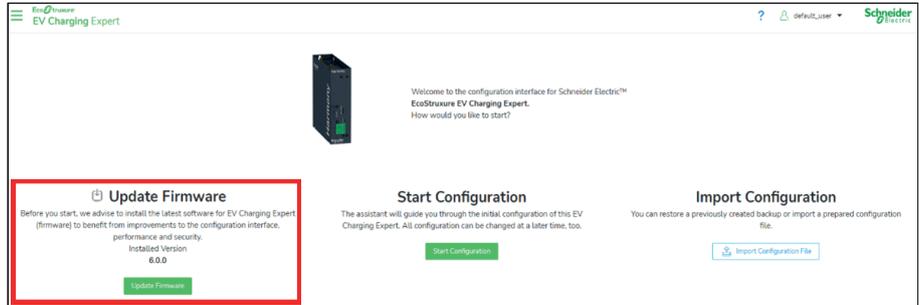

Architecture	Next step
Architecture 1, page 37	Creating an installer account, page 61
Architecture 2, page 40	Creating an installer account, page 61
Architecture 3, page 43	Creating an installer account, page 61
Architecture 4, page 46	Creating an installer account, page 61
Architecture 5, page 49	Creating an installer account, page 61
Refer to Description of System Architectures, page 34.	

Creating an Installer Account

The **Credentials** screen is the following.

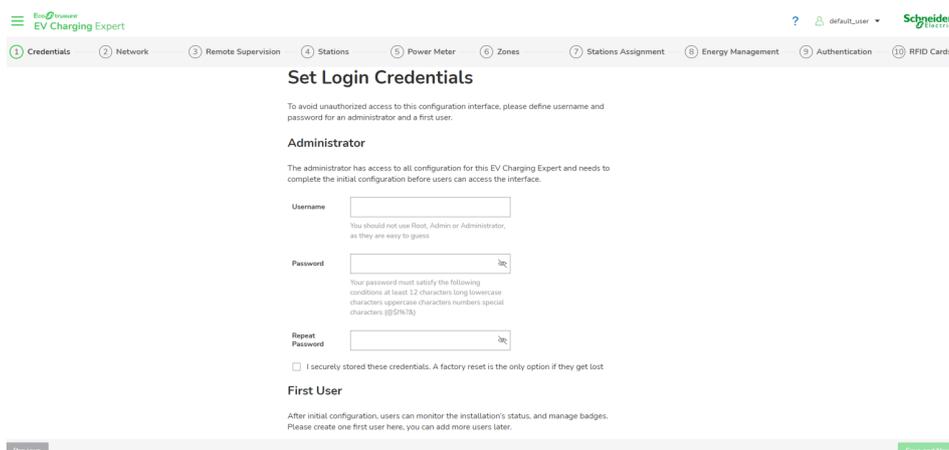

Create an administrator profile and a user profile:

- **Administrator:** has access to all configuration for EcoStruxure EV Charging Expert and needs to complete the initial configuration before users can access the interface.
- **Users:** after initial configuration, users can monitor the installation status, and manage badges.

Fill in the following fields:


- **Username:** do not use Root, Admin or Administrator, as they are easy to guess.
- **Password:** the password must satisfy the required conditions.
- Check box to indicate that you securely stored these credentials. A factory reset is the only option if they get lost.

Architecture	Next step
Architecture 1, page 37	Starting a new configuration, page 62
Architecture 2, page 40	Starting a new configuration, page 62
Architecture 3, page 43	Starting a new configuration, page 62
Architecture 4, page 46	Starting a new configuration, page 62
Architecture 5, page 49	Starting a new configuration, page 62
Refer to Description of System Architectures, page 34.	

Starting a New Configuration

To configure EV Charging Expert:

1. Select the wizard **Start Configuration**.

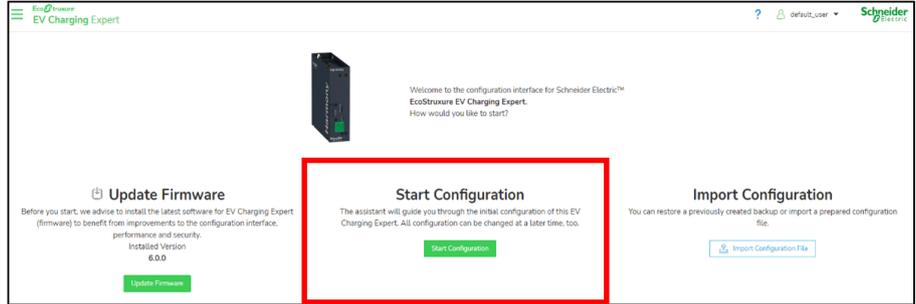


2. Follow the indicated procedure.

Architecture	Next step
Architecture 1, page 37	Updating network settings, page 63
Architecture 2, page 40	Updating network settings, page 63
Architecture 3, page 43	Updating network settings, page 63
Architecture 4, page 46	Updating network settings, page 63
Architecture 5, page 49	Updating network settings, page 63
Refer to Description of System Architectures, page 34.	

Updating Network Settings

The **Network** screen is the following.

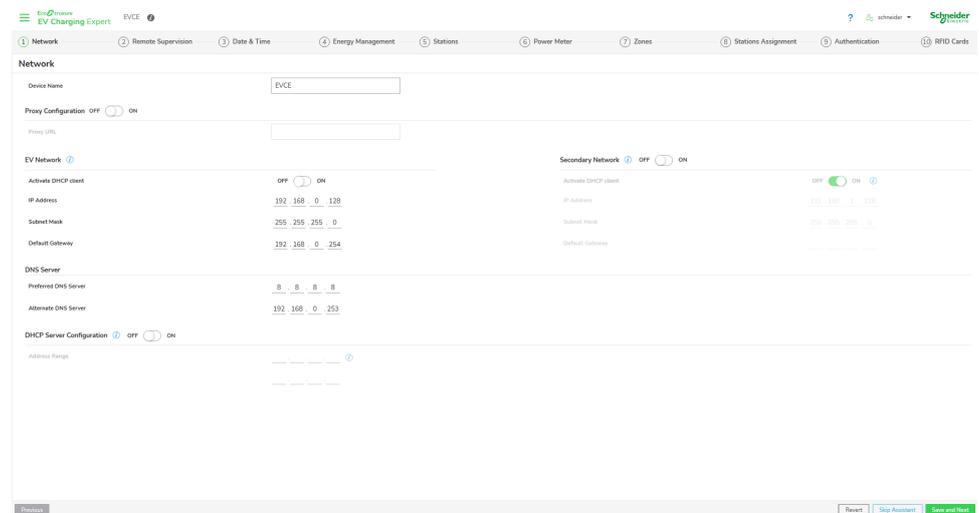

Update network settings (for example, IP, DNS) according to the information given by the IT manager of the customer site:

- **Device Name**
- **EV Network:**
 - **Active DHCP client**
 - **IP Address**
 - **Subnet Mask**
 - **Default Gateway**
- **DNS Server:**
 - **Preferred DNS Server**
 - **Alternate DNS Server**

See *IT plan and network information*, page 28.

Factory settings are the following:

Fields	Factory setting	Description
Device Name	My EVCE device	Your EcoStruxure EV Charging Expert device
IP Address	192.168.0.128	Network IP address
Subnet Mask	255.255.255.0	Network sub-network mask
Default Gateway⁽¹⁾	192.168.0.254	Gateway IP address. Mandatory to connect two networks so that devices on one network can communicate with the devices of another network.
Preferred DNS Server⁽²⁾	8.8.8.8	Preferred DNS server IP address ⁽²⁾
Alternate DNS Server	–	Other DNS server IP address ⁽²⁾
DHCP Server Configuration	OFF	ON/OFF When DHCP server is managed by customer, DHCP server remains OFF .

(1) Address of the modem used for the connection to the supervision, if any. All charging stations are on the same sub-network as EcoStruxure EV Charging Expert and must be configured with the same gateway IP address.

(2) DNS server is used to convert URL to IP address. May be provided by the remote supervision (for example, through a dedicated SIM card). Google is the DNS server by default.

When you have finished updating network settings, select **Save and Next**.

Architecture	Next step
Architecture 1, page 37	Rebooting EcoStruxure EV Charging Expert, page 65
Architecture 2, page 40	Rebooting EcoStruxure EV Charging Expert, page 65
Architecture 3, page 43	Rebooting EcoStruxure EV Charging Expert, page 65
Architecture 4, page 46	Rebooting EcoStruxure EV Charging Expert, page 65
Architecture 5, page 49	Rebooting EcoStruxure EV Charging Expert, page 65
Refer to Description of System Architectures, page 34.	

Rebooting EcoStruxure EV Charging Expert

If you have changed the network mask, configure the PC again. See *Switching on the Device and Configuring the PC*, page 58.

If you have not changed the network mask, you can proceed with the next step.

Architecture	Next step
Architecture 1, page 37	Reconnecting to EcoStruxure EV Charging Expert web page, page 66
Architecture 2, page 40	Reconnecting to EcoStruxure EV Charging Expert web page, page 66
Architecture 3, page 43	Reconnecting to EcoStruxure EV Charging Expert web page, page 66
Architecture 4, page 46	Reconnecting to EcoStruxure EV Charging Expert web page, page 66
Architecture 5, page 49	Reconnecting to EcoStruxure EV Charging Expert web page, page 66
Refer to Description of System Architectures, page 34.	

Reconnecting to EcoStruxure EV Charging Expert Web Page


Reconnect to EcoStruxure EV Charging Expert web page using the new IP address.

Architecture	Next step
Architecture 1, page 37	Configuring charge point operator supervisions, page 67
Architecture 2, page 40	Setting the date and time, page 72
Architecture 3, page 43	Configuring charge point operator supervisions, page 67
Architecture 4, page 46	Setting the date and time, page 72
Architecture 5, page 49	Configuring charge point operator supervisions, page 67
Refer to Description of System Architectures, page 34.	

Configuring Charge Point Operator Supervisions

To configure charge point operator supervisions:


1. Select **ADMIN > Configuration > Remote Supervision**.
2. Select your type of EcoStruxure EV Charging Expert supervision:
 - **Local:** EcoStruxure EV Charging Expert is managing authentication rules and badges.
 - **Unique:** one supervision is managing authentication rules and badges of the complete installation.
 - **Multiple:** charging stations are divided in groups managed by a specific supervision or by EcoStruxure EV Charging Expert.

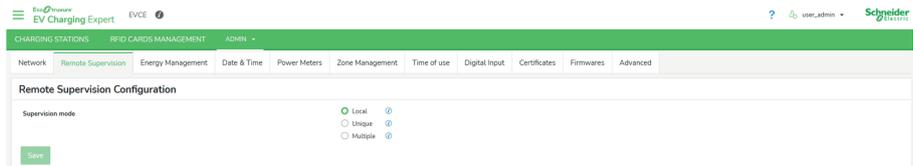

NOTE: Between the charging stations and the remote supervision, the communication protocol must be OCPP 1.6 Json.

For Unique Supervision


1. Select **Unique** and **Save**.

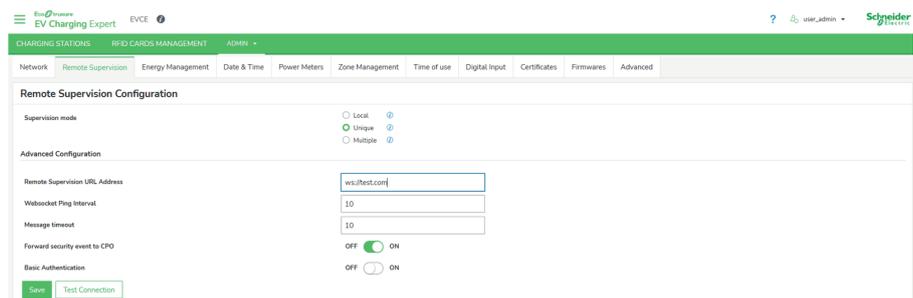

2. Enter the **Remote Supervision URL Address:** WebSocket (ws) or WebSocket Secure (wss). It is recommended to use a WebSocket Secure as a good practice of cybersecurity, and to add a certificate if needed.
3. **Websocket Ping Interval:** positive values are interpreted as number of seconds between pings. The value must be between 1 and 60 seconds.
4. **Message timeout:** interval between request and response OCPP message before considering the connection lost. The value must be between 1 and 60 seconds.
5. **Forward security event to CPO:** OCPP security events.
6. Select **Save**.

For Multiple Supervisions

1. Select Multiple.

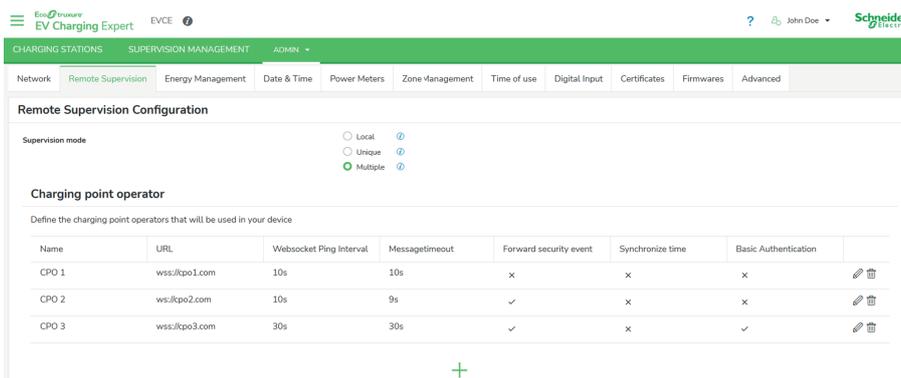


2. To add your supervisions, select the + sign.
3. To configure each supervision, follow steps 2 to 6 described in the process for a unique supervision, page 67.

Multiple supervisions option offers the possibility to manage authentication strategy according to supervision or local strategy. To manage the installation, it is necessary to create authentication groups and assigned charging stations to a group. An authentication group is a selection of charging stations associated to a charging point operator.

There are two charging point operator options:

- Supervision as charging point operator: select in the list the supervision already configured.
- **Local** as charging point operator. For detailed information, see [Managing Authentication](#), page 98.

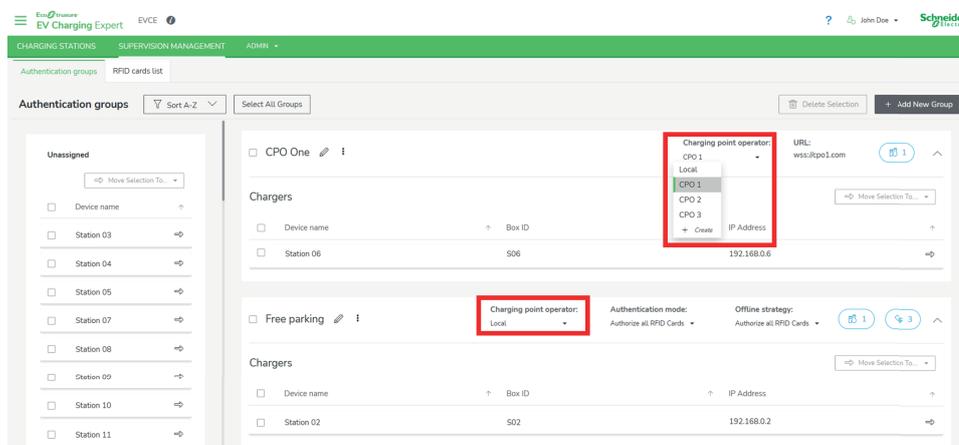

IMPORTANT: When remote supervision option is enabled:

- It is the responsibility of the remote supervision system to handle EV driver authentication and to consider charging station specific keys for authentication management.
- The date and time are provided by the Charging Station Management System, but it is necessary to configure the time zone.

Architecture	Next step
Architecture 1, page 37	Managing basic authentication and charge point operator certificates, page 70
Architecture 3, page 43	Managing basic authentication and charge point operator certificates, page 70
Architecture 4, page 46	Managing basic authentication and charge point operator certificates, page 70


Architecture	Next step
Architecture 5, page 49	Managing basic authentication and charge point operator certificates, page 70
Refer to Description of System Architectures, page 34.	

Managing Basic Authentication and Charge Point Operator Certificates

Managing Basic Authentication

To help secure communication between EcoStruxure EV Charging Expert and supervision, add a basic authentication password for all charging stations. There are two options:


- One unique password for each charging station:
 1. Select each charging station on the installation page.
 2. Select **Change password**.
- Same password for all charging stations: when this option is selected, a popup appears to add a basic authentication key according to two formats (ASCII or HEXA format). The password is used for all charging stations. It can be changed later by supervision through OCPP commands.

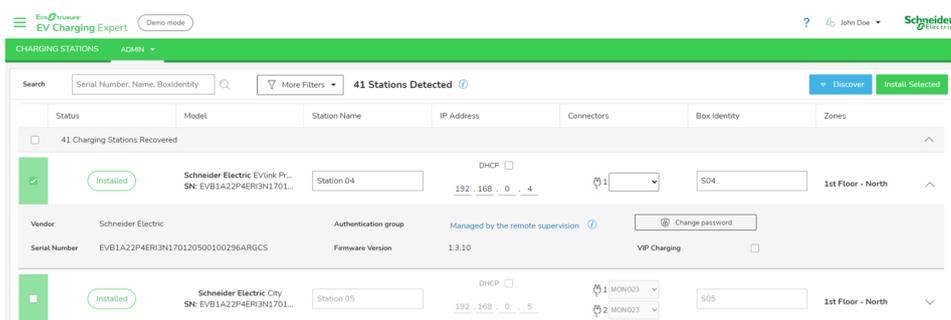

Managing Charge Point Operator Supervision Certificates

To manage charge point operator supervision certificates:

1. Select **ADMIN > Certificates**.
2. To add or delete certificates, select **Manage Certificates**. For example, you can upload in this bank of certificates a new remote supervision certificate to perform a WebSocket secure connection.

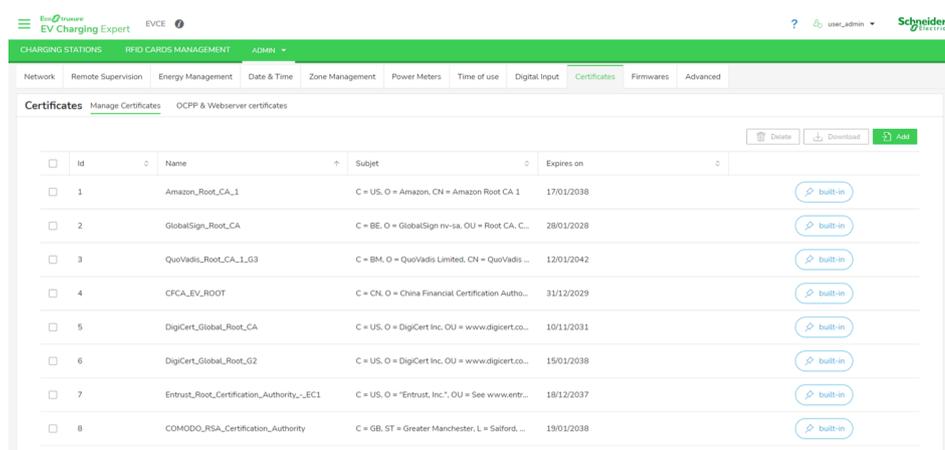


Architecture	Next step
Architecture 1, page 37	Setting the date and time, page 72
Architecture 3, page 43	Setting the date and time, page 72
Architecture 4, page 46	Setting the date and time, page 72

Architecture	Next step
Architecture 5, page 49	Setting the date and time, page 72
Refer to Description of System Architectures, page 34.	

Setting the Date and Time

1. Select your time zone.
2. Synchronize date and time of your installation.

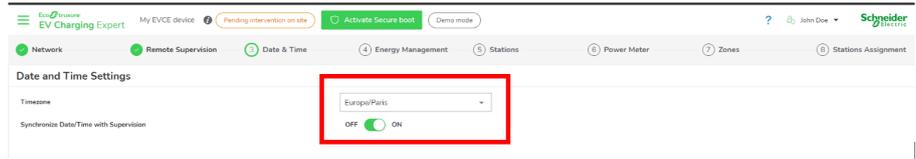


3. Select **Save and Next**.
4. To enable the wizard that guides you through the settings, click **Next**.

Architecture	Next step
Architecture 1, page 37	Setting energy management, page 73
Architecture 2, page 40	Setting energy management, page 73
Architecture 3, page 43	Setting energy management, page 73
Architecture 4, page 46	Setting energy management, page 73
Architecture 5, page 49	Setting energy management, page 73
Refer to Description of System Architectures, page 34.	

Setting Energy Management

The following screen is displayed.

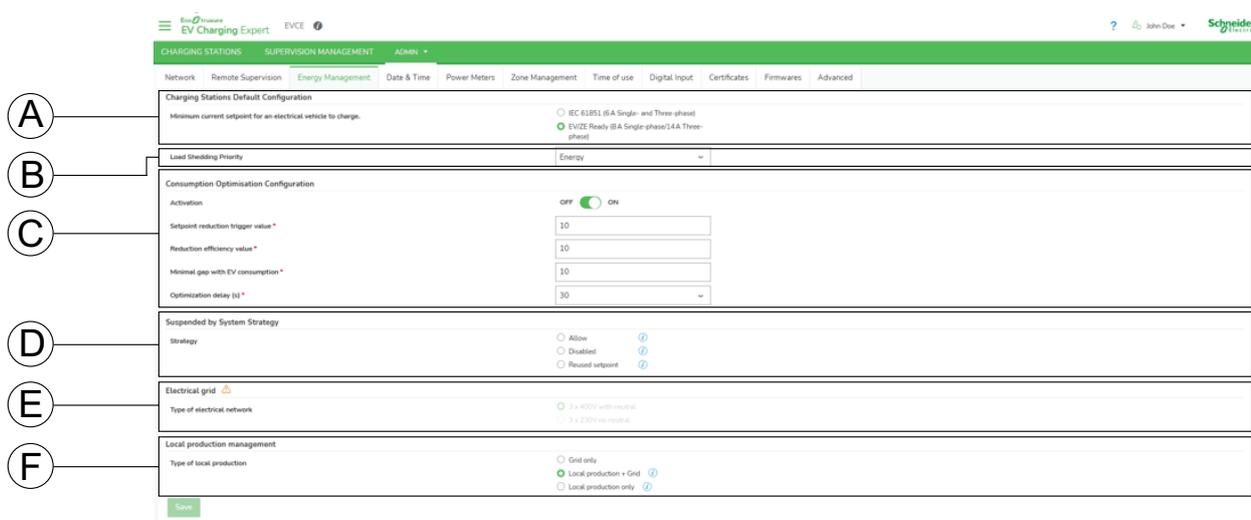

- A. Minimum current setpoint for an electrical vehicle to charge.
- B. Load Shedding Priority: Energy/Duration
- C. Consumption Optimisation Configuration
- D. Suspended by System Strategy
- E. Electrical grid: 3 x 400V with neutral/3 x 230V no neutral
- F. Local production management

Setting	Value	Description
Minimum current setpoint for an electrical vehicle to charge	IEC 61851	6 A in both single and 3-phases connection
	EV/ZE ready	8 A in single-phase, 14 A in 3-phase connection
Load Shedding Priority	Energy (default value)	Proportional to the consumed energy (kWh). This option favors transaction that delivers the lowest amount of energy.
	Duration	Proportional to the charging time. This option favors transaction that has been charging for the least time.
Consumption Optimisation Configuration	Setpoint reduction trigger value	Difference between decreasing EV consumption and setpoint before triggering the optimization. Default value: 5 seconds Range: 0.1 s – 10 s There is a warning before changing this parameter.
	Reduction efficiency value	Gap between the consumption and the new setpoint calculated by the optimization. Default value: 3 seconds Range: 0.1 s – 10 s There is a warning before changing this parameter.
	Minimal gap with EV consumption	Gap between the increasing EV consumption and the setpoint triggering more power allocation to the charging station. Default value: 1 second Range: 0.1 s – 10 s There is a warning before changing this parameter.

Setting	Value	Description
Suspended by System Strategy	Allow	When Allow Suspended by System Strategy option is selected, if a transaction stops consuming energy (current lower than 1 A), EcoStruxure EV Charging Expert stops the transaction and restarts the transaction after a wake-up EV interval defined (in seconds).
	Disabled	–
	Reused setpoint	–
Local production management	Grid only (default value): power coming only from grid	–
	Local production + Grid : local solar production is added to power coming from utility for higher consumption capacity.	If chosen, it is necessary to add power meter dedicated to solar production. See <i>Configuring Power Meters</i> , page 89 and Item 5. how to associate the local production to a zone, page 91. The associated zone can include charging stations. In case of several photovoltaic production zones, one power meter per zone is required.
	Load production only : enables green charging by considering solar energy only as available power for your EV charging installation	



IMPORTANT: When an Energy or Building Management System manages a load reduction, time of use or digital input concerns only the maximum current allocated to the zone. Additional current provided by local production is not taken into account.


Example: if we consider a zone with 100 A and a 70% reduction, that integrates a 20 A solar production, 90 A is available for the charging stations.

For detailed information, refer to *EcoStruxure EV Charging Expert User Guides*, page 10.

If we consider a dynamic zone with 70 A, that integrates solar production and three charging stations:

- The main power meter computes the consumption of the charging stations and the building.
- The solar power meter measures the local energy production.

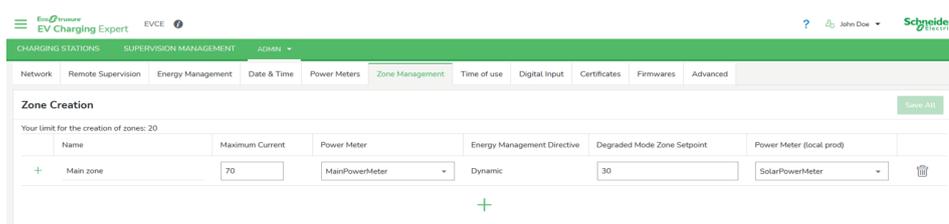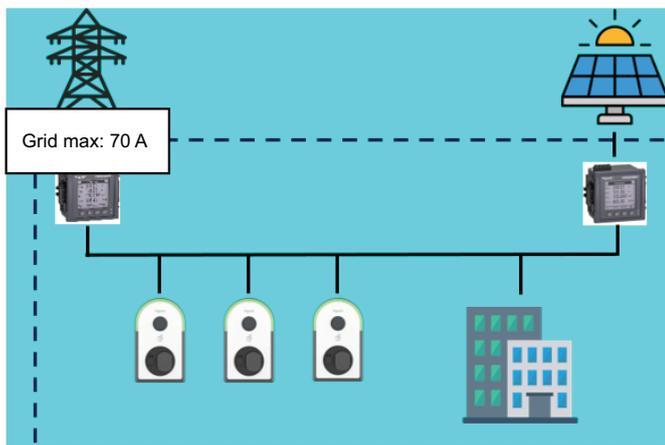

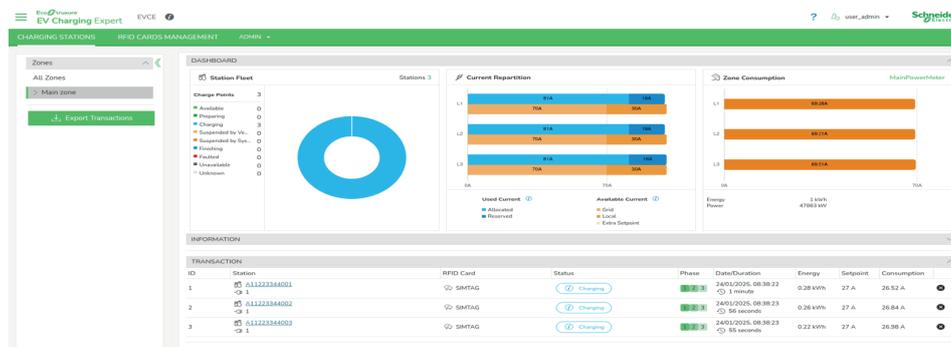

On the dashboard, three transactions are in progress.

The maximum current of the zone is 70 A.

It is increased to 100 A with the addition of 30 A of local energy production.

If the building consumes 19 A, the energy allocated to each transaction is 27 A.

$$\frac{(Max\ current + Local\ production) - Building\ consumption}{Number\ of\ transaction} = \frac{(70\ A + 30\ A) - 19\ A}{3} = 27\ A$$

Energy Management Setting Procedure

- Set the following parameters for EV infrastructure energy management:
 - Minimum Current Setpoint for an Electrical Vehicle to Charge: IEC 61851**
 - Load Shedding Priority: Energy**
 - Consumption Optimisation Configuration: ON**
 - Allow Suspended by System: ON**
- Select **Save and Restart**.

Architecture	Next step
Architecture 1, page 37	Installing and configuring the charging stations, page 76
Architecture 2, page 40	Installing and configuring the charging stations, page 76
Architecture 3, page 43	Installing and configuring the charging stations , page 76
Architecture 4, page 46	Installing and configuring the charging stations, page 76
Architecture 5, page 49	If installing EVlink Pro AC or Schneider Charge Pro, page 85
Refer to Description of System Architectures, page 34.	

Installing and Configuring the Charging Stations

To install and configure AC charging stations, it is recommended to switch on the charging stations in groups of ten.




Install and Configure Charging Stations

All stations that should be installed need to be powered on and connected to the network. After discovery, select stations you want to be managed by EV Charging Expert and configure them.

Discover Stations

For you to identify the stations, they need a name that indicates their location. If they aren't named yet, you will need their serial number.

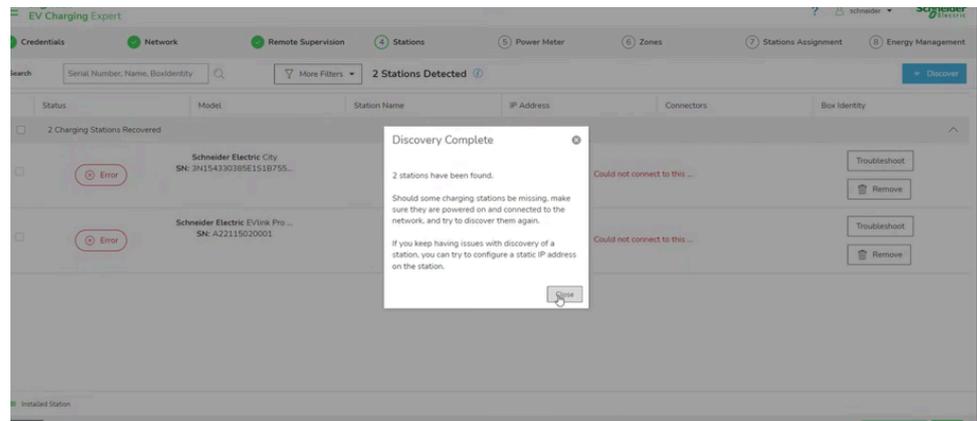

If some charging stations are not discovered, you may need to update the charging station firmware. If so, follow the procedure that applies to the charging station range:

Procedures to update EVlink Pro AC charging station firmware, page 77

Procedure to update Schneider Charge Pro charging station firmware, page 84

Procedures to Update EVlink Pro AC Charging Station Firmware

Follow one of these methods to update the EVlink Pro AC charging station firmware:

Connecting Schneider Electric cloud with eSetup application, page 77
Manually upgrading the firmware of the charging station with USB key and eSetup application, page 77
Using EcoStruxure EV Charging Expert as temporary HTTP server and eSetup application, page 78

Updating the EVlink Pro AC Firmware by Connecting Schneider Electric Cloud with eSetup Application

Prerequisite: EVlink Pro AC must be connected to the Internet.

To update EVlink Pro AC charging station firmware by connecting Schneider Electric cloud with eSetup application:

1. Get authorization from the IT manager and activate 4G connectivity on your mobile phone.

NOTE:

- EVlink Pro AC charging station firmware version must be 1.3.10 minimum from January 2026.
- 4G connectivity must be available during all the firmware upgrade process.

2. Start eSetup application on your smartphone.
3. Connect to one EVlink Pro AC charging station with eSetup application.
4. Select **Schneider Electric**.
5. Select the last firmware version.
6. Select **upgrade**.
7. Reboot the EVlink Pro AC charging station.
8. Repeat steps 1 to 7 for each EVlink Pro AC charging station.

NOTE: This procedure is data consuming and may generate extra operational costs.

Manually Updating the EVlink Pro AC Firmware by Using USB Key and eSetup Application


To update manually the firmware of the EVlink Pro AC charging station with USB key and eSetup application, refer to the video showing how to update EVlink Pro AC firmware:



<https://youtu.be/tBzjU5-Kxs8>

Updating the EVlink Pro AC Firmware by Using EcoStruxure EV Charging Expert as Temporary HTTP Server and eSetup Application

NOTE: Be aware that this procedure is faster but may generate risk of errors in the URL entries.

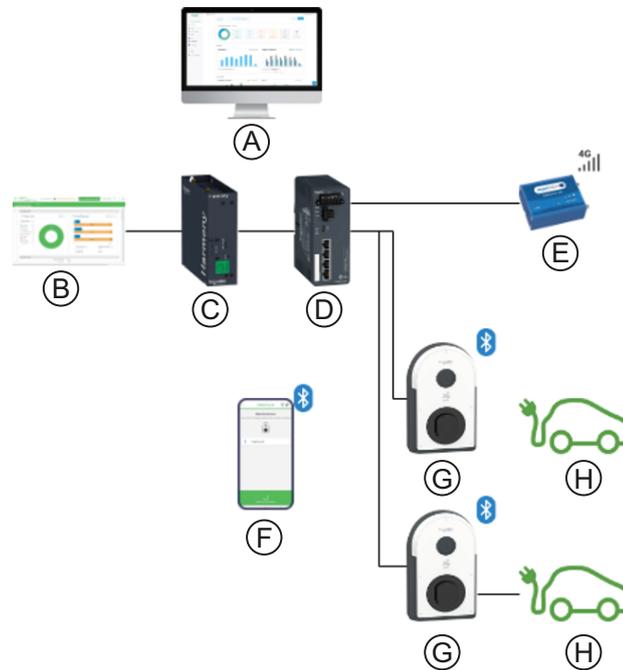

- A. Charging Station Management System
- B. Web pages
- C. EcoStruxure EV Charging Expert
- D. Switch
- E. 4G cellular modem
- F. eSetup application
- G. Pro AC charging station
- H. EV

EcoStruxure EV Charging Expert hosts EVlink Pro AC firmware. The eSetup application allows the charging stations to retrieve the firmware through EcoStruxure EV Charging Expert.

EVlink Pro AC firmware is downloaded directly using the LAN network. This prevents data overages if any cellular modem is used. Using this digital process avoids any electrical intervention on the EVlink Pro AC charging station.

Pairing between EVlink Pro AC and eSetup uses **Bluetooth®**.

When facing a large EV infrastructure with an EcoStruxure EV Charging Expert, it is recommended to rely on EV Charging Expert HTTP server:

- It saves time because there are less steps to upgrade the firmware.
- It saves data because no internet access is required.


For this method, follow the steps to be carried out:

- On EcoStruxure EV Charging Expert, page 79
- On each EVlink Pro AC Charging Station, page 81

On EcoStruxure EV Charging Expert

EcoStruxure EV Charging Expert displays the following message when the firmware needs to be upgraded on a charging station:


**Unable to install this station with current version.
Upgrade the station's firmware.**

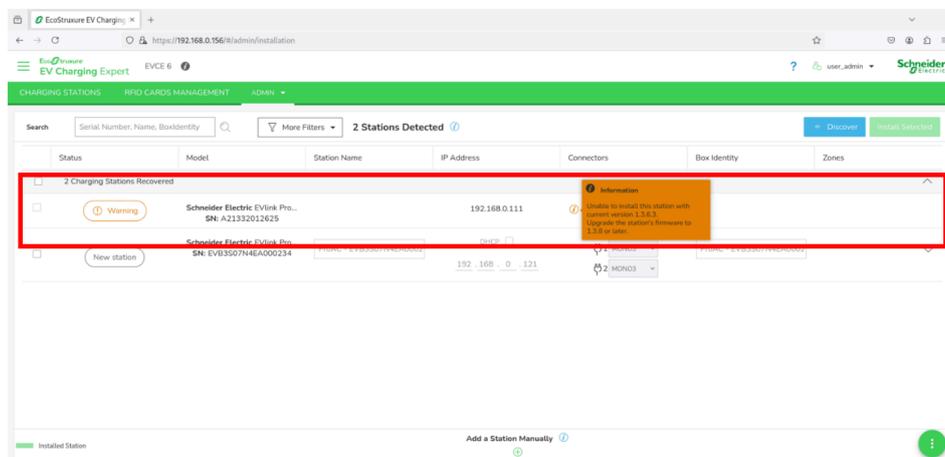


To update EVlink Pro AC charging station firmware by using EcoStruxure EV Charging Expert as temporary HTTP server and eSetup application, follow this procedure:

1. Download the EVlink Pro AC firmware from www.se.com.
2. Enable EV Charging Expert HTTP server in the **Advanced configuration** tab.
3. In **ADMIN > Firmwares**, select **Add**.
4. Set the required fields.
5. Upload the EVlink Pro AC firmware file from here: EVlink Pro AC - Software and firmware.
6. On the pop-up window, select **Continue**.


- When the firmware is downloaded, click the QR code symbol  to display the URL link.

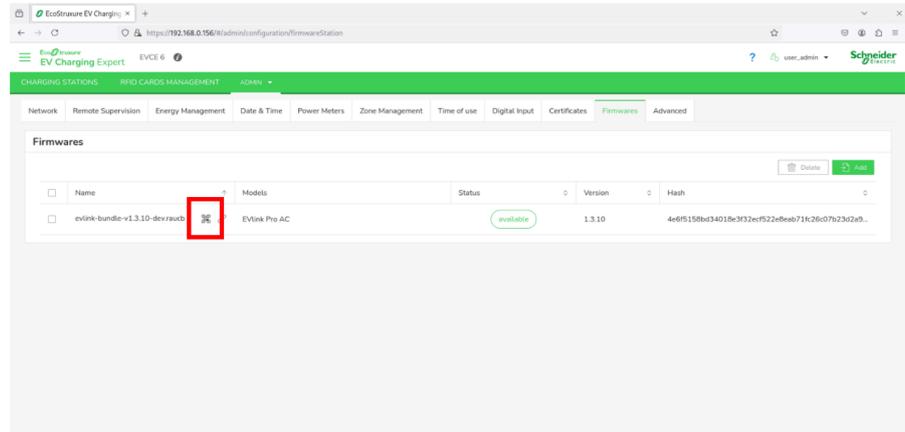

The firmware URL link is displayed as a QR code in a pop up window.

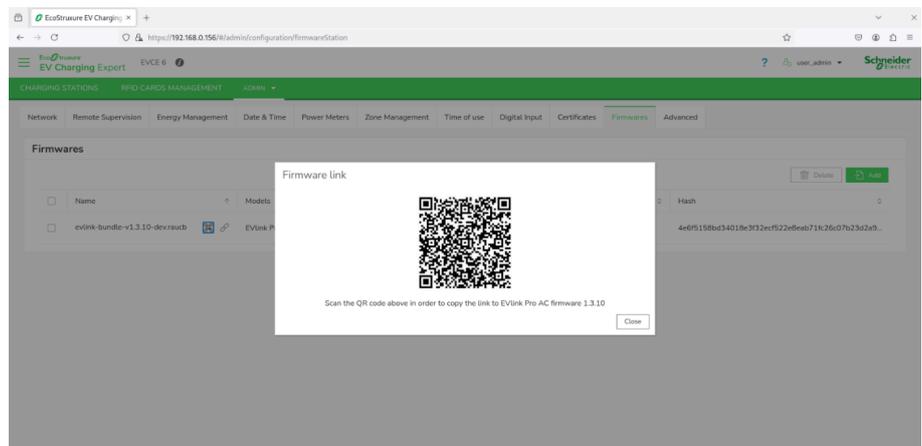

- Scan the QR code using a mobile camera application.

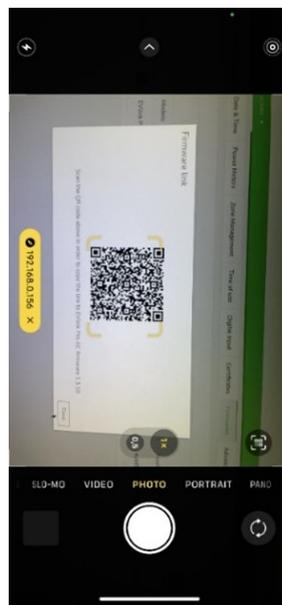


NOTE: When scanning the QR code, you may be asked to confirm the connection to the http URL.

- Copy the embedded link to paste it later when using eSetup application.


On Each EVlink Pro AC Charging Station

To update EVlink Pro AC charging station firmware by using EcoStruxure EV Charging Expert as temporary HTTP server and eSetup application, follow this procedure:


1. Open eSetup commissioning mobile application.
2. Pair eSetup with EVlink Pro AC charging station using the Bluetooth channel.
3. Select **Charging station information**.

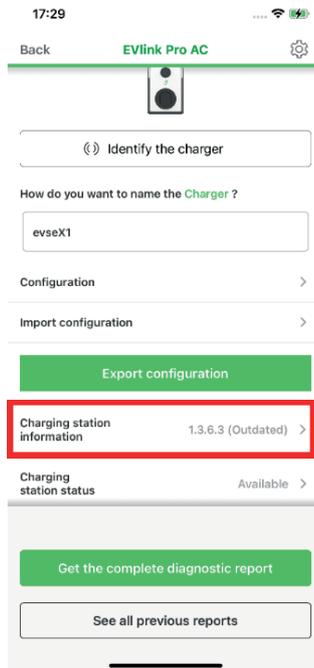

4. Scroll down to the end of the screen to select **Update EVlink Pro AC firmware**.

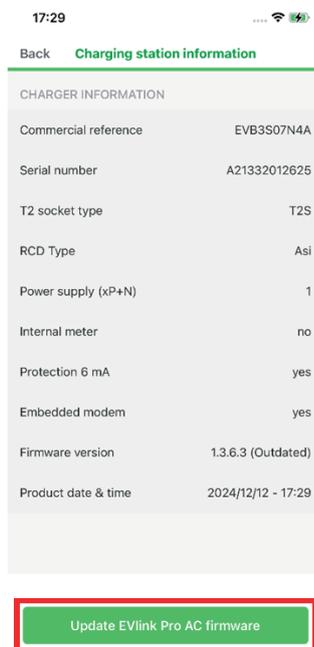

5. Select the following upgrade method: **Upgrade from Server Url (Web)**.

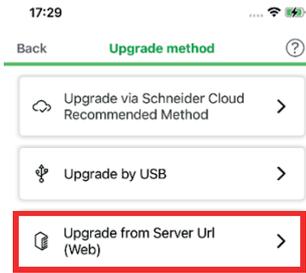


6. Paste in the URL.

7. Select **Upgrade Firmware**.



8. Click **OK** to confirm.

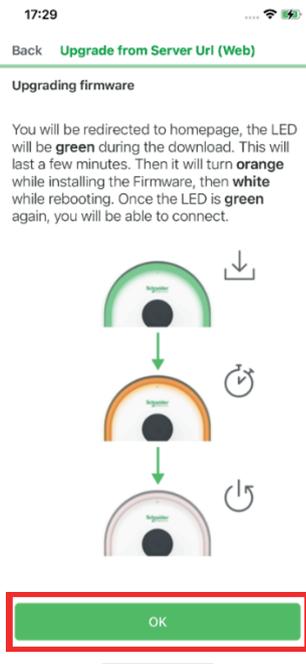

The EVlink Pro AC charging station automatically reboots.

9. Repeat steps 1 to 8 of this procedure with the next EVlink Pro AC charging station.

Architecture	Next step
Architecture 1, page 37	Relaunching the discovery process, page 86
Architecture 2, page 40	Relaunching the discovery process, page 86
Architecture 3, page 43	Relaunching the discovery process, page 86
Architecture 4, page 46	Relaunching the discovery process, page 86
Architecture 5, page 49	Relaunching the discovery process, page 86
Refer to Description of System Architectures, page 34.	

Procedure to Update Schneider Charge Pro Charging Station Firmware

To update Schneider Charge Pro charging station firmware, follow this procedure:

1. Open eSetup application on your smartphone.
2. Download on your smartphone the latest firmware version available for Schneider Charge Pro charging station.

NOTE: In eSetup firmware settings, activate the **Automatic download** feature to be alerted when a new firmware has been released and is available for your charging stations.

3. Connect to the Schneider Charge Pro with eSetup using Wi-Fi.
Firmware upgrade is forced.
4. Restart the Schneider Charge Pro charging station.

For more information, refer to the video showing how to commission Schneider Charge Pro with eSetup:



<https://youtu.be/BGCuxbVv9AU>

Architecture	Next step
Architecture 1, page 37	Relaunching the discovery process, page 86
Architecture 2, page 40	Relaunching the discovery process, page 86
Architecture 3, page 43	Relaunching the discovery process, page 86
Architecture 4, page 46	Relaunching the discovery process, page 86
Architecture 5, page 49	Relaunching the discovery process, page 86
Refer to Description of System Architectures, page 34.	

If Installing EVlink Pro AC or Schneider Charge Pro

When internet connectivity is limited, install and configure AC charging stations one by one following the procedure that applies to the charging station range.

Procedures to Commission EVlink Pro AC

Follow one of these methods to update the EVlink Pro AC charging station firmware:

- Manually upgrading the firmware of the charging station with USB key and eSetup application, page 77
- Using EcoStruxure EV Charging Expert as temporary HTTP server and eSetup application, page 78
- Commissioning EVlink Pro AC Charging Stations One by One by Using eSetup Application, page 102

Procedure to Commission Schneider Charge Pro

- To update Schneider Charge Pro charging station firmware, see the procedure, page 84.

For more information, refer to the video showing how to commission Schneider Charge Pro with eSetup:



<https://youtu.be/BGCuxbVv9AU>


- To commission Schneider Charge Pro charging stations, see Commissioning Schneider Charge Pro Charging Stations, page 103.

Architecture	Next step
Architecture 1, page 37	Relaunching the discovery process, page 86
Architecture 3, page 43	Relaunching the discovery process, page 86
Architecture 4, page 46	Relaunching the discovery process, page 86
Architecture 5, page 49	Relaunching the discovery process, page 86
Refer to Description of System Architectures, page 34.	


Relaunching the Discovery Process

When all the charging station firmware are updated to the latest version:

1. Restart EcoStruxure EV Charging Expert wizard.
2. Re-launch the discovery process.

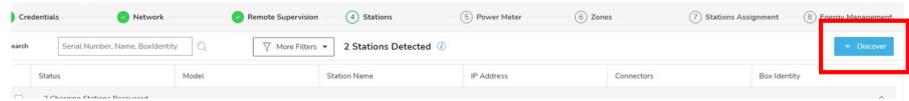

The firmware versions are up to date and all charging stations are discovered.

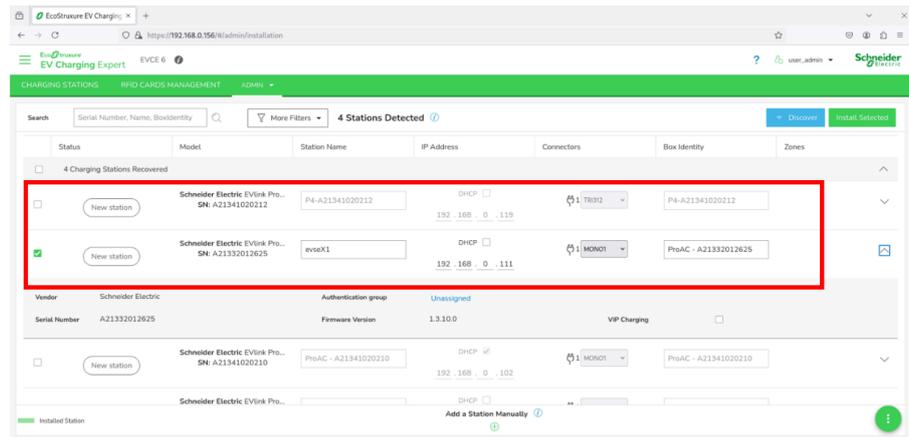

Architecture	Next step
Architecture 1, page 37	Updating the charging station settings, page 87
Architecture 2, page 40	Updating the charging station settings, page 87
Architecture 3, page 43	Updating the charging station settings, page 87
Architecture 4, page 46	Updating the charging station settings, page 87
Architecture 5, page 49	Updating the charging station settings, page 87
Refer to Description of System Architectures, page 34.	

Updating the Charging Station Settings

For the group of charging stations discovered (up to 10), check or update if necessary the following fields.


Fields to be updated
Charging station name
Selection of DHCP versus fixed IP address (for EVlink Pro AC only)
Phase rotation per connector (for all AC charging stations)
Box ID
VIP charging mode

Architecture	Next step
Architecture 1, page 37	Finishing the installation of the selected charging stations, page 88
Architecture 2, page 40	Finishing the installation of the selected charging stations, page 88
Architecture 3, page 43	Finishing the installation of the selected charging stations, page 88
Architecture 4, page 46	Finishing the installation of the selected charging stations, page 88
Architecture 5, page 49	Finishing the installation of the selected charging stations, page 88
Refer to Description of System Architectures, page 34.	

Finishing the Installation of the Selected Charging Stations

To finish the installation of the selected charging stations:

1. Select the charging station(s) for which you want to finish the installation.
2. Select **Install Selected**.

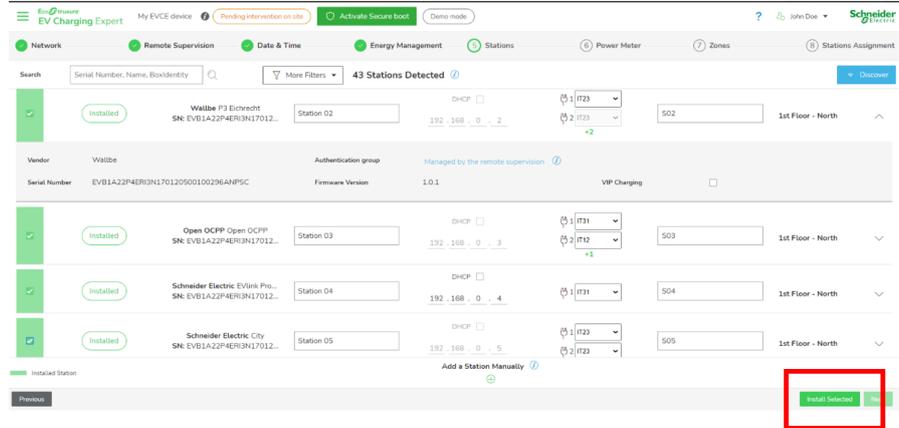

3. On the pop-up window; select **Close**.

EcoStruxure EV Charging Expert installs the charging stations in the system. All the charging stations reboot to finalize their installation in EcoStruxure EV Charging Expert.

4. Repeat step 14 to step 17 for Architecture 1 for each group of 10 charging stations.

Architecture	Next step
Architecture 1, page 37	Configuring power meters, page 89
Architecture 2, page 40	Configuring power meters, page 89
Architecture 3, page 43	Configuring power meters, page 89
Architecture 4, page 46	Configuring power meters, page 89
Architecture 5, page 49	Configuring power meters, page 89
Refer to Description of System Architectures, page 34.	

Configuring Power Meters

Configure power meters if you have dynamic or local energy production zones on the EV infrastructure.

NOTE: To monitor the local energy production, the power meter wiring must include a neutral and be wired in the correct direction.

In case of several photovoltaic production zones, one power meter per zone is required.

For more information about static and dynamic zones, refer to the video showing how to configure load management parameters:




<https://youtu.be/c3FBqzF1Avw>

For more information about power meter configuration (reconfiguration or customization), refer to *Charging Stations Commissioning* in DOCA0358EN *EcoStruxure EV Charging Expert User Guide*, page 10.

Link one power meter to each dynamic zone as follows:


1. From the **Power Meter** menu, select the + sign.

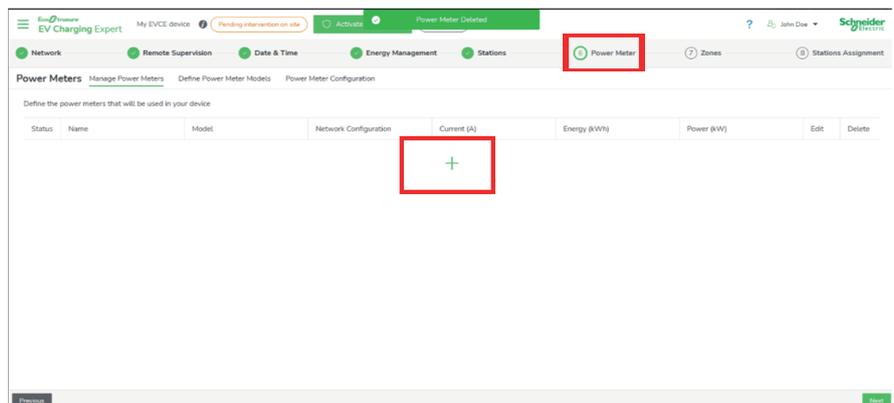

2. To define a pre-configured power meter, select **Define Power Meter Models**.

NOTE: If you already have pre-configured power meters, go directly to the following step.

3. Select **Manage Power Meters**.

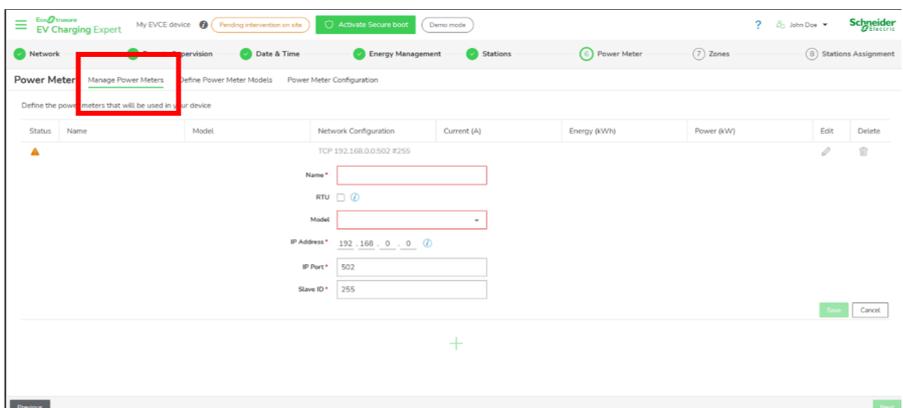

4. Select a power meter from the list of proposed models.

5. To configure the power meter, fill in the following fields:
 - **Name**
 - **Model**
 - **IP Address**
 - **ID Port**
 - **Slave ID** or **Name model RTU slaveID** if RTU device.
6. Select **Save**.
7. Select **Next**.

Architecture	Next step
Architecture 1, page 37	Creating zones and sub-zones, page 91
Architecture 2, page 40	Creating zones and sub-zones, page 91
Architecture 3, page 43	Creating zones and sub-zones, page 91
Architecture 4, page 46	Creating zones and sub-zones, page 91
Architecture 5, page 49	Creating zones and sub-zones, page 91
Refer to Description of System Architectures, page 34.	


Creating Zones and Sub-Zones

You can create a maximum of 20 zones and four levels of sub-zones in each zone.

A zone can include charging stations and energy production.

In case of several photovoltaic production zones, one power meter per zone is required.

1. To create a zone from **Zones** menu, select the + sign.

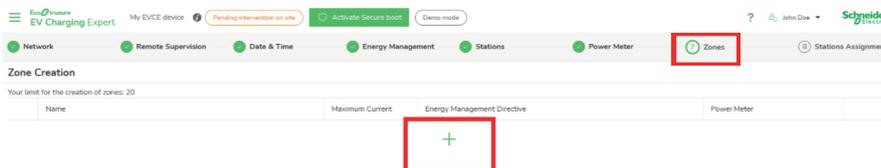

2. For each created zone, fill in the following fields depending on your **Energy Management Directive (Dynamic / Static)**:

- **Name**
- **Maximum Current**
- **Degraded Mode Zone Setpoint**
- Associated **Power Meter**, if any


Degraded mode allows charging stations to continue charging, even in case of communication interruption with EcoStruxure EV Charging Expert. For each charging station connector, an offline maximum current is calculated according to:

- **Maximum Current** of a static zone
- **Degraded Mode Zone Setpoint** of a dynamic zone

For a dynamic zone, a **Degraded Mode Zone Setpoint** defines the maximum current always available for EV charging, irrespective of other load in the same electrical zone. Enter a value for **Degraded Mode Zone Setpoint** that allows you to manage charging stations even if EcoStruxure EV Charging Expert loses building consumption information.

For a dynamic zone, offline management is active when communication is lost with the charging station or with the power meter dedicated to this zone.

3. To create a sub-zone in a zone, select the + sign corresponding to this zone.

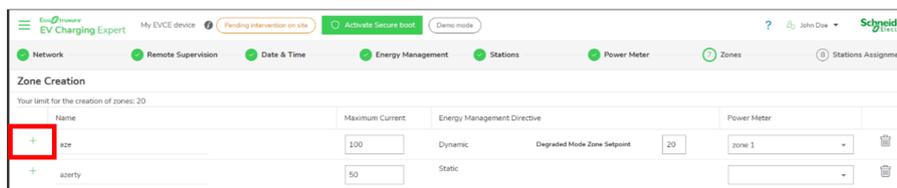

4. For each created sub-zone, fill in the following fields:
 - **Name**
 - **Maximum Current**
5. **Associate a power meter if needed. For local production**, select the power meter that measures the energy produced by the photovoltaic of this zone. A power meter cannot be shared by several zones. In case of several photovoltaic production zones, one power meter per zone is required.
6. Select **Save and Next**.

For more information about the creation of zones and sub-zones, refer to the video showing how to configure loads' parameters with EcoStruxure EV Charging Expert & assign chargers to a zone:




<https://youtu.be/c3FBqzF1Avw>

Architecture	Next step
Architecture 1, page 37	Assigning charging stations, page 93
Architecture 2, page 40	Assigning charging stations, page 93
Architecture 3, page 43	Assigning charging stations, page 93
Architecture 4, page 46	Assigning charging stations, page 93
Architecture 5, page 49	Assigning charging stations, page 93
Refer to Description of System Architectures, page 34.	


Assigning Charging Stations

To assign charging stations to a zone according to the electrical distribution plan and to the defined EVSE architecture:


1. Select the installation wizard.
2. In the **Stations Assignment** menu, in the **Unassigned Stations** list, select the charging station you want to assign to a zone.

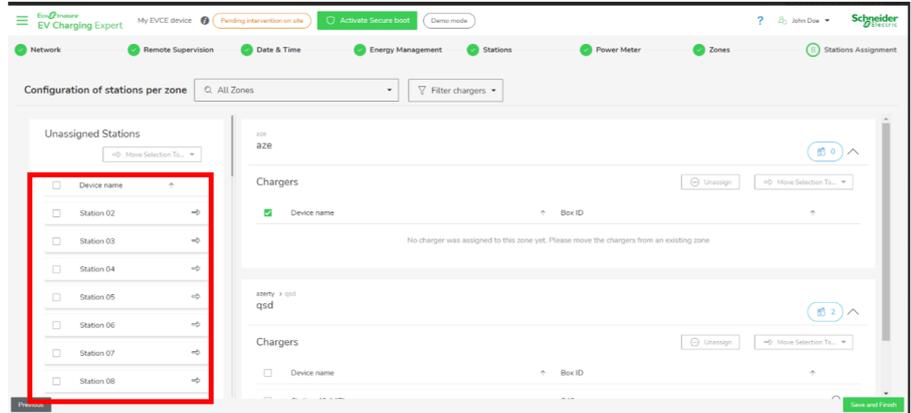

3. **Move Selection To** a created zone.

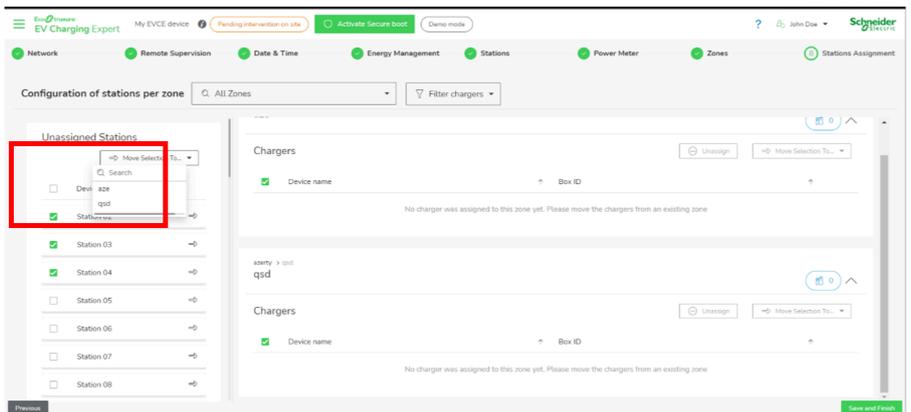

The **Unassigned Stations** list is automatically updated.

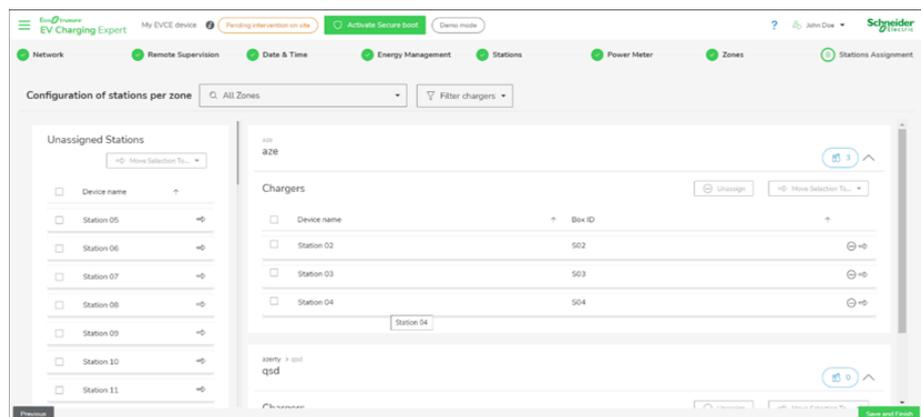

4. When you have assigned all charging stations to a zone, select **Save and Finish**.

For more information about the assignment of charging stations to a zone, refer to the video showing how to configure loads' parameters with EcoStruxure EV Charging Expert & assign chargers to a zone:



<https://youtu.be/c3FBqzF1Avw>

Architecture	Next step
Architecture 1, page 37	Configuring time of use and digital inputs, page 95
Architecture 2, page 40	Configuring time of use and digital inputs, page 95
Architecture 3, page 43	Configuring time of use and digital inputs, page 95
Architecture 4, page 46	Configuring time of use and digital inputs, page 95
Architecture 5, page 49	Configuring time of use and digital inputs, page 95
Refer to Description of System Architectures, page 34.	



Configuring Time of Use and Digital Inputs

NOTE: Digital Input feature is not available for EcoStruxure EV Charging Expert licenses using HMIBX1A0NEVB100SCP license.

If needed, the configuration of time of use allows you to reduce the power capacity per zone at set periods of time to fit in with tariff policies.

To assign one or more periods to a zone:

1. Select **ADMIN > Time of use**.
2. Select the + sign to create a time-of-use period.

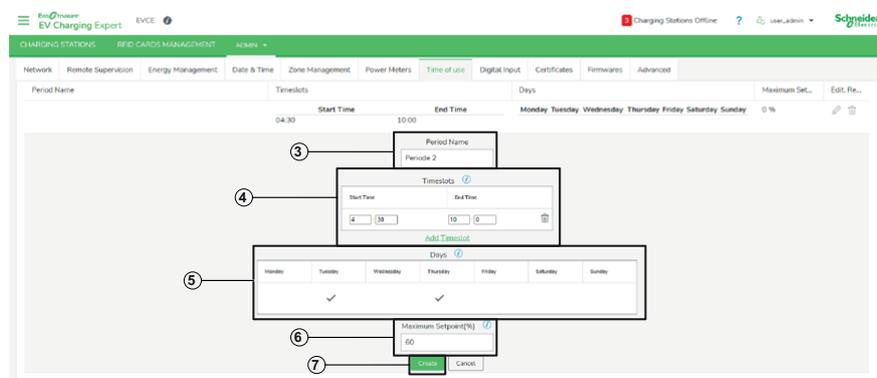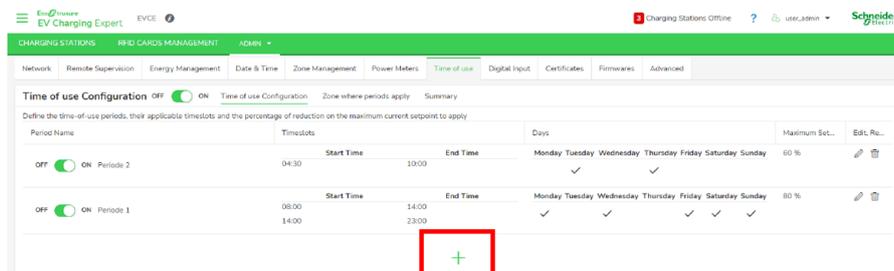


3. Enter a **Period Name**.
4. Define **Timeslots**:
 - Enter a **Start Time**.
 - Enter an **End Time**.
 - Select **Add Timeslot** to add another use timeslot for this reduction.
5. Select the days when the timeslots apply.
6. Define a percentage for **Maximum Setpoint**.
7. Select **Create**.

8. Select **ADMIN > Digital Input**.

NOTE: EcoStruxure EV Charging Expert digital inputs are accessible through GPIO connections located on the rear side of the EcoStruxure EV Charging Expert device. Activation of a digital input reduces maximum zone current according to its configuration.



Electrical connection: only digital inputs 1, 2 and 3 are driven by GPIO channels 1, 2 and 3. To activate a digital input, it must be powered to 3.3 Vdc TTL.

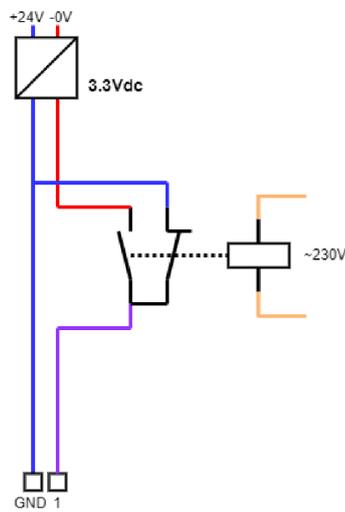


⚠ WARNING
HAZARD OF EQUIPMENT DAMAGE
Follow the wiring indications and the voltage of a maximum of 3.3 Vdc.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

9. Enable or disable digital inputs.

NOTE: Each digital input can be enabled or disabled separately.

10. For each digital input, fill in the following fields:

- **Name**
- **Maximum Setpoint:** reduction in percentage applied to EcoStruxure EV Charging Expert zones

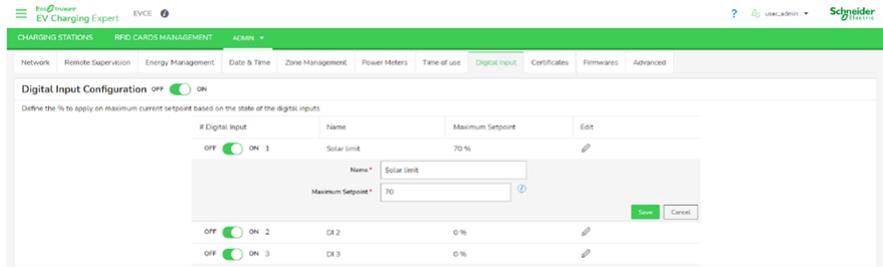

For example, if you select 70, and if your actual setpoint for the charger is 32 A, the resulting setpoint applied to the charger is $32 \text{ A} * 70\% = 22,4 \text{ A}$.

Architecture	Next step
Architecture 1, page 37	Managing authentication, page 98
Architecture 2, page 40	Managing authentication, page 98
Architecture 3, page 43	Managing authentication, page 98
Architecture 4, page 46	Managing authentication, page 98
Architecture 5, page 49	Managing authentication, page 98
Refer to Description of System Architectures, page 34.	

Managing Authentication

When there is no charging station management system to manage authentication and grant access to the charging stations, EcoStruxure EV Charging Expert can handle access through the creation of groups and the use of RFID cards.

An authentication group is a selection of charging stations associated with a list of RFID cards. Each authentication group has its own online and offline authentication strategies.

Each charging station can only be associated with one authentication group. RFID cards can be assigned to several authentication groups.

To manage authentication strategy:

1. Select the **Authentication** menu.




2. Select one of the three following options for **Authentication groups**:


- **One global group**: all installed charging stations are assigned to one authentication group.
- **One group per charger**: one authentication group is created for each charging station (recommended solution to manage one RFID badge for one charging station).
- **Custom installation**: create one or multiple authentication groups according to installation needs.

NOTE: After configuration, you can change the authentication configuration from the **ADMIN** menu.

3. Define online and offline authentication strategies. The **Offline strategy** manages the authentication process when the charging stations are disconnected from EcoStruxure EV Charging Expert.

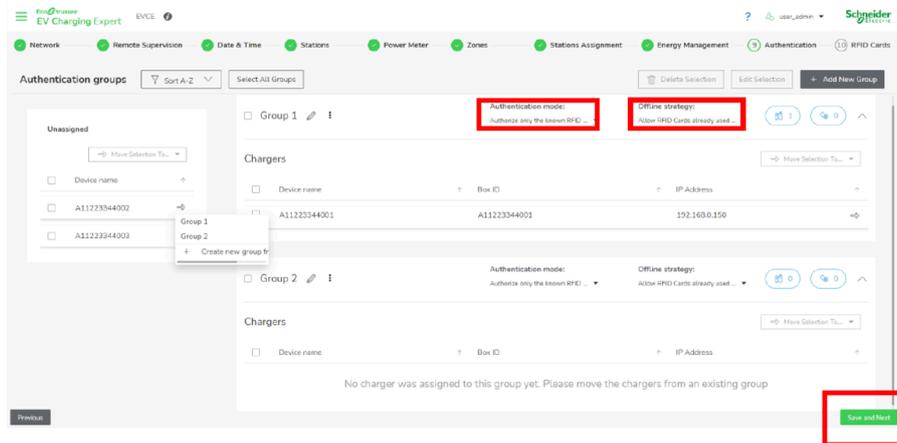

4. When selecting **Save and Next**, the following screen is displayed:

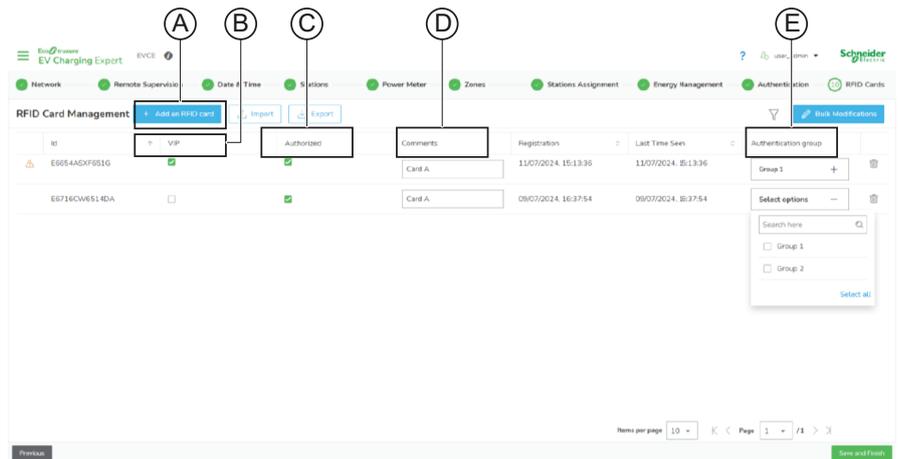


- A. **Add an RFID card:** to add or import RFID badges.
- B. **VIP:** tick this box to give the EV driver priority in load management system. This option is disabled by default.
- C. **Authorized:** tick this box to authorize the EV driver to start a transaction with this RFID card. This option is only used for assigned authentication group with **Authorize only the known RFID cards** authentication strategy. This option is disabled by default.
- D. **Comments:** to add a comment on an RFID card.
- E. **Authentication group:** to assign an RFID card to one or more authentication groups.

The list of RFID cards can be exported to a web interface or imported from a web interface. For information about csv format, see DOCA0358EN *EcoStruxure EV Charging Expert User Guide*, page 10.

Architecture	Next step
Architecture 1, page 37	Finalizing the commissioning, page 100
Architecture 2, page 40	Finalizing the commissioning, page 100
Architecture 3, page 43	Finalizing the commissioning, page 100
Architecture 4, page 46	Finalizing the commissioning, page 100
Architecture 5, page 49	Finalizing the commissioning, page 100
Refer to Description of System Architectures, page 34.	

Finalizing the Commissioning

To confirm your settings and finalize the commissioning, select **Save and Finish**.

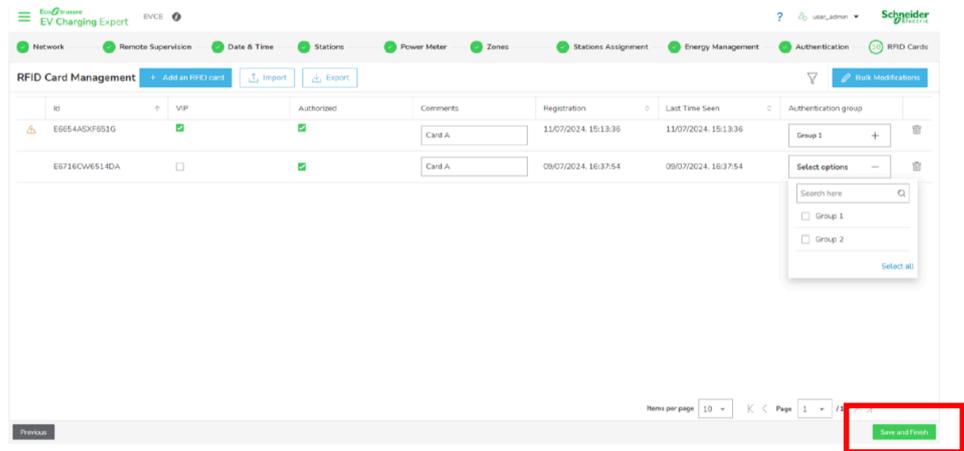

Architecture	Next step
Architecture 1, page 37	Saving and exporting configuration, page 101
Architecture 2, page 40	Saving and exporting configuration, page 101
Architecture 3, page 43	Saving and exporting configuration, page 101
Architecture 4, page 46	Saving and exporting configuration, page 101
Architecture 5, page 49	Saving and exporting configuration, page 101
Refer to Description of System Architectures, page 34.	

Saving and Exporting Configuration


It is recommended to save a backup of the current system configuration and import it later to restore a lost configuration.

The configuration export contains the following information:

- Administrator and user profiles credentials
- Charging stations configuration
- Zones configuration
- Power meters configuration
- Network configuration
- Authentication strategies
- List of RFID cards
- Authentication groups

To save a backup of the current system configuration:

1. Select **ADMIN > Save**.
2. To generate the backup file, enter a password and confirm the password.

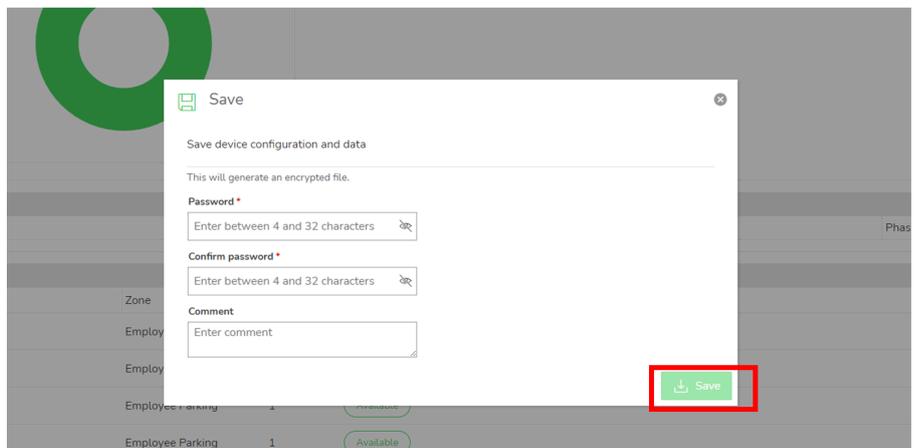

3. Save the exported file in a relevant repository.

NOTE: To help ensure the security of your information, the exported file is encrypted and signed.

4. To check that your EV infrastructure is commissioned and operational, check the following:
 - All charging stations are connected and connectors are available.
 - Use an EV charging simulator to check that the charge works well.
 - Digital inputs are operational by testing them manually.
 - Time of use is confirmed during operation.
 - Data flow is available on your EcoStruxure EV Charging Expert monitoring dashboard.

Commissioning EVlink Pro AC Charging Stations One by One by Using eSetup Application

To commission EVlink Pro AC charging stations one by one by using eSetup application, refer to:

- NNZ1940301 *EVlink Pro AC Troubleshooting Guide*
- the video explaining how to commission EVlink Pro AC charging stations by using eSetup application:



<https://youtube.com/playlist?list=PLa7UGrWOTyjIFktxGii8yNkYOQaMJuzX>

Architecture	Next step
Architecture 4, page 46	Commissioning Schneider Charge Pro charging stations one by one by using eSetup application, page 103
Refer to Description of System Architectures, page 34.	

Commissioning Schneider Charge Pro Charging Stations One by One by Using eSetup Application

To commission Schneider Charge Pro charging stations one by one by using eSetup application, refer to:

- TME42383 *Schneider Charge Pro Installation and Operation Guide*, page 10
- the video explaining how to commission Schneider Charge Pro charging stations by using eSetup application:



<https://youtu.be/BGCuxbVv9AU>

Architecture	Next step
Architecture 4, page 46	Commissioning EVlink Pro AC charging stations one by one by using eSetup application, page 102
Refer to Description of System Architectures, page 34.	


Specific Functions and Configurations

What's in This Part


Importing EcoStruxure EV Charging Expert Configuration	105
Updating EcoStruxure EV Charging Expert Firmware.....	106
Setting Up a Ring Topology for EVlink Pro AC Range.....	107

Importing EcoStruxure EV Charging Expert Configuration

If you want to restore or re-use a saved configuration, you can select **Import Configuration** when opening EcoStruxure EV Charging Expert.

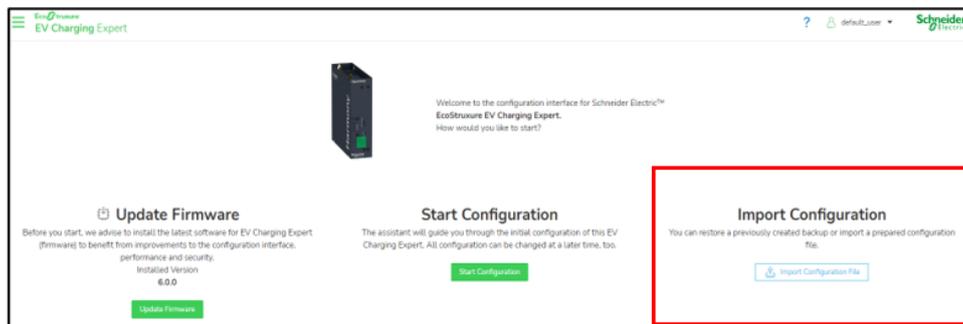

A pop-up window allows you to recover a configuration from a previous configuration export.

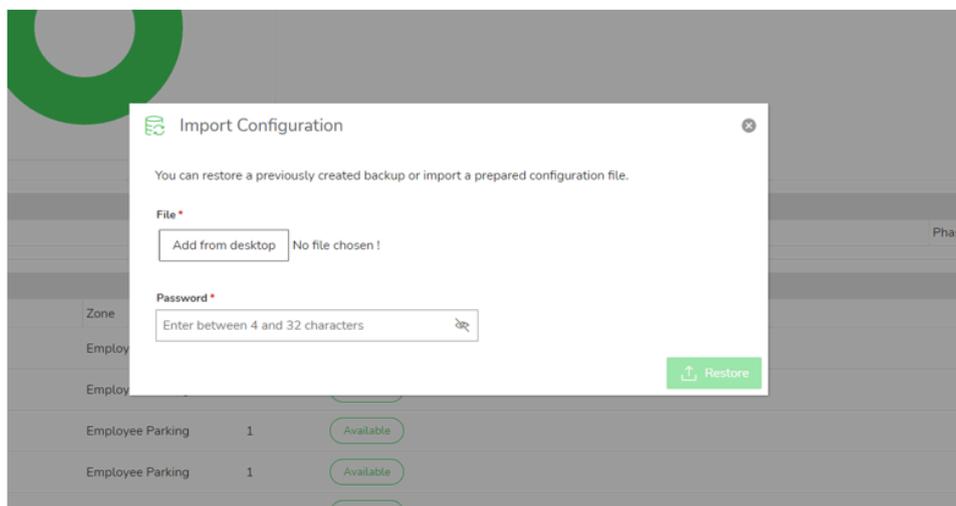

NOTE: The configuration file with version 6.0.0 or higher is compatible. It requires configuration file password to be installed.

Updating EcoStruxure EV Charging Expert Firmware

Select the hamburger menu and **Device Update**.



How to get a firmware update


You need to go online to download the file with the firmware update. It is possible to install a firmware update at any time, you might do so later if you don't have a possibility to go online now.

If you can connect your browser to the internet, please do so now and then use the following link to see what's new in the latest version and download the file.

[EV Charging Expert Firmware Updates](#)

If you change connection now, you will need to reconnect to EV Charging Expert afterwards to install the update.

The following screen is displayed while the new version is being installed.

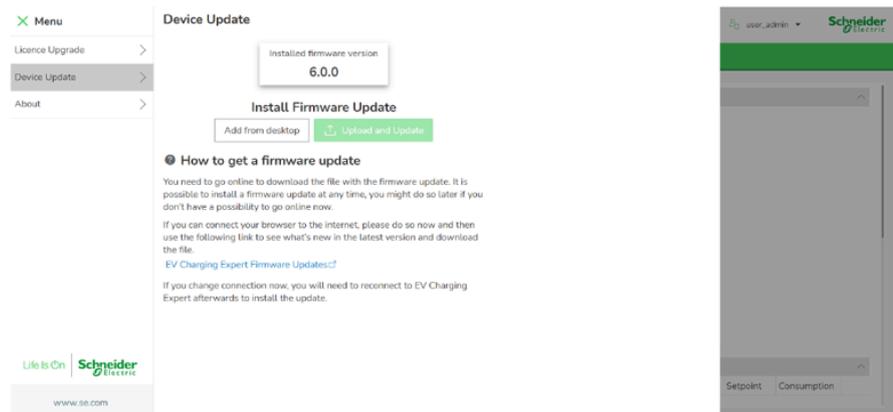

It takes about one minute to run the firmware installation. After one minute, EcoStruxure EV Charging Expert reboots, with the up-to-date firmware version.

Setting Up a Ring Topology for EVlink Pro AC Range

What's in This Chapter

Prerequisites.....	108
Using eSetup to Enable RSTP on EVlink Pro AC Charging Stations	109
Configuring the Switch.....	110
Example of a Configuration Using a Schneider Electric Modicon Managed Switch	111
Setting up the Ring Network.....	118

This chapter provides you with information about the commissioning of a ring topology cable network for EVlink Pro AC charging stations. It contains generic information for configuring the switch in your installation, as well as examples based on a Modicon switch.

This chapter explains how to:

- Update the EVlink Pro AC charging station and activate the RSTP protocol using eSetup.
- Install the switch configuration software on your PC.
- Configure the Modicon switch used to form a ring topology. For more information refer to *Configuring the Switch*, page 110.

For more information, refer to:

- The video showing how to configure Ethernet communication parameters:



https://www.youtube.com/watch?v=Sg7sAeqko_w&t=89s

- DIA6ED2140903EN *Modicon Networking Catalog 2022*, page 10
- ConneXium switch configurator software

Prerequisites

Before installing a ring topology network, check the following:

1. EVlink Pro AC charging stations:

- EVlink Pro AC charging stations are wired for power.
- The eSetup application version is at least 13.1.3.
- The firmware version of the EVlink Pro AC charging stations is at least 1.3.8 for all ring charging stations.

Updating the firmware and entering parameters in eSetup determines whether the charging stations are integrated into a ring topology.

2. Network cabling


The network of charging stations is daisy chained with a maximum of 20 charging stations per daisy chain. The loop is open at switch level.

3. Managed switches

The managed switch is compatible with the RSTP protocol. The STP protocol is not supported.

- The RSTP configuration of the managed switch can be modified.
- The managed switch authorizes BPDU frames on ports connected to the loop. Anti-loop protection such as Cisco BPDU Guard / BPDU Filter are disabled.

Configuring the managed switch determines the proper operation of the ring topology.

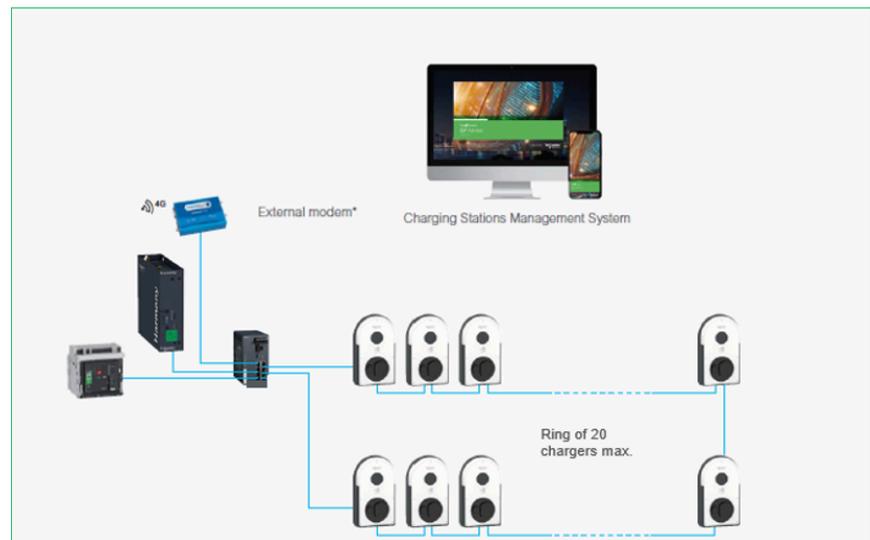

A maximum of 20 charging stations can be in the ring.

Using eSetup to Enable RSTP on EVlink Pro AC Charging Stations

The firmware version installed on EVlink Pro AC charging stations is at least 1.3.8.

The eSetup application version is at least 13.1.3.

Otherwise, when configuring a ring topology, a pop-up window appears on the application and asks you to update the Pro AC firmware to proceed with its configuration.

Refer to the documentation for updating the EVlink Pro AC charging stations: EVlink Pro AC – Professionals.

For more information about how to configure Ethernet communication parameters with eSetup, refer to the video showing RSTP activation for a ring topology.




https://www.youtube.com/watch?v=Sg7sAeqko_w&t=89s

To configure charging stations with eSetup:

1. Check the installation.



2. Enable RSTP.

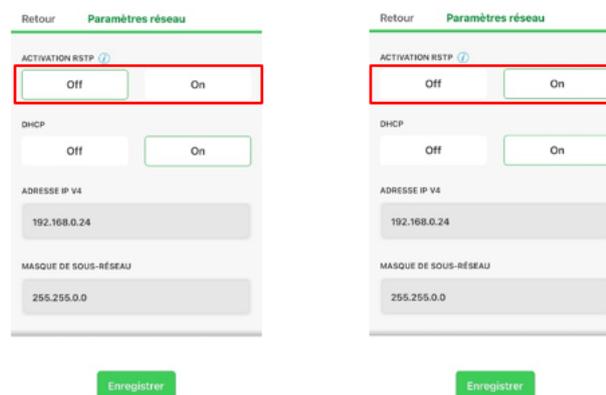

To activate the RSTP protocol, click **Activate RSTP > ON**.

Configuring the Switch

The following configuration is suitable for transforming an existing network into a ring topology.

1. On a computer that is connected to the managed switch or LAN network, open a web browser and enter the IP address of the managed switch.
Enter the user ID and password that are known or provided in the switch user guide (default identifiers).
2. Enable protocol support for the Rapid Spanning Tree Protocol (RSTP). The Spanning Tree Protocol (RSTP) is not supported for the creation of a ring topology on EVlink Pro AC charging stations.
Configure the following RSTP parameters according to the values indicated.

Parameter	Value
Bridge Priority	< 32768
Max age	≥ Number of chargers in the ring + 1

For example, the following RSTP configurations meet the expected values for a ring topology of 20 charging stations.

Parameter	Value
Bridge Priority	4096
Max age	21

Disable anti-loop protection features (such as Cisco BPDU Guard / BPDU Filter or equivalent) on the switch ports connected to the ring.

3. Save the new managed switch configuration. If necessary, restart to apply the changes.


Example of a Configuration Using a Schneider Electric Modicon Managed Switch

The following configuration is recommended for any new installation. The Schneider Electric Modicon managed switch has been tested and validated for optimum use of a ring topology of EVlink Pro AC charging stations.


The following table shows recommendations for configuring IP addresses.

Device	IP address
EV Charging Expert	192.168.0.128
Gateway	192.168.0.254
Remote access	192.168.0.253
Modicon switch	192.168.0.100

1. PC configuration recommendations for installing the Modicon Switch configuration software: to install the **Ethernet Switch Configurator 2.2.07** software:
 - a. Check that you are the administrator of your PC.
 - b. Check that the software is launched in Windows 7 compatibility mode.

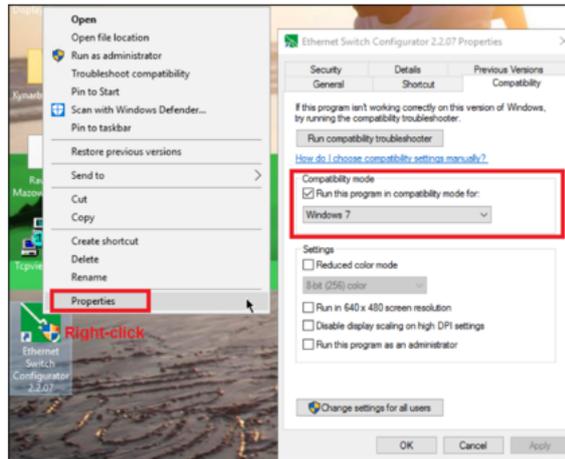

- c. Check that firewalls are disabled or configured to allow communication on the LAN.
- d. Check that the Ethernet network parameters of the PC are modified as follows if a DHCP server is missing:
 - IP address: 192.168.0.1
 - Subnet mask: 255.255.255.0
 - Gateway: 192.168.0.254

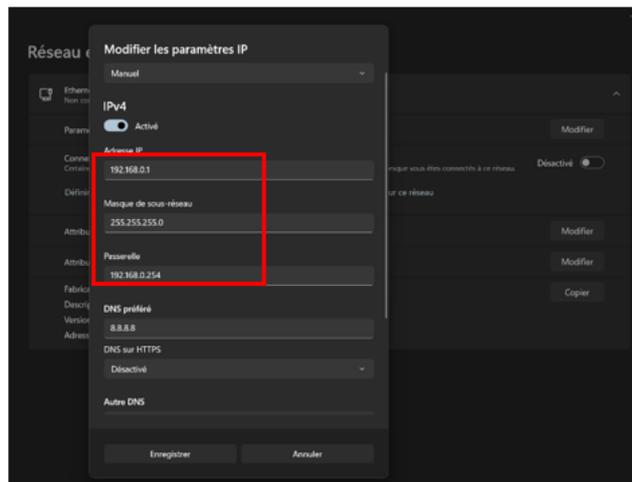

- e. Check that the network configuration is taken into account.

```
Carte Ethernet Ethernet :  
  
Suffixe DNS propre à la connexion. . . . :  
Adresse IPv6 de liaison locale. . . . . : fe80::5f7f:211b:80b6:4f41%22  
Adresse IPv4. . . . . : 192.168.0.1  
Masque de sous-réseau. . . . . : 255.255.255.0  
Passerelle par défaut. . . . . :
```

- 2. Install the Modicon switch and connect it to the LAN.



NOTICE

HAZARD OF NETWORK INOPERABILITY


- Leave the network loop open in switch.
- It is closed once the configuration is completed.

Failure to follow these instructions can result in equipment damage.


- a. Power on the equipment.
- b. Connect the device with an RJ45 cable.




- 3. Switch detection
 - a. On the PC, launch the **Ethernet Switch Configurator 2.2.0 7** software.

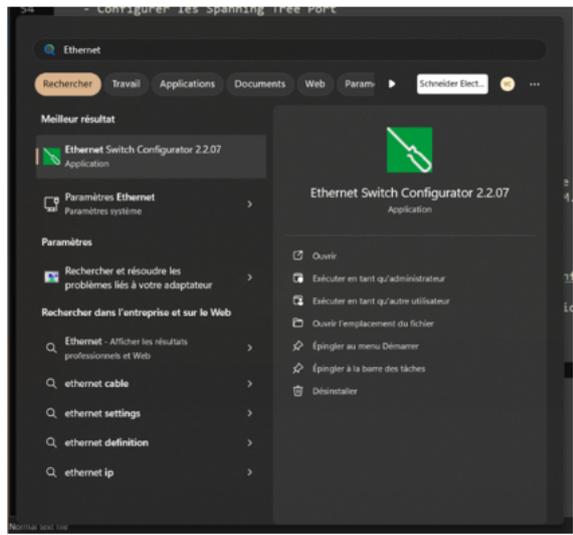


The software automatically runs a network scan that identifies the switch to be configured.

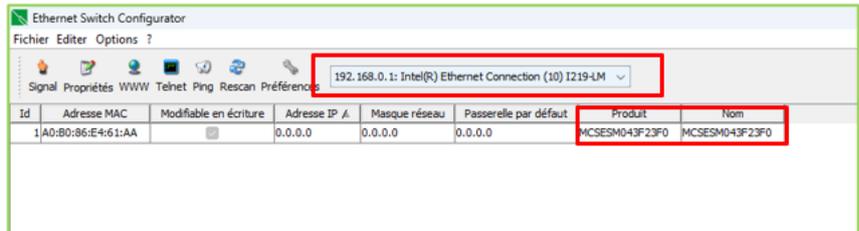


b. Edit the properties by clicking the **Properties** menu.

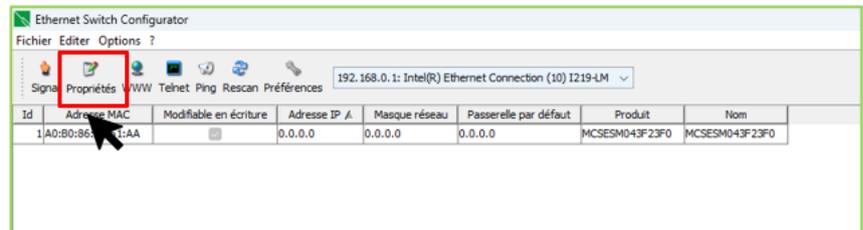

c. Configure the switch network parameters (according to initial recommendations).

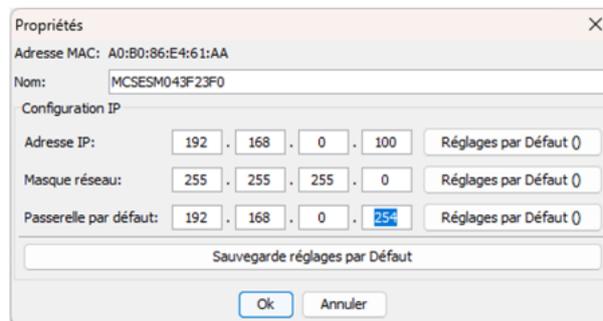


d. Check that the switch network configuration is properly applied.

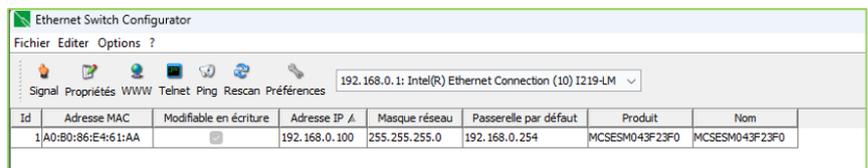

4. Connection to Modicon Switch web pages:

- a. On the PC, launch a web browser and enter the switch IP address.
- b. Confirm the connection to the server by clicking **Continue to 192.168.0.100 (unsecured)**.

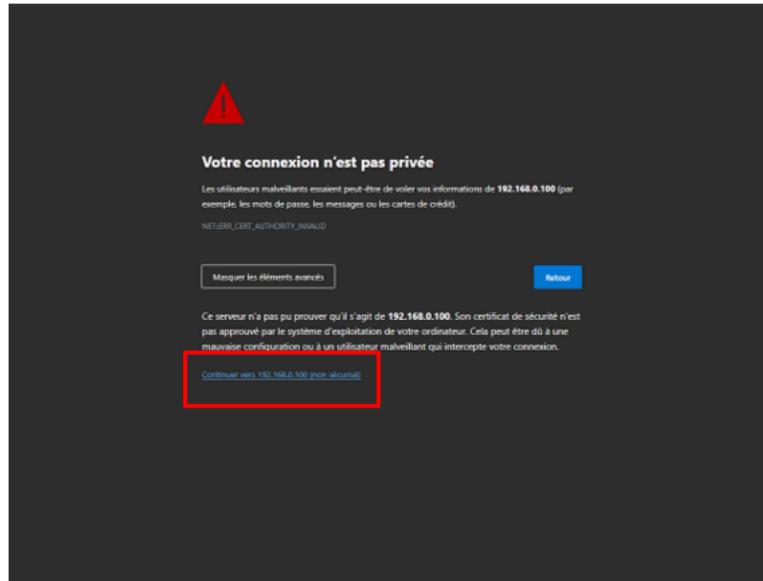



- c. Enter the user ID and password that are known or provided in the switch user guide (default identifiers).

User ID: admin


Password: private



- d. Change the password and confirm.

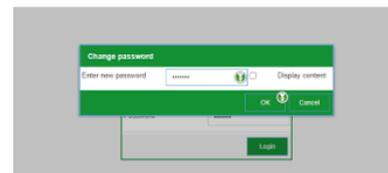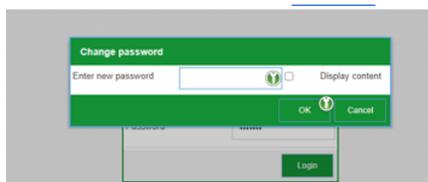



The main screen displayed is as follows.

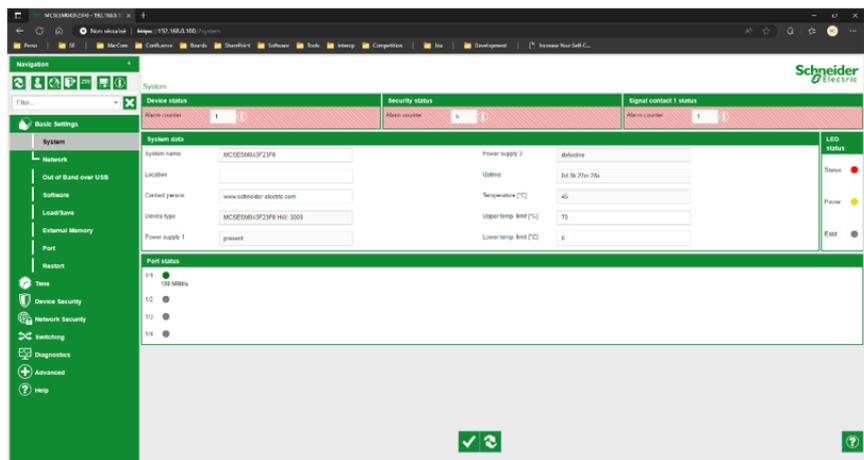

- 5. Configuration of the switch for a ring topology: RSTP Priority and Max age.

- a. In the **Switching** menu check the default values indicated by the configuration tool for configuring the **Bridge**, and modify the value **Priority** and the value **Max age** as follows:

Fields	Value
Priority	4096
Hello time	2 s
Forward delay	15 s
Max age	21

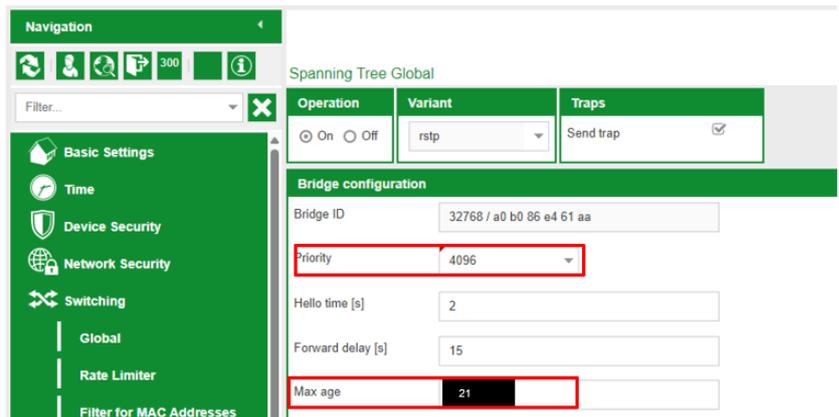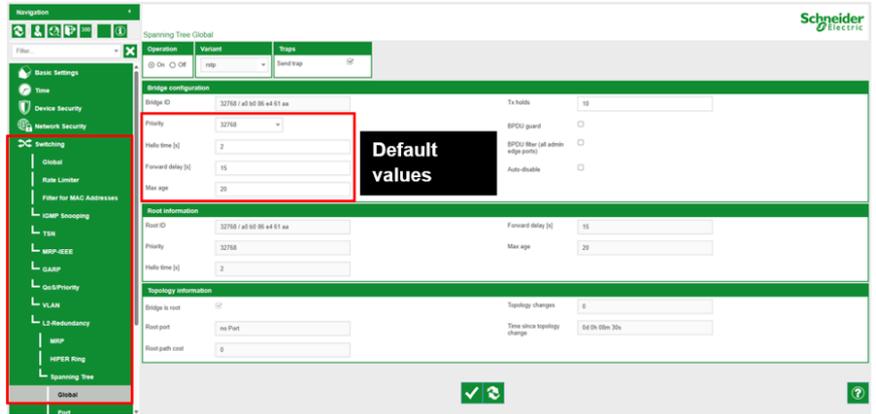


- b. Save the new parameters.




- 6. To update date and time:

- a. In the **Time/Basic settings** menu, update the indicated values using the PC clock.

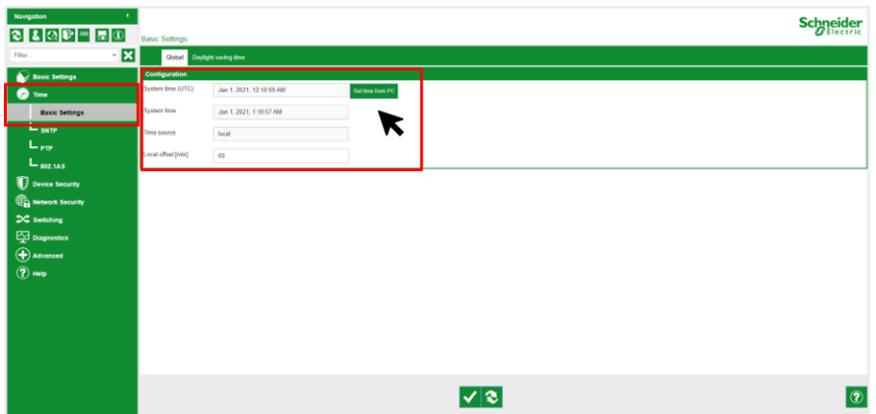


b. Save the date and time settings.


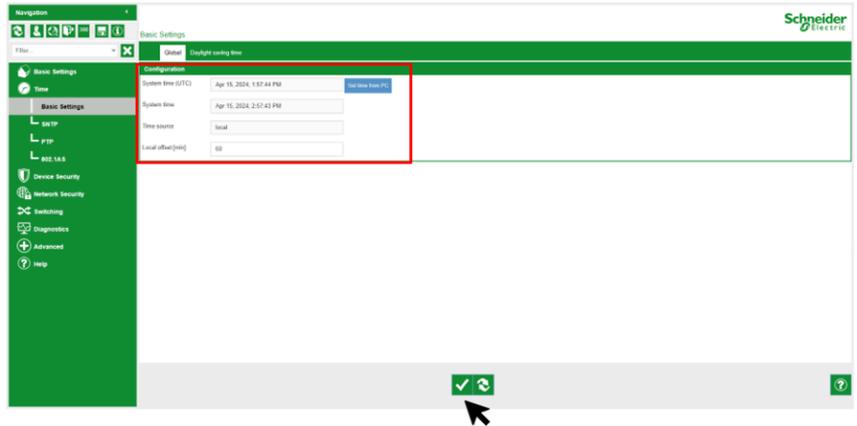


7. To save the new configuration:

a. In the **Basic Settings->Load** menu, select the configuration information.

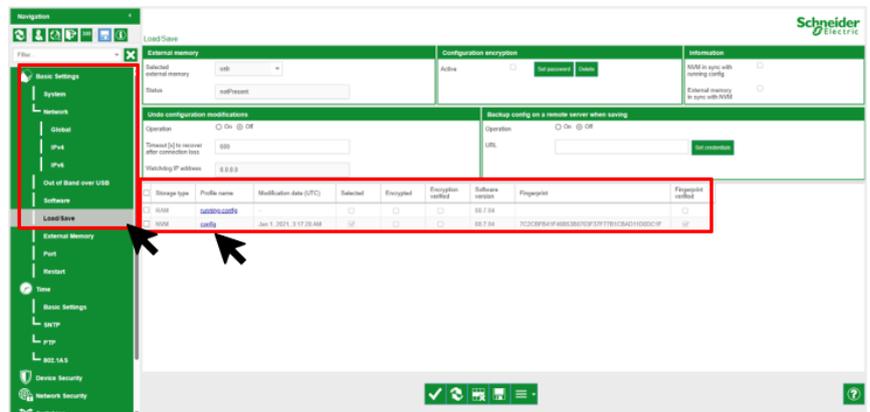

b. Save the new configuration.

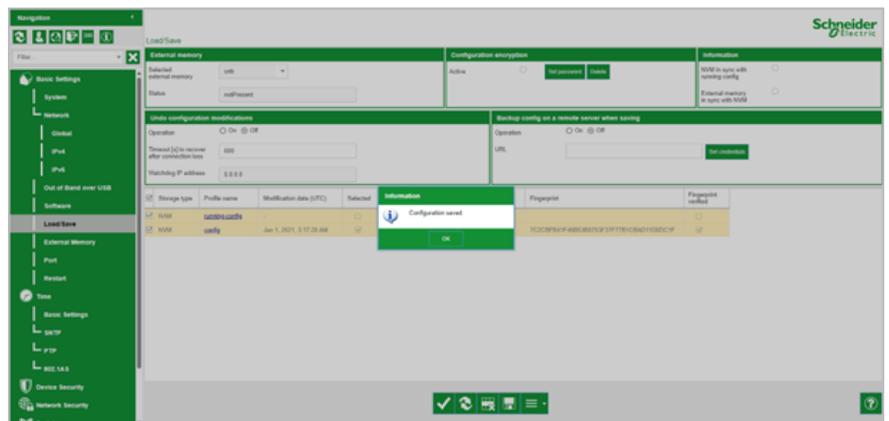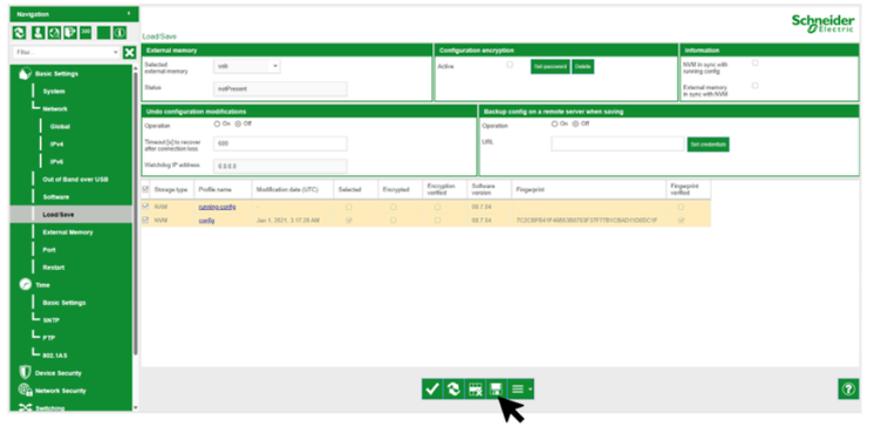

Setting up the Ring Network

1. Closing the loop
 - a. Close the network loop by connecting both ends of the existing daisy chain to two ports on the managed switch.
 - b. Check that the managed switch is still connected to the LAN network and/or the EV Charging Expert.

For example, on a Schneider Electric Modicon managed switch, the connection should look like on the following picture.



2. Check that the ring topology is working correctly:
 - All EVlink Pro AC charging stations are operational (green LED).
 - All EVlink Pro AC charging stations are connected to EV Charging Expert and/or the charging operator (CPO) and are available in the remote management interface.

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison
France

www.se.com

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2025 – 2026 Schneider Electric. All rights reserved.

EVSOLCG001EN-01