Enerlin'X IFM Modbus-SL Interface for One Circuit Breaker

IFM Firmware Release Notes (TRV00210/STRV00210)

DOCA0145EN-00 04/2020





Legal Information

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.

This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an "as is" basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel.

As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

Table of Contents

| Introduction | 5 |
|--|---|
| IFM Modbus-SL Interface for One Circuit Breaker | 5 |
| IFM Interface Firmware Release History | |
| Firmware Update Policy | 5 |
| Firmware Update with EcoStruxure Power Commission Software | 5 |
| Firmware Versions | 7 |
| Firmware Version 002.002.016 | 7 |
| Firmware Version 002.002.014 | 7 |
| Related Documents | 8 |
| Related Documents for IEC Devices | 8 |
| Related Documents for UL/ANSI Devices | 9 |
| | |

Introduction

IFM Modbus-SL Interface for One Circuit Breaker

The IFM Modbus-SL interface for one circuit breaker (IFM interface) enables an intelligent modular unit (IMU) containing a circuit breaker equipped with a communicating MicroLogic trip unit to be connected to a two-wire Modbus-SL RS-485 serial line Modbus network.

Each circuit breaker has its own IFM interface and a corresponding Modbus address.

The IFM interface with part number TRV00210 or STRV00210 is compatible with the following ranges of circuit breaker:

- MasterPact NT/NW circuit breakers
- ComPact NS circuit breakers
- · ComPact NSX circuit breakers
- · PowerPact P- and R-frame circuit breakers
- · PowerPact H-, J-, and L- frame circuit breakers

IFM Interface Firmware Release History

The following table indicates the availability of each firmware version:

| Date | Firmware version | Availability |
|---------------|------------------|--|
| April 2020 | 002.002.016 | Released through EcoStruxure Power Commission software |
| March 2019 | 002.002.014 | Released through EcoStruxure Power Commission software to specific customers |
| November 2016 | 002.002.011 | Obsolete |

Firmware Update Policy

Firmware update is recommended to benefit from the latest features and potential bug fixes. Do not update the firmware to the latest version, if the latest features are not required for your application and no bug fixes are provided.

Use this release note to determine whether an update to the latest version of the IFM firmware is relevant for your application.

For more information about the firmware update policy and the firmware compatibility between devices, refer to <u>DOCA0155EN</u> MicroLogic Trip and Control Units - Firmware History.

Firmware Update with EcoStruxure Power Commission Software

EcoStruxure[™] Power Commission is the new name of Ecoreach software.

Use the latest version of EcoStruxure Power Commission software to:

- Check the firmware compatibility of the devices in the IMU
- Update the devices with the latest firmware version available

After updating the firmware of one device, use EcoStruxure Power Commission software to check the firmware compatibility between IMU devices.

The Firmware Update table helps the user to diagnose and identify all discrepancy issues between IMU devices. This table also provides the recommended actions for each discrepancy issue.

The latest version of EcoStruxure Power Commission software is available at <u>www.se.com</u>.

For more information on the use of EcoStruxure Power Commission software, refer to *EcoStruxure Power Commission Online Help*.

Firmware Versions

Firmware Version 002.002.016

New Features

• Integrated the retry mechanism for optimizing the data continuity of service (automatic bus resynchronisation and automatic disconnection with device as it is silent for more than one minute).

Firmware Version 002.002.014

New Features

• Improved the IFM internal handling mechanism in case of critical failures (automatic recovery).

Related Documents

Related Documents for IEC Devices

The following table lists documents valid for IEC devices that are compatible with an IFM interface with the latest firmware version:

| Title of documentation | Publication date | Reference number | |
|---|------------------|----------------------|--|
| ULP System (IEC Standard) - User Guide | 03/2019 | DOCA0093EN-04 | |
| | | DOCA0093ES-04 | |
| | | DOCA0093FR-04 | |
| | | <u>DOCA0093ZH-04</u> | |
| MasterPact NT/NW, ComPact NS - Modbus Communication Guide | 12/2019 | DOCA0054EN-08 | |
| | | DOCA0054ES-08 | |
| | | DOCA0054FR-08 | |
| | | DOCA0054ZH-08 | |
| ComPact NSX - Modbus Communication Guide | 12/2019 | DOCA0091EN-07 | |
| | | DOCA0091ES-07 | |
| | | DOCA0091FR-07 | |
| | | DOCA0091ZH-07 | |

You can download these technical publications and other technical information from our website at <u>https://www.se.com/en/download</u>.

Related Documents for UL/ANSI Devices

The following table lists documents valid for UL/ANSI devices that are compatible with an IFM interface with the latest firmware version:

| Title of documentation | Publication date | Reference number |
|--|------------------|---------------------------|
| ULP System (UL Standard) - User Guide | 03/2019 | <u>0602IB1503-02 (EN)</u> |
| | | <u>0602IB1504-02 (ES)</u> |
| | | <u>0602IB1505-02 (FR)</u> |
| | | <u>0602IB1506-02 (ZH)</u> |
| MasterPact NT/NW, PowerPact P-, and R-Frame - Modbus Communication | 12/2019 | <u>0611IB1313-07 (EN)</u> |
| Guide | | <u>0611IB1314-07 (ES)</u> |
| | | <u>0611IB1315-07 (FR)</u> |
| | | <u>0611IB1316-07 (ZH)</u> |
| PowerPact H-, J-, and L- Frame Circuit Breakers - Modbus Communication | 12/2019 | <u>0611IB1302-06 (EN)</u> |
| Guide | | <u>0611IB1303-06 (ES)</u> |
| | | <u>0611IB1304-06 (FR)</u> |
| | | <u>06111B1305-06 (ZH)</u> |

You can download these technical publications and other technical information from our website at <u>https://www.se.com/en/download</u>.

Schneider Electric 35 rue Joseph Monier 92500 Rueil Malmaison France

+ 33 (0) 1 41 29 70 00

www.se.com

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2020 – 2020 Schneider Electric. All rights reserved. DOCA0145EN-00