


ULP System

ULP (Universal Logic Plug) System

User Guide

DOCA0093EN-06

01/2025

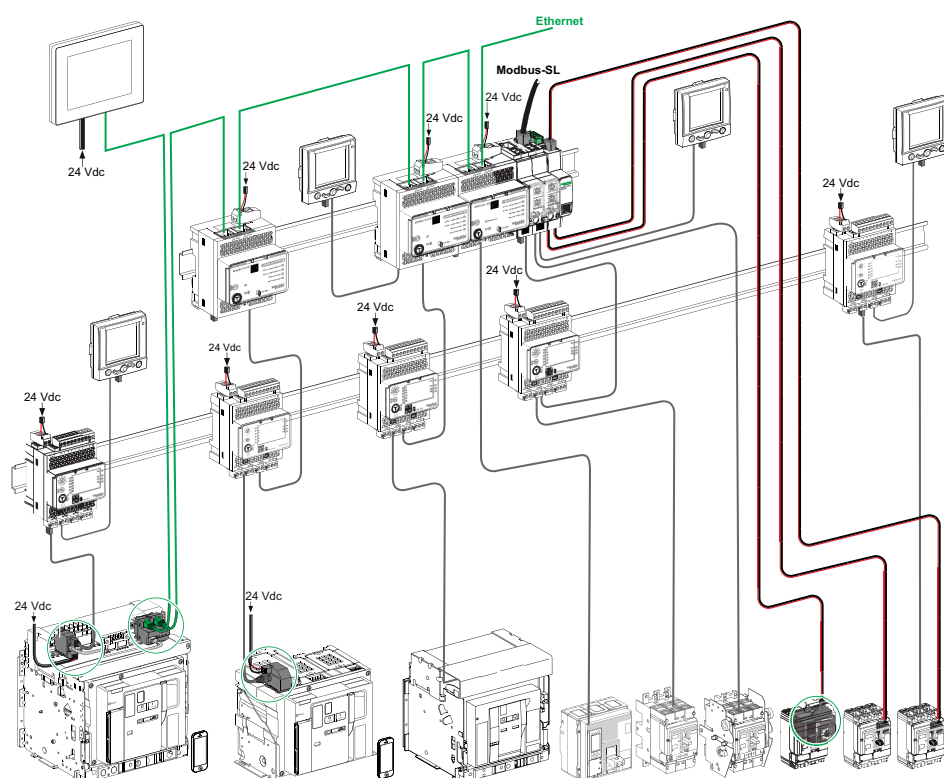

Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.

Table of Contents

Safety Information	5
About the Book.....	7
ULP System.....	13
ULP System Presentation	14
ULP Modules	24
ULP Accessories	29
Connecting ComPacT NSX or PowerPacT H-, J-, and L-Frame Circuit Breakers to the ULP System.....	31
Connecting MasterPacT NT/NW, ComPacT NS and PowerPacT P- and R-Frame Circuit Breakers to the ULP System	37
Connecting MasterPacT MTZ Circuit Breakers with MicroLogic X Control Units to the ULP System	39
EcoStruxure Power Commission Software	41
Design Rules of ULP System.....	43
Compatibility Rules of ULP Modules	44
Hardware and Firmware Compatibility of ULP Modules.....	45
Compatibility Check of Device/Firmware and Corrective Actions.....	48
Rules for ULP Connection and Power Supply	50
Composition Rules for Intelligent Modular Units (IMUs).....	51
Intelligent Modular Unit (IMU) with Withdrawable Drawer	59
Grounding System	61
ULP System Power Supply.....	63
Rules for Connection to the Communication Network	72
Connection to the Ethernet Network with IFE Server and IFE/EIFE Interfaces	73
Connection to the Modbus-SL Network with IFM Interface.....	76
Connection to the Modbus-SL Network with BSCM Modbus SL/ULP Module and Modbus SL Hub.....	79
Communication Architecture Examples with Modbus SL Hub	83
Modbus SL Connection Rules.....	86
Modbus SL Wiring Diagram Examples.....	90
ULP System Architectures.....	95
Presentation of ULP System Architectures.....	96
Standalone Architecture	98
Centralized Modbus Architecture	100
Daisy-Chain Distributed Modbus Architecture.....	108
Tap-Linked Distributed Modbus Architecture	115
Ethernet Architectures.....	126
Appendices	130
Technical Characteristics	131
Technical Characteristics of USB Maintenance Interface.....	132
RJ45 Plug/Plug ULP Cord Characteristics	134
Part Numbers for ULP System Components	135
IFM Interface with Part Number TRV00210 or STRV00210.....	137
IFM Interface with Part Number TRV00210 or STRV00210	138
Connection to the Modbus-SL Network with IFM Interface	140
Rules for ULP Connection and Power Supply	143
Modbus Cable Characteristics.....	147

Two-Wire RS 485 Isolated Repeater Module 148

 Technical Characteristics of Two-Wire RS 485 Isolated Repeater
 Module 150

Safety Information

Important Information

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

Cybersecurity Safety Notice

WARNING

POTENTIAL COMPROMISE OF SYSTEM AVAILABILITY, INTEGRITY, AND CONFIDENTIALITY

- Change default passwords at first use to help prevent unauthorized access to device settings, controls, and information.
- Disable unused ports/services and default accounts to help minimize pathways for malicious attackers.
- Place networked devices behind multiple layers of cyber defenses (such as firewalls, network segmentation, and network intrusion detection and protection).
- Use cybersecurity best practices (for example, least privilege, separation of duties) to help prevent unauthorized exposure, loss, modification of data and logs, or interruption of services.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

About the Book

Document Scope

The aim of this guide is to provide installers and maintenance personnel with the technical information needed to set up and operate the ULP (Universal Logic Plug) system.

Validity Note

This document is applicable to ULP system modules and accessories associated with:

- The ComPacT™ NSX, ComPacT™ NS, MasterPacT™ NT/NW and MasterPacT™ MTZ ranges of IEC circuit breakers and switch-disconnectors.
- The PowerPacT™ H-, J-, and L-frame, PowerPacT™ P- and R-frame, MasterPacT NT/NW and MasterPacT MTZ ranges of UL/ANSI circuit breakers and switch-disconnectors.

Online Information

The technical characteristics of the devices described in this guide also appear online. To access the information online, go to the Schneider Electric Country website at www.se.com.

The information contained in this guide is likely to be updated at any time. Schneider Electric strongly recommends that you have the most recent and up-to-date version available on www.se.com/ww/en/download.

Related Documents for IEC Devices

Title of documentation	Reference number
<i>ComPacT NSX - Circuit Breakers and Switch-Disconnectors 100–630 A - User Guide</i>	DOCA0187EN DOCA0187ES DOCA0187FR DOCA0187ZH
<i>ComPacT NSX DC - Circuit Breakers and Switch-Disconnectors - User Guide</i>	DOCA0186EN DOCA0186ES DOCA0186FR DOCA0186ZH
<i>ComPacT NSX - MicroLogic 5/6/7 Electronic Trip Units - User Guide</i>	DOCA0188EN DOCA0188ES DOCA0188FR DOCA0188ZH
<i>ComPacT NSX - Modbus Communication Guide</i>	DOCA0213EN DOCA0213ES DOCA0213FR DOCA0213ZH
<i>ComPacT NSX & NSXm Catalogue</i>	LVPED221001EN
<i>ComPacT NS - Circuit Breakers and Switch-Disconnectors from 630 to 3200 A - User Guide</i>	DOCA0221EN

Title of documentation	Reference number
	DOCA0221ES DOCA0221FR DOCA0221ZH
<i>ComPacT NS - Modbus Communication Guide</i>	DOCA0220EN DOCA0220ES DOCA0220FR DOCA0220ZH
<i>ComPacT NS 630b-3200 A Catalogue</i>	LVPED221008EN
<i>MasterPacT NT - Circuit Breakers and Switch-Disconnectors - User Guide</i>	51201116AA (EN) EAV16739 (ES) 51201115AA (FR)
<i>MasterPacT NW - Circuit Breakers and Switch-Disconnectors - User Guide</i>	04443720AA (EN) EAV16740 (ES) 04443719AA (FR)
<i>MasterPacT NT/NW - Modbus Communication Guide</i>	DOCA0054EN DOCA0054ES DOCA0054FR DOCA0054ZH
<i>MasterPacT NT/NW Catalogue</i>	LVPED208008EN
<i>MasterPacT MTZ1 - IEC Circuit Breakers and Switch-Disconnectors - User Guide</i>	DOCA0100EN DOCA0100ES DOCA0100FR DOCA0100ZH
<i>MasterPacT MTZ2/MTZ3 - IEC Circuit Breakers and Switch-Disconnectors - User Guide</i>	DOCA0101EN DOCA0101ES DOCA0101FR DOCA0101ZH
<i>MasterPacT MTZ MicroLogic X - Control Unit - User Guide</i>	DOCA0102EN DOCA0102ES DOCA0102FR DOCA0102ZH
<i>MasterPacT MTZ - Modbus Communication Guide</i>	DOCA0105EN DOCA0105ES DOCA0105FR DOCA0105ZH
<i>MasterPacT MTZ Catalogue</i>	LVPED216026EN
<i>Enerlin'X EIFE - Embedded Ethernet Interface for One MasterPacT MTZ Drawout Circuit Breaker - Instruction Sheet</i>	NVE23550
<i>Enerlin'X EIFE - Embedded Ethernet Interface for One MasterPacT MTZ Drawout Circuit Breaker - User Guide</i>	DOCA0106EN DOCA0106ES DOCA0106FR DOCA0106ZH
<i>Enerlin'X IFE - Ethernet Interface for One Circuit Breaker - Instruction Sheet</i>	QGH13473
<i>Enerlin'X IFE - Ethernet Interface for One Circuit Breaker - User Guide</i>	DOCA0142EN DOCA0142ES DOCA0142FR DOCA0142ZH
<i>Enerlin'X IFE - Ethernet Switchboard Server - User Guide</i>	DOCA0084EN DOCA0084ES

Title of documentation	Reference number
	DOCA0084FR DOCA0084ZH
<i>Enerlin'X IFM - Modbus-SL Interface for One Circuit Breaker - Instruction Sheet</i>	NVE85393
<i>BSCM Modbus SL/ULP Module - Instruction Sheet</i>	PKR1891407
<i>Modbus SL Hub - Instruction Sheet</i>	BQT1758409
<i>Enerlin'X IO - Input/Output Application Module for One Circuit Breaker - Instruction Sheet</i>	HRB49217
<i>Enerlin'X IO - Input/Output Application Module for One Circuit Breaker - User Guide</i>	DOCA0055EN DOCA0055ES DOCA0055FR DOCA0055ZH
<i>Enerlin'X FDM121 - Front Display Module for One Circuit Breaker - Instruction Sheet</i>	QGH80971
<i>Enerlin'X FDM121 - Front Display Module for One Circuit Breaker - User Guide</i>	DOCA0088EN DOCA0088ES DOCA0088FR DOCA0088ZH
<i>Service Interface - Instruction Sheet</i>	GDE78167
<i>Service Interface for MasterPacT NT/NW, ComPacT, PowerPacT, and EasyPacT Circuit Breakers - User Guide</i>	DOCA0170EN DOCA0170ES DOCA0170FR DOCA0170ZH
<i>USB Maintenance Interface - Instruction Sheet</i>	GHD16349AA
<i>Two-Wire RS 485 Isolated Repeater - Instruction Sheet</i>	S1A2181101
<i>MasterPacT NT/NW, ComPacT NS, PowerPacT P- and R-Frame Communication Option - Installation Manual</i>	EAV3608000 (EN, ES, FR)
<i>EcoStruxure Power connected products Catalogue</i>	LVCATENLX_EN
<i>MasterPacT, ComPacT, PowerPacT Cybersecurity Guide</i>	DOCA0122EN DOCA0122ES DOCA0122FR DOCA0122ZH

You can download these technical publications and other technical information from our website at www.se.com/ww/en/download/

Related Documents for UL/ANSI Devices

Title of documentation	Reference number
<i>PowerPacT H-, J-, and L-Frame Circuit Breakers with MicroLogic Trip Units - User Guide</i>	48940-313-01 (EN, ES, FR)
<i>MicroLogic 5 and 6 Electronic Trip Units for PowerPacT H-, J-, and L-Frame Circuit Breakers - User Guide</i>	48940-312-01 (EN, ES, FR)
<i>PowerPacT H-, J-, and L-Frame Circuit Breakers - Modbus Communication Guide</i>	0611IB1302 (EN) 0611IB1303 (ES) 0611IB1304 (FR) 0611IB1305 (ZH)
<i>PowerPacT H-, J-, and L-Frame Circuit Breakers Catalog</i>	0611CT1001
<i>PowerPacT P-Frame and NS630b–NS1600 Circuit Breakers - Instruction Bulletin</i>	48049-148-05 (EN, ES, FR)

Title of documentation	Reference number
<i>PowerPacT P-Frame Drawout Circuit Breakers - Instruction Bulletin</i>	48049-336-02 (EN, ES, FR)
<i>PowerPacT R-Frame and NS1600b–NS3200 Circuit Breakers - Instruction Bulletin</i>	48049-243-04 (EN, ES, FR)
<i>MasterPacT NT Low-Voltage Power/Insulated Case Circuit Breaker - User Guide</i>	0613IB1209 (EN, ES, FR)
<i>MasterPacT NW Low-Voltage Power/Insulated Case Circuit Breaker - User Guide</i>	0613IB1204 (EN, ES, FR)
<i>MasterPacT NT/NW and PowerPacT P- and R -Frame - Modbus Communication Guide</i>	0613IB1313 (EN) 0613IB1314 (ES) 0613IB1315 (FR) 0613IB1316 (ZH)
<i>MasterPacT NT and NW Universal Power Circuit Breakers Catalog</i>	0613CT0001
<i>MasterPacT MTZ1 - UL Rated/ANSI Certified 800 to 1600 A Circuit Breakers and Switches - User Guide</i>	0614IB1702EN 0614IB1702ES 0614IB1702FR 0614IB1702ZH
<i>MasterPacT MTZ2/MTZ3 - UL Rated/ANSI Certified 800 to 6000 A Circuit Breakers and Switches - User Guide</i>	0614IB1701EN 0614IB1701ES 0614IB1701FR 0614IB1701ZH
<i>MasterPacT MTZ MicroLogic X - Control Unit - User Guide</i>	DOCA0102EN DOCA0102ES DOCA0102FR DOCA0102ZH
<i>MasterPacT MTZ - Modbus Communication Guide</i>	DOCA0105EN DOCA0105ES DOCA0105FR DOCA0105ZH
<i>MasterPacT MTZ Catalog</i>	0614CT1701
<i>Enerlin'X EIFE - Embedded Ethernet Interface for One MasterPacT MTZ Drawout Circuit Breaker - Instruction Sheet</i>	NVE23550
<i>Enerlin'X EIFE - Embedded Ethernet Interface for One MasterPacT MTZ Drawout Circuit Breaker - User Guide</i>	DOCA0106EN DOCA0106ES DOCA0106FR DOCA0106ZH
<i>Enerlin'X IFE - Ethernet Interface for One Circuit Breaker - Instruction Sheet</i>	QGH13473
<i>Enerlin'X IFE - Ethernet Interface for One Circuit Breaker - User Guide</i>	DOCA0142EN DOCA0142ES DOCA0142FR DOCA0142ZH
<i>Enerlin'X IFE - Ethernet Switchboard Server - User Guide</i>	DOCA0084EN DOCA0084ES DOCA0084FR DOCA0084ZH
<i>Enerlin'X IFM - Modbus-SL Interface for One Circuit Breaker - Instruction Sheet</i>	NVE85393
<i>BSCM Modbus SL/ULP Module - Instruction Sheet</i>	PKR1891407
<i>Modbus SL Hub - Instruction Sheet</i>	BQT1758409
<i>Enerlin'X IO - Input/Output Application Module for One Circuit Breaker - Instruction Sheet</i>	HRB49217

Title of documentation	Reference number
<i>Enerlin'X IO - Input/Output Application Module for One Circuit Breaker - User Guide</i>	DOCA0055EN DOCA0055ES DOCA0055FR DOCA0055ZH
<i>Enerlin'X FDM121 - Front Display Module for One Circuit Breaker - Instruction Sheet</i>	QGH80971
<i>Enerlin'X FDM121 - Front Display Module for One Circuit Breaker - User Guide</i>	DOCA0088EN DOCA0088ES DOCA0088FR DOCA0088ZH
<i>UTA Tester for PowerPacT H-, J- and L-Frame Circuit Breakers - Instruction Bulletin</i>	48940-330-01
<i>Two-Wire RS 485 Isolated Repeater - Instruction Sheet</i>	S1A2181101
<i>EcoStruxure Power Connected Products - Catalog</i>	LVCATENLX_EN
<i>Service Interface - Instruction Sheet</i>	GDE78167
<i>Service Interface for MasterPacT NT/NW, ComPacT, PowerPacT, and EasyPacT Circuit Breakers - User Guide</i>	DOCA0170EN DOCA0170ES DOCA0170FR DOCA0170ZH
<i>MasterPacT, ComPacT, PowerPacT Cybersecurity Guide</i>	DOCA0122EN DOCA0122ES DOCA0122FR DOCA0122ZH

You can download these technical publications and other technical information from our website at www.se.com/ww/en/download/

Information on Non-Inclusive or Insensitive Terminology

As a responsible, inclusive company, Schneider Electric is constantly updating its communications and products that contain non-inclusive or insensitive terminology. However, despite these efforts, our content may still contain terms that are deemed inappropriate by some customers.

ULP System

What's in This Part

- ULP System Presentation 14
- ULP Modules 24
- ULP Accessories..... 29
- Connecting ComPacT NSX or PowerPacT H-, J-, and L-Frame Circuit Breakers to the ULP System 31
- Connecting MasterPacT NT/NW, ComPacT NS and PowerPacT P- and R-Frame Circuit Breakers to the ULP System..... 37
- Connecting MasterPacT MTZ Circuit Breakers with MicroLogic X Control Units to the ULP System 39
- EcoStruxure Power Commission Software 41

ULP System Presentation

Description

Use the ULP (Universal Logic Plug) system to construct an electrical distribution solution which integrates metering, communication, and operating assistance functions for IEC and UL/ANSI circuit breakers and switch-disconnectors.

IEC Devices Compatible with the ULP System

The IEC devices compatible with the ULP system are the following:

- ComPacT NSX circuit breakers and switch-disconnectors from 100 to 630 A
- ComPacT NSX DC circuit breakers from 100 to 1200 A and switch-disconnectors from 100 to 630 A
- ComPacT NS circuit breakers and switch-disconnectors from 630 to 3200 A
- MasterPacT NT circuit breakers and switch-disconnectors from 630 to 1600 A
- MasterPacT NW circuit breakers and switch-disconnectors from 800 to 6300 A
- MasterPacT MTZ1 circuit breakers from 630 to 1600 A
- MasterPacT MTZ2 circuit breakers from 800 to 4000 A
- MasterPacT MTZ3 circuit breakers from 4000 to 6300 A

NOTE:

The information related to the new generation of ComPacT NSX circuit breakers in this guide applies also to the existing ranges of ComPacT NSX circuit breakers.

The information related to the new generation of ComPacT NS circuit breakers in this guide applies also to the existing ranges of ComPacT NS circuit breakers.

The exceptions are mentioned wherever applicable. The new ranges are based on the same technical and dimensional architecture as that of the existing range of circuit breakers.

UL/ANSI Devices Compatible with the ULP System

The UL/ANSI devices compatible with the ULP system are the following:


- PowerPacT H-frame circuit breakers and switches from 15 to 150 A
- PowerPacT J-frame circuit breakers and switches from 150 to 250 A
- PowerPacT L-frame circuit breakers and switches from 250 to 600 A
- PowerPacT P-frame circuit breakers and switches from 600 to 1200 A
- PowerPacT R-frame circuit breakers and switches from 1600 to 3000 A
- MasterPacT NT circuit breakers and switches from 600 to 1600 A
- MasterPacT NW circuit breakers and switches from 800 to 6000 A
- MasterPacT MTZ1 circuit breakers from 600 to 1600 A
- MasterPacT MTZ2 circuit breakers from 800 to 4000 A
- MasterPacT MTZ3 circuit breakers from 4000 to 6000 A

NOTE:

The information related to the new generation of PowerPacT circuit breakers in this guide applies also to the existing ranges of PowerPacT circuit breakers.



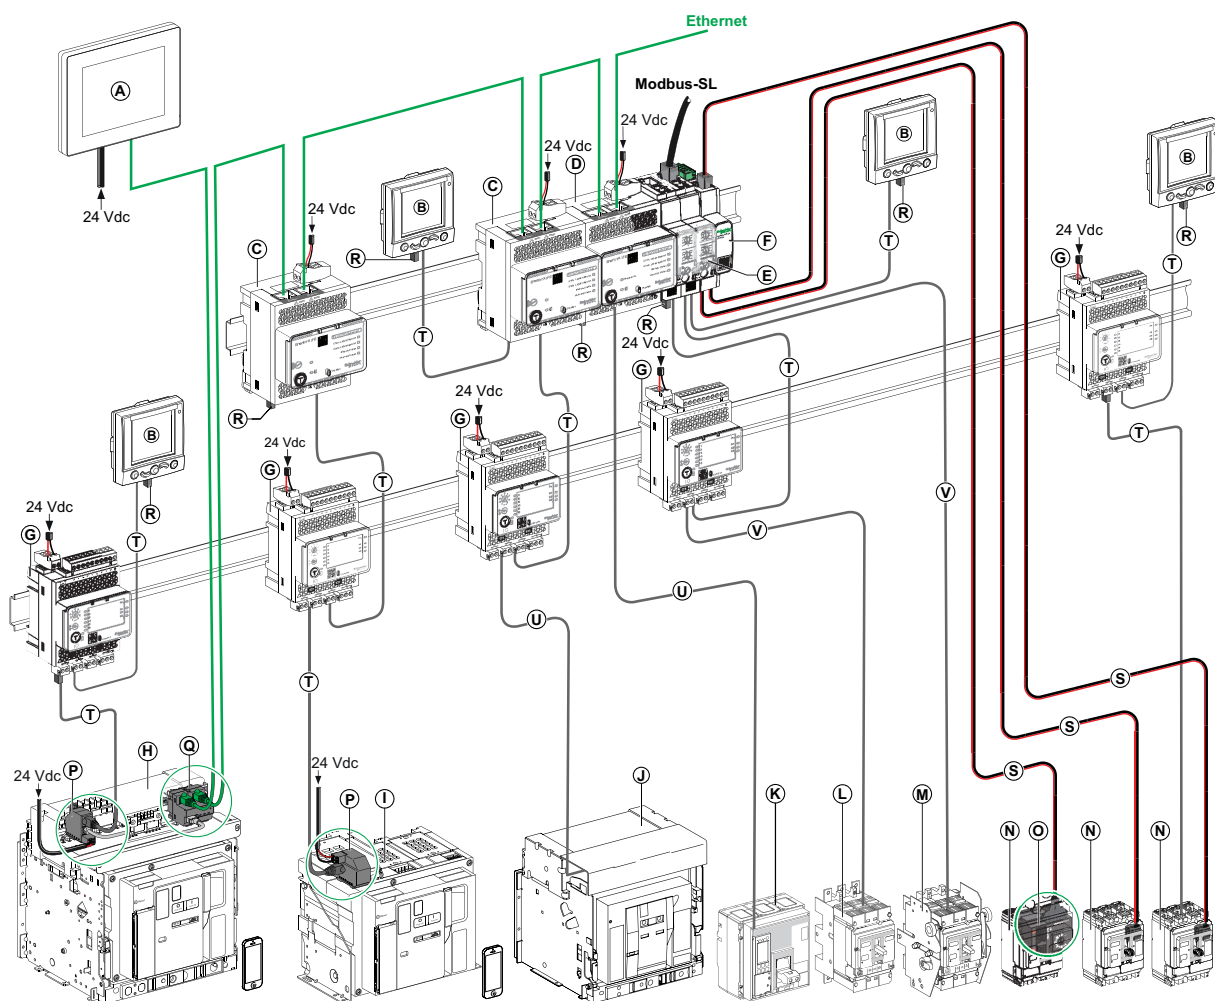

The exceptions are mentioned wherever applicable. The new ranges are based on the same technical and dimensional architecture as that of the exiting range of circuit breakers.

Architecture Example



Legend	Description	Part of the ULP system
A	FDM128 Ethernet display for eight devices	—
B	FDM121 front display module for one circuit breaker	✓
C	IFE Ethernet interface for one circuit breaker	✓
D	IFE Ethernet switchboard server	✓
E	IFM Modbus-SL interface for one circuit breaker	✓
F	Modbus SL hub	✓
G	IO input/output application module for one circuit breaker	✓
H	MasterPacT MTZ drawout circuit breaker	✓
I	MasterPacT MTZ fixed circuit breaker	✓
J	MasterPacT NT/NW circuit breaker	✓
K	ComPacT NS/PowerPacT P- and R-frame circuit breaker	✓
L	ComPacT NSX/PowerPacT H-, J-, and L-frame plug-in circuit breaker	✓

Legend	Description	Part of the ULP system
M	ComPacT NSX/PowerPacT H-, J-, and L-frame withdrawable circuit breaker	✓
N	ComPacT NSX/PowerPacT H-, J-, and L-frame fixed circuit breaker	✓
O	BSCM Modbus SL/ULP module	✓
P	ULP port module	✓
Q	EIFE Embedded Ethernet interface for one MasterPacT MTZ drawout circuit breaker	✓
R	ULP line termination	✓
S	BSCM Modbus SL cord	✓
T	RJ45 ULP cord	✓
U	Circuit breaker BCM ULP cord	✓
V	NSX cord	✓

Cable	Description
	Ethernet network
	Modbus network
	ULP network
	24 Vdc power supply

Features

Use the ULP system to enhance the functions of ComPacT NSX, PowerPacT H-, J-, and L-frame, ComPacT NS, PowerPacT P- and R-frame, MasterPacT NT/NW, and MasterPacT MTZ circuit breakers by:

- An Ethernet communication link for access and remote monitoring with the IFE communication interface or EIFE interface (MasterPacT MTZ drawout circuit breakers only).
- Web access to monitor and control the circuit breaker connected to an IFE communication interface or EIFE interface (MasterPacT MTZ circuit breakers only).
- An input/output application with an IO module. It benefits from the extended capability of the IO module to monitor and control position of drawout circuit breakers in the cradle, circuit breaker operation, and custom application, and so on.
- Test, setup, and maintenance functions with EcoStruxure Power Commission software, page 41.
- A Modbus-SL communication link for access and remote monitoring:
 - With the IFM communication interface.
 - With the BSCM Modbus SL/ULP module and the Modbus SL hub (for ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers only).
- Local display of measurements and operating assistance data with the FDM121 display.

The ULP system lets the circuit breakers become a metering and supervision tool to assist energy efficiency and can:

- Optimize energy consumption by zone or by application, according to the load peaks or priority zones.
- Improve electrical equipment management.


Intelligent Modular Unit (IMU)

A modular unit is a mechanical and electrical assembly containing one or more products to perform a function in electrical equipment (incoming protection, motor command and control). The modular units are easily installed in the electrical equipment.

The circuit breaker with its internal communicating components (for example, MicroLogic™ trip unit) and external ULP modules (for example, IO module) connected to one communication interface (IFE, EIFE, IFM, or BSCM Modbus SL/ULP module depending on the circuit breaker type) is called an intelligent modular unit or IMU.


Examples of IMU with ComPacT NSX or PowerPacT H-, J-, and L-Frame Circuit Breaker

Example 1: IMU composed of a fixed ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker connected to a BSCM Modbus SL/ULP module, an FDM121 display and an IO module.

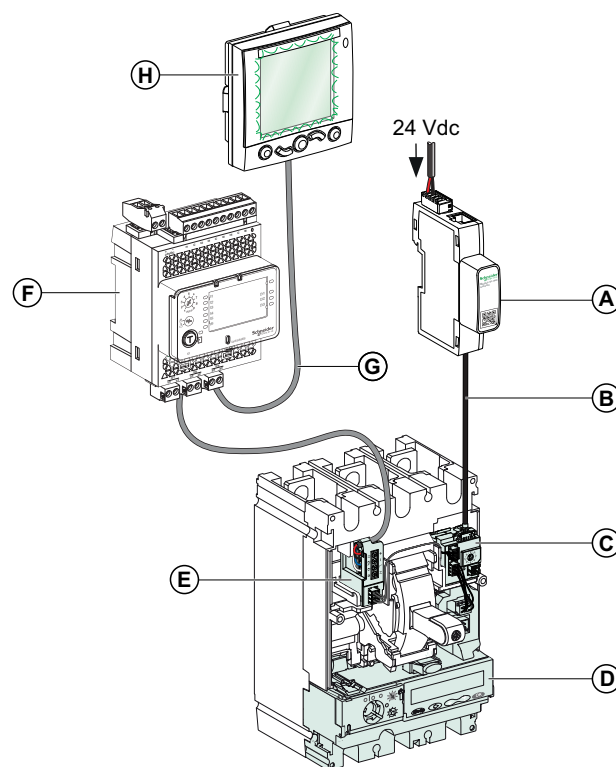

- A Modbus SL hub
- B BSCM Modbus SL cord
- C BSCM Modbus SL/ULP module
- D MicroLogic 5, 6 or 7 trip unit
- E NSX cord
- F IO module
- G ULP cord
- H FDM121 display


Example 2: IMU composed of a ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker connected to one IO module and an IFE communication interface.

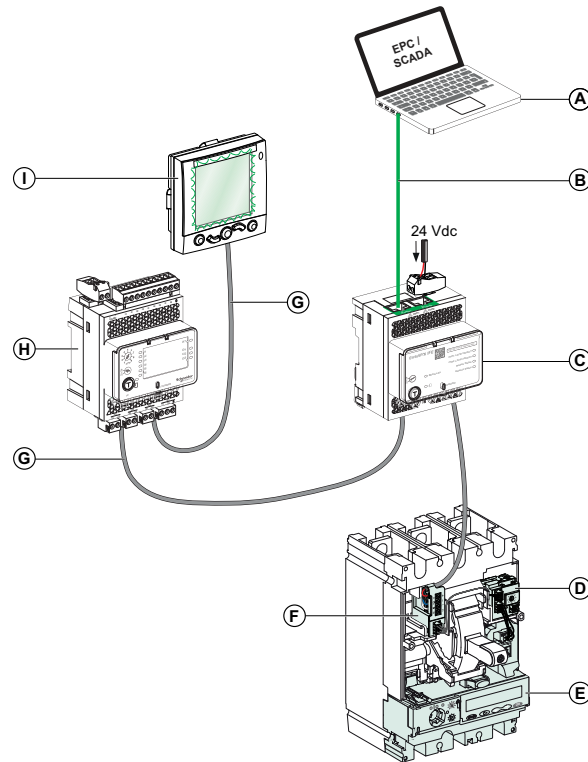

- A** Modbus TCP client
- B** Ethernet cable
- C** IFE Ethernet interface for one circuit breaker or IFE Ethernet switchboard server
- D** BSCM Modbus SL/ULP module
- E** MicroLogic 5, 6 or 7 trip unit
- F** NSX cord
- G** ULP cord
- H** IO module
- I** FDM121 display

Example 3: IMU composed of a withdrawable ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker with a BSCM Modbus SL/ULP module connected to an FDM121 display and an IFM communication interface.


NOTE: It is recommended to use the BSCM Modbus SL/ULP module in ULP only mode for withdrawable and plug-in circuit breakers.

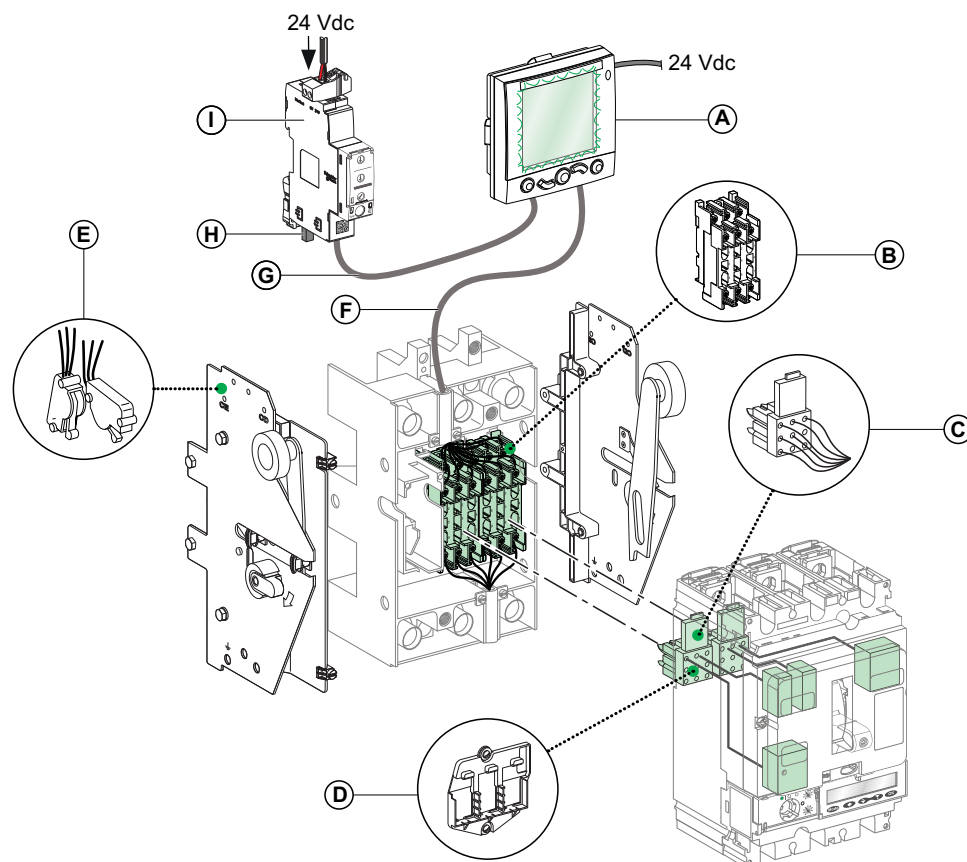

- A FDM121 display
- B 9-wire fixed connector for base
- C 9-wire moving connector
- D Support for two moving connectors
- E CE/CD (connected/disconnected) position auxiliary switches
- F NSX cord
- G RJ45 plug/plug ULP cord
- H ULP line termination
- I IFM communication interface


Examples of IMU with MasterPacT NT/NW Circuit Breaker

Example 1: IMU composed of a fixed, electrically-operated MasterPacT NT circuit breaker connected to an IFM communication interface and an FDM121 display.

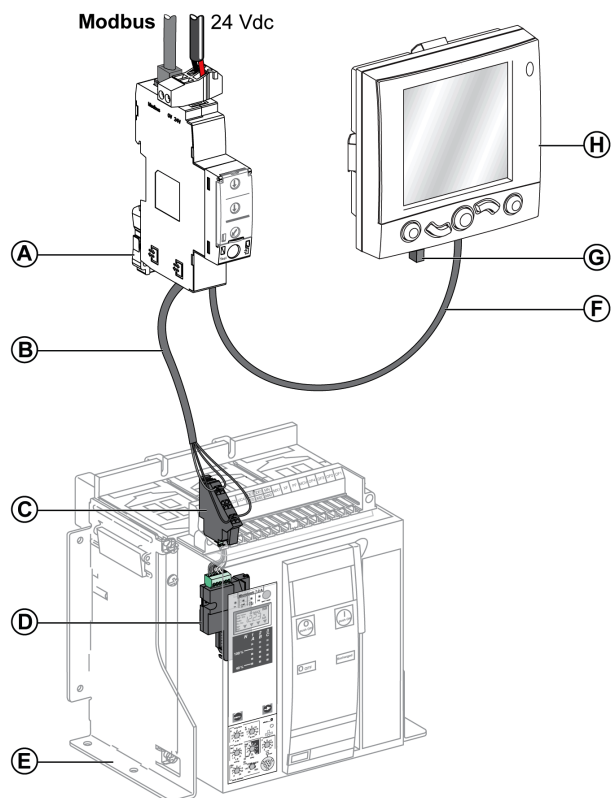

- A** IFM Modbus-SL interface for one circuit breaker
- B** Circuit breaker BCM ULP cord
- C** Fixed terminal block
- D** BCM ULP circuit breaker communication module
- E** Fixed electrically-operated circuit breaker
- F** RJ45 plug/plug ULP cord
- G** ULP line termination
- H** FDM121 front display module for one circuit breaker


Example 2: IMU composed of a drawout MasterPacT NT circuit breaker connected to one IO module for cradle management and an IFE communication interface.

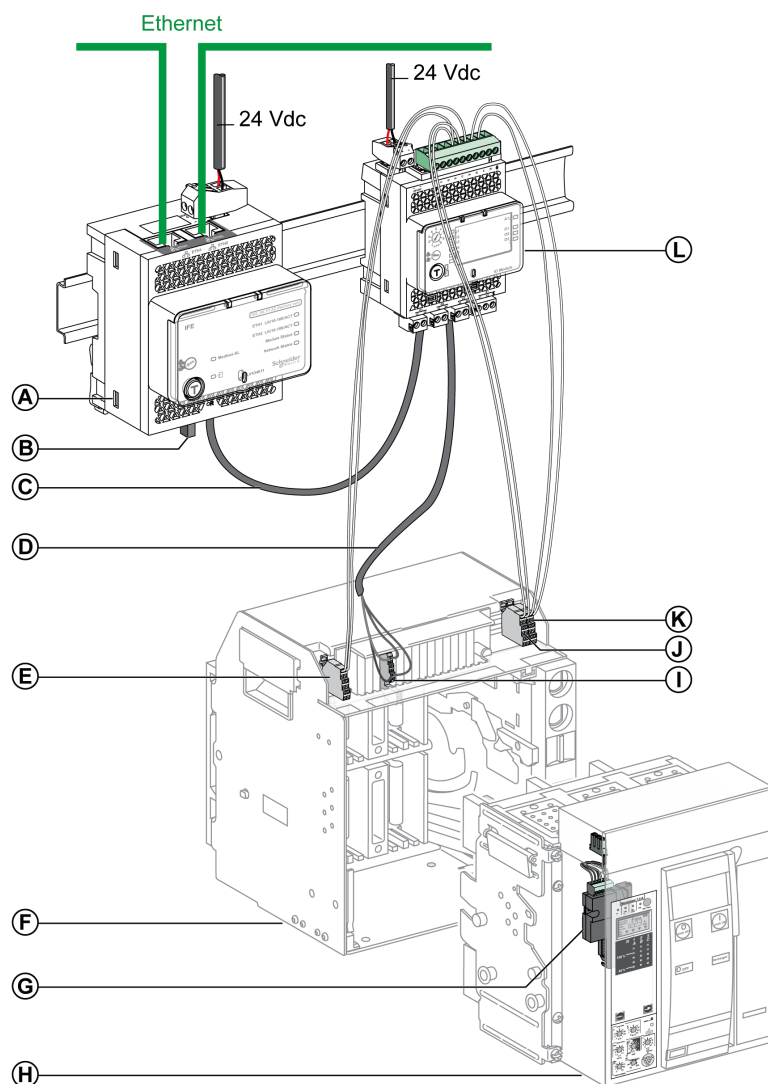

- | | |
|----------|--|
| A | IFE Ethernet interface for one circuit breaker or IFE Ethernet switchboard service |
| B | ULP line termination |
| C | RJ45 plug/plug ULP cord |
| D | Circuit breaker BCM ULP cord |
| E | Circuit breaker disconnected position contact (CD) |
| F | Circuit breaker cradle |
| G | BCM ULP circuit breaker communication module |
| H | Drawout circuit breaker |
| I | Drawout terminal block |
| J | Circuit breaker connected position contact (CE) |
| K | Circuit breaker test position contact (CT) |
| L | IO input/output application module for one circuit breaker |


Examples of IMU with MasterPacT MTZ Circuit Breaker

Example 1: IMU composed of a MasterPacT MTZ fixed circuit breaker connected to one IO module and an IFE communication interface.

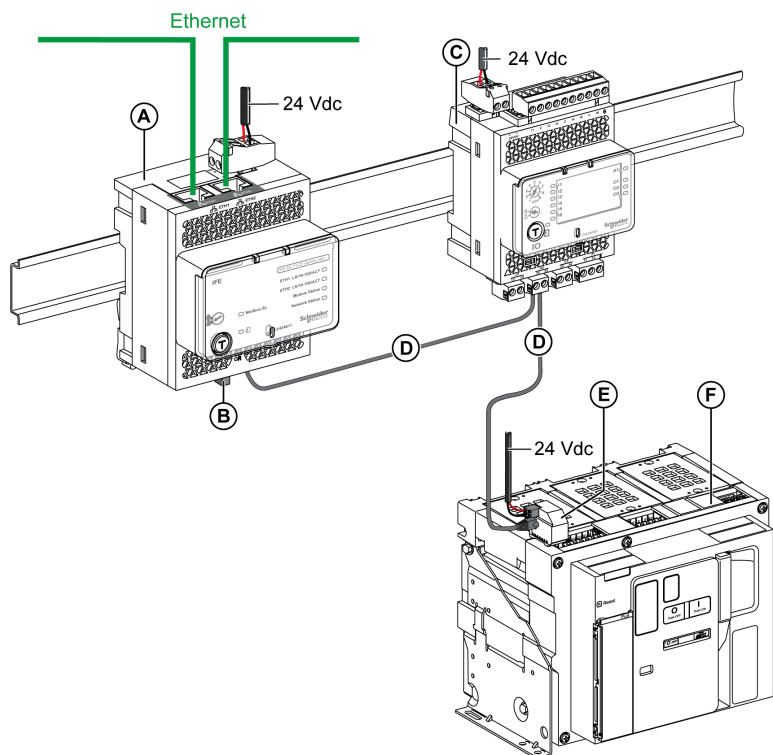

- A** IFE Ethernet interface for one circuit breaker or IFE Ethernet switchboard server
- B** ULP line termination
- C** IO input/output application module for one circuit breaker
- D** RJ45 plug/plug ULP cord
- E** ULP port module
- F** MasterPacT MTZ fixed circuit breaker

Example 2: IMU composed of a MasterPacT MTZ drawout circuit breaker connected to an EIFE interface and one IO module.

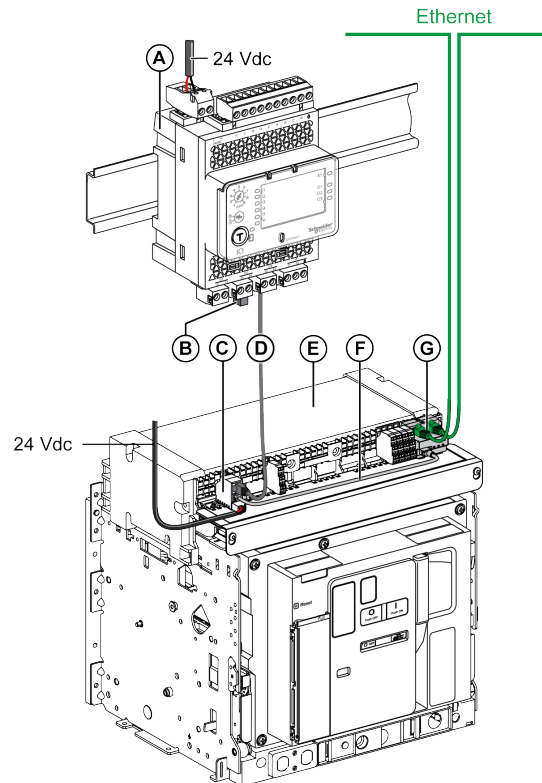

- A** IO input/output application module for one circuit breaker
- B** ULP line termination
- C** ULP port module
- D** RJ45 plug/plug ULP cord
- E** MasterPacT MTZ drawout circuit breaker
- F** Cord between ULP port module and EIFE interface
- G** EIFE embedded Ethernet interface for one MasterPacT MTZ drawout circuit breaker

ULP Modules

ULP Modules

ULP modules can be grouped in categories:


- Generic ULP modules which are compliant with all circuit breakers as presented in the following tables.
- ULP modules specific to ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers, page 31.
- ULP modules specific to MasterPacT NT/NW, ComPacT NS and PowerPacT P- and R-frame circuit breakers, page 37.
- ULP modules specific to MasterPacT MTZ circuit breakers, page 39.

IFE Ethernet Interface for One Circuit Breaker

The IFE Ethernet interface for one circuit breaker provides an Ethernet access to a single intelligent modular unit using a ComPacT, PowerPacT or MasterPacT circuit breaker.

Each circuit breaker has its own IFE interface and a corresponding IP address.

NOTE: The IFE interface with part number LV434001 replaces the IFE interface with part number LV434010. The IFE interface LV434001 comes with the real time clock (RTC) feature and allows ULP connections up to 20 m (65.6 ft). The part number LV434010 had a theoretical limitation of 5 m (16.4 ft) over the life of the IFE interface.

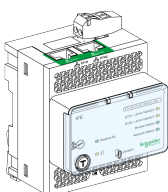Illustration	Part number	Documentation
	LV434001	<ul style="list-style-type: none">• QGH13473 <i>Enerlin'X IFE - Ethernet Interface for One Circuit Breaker - Instruction Sheet</i>• DOCA0142** <i>Enerlin'X IFE - Ethernet Interface for One Circuit Breaker - User Guide</i>, page 7


IFE Ethernet Switchboard Server

The IFE Ethernet switchboard server provides an Ethernet access to one or several intelligent modular units using ComPacT, PowerPacT, or MasterPacT circuit breakers.

It supports the following communication architectures:


- One single circuit breaker connected to the IFE server.
- Up to 11 circuit breakers that can be connected:
 - Through IFM Modbus-SL interfaces that are stacked to the IFE server.
 - Through Modbus SL hubs that are stacked to the IFE server (ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers only).

NOTE: The IFE server with part number LV434002 replaces the IFE server with part number LV434011. The IFE server LV434002 comes with the real time clock (RTC) feature and allows ULP connections up to 20 m (65.6 ft). The part number LV434011 had a theoretical limitation of 5 m (16.4 ft) over the life of the IFE server.

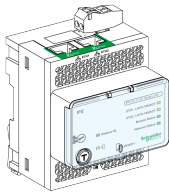Illustration	Part number	Documentation
	LV434002	<ul style="list-style-type: none"> QGH13473 <i>Enerlin'X IFE - Ethernet Interface for One Circuit Breaker - Instruction Sheet</i> DOCA0084** <i>Enerlin'X IFE - Ethernet Switchboard Server - User Guide, page 7</i>

IFM Modbus-SL Interface for One Circuit Breaker

The IFM Modbus-SL interface provides access to a Modbus serial line communication network for a single intelligent modular unit using a ComPacT, PowerPacT, or MasterPacT circuit breaker.

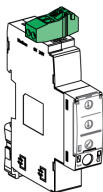Illustration	Part number	Documentation
	LV434000	NVE85393 <i>Enerlin'X IFM - Modbus-SL Interface for One Circuit Breaker - Instruction Sheet</i>


NOTE: The IFM interface with part number LV434000 replaces the IFM interface with part number TRV00210 or STRV00210. The specific features of IFM interface with part number TRV00210 or STRV00210, including rules for ULP connection and power supply, are detailed in the appendix B, page 137.

IO Input/Output Application Module for One Circuit Breaker

The IO input/output application module for one circuit breaker is one of the components of the ULP architecture.


The IO application module enhances control and monitoring functions of a single intelligent modular unit with a ComPacT, PowerPacT, or MasterPacT circuit breaker, thanks to its built-in applications. Its resources are:

- Six digital inputs: self-powered inputs, used as NO and NC dry contact or pulse counter.
- Three digital outputs: bistable relay (5 A maximum).

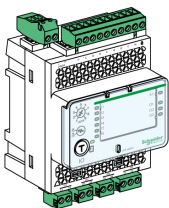Illustration	Part number	Documentation
	LV434063	<ul style="list-style-type: none"> HRB49217 <i>Enerlin'X IO - Input/Output Application Module for One Circuit Breaker - Instruction Sheet</i> DOCA0055** <i>Enerlin'X IO - Input/Output Application Module for One IEC Circuit Breaker - User Guide, page 7</i>

FDM121 Front Display Module for One Circuit Breaker

The FDM121 front display module for one circuit breaker shows the measurements, alarms, and operating assistance data from a single intelligent modular unit with a ComPacT, PowerPacT, or MasterPacT circuit breaker.

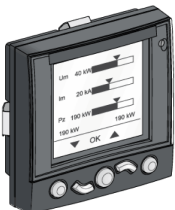Illustration	Part number	Documentation
	TRV00121 STRV00121	<ul style="list-style-type: none"> QGH80971 <i>Enerlin'X FDM121 - Front Display Module for One Circuit Breaker - Instruction Sheet</i> DOCA0088** <i>Enerlin'X FDM121 - Front Display Module for One Circuit Breaker - User Guide, page 7</i>


Service Interface

The Service Interface is a portable instrument designed for field testing.

The Service Interface is used for:

- Configuration of Enerlin'X devices
- Testing and configuration of MicroLogic trip units mounted in the following low voltage circuit breakers:
 - MasterPacT NT/NW circuit breakers
 - EasyPacT MVS circuit breakers
 - ComPacT NS circuit breakers
 - PowerPacT P- and R-frame circuit breakers
 - ComPacT NSX circuit breakers
 - PowerPacT H-, J-, and L-frame circuit breakers

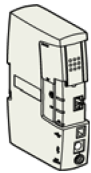
NOTE: The Service Interface cannot be connected to a MasterPacT MTZ circuit breaker.

Illustration	Part number	Documentation
	LV485500	<ul style="list-style-type: none"> GDE78167 <i>Service Interface - Instruction Sheet</i> DOCA0170** <i>Service Interface for MasterPacT NT/NW, ComPacT, PowerPacT, and EasyPacT Circuit Breakers - User Guide, page 7</i>

USB Maintenance Interface

The USB maintenance interface or UTA tester is used to set up, test, and maintain a single intelligent modular unit with a ComPacT NSX or a PowerPacT H-, J-, and L-frame circuit breaker and the associated ULP modules.

NOTE: The USB maintenance interface is discontinued. It cannot be connected to a MasterPacT MTZ or NT/NW, a ComPacT NS or a PowerPacT P- and R-frame circuit breaker.

Illustration	Part number	Documentation
	TRV00911	GHD16349AA USB Maintenance Interface - Instruction Sheet
	STRV00911	48940-330-01 UTA Tester for PowerPacT H-, J- and L- Frame Circuit Breakers - Instruction Bulletin

RJ45 ULP Ports

 
NOTICE

HAZARD OF EQUIPMENT DAMAGE


- Never connect an Ethernet device, a Modbus-SL device, or a Modbus line termination to an RJ45 ULP port.
- The RJ45 ULP ports are for ULP modules only.
- Any other use can damage the ULP module or the device connected to the ULP module.

Failure to follow these instructions can result in equipment damage.

ULP modules have RJ45 ports, identified by one of the following pictograms:



Generally, each ULP module has two identical RJ45 ports in parallel to connect the IMU ULP modules in a daisy chain, in any order, by using RJ45 plug/plug ULP cords.

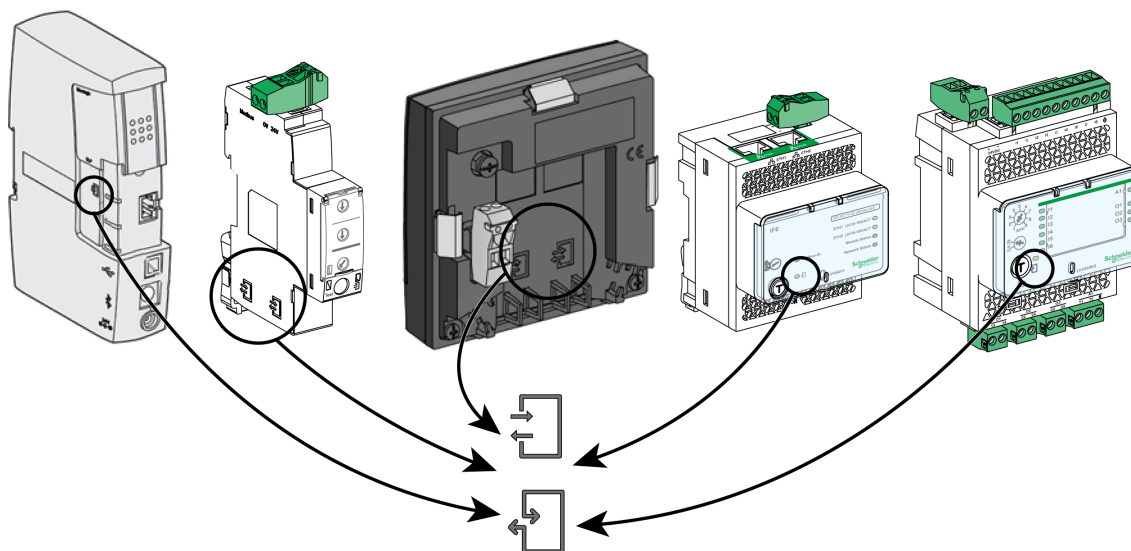

Updating the Firmware in ULP Modules

The user can update the firmware of a ULP module by using the latest version of EcoStruxure Power Commission software.

The compatibility matrix embedded in EcoStruxure Power Commission software helps the user to perform diagnostics and correct the firmware discrepancy issues.

between the ULP modules by providing recommended actions and diagnostics messages relevant to the detected discrepancies, page 44.

NOTE: The following firmware cannot be updated using EcoStruxure Power Commission software:

- The firmware of the BSCM circuit breaker status control module with part number LV434205 or S434205.
- The firmware of the MicroLogic trip units and control units, MasterPacT NT/NW, ComPacT NS and PowerPacT P- and R-frame circuit breakers.

ULP Accessories


ULP Accessories

ULP accessories can be grouped in categories:

- Generic ULP accessories which are compliant with all circuit breakers as presented in the following tables.
- ULP accessories specific to ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers, page 31.
- ULP accessories specific to MasterPacT NT/NW, ComPacT NS, and PowerPacT P- and R-frame circuit breakers, page 37.
- ULP accessories specific to MasterPacT MTZ circuit breakers, page 39.

RJ45 Plug/Plug ULP Cord

Use simple plug-and-play ULP cords to interconnect ULP modules within a single IMU. They have RJ45 plug connectors at both ends and are available in several lengths.

Illustration	Description	Part number
	L = 0.3 m (0.98 ft) (ten cords)	TRV00803
	L = 0.6 m (1.98 ft) (ten cords)	TRV00806
	L = 1 m (3.28 ft) (five cords)	TRV00810
	L = 2 m (6.56 ft) (five cords)	TRV00820
	L = 3 m (9.84 ft) (five cords)	TRV00830
	L = 5 m (16.4 ft) (one cord)	TRV00850

ULP Line Termination


NOTICE

HAZARD OF EQUIPMENT DAMAGE

- Never connect a ULP line termination to an Ethernet or Modbus-SL RJ45 port.
- The ULP line termination must be connected on an RJ45 ULP port only.

Failure to follow these instructions can result in equipment damage.

The ULP line termination closes the unused RJ45 ULP port on a ULP module. It consists of an RJ45 connector with passive components in a sealed unit.

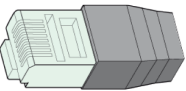Illustration	Description	Part number
	Ten ULP line terminations	TRV00880


ULP Line Termination in an IMU with MasterPacT MTZ Circuit Breaker

The following table lists the ULP module on which the ULP line termination must be connected in the case of an IMU with a MasterPacT MTZ circuit breaker with MicroLogic X control unit and a ULP port module.

IMU	Connection of the ULP line termination
MasterPacT MTZ circuit breaker with ULP port module	No ULP line termination (connect a protection cap on the unused connector on the ULP port module)
MasterPacT MTZ circuit breaker with ULP port module connected to an EIFE interface	On ULP port module
MasterPacT MTZ circuit breaker with ULP port module connected to an EIFE interface and one IO module	On IO module
MasterPacT MTZ circuit breaker with ULP port module connected to one IO module and an IFE interface	On IFE interface

RJ45 Socket Connector

Use the RJ45 socket connector to connect two ULP cords end-to-end and thus extend them. It consists of two RJ45 socket connectors linked by a direct electrical connection.

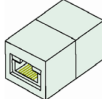Illustration	Description	Part number
	Ten RJ45 socket connectors	TRV00870

The length of the extended ULP cord is limited.

Connecting ComPacT NSX or PowerPacT H-, J-, and L-Frame Circuit Breakers to the ULP System

Introduction

Use the NSX cord to connect the ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breakers to the ULP system:

- The ComPacT NSX circuit breaker must have a BSCM Modbus SL/ULP module and/or a MicroLogic 5, 6, or 7 trip unit.
- The PowerPacT H-, J-, and L-frame circuit breaker must have a BSCM Modbus SL/ULP module and/or a MicroLogic 5 or 6 trip unit.
- The ComPacT NSX DC circuit breaker must have a BSCM Modbus SL/ULP module.

For more information, refer to the following documentation:

- DOCA0187•• *ComPacT NSX - Circuit Breakers and Switch-Disconnectors 100–630 A - User Guide*, page 7
- DOCA0186•• *ComPacT NSX DC - Circuit Breakers and Switch-Disconnectors - User Guide*, page 7
- 48940-313-01 *PowerPacT H-, J-, and L-Frame Circuit Breakers with MicroLogic Trip Units - User Guide*, page 9

MicroLogic Trip Units

MicroLogic 5, 6, or 7 trip units provide multiple functions:

- Protecting the electrical distribution system or specific applications
- Metering instantaneous values, metering demand values for electrical quantities
- Kilowatt hour metering
- Operating information (such as peak demand, customized alarms, and operation counter)
- Communication

For more information, refer to the following documentation:

- DOCA0188•• *ComPacT NSX – MicroLogic 5/6/7 Electronic Trip Units - User Guide*, page 7
- 48940-312-01 *MicroLogic 5 and 6 Electronic Trip Units for PowerPacT H-, J-, and L-Frame Circuit Breakers - User Guide*, page 9

BSCM Modbus SL/ULP Module

The BSCM Modbus SL/ULP module is a Breaker Status Control Module that can be used to communicate data via:

- Modbus Serial Line communication network
- ULP communication network

Use the BSCM Modbus SL/ULP module with:


- ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breakers equipped with:
 - Thermal-magnetic trip units
 - MicroLogic electronic trip units

- NOTE:** The BSCM Modbus SL/ULP module cannot be installed in a ComPacT NSX400K circuit breaker.

- OF and SDE circuit breaker states from the BSCM Modbus SL/ULP module
- SD circuit breaker state from SD auxiliary contact for BSCM Modbus SL/ULP module or NSX cord (if present)
- Control instructions for the communicating motor mechanism (if present): opening, closing, and resetting
- Information to assist the operator: storage of the last 10 events

The BSCM Modbus SL/ULP module can be used in the following modes:


- Modbus SL only mode
- Modbus SL and ULP mode
- ULP only mode

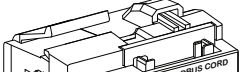Illustration	Part number	Documentation
	LV434220 S434220	<ul style="list-style-type: none"> PKR1891407 <i>BSCM Modbus SL/ULP Module Instruction Sheet</i> DOCA0187• <i>ComPacT NSX – Circuit Breakers and Switch-Disconnectors 100–630 A - User Guide</i>, page 7 DOCA0186• <i>ComPacT NSX DC – Circuit Breakers and Switch-Disconnectors 1 - User Guide</i>, page 7 48940-313-01 <i>PowerPacT H-, J-, and L-Frame Circuit Breakers with MicroLogic Trip Units - User Guide</i>

NOTE: The BSCM Modbus SL/ULP module with part number LV434220 or S434220 replaces the BSCM circuit breaker status control module with part number LV434205 or S434205.

Modbus SL Hub

The Modbus SL hub is used to connect a BSCM Modbus SL/ULP module in Modbus SL only mode and in Modbus SL and ULP mode, to a Modbus client via the Modbus Serial Line communication network.


 DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

It is forbidden to use the Modbus SL hub when the system voltage is greater than 480 Vac or 480 Vdc.

Failure to follow these instructions will result in death or serious injury.

For information about connection of the Modbus SL hub to the BSCM Modbus SL/ULP module and to the Modbus-SL network, see [Connection to the Modbus-SL Network with BSCM Modbus SL/ULP Module and Modbus SL Hub](#), page 79.

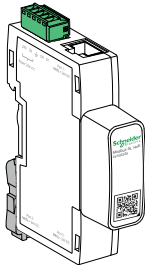Illustration	Part number	Documentation
	LV434224 S434224	<ul style="list-style-type: none"> BQT1758409 <i>Modbus SL Hub - Instruction Sheet</i> User guides: <ul style="list-style-type: none"> DOCA0187•• <i>ComPacT NSX – Circuit Breakers and Switch-Disconnectors 100–630 A - User Guide</i>, page 7 DOCA0186•• <i>ComPacT NSX DC – Circuit Breakers and Switch-Disconnectors 1 - User Guide</i>, page 7 48940-313-01 <i>PowerPacT H-, J-, and L-Frame Circuit Breakers with MicroLogic Trip Units - User Guide</i>

NSX Cord

NSX cords are internal connection blocks used to connect a ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker equipped with the BSCM Modbus SL/ULP module and/or the MicroLogic 5, 6, or 7 trip unit to a ULP module.


⚡⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- It is forbidden to use the NSX cords LV434200, LV434201, S434201, LV434202, or S434202 if the system voltage is greater than 480 Vac or 480 Vdc.
- It is mandatory to use the insulated NSX cord LV434204, S434204, or S434303 if the system voltage is greater than 480 Vac or 480 Vdc, and less than or equal to 690 Vac or 690 Vdc.

Failure to follow these instructions will result in death or serious injury.

The NSX cord is available in three cable lengths and terminates with a RJ45 plug connector for direct connection to a ULP module.

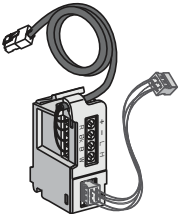Illustration	Length	Part number	Documentation
	L = 0.35 m (1.15 ft)	LV434200	<ul style="list-style-type: none"> Instruction sheets: <ul style="list-style-type: none"> GHD16047AA for LV4•••• part numbers 48940–323–01 for S4•••• part numbers User guides: <ul style="list-style-type: none"> DOCA0187•• <i>ComPacT NSX – Circuit Breakers and Switch-Disconnectors 100–630 A - User Guide</i>, page 7 DOCA0186•• <i>ComPacT NSX DC – Circuit Breakers and Switch-Disconnectors - User Guide</i>, page 7 48940-313-01 <i>PowerPacT H-, J-, and L-Frame Circuit Breakers with MicroLogic Trip Units - User Guide</i>
	L = 1.3 m (4.3 ft)	LV434201 S434201	
	L = 3 m (9.8 ft)	LV434202 S434202	

Lengths up to 5 m (16.4 ft) are possible by using RJ45 socket/socket connectors.

Insulated NSX Cord

The insulated NSX cord is an isolated variant of the NSX cord, terminated by an electronic module with a RJ45 socket connector.


⚡ ⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- It is forbidden to use the insulated NSX cord LV434204, S434204, or S434303 if the system voltage is greater than 690 Vac or 690 Vdc.
- It is mandatory to use the insulated NSX cord LV434204, S434204, or S434303 if the system voltage is greater than 480 Vac or 480 Vdc, and less than or equal to 690 Vac or 690 Vdc.

Failure to follow these instructions will result in death or serious injury.

Use an RJ45 plug/plug ULP cord to connect the isolated electronic module of the NSX cord to a ULP module.

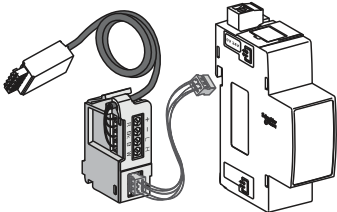Illustration	Length	Part number	Documentation
	L = 1.3 m (4.3 ft)	LV434204 S434204	<ul style="list-style-type: none"> • Instruction sheets: <ul style="list-style-type: none"> ◦ GHD16313AA for LV4.... part numbers ◦ S1A80372 for S4.... part numbers • User guides: <ul style="list-style-type: none"> ◦ DOCA0187•• <i>ComPacT NSX – Circuit Breakers and Switch-Disconnectors 100–630 A - User Guide</i>, page 7 ◦ DOCA0186•• <i>ComPacT NSX DC – Circuit Breakers and Switch-Disconnectors - User Guide</i>, page 7 ◦ 48940-313-01 <i>PowerPacT H-, J-, and L-Frame Circuit Breakers with MicroLogic Trip Units - User Guide</i>, page 9
	L = 3 m (9.8 ft)	S434303	

The electronic module of the insulated NSX cord must be powered by a 24 Vdc power supply so that the ULP system is isolated.

The following table summarizes the electronic module characteristics:

Characteristic	Value
Dimensions	27 x 27 x 27 mm (1 x 1 x 1 in)
Mounting	On DIN rail
Degree of protection of the installed module	<ul style="list-style-type: none"> • On the front panel (wall-mounted enclosure): IP40 • On the connections (behind the enclosure door): IP20
Operating temperature	-25 °C to +70 °C (-13 °F to +158 °F)
Power supply voltage	24 Vdc -20%/+10% (19.2–26.4 Vdc)
Consumption	<ul style="list-style-type: none"> • Typical: 20 mA/24 Vdc at 20 °C (68 °F) • Maximum: 30 mA/19.2 Vdc at 60 °C (140 °F)

Connection to the ULP System with NSX Cord




⚡ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- It is forbidden to use the NSX cords LV434200, LV434201, or LV434202 if the system voltage is greater than 480 Vac or 480 Vdc.
- It is mandatory to use the insulated NSX cord LV434204 if the system voltage is greater than 480 Vac or 480 Vdc, and less than or equal to 690 Vac or 690 Vdc.

Failure to follow these instructions will result in death or serious injury.

The following figures show connection of the ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker to the IMU with the NSX cord.

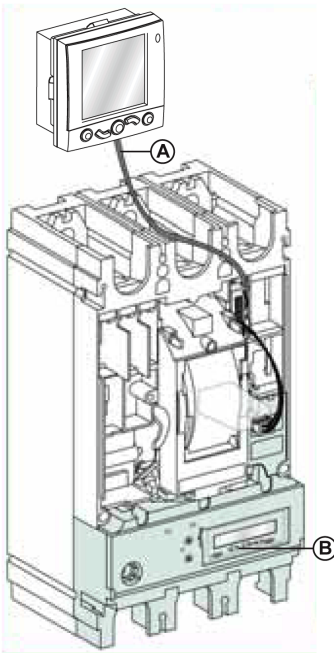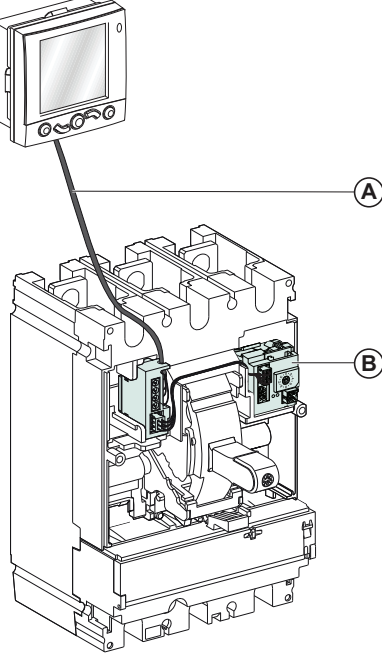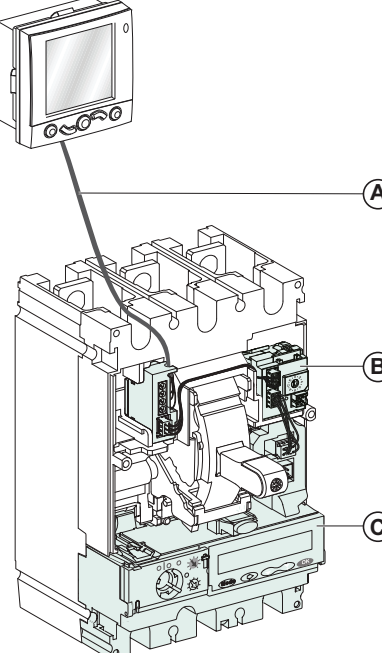Circuit breaker with MicroLogic 5, 6, or 7 trip unit	Circuit breaker with BSCM Modbus SL/ULP module	Circuit breaker with BSCM Modbus SL/ULP module and MicroLogic 5, 6, or 7 trip unit
 <p>A NSX cord</p> <p>B MicroLogic 5, 6, or 7 trip unit</p>	 <p>A NSX cord</p> <p>B BSCM Modbus SL/ULP module</p>	 <p>A NSX cord</p> <p>B BSCM Modbus SL/ULP module</p> <p>C MicroLogic 5, 6, or 7 trip unit</p>

Connection to the ULP System with Insulated NSX Cord

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- It is forbidden to use the NSX cords LV434200, LV434201, or LV434202 if the system voltage is greater than 480 Vac or 480 Vdc.
- It is mandatory to use the insulated NSX cord LV434204 if the system voltage is greater than 480 Vac or 480 Vdc, and less than or equal to 690 Vac or 690 Vdc.

Failure to follow these instructions will result in death or serious injury.

The following figures show connection of the ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker to the IMU with the insulated NSX cord.

Fixed circuit breaker with BSCM Modbus SL/ULP module and MicroLogic 5, 6, or 7 trip unit	Withdrawable circuit breaker with BSCM Modbus SL/ULP module and MicroLogic 5, 6, or 7 trip unit
<p>A IFM Modbus-SL interface for one circuit breaker</p> <p>B ULP line termination</p> <p>C RJ45 plug/plug ULP cord</p> <p>D Insulated ULP module for system voltage greater than 480 Vac or 480 Vdc</p> <p>E Circuit breaker ULP cord for system voltage greater than 480 Vac or 480 Vdc</p> <p>F Connector for circuit breaker internal connection</p>	<p>A IFM Modbus-SL interface for one circuit breaker</p> <p>B ULP line termination</p> <p>C RJ45 plug/plug ULP cord</p> <p>D Insulated ULP module for system voltage greater than 480 Vac or 480 Vdc</p> <p>E Insulated NSX cord</p> <p>F BSCM Modbus SL/ULP module</p>

Connecting MasterPacT NT/NW, ComPacT NS and PowerPacT P- and R-Frame Circuit Breakers to the ULP System

Introduction

Use the circuit breaker BCM ULP cord to connect MasterPacT NT/NW, ComPacT NS and PowerPacT P- and R-frame circuit breakers to the ULP system. The circuit breaker must have a BCM ULP circuit breaker communication module.

BCM ULP Circuit Breaker Communication Module


Supplied with the circuit breaker, the BCM ULP circuit breaker communication module is installed behind the MicroLogic trip unit and is wired to the microswitches:

- For manually-operated devices:
 - OF, SDE and/or SD contacts
- For electrically-operated devices:
 - OF, SDE, PF, CH contacts
 - Connection kit to the MX1 and XF communicating voltage releases

The BCM ULP circuit breaker communication module is independent of the trip unit. It communicates two-way with:

- the ULP system via the circuit breaker BCM ULP cord
- the MicroLogic trip unit via an infra-red link

The part number depends on the circuit breaker type. For details, refer to a selector program of Schneider Electric products.

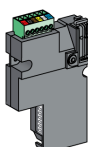
Illustration	Part number	Documentation
	47405	EAV3608000 <i>MasterPacT NT/NW, ComPacT NS, PowerPacT P- and R-Frame Communication Option - Installation Manual</i>
	S48188 (fixed MasterPacT NT)	Instruction sheet: 48049-293-02
	S47485 (drawout MasterPacT NT)	
	S47405 (fixed MasterPacT NT)	
	S48384 (drawout MasterPacT NW)	0613IB1204 <i>MasterPacT NW Low-Voltage Power/ Insulated Case Circuit Breaker - User Guide</i> , page 9
	S64205 (PowerPacT P-frame with standard operating handle, PowerPacT R-frame)	Instruction sheet: 48049-338-01
	S64206 (drawout PowerPacT P-frame)	
	S64207 (electrically-operated PowerPacT P-frame)	

Circuit Breaker BCM ULP Cord

The circuit breaker BCM ULP cord is used to connect a MasterPacT NT/NW, ComPacT NS, or PowerPacT P- and R-frame circuit breaker equipped with the BCM ULP module and/or a MicroLogic trip unit to a ULP module.

ULP (Universal Logic Plug) System

It is available in three lengths and terminates with an RJ45 plug connector for direct connection to a ULP module.

Illustration	Length	Part number	Documentation
	L = 0.35 m (1.15 ft)	LV434195	S1A73172 MasterPacT NT/ NW, ComPacT NS 630b- 3200 A Circuit Breaker ULP Cord for BCM ULP - Instruction Sheet
	L = 1.3 m (4.26 ft)	LV434196	
	L = 3 m (9.84 ft)	LV434197	
	L = 5 m (16.4 ft)	LV434198	

Connecting MasterPacT MTZ Circuit Breakers with MicroLogic X Control Units to the ULP System

Introduction

Use the RJ45 plug/plug ULP cord to connect a MasterPacT MTZ circuit breaker with MicroLogic X control unit to the ULP system. The circuit breaker must have a ULP port module.

ULP Port Module

Depending on the type of MasterPacT MTZ circuit breaker with MicroLogic X control unit, the ULP port module is supplied as follows:




- As standard on MasterPacT MTZ2/MTZ3 drawout circuit breakers.
- As an option on MasterPacT MTZ1/MTZ2/MTZ3 fixed circuit breakers and MasterPacT MTZ1 drawout circuit breakers. It is mounted with the terminal blocks of the circuit breaker.

The ULP port module:

- Supplies power to the MicroLogic X control unit.
- Has an integrated ULP line termination.
- Enables the connection to external ULP modules, like the IO module or the IFE interface.


For MasterPacT MTZ drawout circuit breakers with optional EIFE interface, the ULP port module:

- Supplies power to the EIFE interface.
- Connects the EIFE interface to the other IMU modules (for example, IO module).

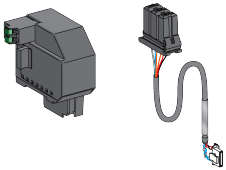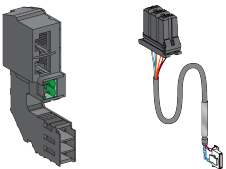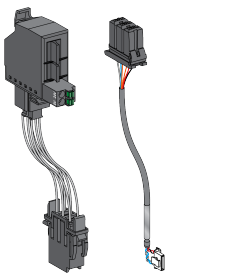Illustration	Description	Part number	Documentation
	ULP port module for MasterPacT MTZ1 fixed circuit breaker	LV850063SP	NVE40791 ULP Port Module for Fixed MasterPacT MTZ - Instruction Sheet
	ULP port module for MasterPacT MTZ2/MTZ3 fixed circuit breaker	LV850061SP	
	ULP port module for MasterPacT MTZ1 drawout circuit breaker	LV850064SP	NVE40796 ULP Port Module for Drawout MasterPacT MTZ1 - Instruction Sheet
	ULP port module for MasterPacT MTZ2/MTZ3 drawout circuit breaker	LV850062SP	NVE40797 ULP Port Module for Drawout MasterPacT MTZ2/MTZ3 - Instruction sheet

Power Supply of ULP Port Module in MasterPacT MTZ Circuit Breakers

The ULP port module in MasterPacT MTZ circuit breakers supplies power directly to the MicroLogic X control unit and EIFE interface.

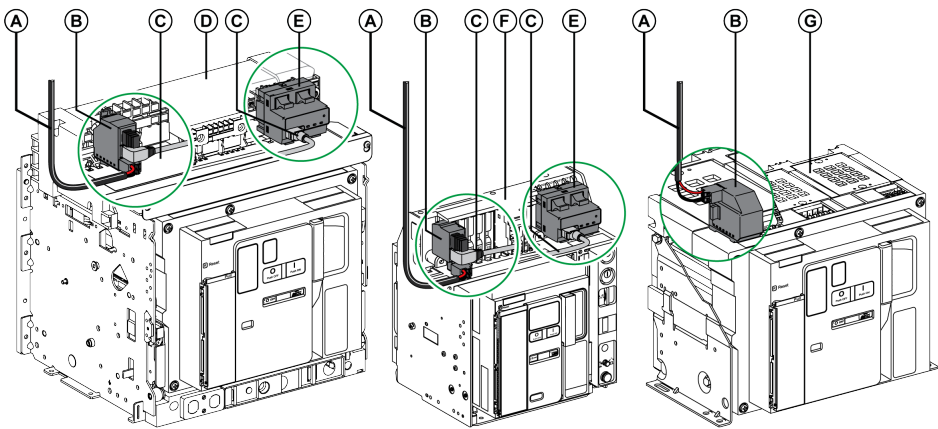

- A 24 Vdc power supply
- B ULP port module
- C ULP port module and EIFE interface
- D Drawout MasterPacT MTZ2/MTZ3 circuit breaker
- E EIFE embedded Ethernet interface for one MasterPacT MTZ drawout circuit breaker
- F Drawout MasterPacT MTZ1 circuit breaker
- G MasterPacT MTZ circuit breaker

EIFE Embedded Ethernet Interface for One MasterPacT MTZ Drawout Circuit Breaker

The EIFE interface is an optional accessory that is mounted on the cradle of a MasterPacT MTZ drawout circuit breaker.

The EIFE interface enables MasterPacT MTZ drawout circuit breakers to be connected to an Ethernet network. It provides digital access to all the data delivered by the MicroLogic X control unit. In addition, it monitors the position of the device in the cradle: connected, test, and disconnected.

Kits with cord between ULP port module and EIFE interface in different lengths are available.

Illustration	Part number	Documentation
	LV851001	<ul style="list-style-type: none">NVE23550 Enerlin'X EIFE - Embedded Ethernet Interface for One MasterPacT MTZ Drawout Circuit Breaker - Instruction SheetDOCA0106•• Enerlin'X EIFE - Embedded Ethernet Interface for One MasterPacT MTZ Drawout Circuit Breaker - User Guide, page 7

EcoStruxure Power Commission Software

Overview

EcoStruxure Power Commission software helps you to manage a project as part of testing, commissioning, and maintenance phases of the project life cycle. The innovative features in it provide simple ways to configure, test, and commission the smart electrical devices.

EcoStruxure Power Commission software automatically discovers the smart devices and allows you to add the devices for an easy configuration. You can generate comprehensive reports as part of Factory Acceptance Test and Site Acceptance Test to replace your heavy manual work. Additionally, when the panels are under operation, any change of settings made can be easily identified by a yellow highlighter. This indicates the difference between the project and device values, and hence provides a system consistency during the operation and maintenance phase.

EcoStruxure Power Commission software enables the configuration of the following circuit breakers, modules, and accessories:

Circuit breaker ranges	Modules	Accessories
MasterPacT MTZ circuit breakers	<ul style="list-style-type: none"> MicroLogic X control unit Communication interface modules: IFM interface, IFE interface, IFE server, and EIFE interface ULP modules: IO module, FDM121 display⁽¹⁾ 	M2C output module
<ul style="list-style-type: none"> MasterPacT NT/NW circuit breakers ComPacT NS circuit breakers PowerPacT P- and R-frame circuit breakers 	<ul style="list-style-type: none"> MicroLogic trip units Communication interface modules: BCM module, CCM module, BCM ULP module, IFM interface, IFE interface, IFE server ULP modules: IO module, FDM121 display⁽¹⁾ 	M2C and M6C output modules
<ul style="list-style-type: none"> ComPacT NSX circuit breakers PowerPacT H-, J-, and L-frame circuit breakers 	<ul style="list-style-type: none"> MicroLogic trip units Communication interface modules: BSCM Modbus SL/ULP module, IFM interface, IFE interface, IFE server ULP modules: IO module, FDM121 display⁽¹⁾ 	SDTAM and SDx output modules
(1) For FDM121 display, only the firmware and language download are supported.		

For more information, refer to the *EcoStruxure Power Commission Online Help*.

Click [here](#) to download the latest version of EcoStruxure Power Commission software.

Key Features

EcoStruxure Power Commission software performs the following actions for the supported devices and modules:

- Create projects by device discovery
- Save the project in the EcoStruxure Power Commission cloud for reference
- Upload settings to the device and download settings from the device
- Compare the settings between the project and the device
- Perform control actions in a secured way
- Generate and print the device settings report
- Perform a communication wiring test on the entire project and generate and print test report
- View the communication architecture between the devices in a graphical representation
- View the measurements, logs, and maintenance information
- Export Waveform Capture on Trip Event (WFC)
- View the status of device and IO module
- View the alarm details
- Buy, install, remove, or retrieve the Digital Modules
- Check the system firmware compatibility status
- Update to the latest device firmware
- Perform force trip and automatic trip curve tests

Design Rules of ULP System

What's in This Part

Compatibility Rules of ULP Modules44

Rules for ULP Connection and Power Supply50

Rules for Connection to the Communication Network72

ULP System Architectures95

Compatibility Rules of ULP Modules

What’s in This Chapter

Hardware and Firmware Compatibility of ULP Modules45

Compatibility Check of Device/Firmware and Corrective Actions48

Hardware and Firmware Compatibility of ULP Modules

Introduction

ULP modules must be compatible with both the hardware and firmware.

The hardware and firmware compatibility of ULP modules can be checked with:

- ULP status LED, page 47
- EcoStruxure Power Commission software, page 47

Hardware Compatibility

The following table lists the compatible ULP modules for each range of circuit breakers:

- MasterPacT MTZ circuit breaker with ULP port module and MicroLogic X control unit
- MasterPacT NT/NW, ComPacT NS, or PowerPacT P- and R-frame circuit breaker with BCM ULP module and MicroLogic trip unit
- ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker with BSCM module or BSCM Modbus SL/ULP module in ULP only mode and/or with MicroLogic trip unit. It is recommended to use the BSCM Modbus SL/ULP module in ULP only mode only for fixed ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breakers, but not for withdrawable and plug-in circuit breakers.
- ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker with BSCM Modbus SL/ULP module in Modbus SL only mode or Modbus SL and ULP mode and/or with MicroLogic trip unit

ULP module	Part number	Circuit breakers			
		MasterPacT MTZ	MasterPacT NT/NW, ComPacT NS, or PowerPacT P- and R-frame	ComPacT NSX or PowerPacT H-, J-, and L-frame (ULP only mode)	ComPacT NSX or PowerPacT H-, J-, and L-frame (Modbus SL only mode or Modbus SL and ULP mode)
IFE Ethernet interface for one circuit breaker	LV434001	✓	✓	✓	✓
IFE Ethernet switchboard server	LV434002	✓	✓	✓	✓
EIFE embedded Ethernet interface for one MasterPacT MTZ drawout circuit breaker	LV851001	✓	–	–	–
Spare part kit EIFE for one MasterPacT MTZ1 drawout circuit breaker	LV851100SP	✓	–	–	–
Spare part kit EIFE for one MasterPacT MTZ2/MTZ3 drawout circuit breaker	LV851200SP	✓	–	–	–
IFM Modbus-SL interface for one circuit breaker with Modbus-SL RJ45 port	LV434000	✓	✓	✓	✓
IFM Modbus-SL interface for one circuit breaker with Modbus-SL 5-pin connector	TRV00210 or STRV00210	–	✓	✓	✓
FDM121 front display module for one circuit breaker	TRV00121 or STRV00121	✓	✓	✓	✓



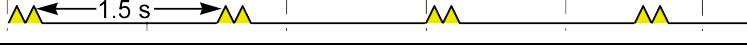

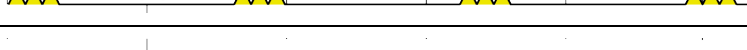
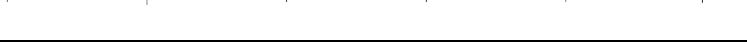

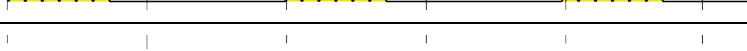
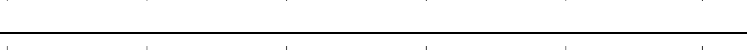

 
ULP module	Part number	Circuit breakers			
		MasterPacT MTZ	MasterPacT NT/NW, ComPacT NS, or PowerPacT P- and R-frame	ComPacT NSX or PowerPacT H-, J-, and L-frame (ULP only mode)	ComPacT NSX or PowerPacT H-, J-, and L-frame (Modbus SL only mode or Modbus SL and ULP mode)
IO input/output application module for one circuit breaker	LV434063	✓	✓	✓	✓
Service Interface	LV485500	–	✓	✓	✓
USB maintenance interface	TRV00911 or STRV00911	–	✓	✓	✓

Firmware Compatibility Matrix

The primary reason for updating the system is to obtain the latest system features. The latest device firmware baseline and version details of the devices are available in EcoStruxure Power Commission software.

Checking Hardware and Firmware Compatibility with ULP Status LED

The yellow ULP LED indicates the mode of the ULP module.

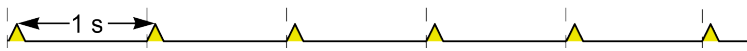ULP LED	Mode	Action
	Nominal	None
	Conflict	Remove extra ULP module
	Degraded	Replace ULP module at the next maintenance operation
	Test	None
	Non-critical firmware discrepancy	Update firmware at the next maintenance operation
	Non-critical hardware discrepancy	Replace ULP module at the next maintenance operation
	Configuration discrepancy	Install missing features
	Critical firmware discrepancy	Use EcoStruxure Power Commission software to check the firmware and hardware compatibility and follow the recommended actions
	Critical hardware discrepancy	
	Stop	Replace ULP module
	Power off	Check power supply

Checking Hardware and Firmware Compatibility with EcoStruxure Power Commission Software

EcoStruxure Power Commission software can be used to check hardware and firmware compatibility of the modules in the IMU and to get recommended actions to recover from a compatibility discrepancy situation, page 48.

For more information, refer to *EcoStruxure Power Commission Online Help*.

Click [here](#) to download the latest version of EcoStruxure Power Commission software.

Compatibility Check of Device/Firmware and Corrective Actions

Overview

When ULP modules are upgraded with new functionalities, verify with the EcoStruxure Power Commission software that they are compatible with the different modules in the IMU system. Use the **Firmware Upgrade** table to perform diagnostics and identify discrepancies between the ULP modules. This table also provides the recommended actions relevant to the detected discrepancies.

NOTE: Compatibility check will only work if the device is connected.

Firmware Upgrade

To view the firmware status, click **Firmware** in the Device view.

The **Firmware Upgrade** window displays the following compatibility table.

A





B

C

D

E



F



Firmware Upgrade		Firmware Version Details			
Overall System firmware status		1 recommended action(s).			
Module	Status	Current Version	Latest Version	Recommended Action	
Micrologic	✓	V1.0.3	V1.0.3	None	
BSCM	✗	V2.1.7	NA	Replace module	
IFM	✓	V2.2.9	V2.2.9	None	
 FDM121	✗	V2.1.7	V2.3.5	Upgrade firmware	
 BCMULP	⚠	V4.0.7	V4.1.1	Replace module at next maintenance operation	

Legend	Name	Description
A	IP address	Displays the IP address of the connected device.
B	Modbus address	Displays the Modbus address of the connected device.
C	Module	Lists the ULP modules of the connected device.
D	Status	Displays the compatibility status of the module inside the system.
E	Device Version	Displays the current firmware version installed in the module.
F	Available Version	Displays the latest firmware version available for upgrade.
G	Recommended Action	Provides the solution for discrepancies.
H	Refresh	Updates the changes made as per the recommended action.

Status

The **Status** column identifies the discrepancy conditions within the ULP modules.

Icons	Module status
	Nominal
	Non-critical firmware discrepancy Or

Icons	Module status
	Non-critical hardware discrepancy
	Critical firmware discrepancy Critical hardware discrepancy Or Hardware degraded
	Stop Or Conflict

Recommended Actions

The **Recommended Action** column on the **Firmware Upgrade** window provides a solution to resolve a discrepancy. Each discrepancy has a generic predefined recommended action.

The table lists the recommended actions to take in the case of a detected discrepancy.

Module status	Description	Recommended action
Nominal	The ULP module is in nominal mode.	None.
Non-critical firmware discrepancy	There is a non-critical firmware discrepancy between the ULP module and other modules in the IMU.	Upgrade firmware at the next maintenance operation.
Non-critical hardware discrepancy	There is a non-critical hardware discrepancy between the ULP module and other modules in the IMU.	Replace module at the next maintenance operation.
Critical firmware discrepancy	There is a critical firmware discrepancy between the ULP module and other modules in the IMU.	Upgrade firmware.
Critical hardware discrepancy	There is a critical hardware discrepancy between the ULP module and other modules in the IMU.	Replace module.
Hardware degraded	The ULP module is in degraded mode.	Replace module at the next maintenance operation.
Stop	The ULP module is out of service.	Replace module.
Conflict	The ULP module is in conflict mode.	Remove duplicate module.

Refresh

After performing a recommended action for a specific discrepancy, you can click the **Refresh** button to update the changes in the **Firmware Upgrade** window.

Rules for ULP Connection and Power Supply

What’s in This Chapter

Composition Rules for Intelligent Modular Units (IMUs)	51
Intelligent Modular Unit (IMU) with Withdrawable Drawer.....	59
Grounding System.....	61
ULP System Power Supply	63

Composition Rules for Intelligent Modular Units (IMUs)

Introduction

Connection of an IMU in the ULP system is simple, but must comply with the rules concerning composition, RJ45 plug/plug ULP cords, and the ULP module power supply.

General Rule: Composition of an IMU


An IMU is composed of the following two device types:

- One main device (circuit breaker or switch-disconnector) and an internal ULP communication module
- One or several external ULP modules

Device range	Main device type	ULP modules
ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers	In ULP only mode: <ul style="list-style-type: none"> • ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker with BSCM Modbus SL/ULP module and/or MicroLogic 5, 6, or 7 trip unit • ComPacT NSX or PowerPacT H-, J-, and L-frame switch-disconnector with BSCM Modbus SL/ULP module • ComPacT NSX DC circuit breaker or switch-disconnector with BSCM Modbus SL/ULP module 	<ul style="list-style-type: none"> • 0 or 1 FDM121 display • 0, 1, or 2 IO modules • 0 or 1 interface among: <ul style="list-style-type: none"> ◦ IFE interface ◦ IFE server ⁽¹⁾ ◦ IFM interface
	In Modbus SL and ULP mode: <ul style="list-style-type: none"> • Fixed ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker with BSCM Modbus SL/ULP module • Fixed ComPacT NSX or PowerPacT H-, J-, and L-frame switch-disconnector with BSCM Modbus SL/ULP module • Fixed ComPacT NSX DC circuit breaker or switch-disconnector with BSCM Modbus SL/ULP module 	<ul style="list-style-type: none"> • 1 Modbus SL hub • 0 or 1 FDM121 display • 0, 1, or 2 IO modules
	In Modbus SL only mode: <ul style="list-style-type: none"> • Fixed ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker or switch-disconnector with BSCM Modbus SL/ULP module • Fixed ComPacT NSX DC circuit breaker or switch-disconnector with BSCM Modbus SL/ULP module 	1 Modbus SL hub
ComPacT NS and PowerPacT P- and R-frame circuit breakers	ComPacT NS or PowerPacT P- and R-frame circuit breaker with BCM ULP circuit breaker communication module	<ul style="list-style-type: none"> • 0 or 1 FDM121 display • 0, 1, or 2 IO modules • 0 or 1 interface among: <ul style="list-style-type: none"> ◦ IFE interface ◦ IFE server ⁽¹⁾ ◦ IFM interface
MasterPacT NT/ NW circuit breakers	MasterPacT NT/NW circuit breaker with BCM ULP circuit breaker communication module	<ul style="list-style-type: none"> • 0 or 1 FDM121 display • 0, 1, or 2 IO modules • 0 or 1 interface among: <ul style="list-style-type: none"> ◦ IFE interface ◦ IFE server ⁽¹⁾ ◦ IFM interface
MasterPacT MTZ circuit breakers with MicroLogic X control units	MasterPacT MTZ drawout circuit breaker with ULP port module	<ul style="list-style-type: none"> • 0 or 1 FDM121 display • 0, 1, or 2 IO modules • 0 or 1 interface among: <ul style="list-style-type: none"> ◦ IFE interface ◦ IFE server ⁽¹⁾ ◦ EIFE embedded Ethernet interface ◦ IFM interface (LV434000 only)


Device range	Main device type	ULP modules
	MasterPacT MTZ fixed circuit breaker with ULP port module	<ul style="list-style-type: none"> • 0 or 1 FDM121 display • 0, 1, or 2 IO modules • 0 or 1 interface among: <ul style="list-style-type: none"> ◦ IFE interface ◦ IFE server ⁽¹⁾ ◦ IFM interface (LV434000 only)
<p>(1) One IFE server with stacked IFM interfaces:</p> <ul style="list-style-type: none"> • In terms of power supply, the maximum number of IFM interfaces stacked to one IFE server is 11 in order to limit voltage drop. • In terms of Modbus-SL communication, it depends on the performance requirement. As it takes approximately 500 ms at 19,200 Baud per device to refresh 100 registers, the more interfaces added the longer the minimum refreshment period. The minimum refreshment period depends on the number of IFM interfaces stacked to one IFE server. Multiply the time to refresh one device by the number of devices to find the minimum refreshment period expected in the application. For instance, an installation with eight IFM interfaces stacked to one IFE server at 19,200 Baud would take approximately 4 seconds to be read. <p>For good communication performance, a maximum of eight IFM interfaces stacked to one IFE server is recommended.</p>		

These examples illustrate the composition rules for an IMU.

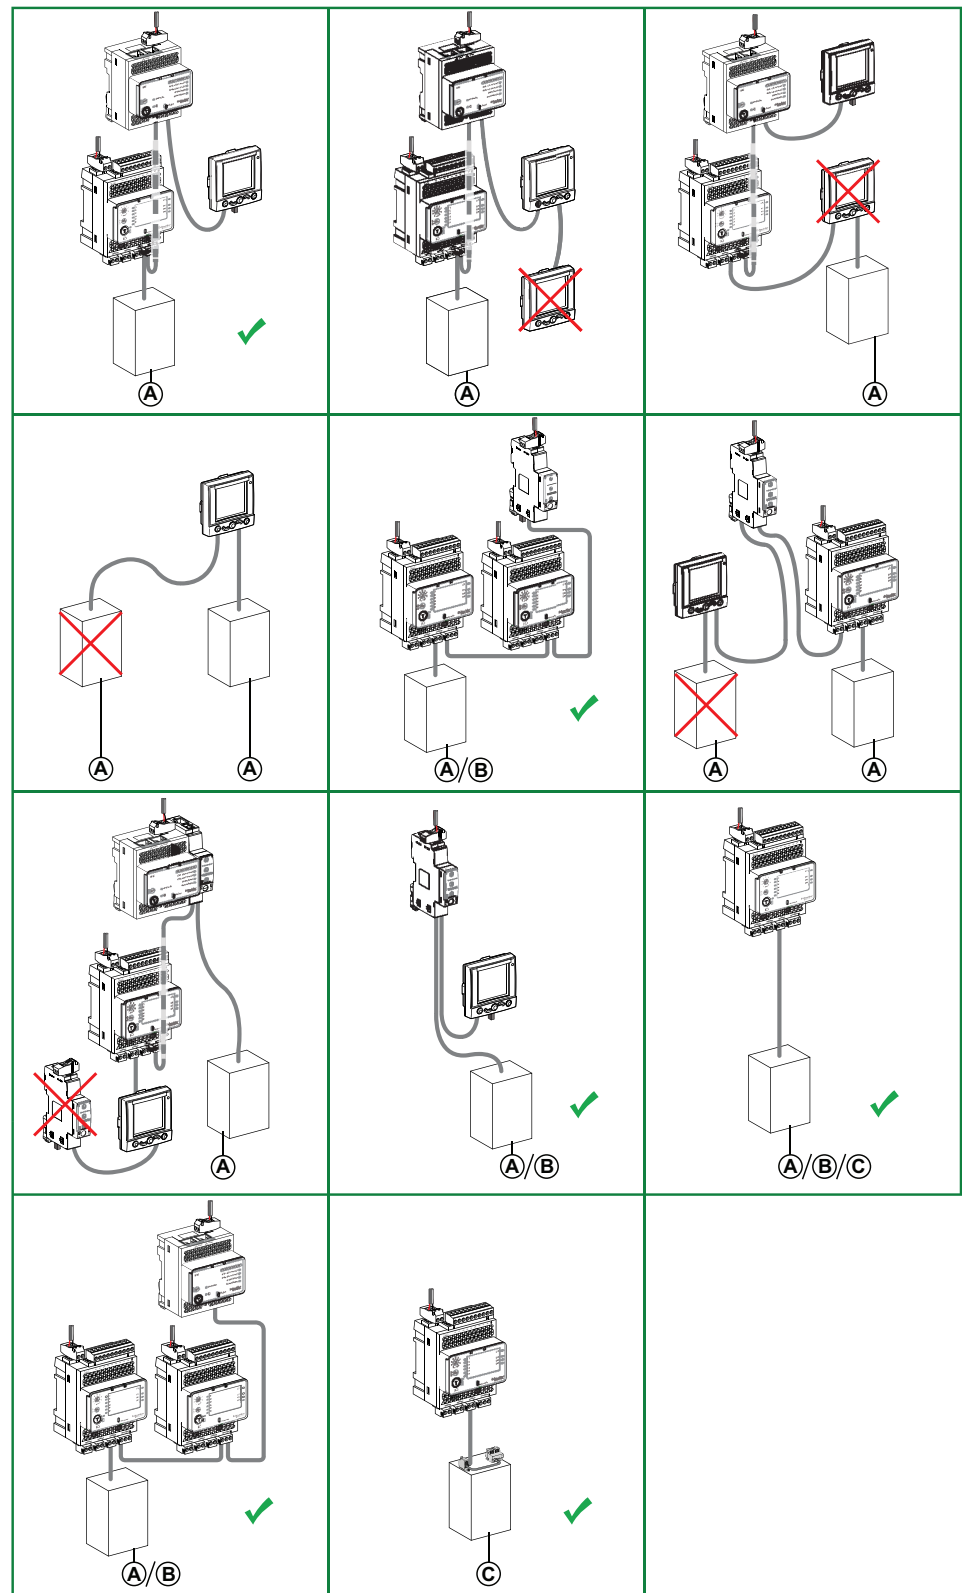

- A** ComPacT NSX, PowerPacT H-, J-, and L-frame, ComPacT NS, PowerPacT P- and R-frame, or MasterPacT NT/NW circuit breaker
- B** MasterPacT MTZ circuit breaker with ULP port module
- C** MasterPacT MTZ drawout circuit breaker with ULP port module and EIFE interface


These examples illustrate the composition rules for an IMU for ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker only.

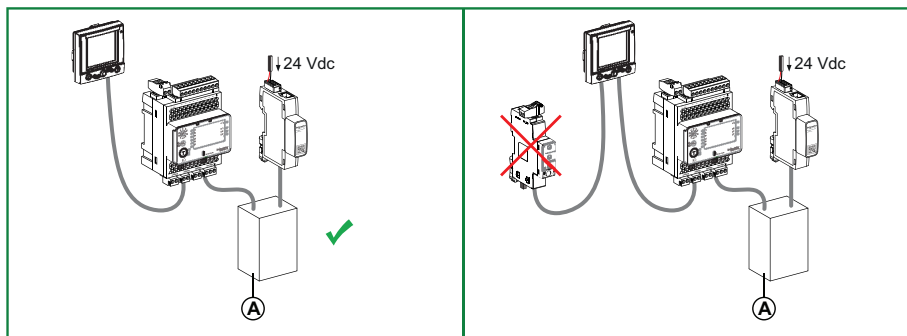

A ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker with BSCM Modbus SL/ULP module

General Rule: Order of ULP Modules in an IMU

Connect the ULP modules in a single IMU in any order. Base the connection on the ULP cable recommendations and the desired layout for the ULP modules in the electrical equipment.

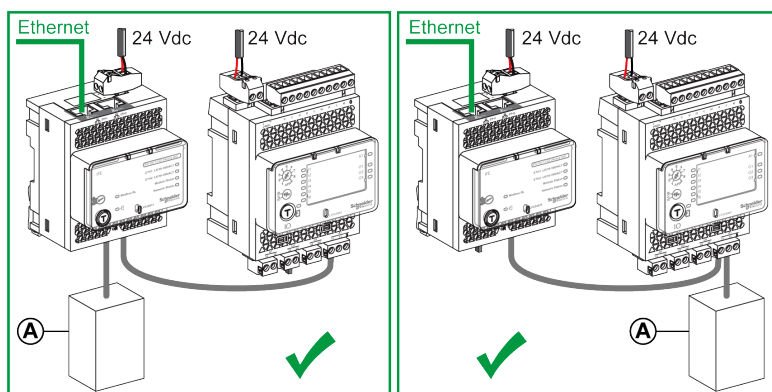


A ComPacT NSX, PowerPacT H-, J-, and L-frame, ComPacT NS, PowerPacT P- and R-frame, MasterPacT NT/NW, or MasterPacT MTZ circuit breaker

General Rule: ULP Line Termination

The ULP modules placed at the end of the ULP line must have a ULP line termination (part number TRV00880) on the unused ULP RJ45 connector.

Example of ULP line termination on IFE interface:

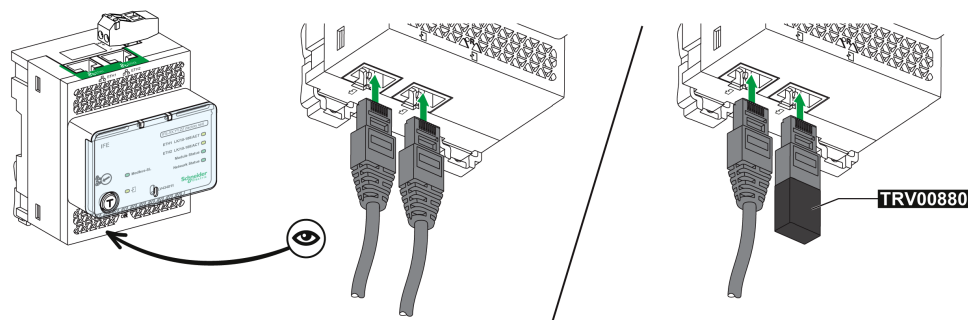

Place the ULP modules which have an internal ULP line termination at the end of the ULP line. The ULP modules which have an internal ULP line termination are:


- BSCM Modbus SL/ULP module for ComPacT NSX, PowerPacT H-, J-, and L-frame, and ComPacT NSX DC circuit breakers.
- MicroLogic 5, 6, or 7 trip unit for ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers.
- BCM ULP module for ComPacT NS, PowerPacT P- and R-frame, or MasterPacT NT/NW circuit breakers.
- ULP port module for MasterPacT MTZ circuit breakers.

NOTE: In an architecture with an EIFE interface connected to a ULP port module, the ULP port module is the end of the ULP line.

General Rule: Cables to Interconnect IMUs on Communication Networks


Do not connect the IMUs to one another with ULP cords.

- Use only the Ethernet cable to interconnect IMUs connected to an Ethernet network.

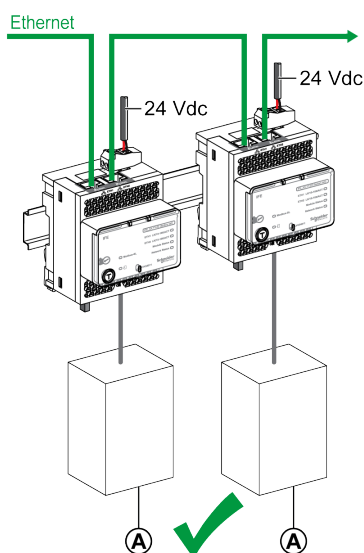

A ComPacT NSX, PowerPacT H-, J-, and L-frame, ComPacT NS, PowerPacT P- and R-frame, MasterPacT NT/NW, or MasterPacT MTZ circuit breaker

- Use only the Modbus cable or stacking accessory to interconnect IMUs connected to a Modbus network.

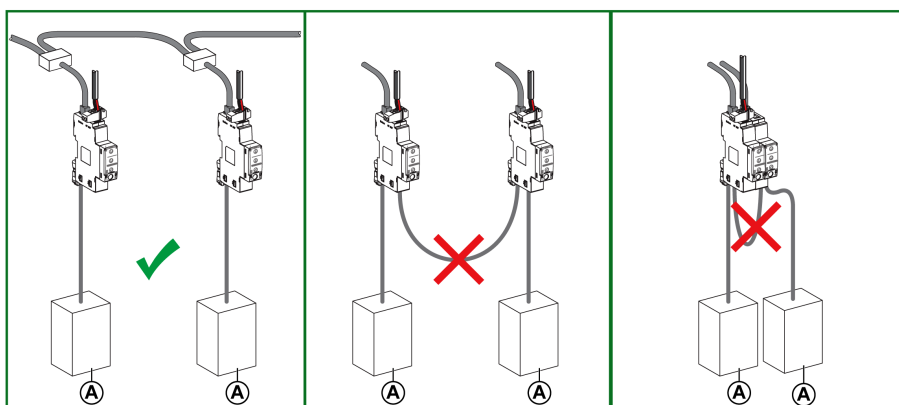

A ComPacT NSX, PowerPacT H-, J-, and L-frame, ComPacT NS, PowerPacT P- and R-frame, MasterPacT NT/NW, or MasterPacT MTZ circuit breaker

General Rule: Limitation of Number of MasterPacT MTZ, ComPacT NSX and PowerPacT H-, J-, and L-Frame Circuit Breakers

In case of floating power supply and when no IFM interface with part number TRV00210 is installed in the ULP system, the number of MasterPacT MTZ circuit breakers with MicroLogic X control units, and the number of ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers is limited by ground leakage currents as described in the following tables.

The limitation is valid for MasterPacT MTZ circuit breakers with MicroLogic X control units, and for ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers used with a ULP connection.

Limiting the maximum number of IMUs on the same external DC power supply limits the cumulated leakage currents under 0.5 mA (human sensitivity level) or 3.5 mA (class I equipment).

Number of MicroLogic trip units or control units in the case of 0.5 mA leakage current maximum:

Ue (V L-N / U L-L) (Vac)	Maximum number of MicroLogic X control units without VPS power supply (MasterPacT MTZ circuit breakers)	Maximum number of MicroLogic X control units with VPS power supply (MasterPacT MTZ circuit breakers)	Maximum number of MicroLogic trip units (ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers)
66 / 115	144	23	66
127 / 220	75	12	34
230 / 400	41	6	19
347 / 600	27	4	12
400 / 690	24	9	11
1,000	16	6	0

Number of MicroLogic trip units or control units in the case of 3.5 mA leakage current maximum:

Ue (V L-N / U L-L) (Vac)	Maximum number of MicroLogic X control units without VPS power supply (MasterPacT MTZ circuit breakers)	Maximum number of MicroLogic X control units with VPS power supply (MasterPacT MTZ circuit breakers)	Maximum number of MicroLogic trip units (ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers)
66 / 115	344	57	156
127 / 220	180	29	81
230 / 400	99	16	44
347 / 600	66	10	29
400 / 690	57	23	26
1,000	39	16	0

General Rule: Power Supply Through the ULP Cord


Only one device can be powered through the ULP cord. This device must be at the end of the ULP line. It can be done only for the following devices:

- FDM121 display.
- BSCM Modbus SL/ULP module in ULP only mode for ComPacT NSX, PowerPacT H-, J-, and L-frame, and ComPacT NSX DC circuit breakers.
- MicroLogic 5, 6, or 7 trip unit for ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers.

- BCM ULP module for MasterPacT NT/NW, ComPacT NS, and PowerPacT P- and R-frame circuit breakers.

NOTE: If BSCM Modbus SL/ULP module is in Modbus SL and ULP mode, the power supply to the BSCM Modbus SL/ULP module and the ULP modules connected to it is provided by the Modbus SL hub.

Example: In the diagram, the FDM121 display and the ComPacT NSX MicroLogic trip unit are powered through ULP system. The IFE server and the IO modules are connected to the power supply. As the IFM interfaces are stacked on the IFE server, they are already powered.

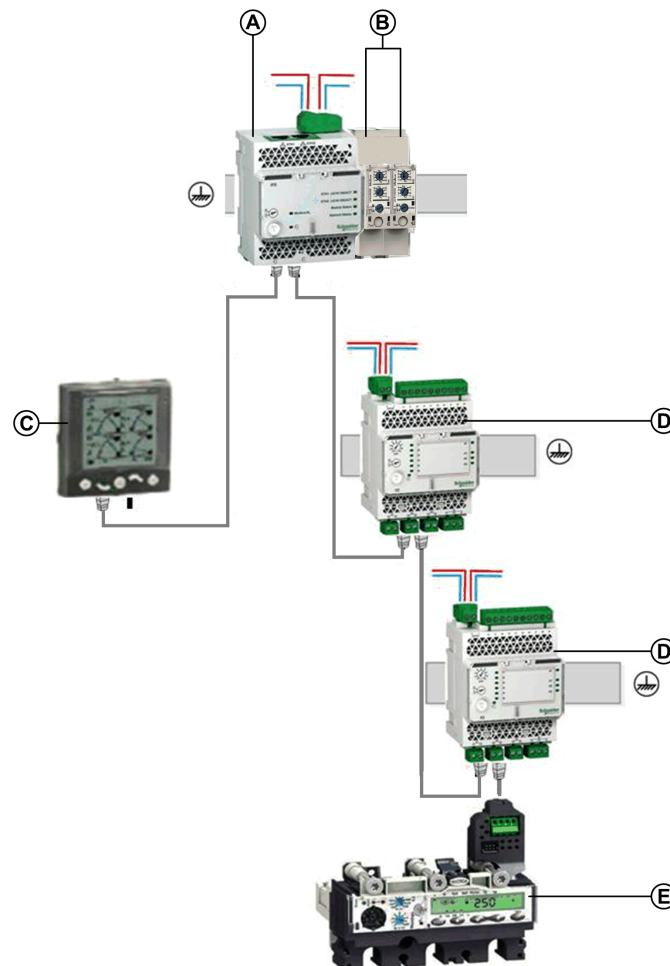

- A IFE server
- B IFM interfaces stacked on IFE server
- C FDM121 display
- D IO module
- E MicroLogic trip unit in ComPacT NSX circuit breaker

NOTE: The ULP port module on MasterPacT MTZ circuit breaker must be connected to a 24 Vdc power supply.

Length of ULP Cords

The rules for ULP cord length are as follows:

- The maximum length of the ULP cord between two ULP modules in an IMU is 5 m (16.4 ft) if one of the ULP modules does not have an external power supply.
- The maximum length of the ULP cord between two ULP modules in an IMU is 10 m (32.8 ft) if both ULP modules have an external power supply.

- The maximum length of all the ULP cords on a single IMU is 20 m (65.6 ft).
- In the case of an installation with a withdrawable drawer, the total length of the ULP cords for the fixed part must be less than 12 m (39.4 ft). This length limitation is to ensure that the fixed part operates correctly when the drawer is drawn out, page 59.
- The bending radius of the ULP cords must be 50 mm (1.97 in) minimum.

NOTE: In the following cases of device combinations with an IFE interface with part number LV434010 or LV434011, ULP total network length is limited to a maximum of 5 m (16.4 ft):

- A MasterPacT MTZ circuit breaker and an IFE interface.
- A MasterPacT MTZ circuit breaker, one IO module, and an IFE interface.
- A MasterPacT MTZ circuit breaker, two IO modules, and an IFE interface.

Maximum Number of Stacked Devices

A maximum of 12 circuit breakers can be connected to stacked modules (IFE server, IFM interface, or Modbus SL hub).

Example of a maximum configuration with 12 circuit breakers:

- 1 IFE server connected to 1 circuit breaker.
- Stacked to 1 IFM interface connected to 1 circuit breaker.
- Stacked to 4 Modbus SL hubs, connected to a maximum of 10 circuit breakers. 2 RJ45 ports remain free on the Modbus SL hubs.

Summary of Connection Rules


Characteristic	Value
Connection	Daisy-chaining of ULP cords and ULP line termination at the end of the ULP line.
Maximum length	<ul style="list-style-type: none"> • 20 m (65.6 ft) in total for the IMU. • 10 m (32.8 ft) between two ULP modules if both ULP modules have an external power supply. • 5 m (16.4 ft) between two ULP modules if one of the ULP modules does not have an external power supply. • 12 m (39.4 ft) for the fixed part in the case of an installation with a withdrawable drawer, page 59.
Voltage range supported	24 Vdc -10%/+10% (21.6–26.4 Vdc)
Current limitation on each ULP RJ45 port, page 63	300 mA

Intelligent Modular Unit (IMU) with Withdrawable Drawer

Installation in a Withdrawable Drawer

In equipment with withdrawable drawers, the circuit breaker is found in the withdrawable drawer. The IFE or IFM interface and IO modules must always be in the fixed part.

The FDM121 display can be placed in the withdrawable drawer or on the front of the drawer as shown:

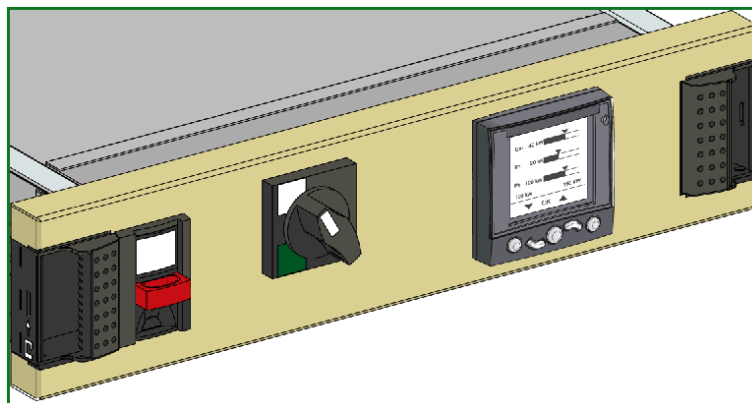


Connection of the Withdrawable Drawer

The ULP connection between the fixed part and the part built into the withdrawable drawer is made with the pluggable control terminal blocks on the unit.

Withdrawable part

Fixed part

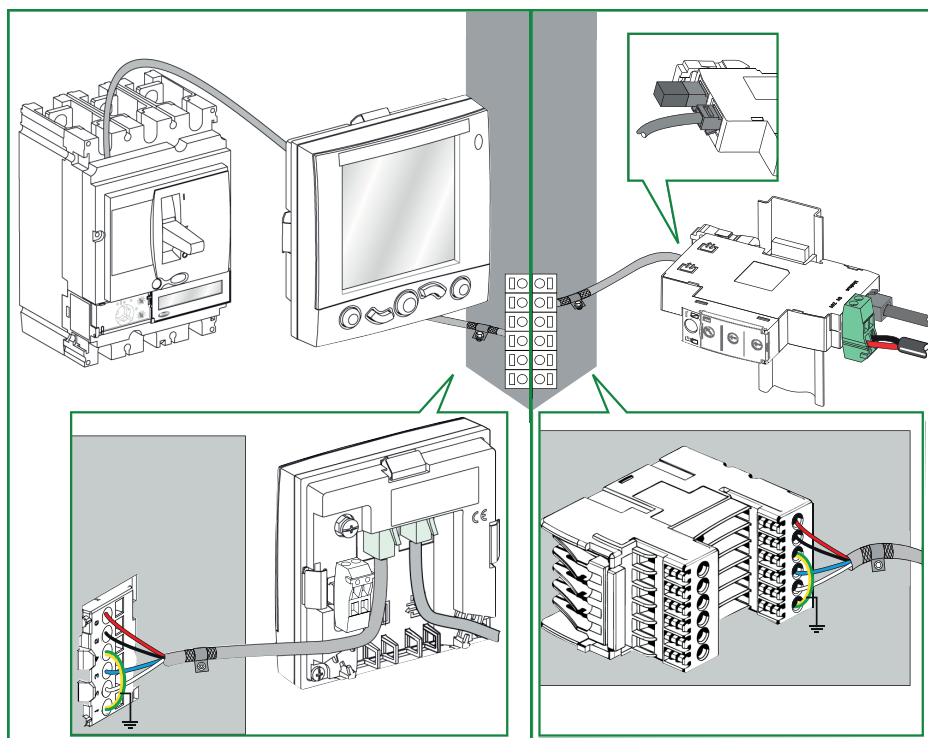

Connection Procedure

For this connection procedure, use only the circuit breaker BCM ULP cord with commercial reference LV434195, LV434196, LV434197, or LV434198. See [Circuit Breaker BCM ULP Cord](#), page 37.

The procedure for connecting the withdrawable drawer terminal block is as follows:

Step	Action	
1	Plug the four conductors into the terminal block (removable side): <ul style="list-style-type: none">Terminal 1: Connected to terminal 4 and to groundTerminal 2: White wire (L data)Terminal 3: Blue wire (H data)Terminal 5: Black wire (0 V)Terminal 6: Red wire (24 Vdc)	
2	Plug the four ULP cord conductors into the terminal block on the fixed part in the same order.	
3	Strip the ULP cord insulation: <ul style="list-style-type: none">Close to the ULP cord end connected into the terminal block (removable side).Close to the ULP cord end connected on the fixed part.	
4	Insert the wire braid into a grounding clamp at both ends of the stripped ULP cord.	
5	Screw the grounding clamps on the fixed part and withdrawable part of the drawer.	<div></div>

Grounding System

Introduction

The grounding system of the ULP system architectures must be designed and installed in power switchgear and controlgear assemblies in accordance with IEC 61439-2 standard.

The types of grounding are as follows (conforming to standard IEC 60050-826):


- Protective grounding: grounding a point or points in a system or in an installation or in equipment for purposes of electrical protection.
- Functional grounding: grounding a point or points in a system or in an installation or in equipment for purposes other than electrical protection.

Mounting Devices in the Electrical Enclosure

The following rules for mounting devices in the enclosure must be followed:

- The enclosure can be used to connect devices to the ground, in particular auxiliary power supply, PLC, and ULP modules, when the resistance between the protective conductor (PE) and all the metallic parts of the enclosure is 0.1 Ω maximum (conforming to IEC 61439-2 standard).
- All metallic parts of the enclosure must be connected together. The contact between parts must be metal on metal: paint and other isolating material must be removed. A special grease or paint must be applied on the connection to avoid corrosion in harsh environmental conditions (for example, relative humidity >65%, outdoor applications, atmosphere where corrosive agents, such as Hydrogen Sulfide (H_2S), are present).
- The connection to the protective ground terminal block in the enclosure must be as short as possible.
- The power supply used with ULP modules is limited, page 66.
- Each DIN rail must be connected to the protective ground of the enclosure. A stainless steel DIN rail is recommended rather than an aluminum one in order to provide the most consistent grounding.

The following figure shows installation for continuity of protective ground:

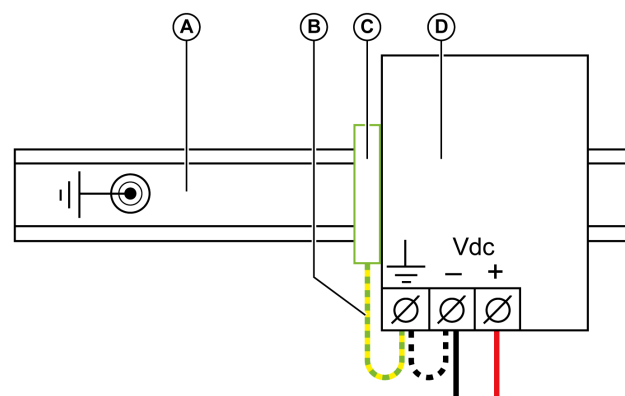


- A DIN rail connected to the protective ground of the enclosure
- B Connection as short as possible
- C Protective ground terminal block
- D Power supply

Functional Grounding


The Enerlin'X modules (IFE, EIFE, and IFM interfaces, IO module, and FDM121 display) have a functional ground. The functional ground is provided by the metallic parts of the assembly (enclosure with metallic DIN rails) having a resistance equal to $0.1\ \Omega$ maximum with the main protective ground conductor (PE).

If the devices are mounted on the door of the enclosure, check the ground continuity between the door and the PE conductor. The door must be connected to the enclosure frame with at least one PE cable. It is recommended to use PE cable with copper braids.

Examples:

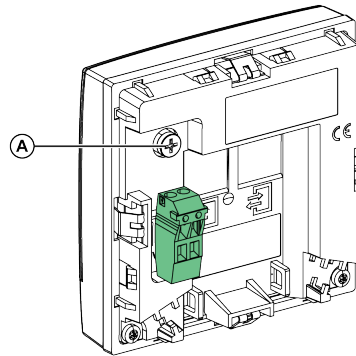

A Grounding connection on FDM121 display to be connected to the enclosure frame

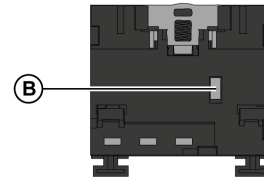

B Grounding connection on EIFE interface in contact with grounding plate installed on MasterPacT MTZ circuit breaker

ULP System Power Supply

Power Supply Distribution Systems

The power supply distribution system can be installed following either of these topologies:

- Star topology:

In a cubicle, the star supply distribution system is recommended to minimize EMC disturbances due to common impedance.


- Daisy chain topology:

The daisy chain supply distribution system enables service continuity: a device can be disconnected without impacting the others and the common impedance and voltage drop on devices are limited.

Star Supply Distribution System

The following diagram shows the design of a star supply distribution system (DC or AC). In this configuration, only the link between the main power supply and the terminal distribution is common impedance. The common impedance is minimized. The shorter the cable length (**C**), the lower the common impedance.

The wiring of each device must be done with twisted-pair cables to avoid loops and radiated emissions.

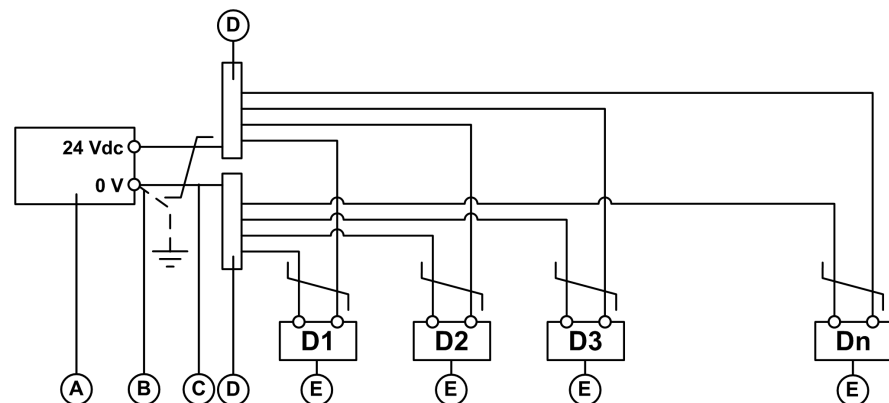


- A** Power supply
- B** 0 V connection of power supply, page 66
- C** Cable between power supply and terminal distribution
- D** Terminal distribution
- E** Device (D1–Dn)

Daisy Chain Supply Distribution System

The devices in the system are connected in a daisy chain and a loop, in which the first and the last device are connected directly to the power supply.

The cables between the daisy chain and the loop for reconnecting to the power supply must be close together to avoid current loop and generation of EMC disturbances.

The following diagram shows the design of a daisy chain supply distribution system in a single cubicle. In this configuration, additional wiring closing the daisy chain is required.

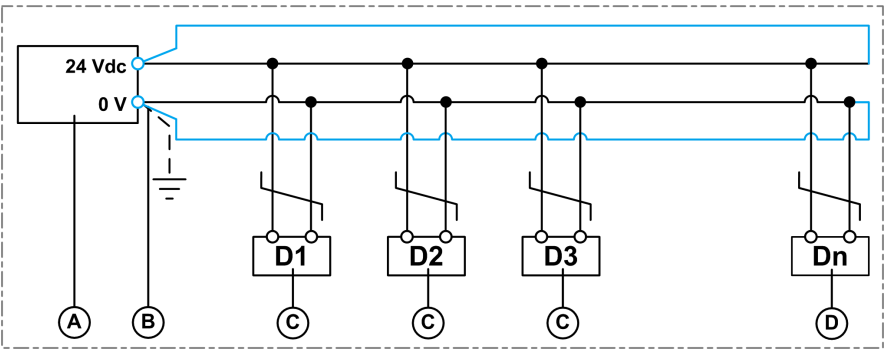

- A Power supply
- B 0 V connection of power supply, page 66
- C Device (D1–Dn)
- D Last device connected to the power supply on the line


Wiring closing the daisy chain

Power Supply Distribution in a System with Several Cubicles

In a power supply distribution system with several cubicles, it is possible to feed three or four devices per line if the current consumption is low (less than 500 mA) and the total length is less than 5 m (16.4 ft).

The following diagram shows the design of the power supply distribution system in a global system with several cubicles:

- The devices (D1–Dn) are connected in a star to reduce common impedance, page 63.
- The cubicles (C1–Cn) are connected in a daisy chain with additional loop wiring to minimize drop voltage, reduce common impedance, and provide service continuity.

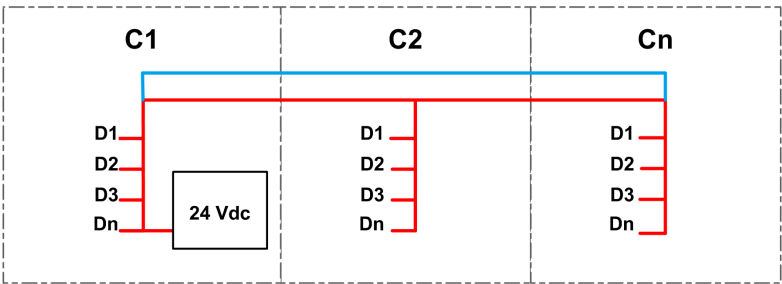

- Cubicles connected in daisy chain topology with cables for reconnecting to the power supply close to the loop
- Devices connected in star topology

ULP Module Consumption

To limit voltage drops on the ULP cords, the consumption of each RJ45 ULP port is limited to 300 mA.

The following table lists ULP module consumption.

Module	Typical consumption (24 Vdc at 20 °C / 68 °F)	Maximum consumption (19.2 Vdc at 60 °C / 140 °F)
IFE Ethernet interface for one circuit breaker	100 mA	140 mA
IFE Ethernet switchboard server	100 mA	140 mA
EIFE embedded Ethernet interface for one MasterPacT MTZ drawout circuit breaker	115 mA	180 mA
IFM Modbus-SL interface for one circuit breaker	21 mA	30 mA
IO input/output application module for one circuit breaker	100 mA	130 mA
FDM121 front display module for one circuit breaker	21 mA	30 mA
MicroLogic X control unit for MasterPacT MTZ circuit breaker (powered through ULP port module)	200 mA	335 mA
MicroLogic 5, 6, or 7 trip unit for ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers	30 mA	55 mA
BSCM Modbus SL/ULP module for ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers	30 mA	45 mA
Modbus SL hub for ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers	3 mA	5 mA
BSCM circuit breaker status control module for ComPacT NSX and PowerPacT H-, J-, and L-frame circuit breakers	9 mA	15 mA
MicroLogic trip units for MasterPacT NT/NW, ComPacT NS, and PowerPacT P- and R-frame circuit breakers	100 mA	100 mA
BCM ULP circuit breaker communication module for MasterPacT NT/NW, ComPacT NS, and PowerPacT P- and R-frame circuit breakers	40 mA	65 mA
Service Interface	0 mA (the Service Interface has its own power supply)	0 mA (the Service Interface has its own power supply)
USB maintenance interface	0 mA (the USB maintenance interface has its own power supply)	0 mA (the USB maintenance interface has its own power supply)

Power Supply Characteristics

NOTICE

LOSS OF DOUBLE INSULATION

- Supply the MicroLogic X control unit with a 24 Vdc Safety Extra Low Voltage (SELV) power supply only, connected through the ULP port module or through the terminal block for external power supply (F1- F2+). Pay attention to the polarity.
- Do not connect devices which do not have double insulation to the 24 Vdc SELV power supply which is being used to supply the MicroLogic X control unit. For example, do not use the same 24 Vdc SELV power supply to supply a MicroLogic X control unit for MasterPacT MTZ circuit breakers and a MicroLogic A/E/P/H trip unit for MasterPacT NT/NW circuit breakers.

Failure to follow these instructions will result in a basic/single insulated system.

The 24 Vdc power supplies of the ULP system must be SELV to provide insulation coordination (IEC 60664-1 and IEC 61204-7) and distribute a SELV along the entire length of the ULP connections. The 24 Vdc power supply must be connected at the primary end to a low-voltage distribution zone, whose overvoltage category is less than or the same as that of the 24 Vdc power supply:

- Power supplies in overvoltage category IV can be connected directly to the busbar system of a main low voltage distribution board.

Schneider Electric AD power supplies are overvoltage category IV.

- Power supplies in an overvoltage category lower than IV cannot be connected directly to the busbar system of a main low voltage distribution board. A minimum of one circuit isolation transformer is therefore needed between the busbar system of a main low voltage distribution board and a control circuit that can be connected to the primary of the 24 Vdc power supply.

Schneider Electric Phaseo ABL8 power supplies are overvoltage category II, like most standard power supplies.

The 24 Vdc SELV power supplies of the ULP system can be used to power other devices on condition that they have double insulation or reinforced insulation to retain the SELV nature of the power supply. These devices must not connect either the 0 V or the 24 Vdc to the local machine ground or the protective ground.

0 V Connection

0 V of power supply can be connected to local ground or be floating. The following table presents the use cases and their recommendations.

0 V connection	Requirements	Recommendations
0 V connected to ground	<ul style="list-style-type: none"> TN-S grounding system Meshed ground The devices are powered with the same power supply. The power supply is installed in the same electrical equipment as the devices. One or more connections of 0 V to ground: 0 V of devices is not connected to ground in the installation comprising the power supply and the devices. 	Check that the common mode voltage between phase and ground is not higher than 7 Vac. Otherwise, add one power supply to reduce the load.
Floating 0 V	If one or more of the requirements to connect 0 V to ground is not met, the 0 V of the power supply must be kept floating.	It is recommended to use an insulation monitoring device (Vigilohm IM20, for example) to detect the first phase-to-ground fault and improve continuity of service.

Power Supply Rating

Power supply rating rules are as follows:

- To design the power supply dedicated to communication modules, check the maximum short-circuit current (I_{cc}). It must not exceed 20 A. This is the maximum short-circuit current which can be withstood by the ULP modules. For example, the I_{cc} of the ABL8 power supply is limited to 14 A for a 10 A nominal current.
- The rating of the 24 Vdc power supply voltage for the furthest ULP module must be 24 Vdc +/-10% (21.6–26.4 Vdc).

To comply with this rating range at the end of a Modbus cable distributing power, the 24 Vdc power supply output voltage must be regulated at the following value:



- +/-3% (23.3–24.7 Vdc) for ABL8 power supplies.
- +/-5% (22.8–25.2 Vdc) for AD power supplies.

Recommended 24 Vdc Power Supplies

The recommended 24 Vdc power supplies are:

- Schneider Electric Phaseo ABL8 power supplies (3 to 10 A, overvoltage category II), recommended for large installations.

- Schneider Electric AD power supplies (1 A, overvoltage category IV), recommended in the following cases:
 - For installation limited to a few IMUs.
 - As power supply of MicroLogic trip units in MasterPacT NT/NW, ComPacT NS, or PowerPacT P- and R-frame circuit breakers.

Characteristic	Phaseo ABL8 Power supply	AD Power supply
Illustration		
Overvoltage category	Category II per IEC 60947-1	<ul style="list-style-type: none"> • Category IV per IEC 62477-1 (Vac model) • Category III per IEC 62477-1 (Vdc model) • Category III per UL 61010-1
Input supply voltage AC	<ul style="list-style-type: none"> • 110–120 Vac • 200–500 Vac 	<ul style="list-style-type: none"> • 110–130 Vac • 200–240 Vac
Input supply voltage DC	–	<ul style="list-style-type: none"> • 24–30 Vdc • 48–60 Vdc • 100–125 Vdc
Dielectric withstand strength	<ul style="list-style-type: none"> • Input/output: 4 kV RMS for 1 minute • Input/ground: 3 kV RMS for 1 minute • Output/ground: 0.5 kV RMS for 1 minute 	<ul style="list-style-type: none"> • Input/output: <ul style="list-style-type: none"> ◦ 3 kV RMS for 1 minute (110–130 Vac and 200–240 Vac model) ◦ 3 kV RMS for 1 minute (110–125 Vdc model) ◦ 2 kV RMS for 1 minute (24–30 Vdc and 48–60 Vdc model) • Input/ground: 3 kV RMS for 1 minute • Output/ground: 1.5 kV RMS for 1 minute
Temperature	<ul style="list-style-type: none"> • 50 °C (122 °F) • 60 °C (140 °F) with 80% nominal load maximum 	70 °C (158 °F)
Output Current	Limited to 10 A	1 A
Ripple	200 mV peak-peak	200 mV peak-peak
Output voltage setting for line loss compensation	24–28.8 Vdc	22.8–25.2 Vdc

NOTE: Install a control/isolation transformer for applications requiring an overvoltage current category III, and a surge arrester for overvoltage current category IV.

Power Supply Part Numbers

Power supply	Rating	Input-Output voltage	Part number
Schneider Electric AD power supply Primary overvoltage category IV Temperature: -25 °C to +70 °C (-13 °F to +158 °F)	1 A	24/30 Vdc - 24 Vdc	LV454440
		48/60 Vdc - 24 Vdc	LV454441
		100/125 Vdc - 24 Vdc	LV454442
		110/130 Vac - 24 Vdc	LV454443
		200/240 Vac - 24 Vdc	LV454444


Power supply	Rating	Input-Output voltage	Part number
Schneider Electric Phaseo ABL8 power supply	3 A	100/500 Vac - 24 Vdc	ABL8RPS24030
Primary overvoltage category II	5 A	100/500 Vac - 24 Vdc	ABL8RPS24050
Temperature: 0–60 °C (0–140 °F) (derated to 80% of the current above 50 °C (122 °F))	10 A	100/500 Vac - 24 Vdc	ABL8RPS24100

NOTE: Example of other compliant power supplies: Phoenix Contact TRIO POWER power supply unit, TRIO-PS-2G/1AC/24DC/10/B+D (part number 2903145).


24 Vdc Power Supply Connections Rules

To reduce electromagnetic interference, follow these rules:


- The input and output wires of the 24 Vdc power supply must be physically separated as much as possible.
- The output wires of the 24 Vdc power supply must be twisted together.
- The output wires of the 24 Vdc power supply, communication cables, or line protected by a surge protection device (SPD) must cross over the power cables perpendicularly.

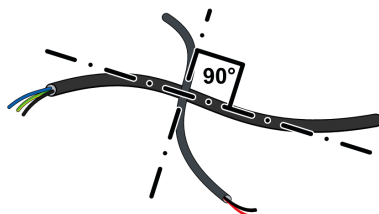


- The 24 Vdc power supply cables must be cut to length and be against the metallic frame of the grounded enclosure. Do not loop excess cable.

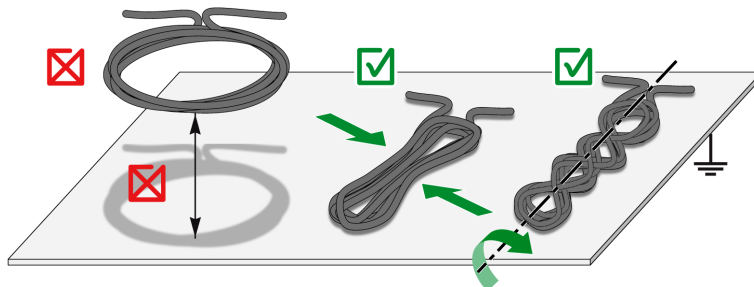

- Always flatten 24 Vdc power supply cables on the grounded metallic frame of cubicles to avoid ground loops.

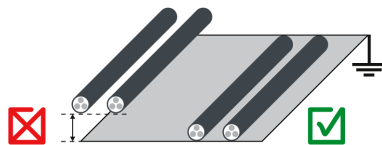

- To route sensitive cable, follow corners inside enclosures, taking into account the cable bending radius.

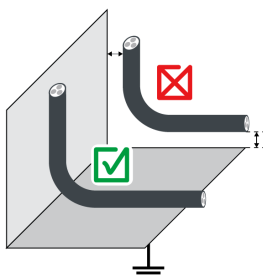

24 Vdc Power Supply Cable Characteristics

The rules for a standard installation of the 24 Vdc power supply in the ULP system are as follows:

- Connect the power supply to a cable with one twisted pair.
- The minimum distance between power supply cable and other signals in the installation must be as follows:
 - Distance between power and control circuits = 100 mm (3.9 in)
 - Distance between power circuit and 24 Vdc or communication cables = 200 mm (7.9 in)
 - Distance between control circuit and 24 Vdc or communication cables = 100 mm (3.9 in)

To limit electromagnetic interference, apply the following additional installation rules:

- Connect the power supply to a one twisted-pair shielded cable.
- The cable shield must be connected to EMC clamps.
- The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation, for example, screw or DIN rail (for example, EMClip® SKHZ brass clamps from Indu-Sol).

24 Vdc Power Supply Load Balance

The power supply rating depends on the load balance, determined by the consumption of the devices in the IMU. Follow this procedure to verify that the power supply rating is correct:

Step	Action
1	Calculate the load balance of the power supply taking into account the ULP module consumption. Refer to ULP Module Consumption, page 64.
2	Measure the voltage on the last device connected to the power supply on the line.
3	Check that the measurement is compatible with the device tolerance.
4	In case of voltage drop, do one of the following: <ul style="list-style-type: none"> • Increase the cross-section of the power supply cable. • Make a loop to the power supply from the last cubicle in a daisy-chain architecture or the last device in the electrical equipment.

24 Vdc Power Supply Mode

NOTICE

HAZARD OF EQUIPMENT DAMAGE

Use the same 24 Vdc SELV AD or Phaseo ABL8 power supply to supply power to all ULP modules of one IMU.


Failure to follow these instructions can result in equipment damage.

- The same 24 Vdc SELV power supply can be used to supply several IMUs, depending on the overall power requirements of the system.
- Use a separate 24 Vdc power supply to supply the MN/MX/XF voltage releases or the MCH gear motor.

Module	Power supply mode
IFE Ethernet interface for one circuit breaker	Must be connected to a 24 Vdc power supply and cannot be powered through its ULP port.
IFE Ethernet switchboard server	Must be connected to a 24 Vdc power supply and cannot be powered through its ULP port.
IFM Modbus-SL interface for one circuit breaker	Must be connected to a 24 Vdc power supply ⁽¹⁾ and cannot be powered through its ULP port.
IO input/output application module for one circuit breaker	Must be connected to a 24 Vdc power supply and cannot be powered through its ULP port if not powered by the Modbus SL hub.
ULP port module for MasterPacT MTZ circuit breakers	Must be connected to a 24 Vdc power supply and cannot be powered through its ULP port.
MicroLogic X control unit for MasterPacT MTZ circuit breakers	Powered by the ULP port module.
EIFE embedded Ethernet interface for one MasterPacT MTZ drawout circuit breaker	Powered by the ULP port module.
FDM121 front display module for one circuit breaker	<ul style="list-style-type: none"> Must be connected to a power supply if alone or not located at the end of the ULP line. Powered by the other ULP modules through the ULP cord if located at the end of the ULP line.
MicroLogic 5, 6, or 7 trip unit for ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breakers	Powered by the other ULP modules through the ULP cord.
Modbus SL hub	Must be connected to a 24 Vdc power supply ⁽¹⁾ .
BSCM Modbus SL/ULP module for ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breakers	<ul style="list-style-type: none"> Powered by the other ULP modules through the ULP cord if BSCM Modbus SL/ULP module is in ULP only mode. Powered by the Modbus SL hub if BSCM Modbus SL/ULP module is in Modbus SL only mode or in Modbus SL and ULP mode.
BSCM circuit breaker status control module for ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breakers	Powered by the other ULP modules through the ULP cord.
MicroLogic trip unit for MasterPacT NT/NW, ComPacT NS, and PowerPacT P- and R-frame circuit breakers	Must be powered by a dedicated AD power supply.
BCM ULP circuit breaker communication module for MasterPacT NT/NW, ComPacT NS, and PowerPacT P- and R-frame circuit breakers	Powered by the other ULP modules through the ULP cord.
<p>(1) The connection of an IFM interface or Modbus SL hub to the 24 Vdc power supply depends on the assembly:</p> <ul style="list-style-type: none"> If the IFM interface or Modbus SL hub is stacked to an IFE server, only the IFE server must be powered by a 24 Vdc power supply. If the IFM interfaces or Modbus SL hubs are stacked without IFE server, only one of the IFM interfaces or Modbus SL hubs must be powered by a 24 Vdc power supply. A single IFM interface or Modbus SL hub must be powered by a 24 Vdc power supply. 	

24 Vdc Power Supply for Modbus SL Hub

- If Modbus SL hub is stacked to the IFE Ethernet switchboard server, the Modbus SL hub, the BSCM Modbus SL/ULP module, the MicroLogic 5, 6, or 7 trip unit and the ULP modules (IO module, FDM121 display) are powered by the IFE Ethernet switchboard server.
- If Modbus SL hub is alone (not stacked to a powered IFE Ethernet switchboard server, IFM interface or Modbus SL hub), the Modbus SL hub must be powered by a 24 Vdc power supply, and the BSCM Modbus SL/ULP module, the MicroLogic 5, 6, or 7 trip unit and the ULP modules (IO module, FDM121 display) are powered by the Modbus SL hub.

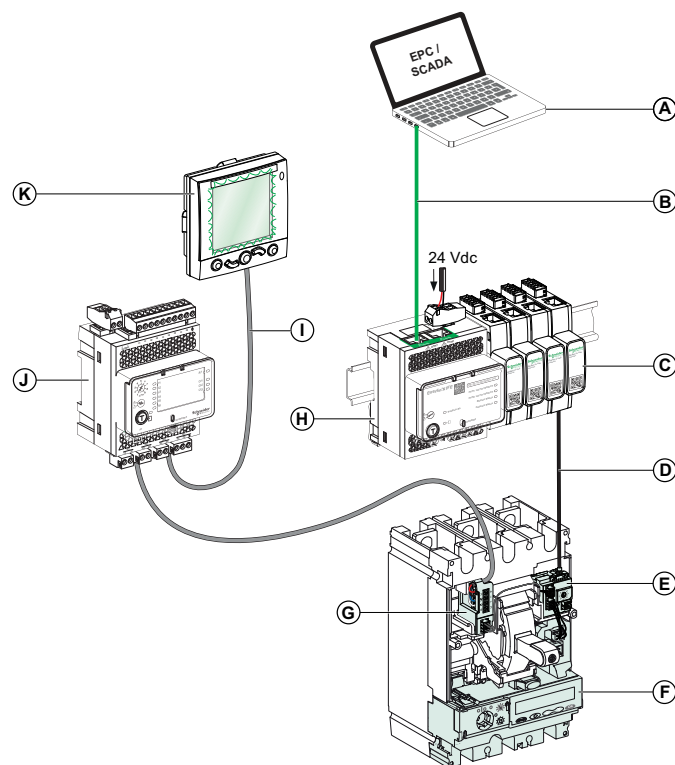

- A Modbus TCP client
- B Ethernet cable
- C Modbus SL hub
- D BSCM Modbus SL cord
- E BSCM Modbus SL/ULP module
- F MicroLogic 5, 6, or 7 trip unit
- G NSX cord
- H IFE Ethernet switchboard server
- I ULP cord
- J IO module
- K FDM121 display

24 Vdc Power Supply for MicroLogic Trip Units in MasterPacT NT/ NW, ComPacT NS and PowerPacT P- and R -Frame Circuit Breakers

NOTICE

HAZARD OF NUISANCE TRIPPING IN NOISY ENVIRONMENT

Use a separate 24 Vdc AD power supply to supply the MicroLogic trip unit in MasterPacT NT/NW, ComPacT NS, or PowerPacT P- and R-frame circuit breakers and its optional M2C or M6C programmable contacts.

Failure to follow these instructions can result in nuisance tripping

One 24 Vdc SELV AD power supply can supply power to several MicroLogic trip units in MasterPacT NT/NW, ComPacT NS, or PowerPacT P- and R-frame circuit breakers, depending on the overall power requirements of the system:

- Up to ten MicroLogic trip units without M2C or M6C programmable contacts.
- Up to five MicroLogic trip units with M2C or M6C programmable contacts.

Rules for Connection to the Communication Network

What's in This Chapter

Connection to the Ethernet Network with IFE Server and IFE/EIFE Interfaces	73
Connection to the Modbus-SL Network with IFM Interface	76
Connection to the Modbus-SL Network with BSCM Modbus SL/ULP Module and Modbus SL Hub	79
Communication Architecture Examples with Modbus SL Hub	83
Modbus SL Connection Rules	86
Modbus SL Wiring Diagram Examples	90

Connection to the Ethernet Network with IFE Server and IFE/EIFE Interfaces

Introduction

Connect intelligent modular units to the Ethernet network with one of the following interfaces:

- IFE Ethernet interface for one circuit breaker
- IFE Ethernet switchboard server
- EIFE embedded Ethernet interface for one MasterPacT MTZ drawout circuit breaker

General Rules for Ethernet Cable


10Base-T/100Base-T Ethernet cable uses only two pairs of the four twisted pairs of wires that compose an Ethernet cable. These two pairs are orange (pins 1 and 2) and green (pins 3 and 6).

An Ethernet line cable must be screened (overall braided screen) and also screened by a foil (SF/UTP, that is, shielded foiled twisted pair).

The rules for standard Ethernet topology are as follows:

- There is no maximum number of devices per network.
- Transmission rate: 10–100 Mbps.
- Maximum permitted length between two IFE interfaces or between an EIFE and an IFE interface (in case of daisy chain): 100 m (328 ft).
- Cable type: Category 5e SFTP (shielded foiled twisted pair) or Category 6 SFTP.

Ethernet RJ45 Pin Connection

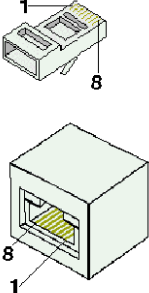RJ45 connector	Pin number	Pair number	Wire color
	1	Pair 1	White-orange
	2	Pair 1	Orange
	3	Pair 2	White-green
	4	Pair 3	Reserved
	5		
	6	Pair 2	Green
	7	Pair 4	Reserved
	8		


Ethernet Connection on IFE Interface or IFE Server

NOTICE


HAZARD OF EQUIPMENT DAMAGE

- Never connect an Ethernet device to an RJ45 ULP port.
- The RJ45 ULP ports of the IFE interface are for ULP modules only.
- Any other use can damage the IFE interface or the device connected to the IFE interface.

Failure to follow these instructions can result in equipment damage.

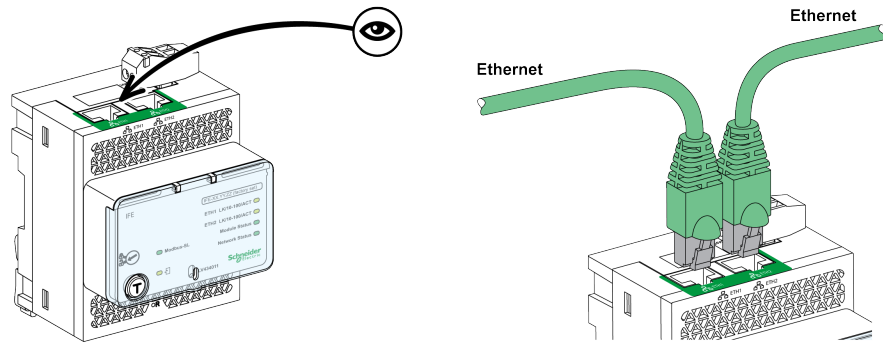

Ethernet Connection on EIFE Interface

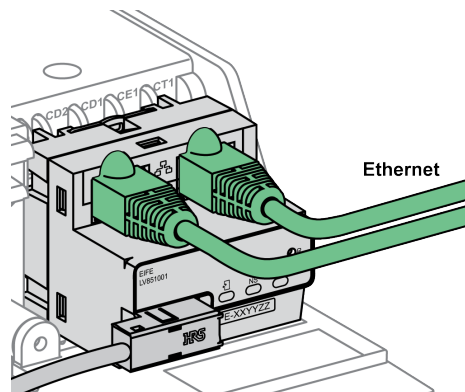


General Wiring Recommendations

- Do not bend or damage the cables:
 - Minimum bending radius is 10 times the cable diameter.
 - Avoid sharp angles of paths or passages of the cable.
- Identify the logical name and the logical address of each device.




Ethernet Connection Linking Two Pieces of Electrical Equipment

Two remote pieces of electrical equipment can be linked by an Ethernet connection, regardless of the distance or the ground equipotentiality between the two pieces of electrical equipment. In this case, the Modbus-SL network is contained within electrical equipment.

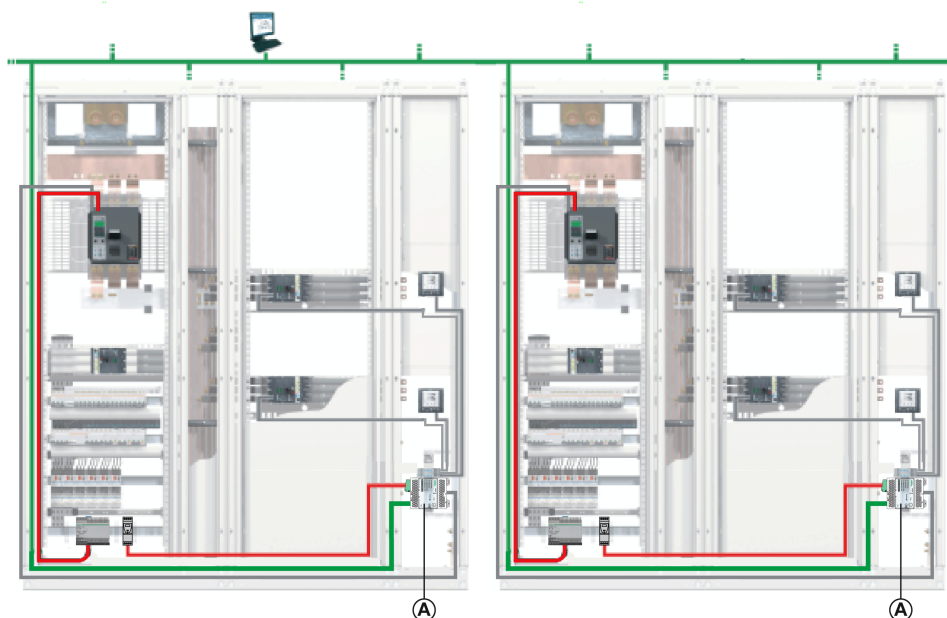The following figure shows an Ethernet link connecting two pieces of electrical equipment, via IFE servers.



A IFE server

Cable	Description
	Ethernet network
	ULP network
	24 Vdc power supply

Connection of the IFE server to the Modbus-SL network inside the electrical equipment is shown in detail in the wiring diagram for Ethernet server, page 103.

Connection to the Modbus-SL Network with IFM Interface

Introduction

Connect intelligent modular units to the Modbus network with the IFM Modbus-SL interface for one circuit breaker.


The 24 Vdc power supply terminal block delivered with the IFM interface is used to supply the IFM interface with power either in a daisy-chain or in a star connection.

In terms of power supply, the maximum number of IFM interfaces stacked to one IFE server is 11 in order to limit voltage drop.

In terms of Modbus communication, it depends on the performance requirement. As it takes approximately 500 ms at 19,200 Baud per device to refresh 100 registers, the more interfaces added the longer the minimum refreshment period. The minimum refreshment period depends on the number of IFM interfaces stacked to one IFE server. Multiply the time to refresh one device by the number of devices to find the minimum refreshment period expected in the application. For instance, an installation with eight IFM interfaces stacked to one IFE server at 19,200 Baud would take approximately 4 seconds to be read.

Connection of RJ45 Modbus Cable to the IFM Interface

The RJ45 Modbus cable connects to the Modbus-SL RJ45 port located on the top of the IFM interface.

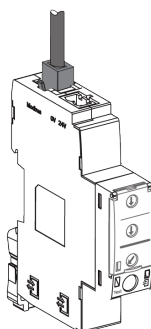


Pin Connection of the RJ45 Plug/Plug Modbus Cable

The RJ45 plug/plug Modbus cable (VW3A8306R••) has RJ45 plug connectors at both ends. The RJ45 connector connection is described in the following table.

RJ45 connector	Pin number	Pin	Wire color	Description
	4	D1	Red	RS 485 B/B' or Rx+/Tx+ signal
	5	D0	Black	RS 485 A/A' or Rx-/Tx- signal
	8	0 VL	Green	0 V for Modbus common and power supply

Composition of the RJ45 Plug/Plug Modbus Cable

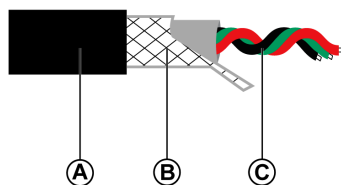


- A** Outer sheath
- B** Shielding braid
- C** Twisted communication wires (red/black/green)

IMPORTANT: The 0 VL cable (Modbus common) must be distributed along the entire length of the network, right up to the Modbus client.

Connection of the IFM Interface to an Open-Style Connector

The IFM interface can be connected to another Modbus server without Modbus RJ45 port (for example, a Smartlink device) by one of the following ways:


- With a LV434211 RJ45 to open connector Modbus adapter:
 1. Connect the wires to the open connector of the Modbus adapter.
 2. Connect the RJ45 connector of the Modbus adapter to the Modbus port of the IFM interface.
- With an RJ45 plug/plug Modbus cable (VW3A8306R••):
 1. Cut off an end of the RJ45 cable.
 2. Strip the cable sheath over a length less or equal to 50 mm (1.96 in).
 3. Cut off the shielding braid close to the cable sheath end.
 4. Connect the wires to terminals (for example, screw terminals or tap junctions):
 - Pin number 4 (D1): red wire
 - Pin number 5 (D0): black wire
 - Pin number 8 (0 VL): green wire
 5. Unstrip the cable insulation close to the cable end.
 6. Fix the cable to a grounding clamp.
 7. Connect the RJ45 connector of the ULP cable to the Modbus port of the IFM interface.

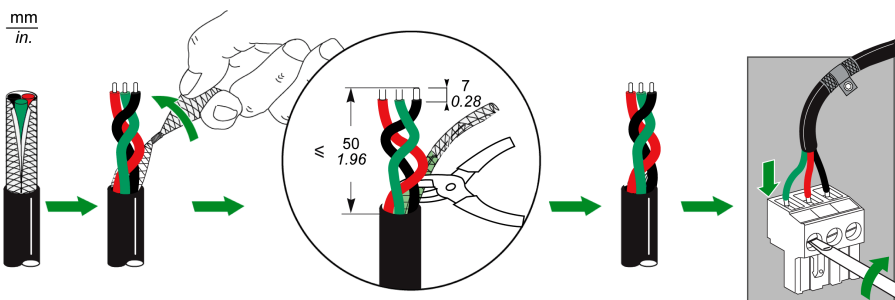

- With a Modbus serial link cable (VW3A8306D30) with one RJ45 plug connector and free wires at other end:
 1. Identify the three wires to be connected to a connector:
 - Pin number 4 (D1): blue wire
 - Pin number 5 (D0): white-blue wire
 - Pin number 8 (0 VL): brown wire
 2. Cut off the five other wires.
 3. Connect the three wires to terminals (for example, screw terminals or tap junctions).
 4. Connect the RJ45 connector of the Modbus serial link cable to the Modbus port of the IFM interface.
- With a Modbus cable with free wires at both ends:
 1. Identify the three wires to be connected to a connector:
 - Pin number 4 (D1)
 - Pin number 5 (D0)
 - Pin number 8 (0 VL)
 2. Cut off the other wires.
 3. At one cable end, connect the three wires to a Phoenix Contact RJ45 connector (VS-08-RJ45-5-Q/IP20 - 1656725).
 4. Connect the Phoenix Contact RJ45 connector to the Modbus port of the IFM interface.
 5. At the other cable end, connect the wires to terminals:
 - Screw terminals by using lugs then connect the lug with the shield to the ground.
 - Tap junctions by using a Phoenix Contact RJ45 connector (VS-08-RJ45-5-Q/IP20 - 1656725).

RJ45 to Open Connector Modbus Adapter


The RJ45 to open connector Modbus adapter can be used to connect an IFM interface to a Modbus device without RJ45 port.

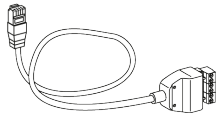Illustration	Description	Part number
	RJ45 to open connector Modbus adapter	LV434211

Modbus Line Termination

The Modbus cable communication pair has an impedance of 120 Ω or 150 Ω . The Modbus cable must therefore be terminated at each end by a Modbus line termination with an impedance of 120 Ω or 150 Ω .

The Modbus client is at one end of the Modbus cable and usually has a switchable termination impedance. At the other end of the Modbus cable, a Modbus line termination with an impedance of 120 Ω or 150 Ω must be connected.

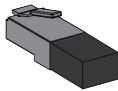Illustration	Description	Part number
	Modbus line termination (150 Ω)	VW3A8306R
	Modbus line termination (120 Ω + 1 nF)	VW3A8306RC

Connection to the Modbus-SL Network with BSCM Modbus SL/ULP Module and Modbus SL Hub

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

Do not connect the BSCM Modbus SL/ULP module to Modbus SL communication network when the system voltage is greater than 480 Vac or 480 Vdc.

Failure to follow these instructions will result in death or serious injury.

Introduction

Connect ComPacT NSX or PowerPacT H-, J-, and L-Frame intelligent modular units to the Modbus network with the Modbus SL hub and the BSCM Modbus SL/ULP module.

The 24 Vdc power supply terminal block delivered with the Modbus SL hub is used to supply the Modbus SL hub with power either in a daisy-chain or in a star connection.

A maximum of 12 circuit breakers (or IMUs) can be connected to stacked modules (IFE server, IFM interface, or Modbus SL hub).

Example of a maximum configuration with 12 circuit breakers, page 83:

- 1 IFE server connected to 1 circuit breaker.
- Stacked to 1 IFM interface connected to 1 circuit breaker.
- Stacked to 4 Modbus SL hubs, connected to a maximum of 10 circuit breakers. 2 RJ45 ports remain free on the Modbus SL hubs.

In terms of Modbus communication, it depends on the performance requirement. As it takes approximately 500 ms at 19,200 Baud per device to refresh 100 registers, the more interfaces added the longer the minimum refreshment period. The minimum refreshment period depends on the number of Modbus SL hubs stacked to one IFE server or connected to Panel Server gateway. Multiply the time to refresh one device by the number of devices to find the minimum refreshment period expected in the application. For instance, an installation with eight BSCM Modbus SL/ULP modules or IFM interfaces connected to one gateway at 19,200 Baud would take approximately 4 seconds to be read.


Connection of the BSCM Modbus SL/ULP Module to the Modbus SL Hub

Up to three BSCM Modbus SL/ULP modules can be connected to one Modbus SL hub by using a BSCM Modbus SL cord.

Three BSCM Modbus SL cords are available:

- BSCM Modbus SL cord with commercial reference LV434221 (0.35 m / 1.15 ft)
- BSCM Modbus SL cord with commercial reference LV434222 (1.3 m / 4.26 ft)
- BSCM Modbus SL cord with commercial reference LV434223 (3 m / 9.84 ft)

The BSCM Modbus SL/ULP modules are powered by the Modbus SL hub.

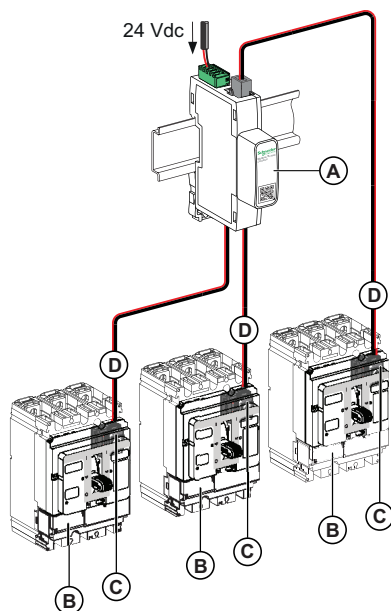

- A Modbus SL hub
- B ComPacT NSX / PowerPacT H-, J-, and L-frame circuit breaker
- C BSCM Modbus SL/ULP module
- D Modbus SL cord

Daisy Chaining of a Modbus SL Hub with an IFM Interface


It is possible to chain the Modbus-SL network by using an RJ45/RJ45 plug-plug cable between:

- One of the three RJ45 ports of the Modbus SL hub
- The RJ45 Modbus SL port of the IFM interface

Three Modbus SL cables are available for this connection:

- Modbus SL cable with commercial reference VW3A8306R03 (0.3 m / 0.98 ft)
- Modbus SL cable with commercial reference VW3A8306R10 (1 m / 3.28 ft)
- Modbus SL cable with commercial reference VW3A8306R30 (3 m / 9.84 ft)

The 24 Vdc power supply is not distributed through the Modbus SL cable.

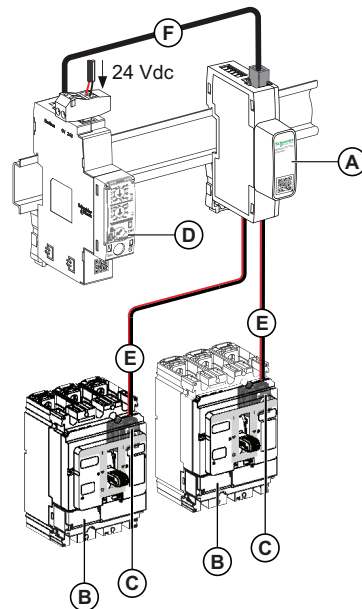

- A** Modbus SL hub
- B** ComPacT NSX / PowerPacT H-, J-, and L-frame circuit breaker
- C** BSCM Modbus SL/ULP module
- D** IFM interface
- E** Modbus SL cord
- F** Modbus SL cable

Daisy Chaining of a Modbus SL Hub with Modbus SL Devices

The Modbus SL hub can be connected to another Modbus SL device that does not have a Modbus RJ45 port (for example, a Panel Server gateway) by using a Modbus SL cable connected on the Modbus SL hub terminal block.


The 24 Vdc power supply can be chained or not through the Modbus SL cable.

Modbus SL Hub Terminal Block

The Modbus SL hub terminal block is used to connect the Modbus SL hub to another Modbus SL device.

Illustration	Marking	Description
	24V	24 Vdc power supply
	0V	0 V for Modbus common and power supply
		Ground terminal
	D0	RS 485 A/A' or Rx-/Tx- signal
	D1	RS 485 B/B' or Rx+/Tx+ signal

Composition of the Modbus Cable

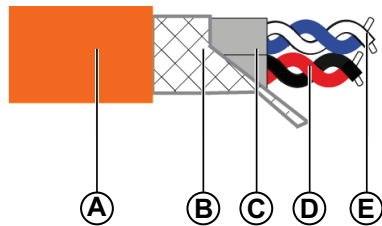

- A Outer sheath
- B Shielding braid
- C Twisted pair sheath
- D Communication pair (white/blue)
- E Power supply pair (red/black)

The characteristics of the Modbus cable are as follows:

- Shielded cable with two twisted pairs:
 - One pair with 0.14 mm² (24 AWG) cross section for the RS 485 signal (D0, D1).
 - One pair with 0.14 mm² (24 AWG) cross section for the 24 Vdc power supply (optional, only used if the Modbus SL hub is not powered through stacking by another device).
- Shielding braid to be connected to the ground terminal of the Modbus SL hub terminal block.

The 0 V terminal of the power supply pair is also the Modbus common, that is the 0 V for the RS 485 signal (D0, D1).

IMPORTANT: The 0 VL cable (Modbus common) must be distributed along the entire length of the network, right up to the Modbus client.

Modbus Line Termination on the Modbus SL Hub

NOTICE
HAZARD OF COMMUNICATION DISTURBANCES Always connect a Modbus line termination of 120 Ω to the final stacked Modbus SL hub, or to the final Modbus server on the Modbus SL communication network. Failure to follow these instructions can result in communication disturbances.

Two Modbus line terminations can be used:


- Plug the Modbus line termination with commercial reference VW3A8306RC in one of the three RJ45 Modbus SL ports of the Modbus SL hub.
- Connect the Modbus line termination with commercial reference VW3A8306DRC to the Modbus SL hub terminal block.

For more information about Modbus line termination, refer to BQT1758409 *Modbus SL Hub - Instruction Sheet*.

Communication Architecture Examples with Modbus SL Hub

Modbus SL Hub Stacked with IFE Server and IFM Interface


Modbus SL hub can be directly stacked with IFE server or IFM interface with the help of stacking accessory (TRV00217) as shown in the following architecture. In this architecture, both 24 Vdc supply and Modbus connection flows via the stacking accessory.

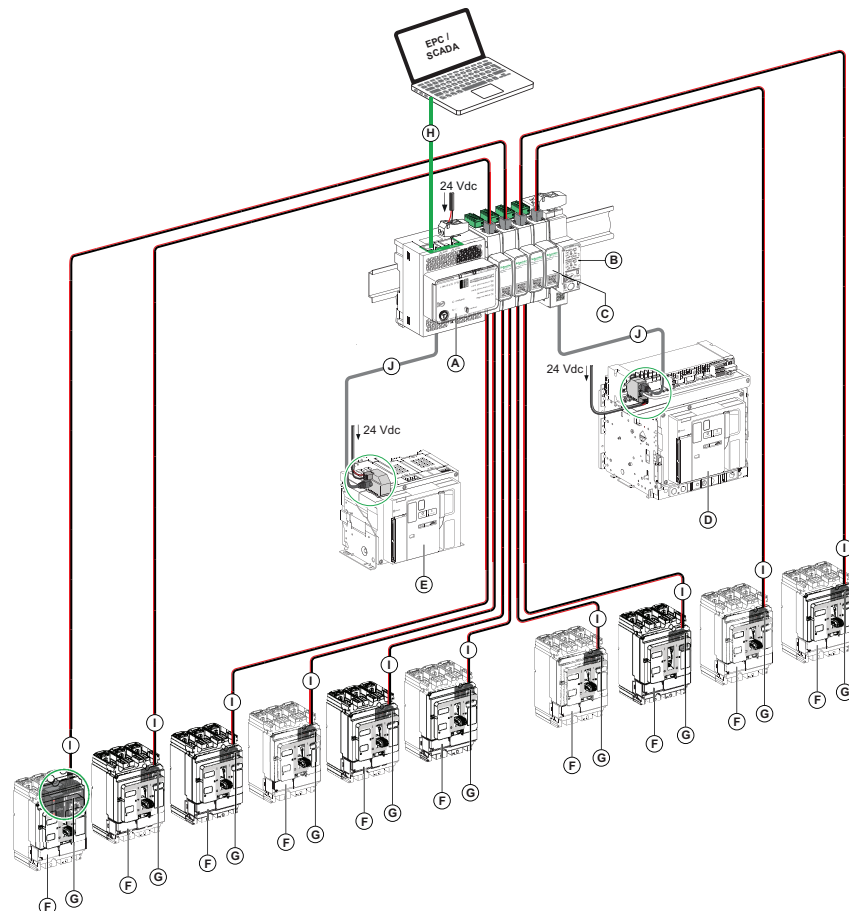

- A. IFE server
- B. IFM interface
- C. Modbus SL hub
- D. Drawout MasterPacT MTZ1/MTZ2/MTZ3
- E. Fixed MasterPacT MTZ1/MTZ2/MTZ3
- F. Fixed ComPacT NSX / PowerPacT H-, J-, and L-Frame
- G. BSCM Modbus SL/ULP module
- H. Ethernet cable
- I. BSCM Modbus SL cord
- J. ULP cord

Modbus SL Hub Daisy Chained with IFE Server and IFM Interface


When it is not possible to stack the Modbus SL hubs together with the help of the stacking accessory TRV00217, the Modbus SL hubs can be daisy chained using the terminal block connector, as shown in the following architecture. In this architecture, the IFE server acts as a gateway.

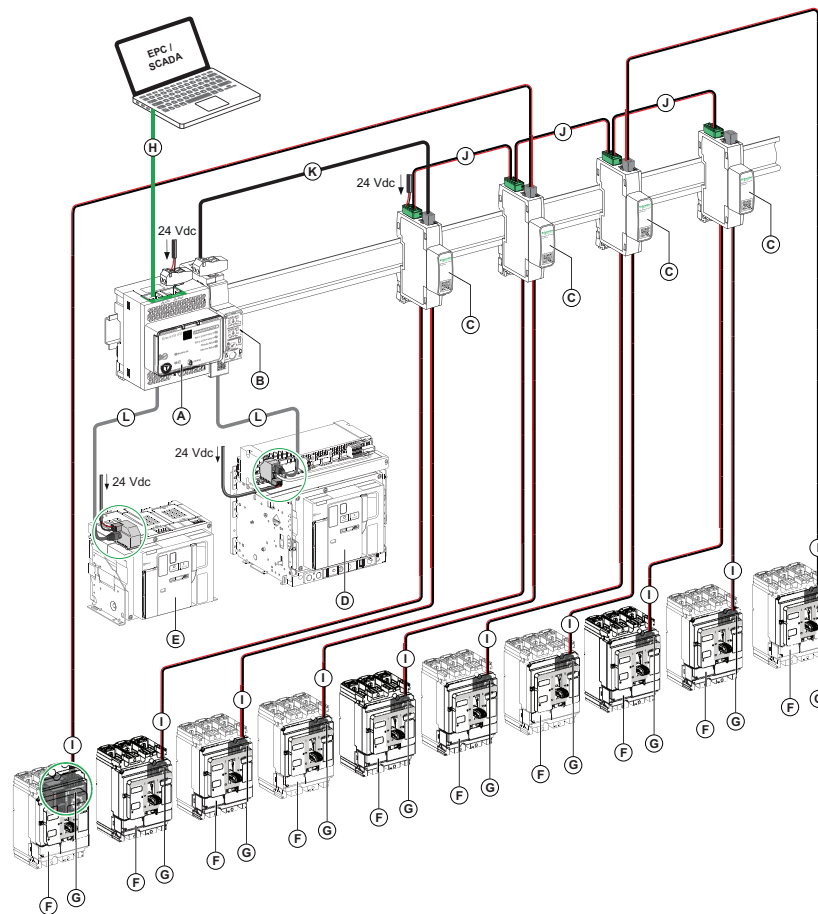

- A. IFE server
- B. IFM interface
- C. Modbus SL hub
- D. Drawout MasterPacT MTZ1/MTZ2/MTZ3
- E. Fixed MasterPacT MTZ1/MTZ2/MTZ3
- F. Fixed ComPacT NSX / PowerPacT H-, J-, and L-frame
- G. BSCM Modbus SL/ULP module
- H. Ethernet cable
 - I. BSCM Modbus SL cord
- J. Modbus cord and 24 Vdc power supply
- K. Modbus SL cable
- L. ULP cord

Stacked Modbus SL Hub and IFM Interface, Connected to Panel Server

Modbus SL hub can be connected to the Panel Server via the terminal block connector of the Modbus SL hub as shown in the following architecture. In this architecture, only the Modbus communication network uses the terminal block connector.

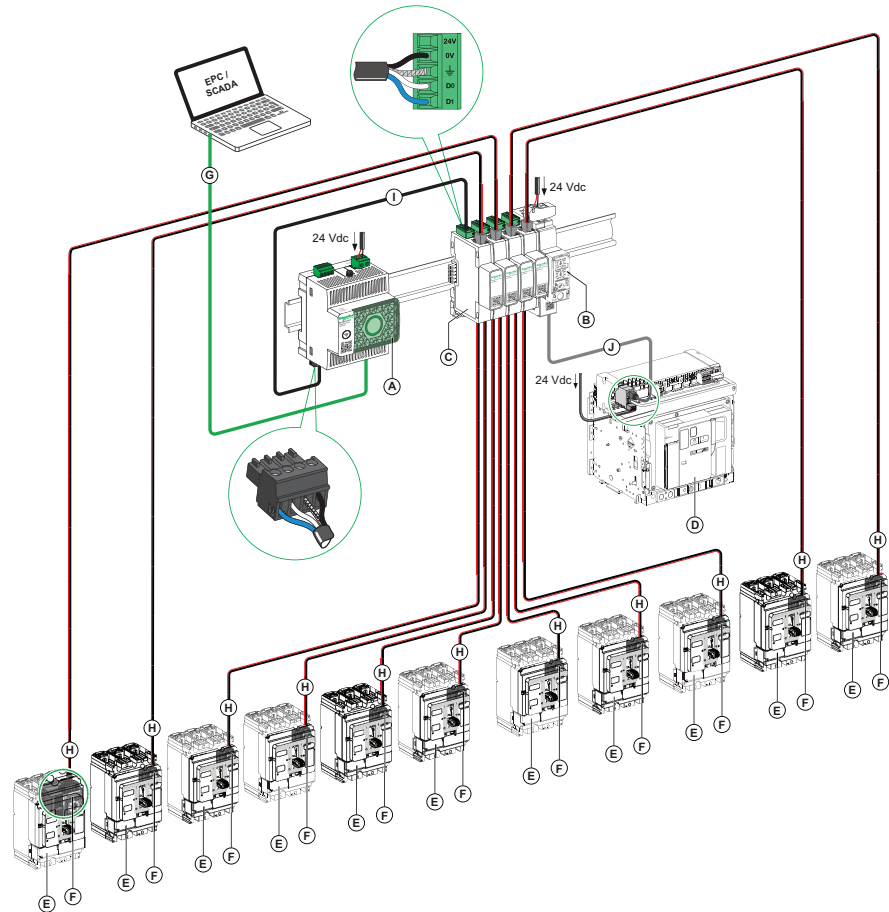

- A. Panel Server
- B. IFM interface
- C. Modbus SL hub
- D. Drawout MasterPacT MTZ1/MTZ2/MTZ3
- E. ComPacT NSX / PowerPacT H-, J-, and L-Frame
- F. BSCM Modbus SL/ULP module
- G. Ethernet cable
- H. BSCM Modbus SL cord
 - I. Modbus cord
 - J. ULP cord

Modbus SL Connection Rules

Introduction

- The Modbus client can be installed either:
- In the same electrical equipment as the IFM interfaces or Modbus SL hubs or in a separate section of electrical equipment from the IFM interfaces or Modbus SL hubs where the two sections of equipment are bolted together.
 - In a separate section of the electrical equipment from the IFM interfaces or Modbus SL hubs where the two sections of equipment are not bolted together.

Connection of IFM Interfaces to Modbus-SL Client

- Connection to the Modbus-SL client depends on the number of IFM interfaces:
- To connect a single IFM interface, use the RJ45 Modbus T-junction, page 83.
 - To connect several stacked IFM interfaces, use the RJ45 Modbus cable, page 83.
 - To interconnect several isolated IFM interfaces, page 116, use one of the following:
 - The Modbus splitter block LU9GC3
 - The RJ45 Modbus T-junction

Connection of Modbus SL Hub to Modbus-SL Client

NOTICE
HAZARD OF EQUIPMENT DAMAGE
It is forbidden to connect the RJ45 plug of the Modbus SL cord (LV43422•) to any device other than the Modbus SL hub.
Failure to follow these instructions can result in equipment damage.

- Connection to the Modbus-SL client depends on the number of Modbus SL hubs.
- To connect a single Modbus SL hub, connect it via the stacking accessory and with an IFE server or via a terminal block connector with a Panel Server gateway.
- To connect several stacked Modbus SL hubs, use the RJ45 Modbus cable, page 83.
- NOTE:** The derivations must be short and never more than 20 m on the Modbus Serial Line communication network (RS 485). If a Modbus SL hub is used with n derivations, each one must respect a maximum length of 40 m divided by n.

Modbus-SL Network Contained in Electrical Equipment

- The Modbus-SL network is contained within the electrical equipment when both conditions below are fulfilled:
- The Modbus-SL network between the IFM interfaces and Modbus SL hubs is connected to the Modbus client (a PLC, for example) or to an IFE Ethernet switchboard server integrated in the electrical equipment.

- The Modbus-SL network between the IFM interfaces and Modbus SL hubs does not exit the electrical equipment to extend to another electrical equipment.

The Modbus client or the IFE server can be connected directly to the Modbus-SL network of the IFM interfaces and Modbus SL hubs and in the electrical equipment.

Examples of a Modbus-SL network contained within the electrical equipment are provided:

- Wiring diagram including IFM interfaces and Modbus SL hubs grouped in islands and Modbus client installed in the electrical equipment, page 90
- Wiring diagram including IFM interfaces and Modbus SL hubs in daisy-chain or star connection and Modbus client installed in the electrical equipment, page 93

Modbus-SL Network Not Contained in Electrical Equipment

The Modbus-SL network is not contained within the electrical equipment when either:

- The Modbus-SL network between the Modbus SL hub interfaces is connected to a Modbus client outside the electrical equipment.
- The Modbus-SL network between the Modbus SL hubs exits the electrical equipment to extend to another electrical equipment or another section of electrical equipment where the two sections of equipment are not bolted together.

Connection rules are detailed in Modbus connection linking several pieces of electrical equipment.

Examples are provided for wiring diagrams, page 91, including IFM interfaces and Modbus SL hub grouped in islands and Modbus client installed in a separate section of electrical equipment from the IFM interfaces and Modbus SL hub where the two sections of equipment are not bolted together:

- With 0 V of power supply floating
- With 0 V of power supply connected to local ground

Modbus Connection Linking Several Pieces of Electrical Equipment


The rules below must be followed when the Modbus client is installed in a separate section of electrical equipment from the Modbus SL hub where the two sections of equipment are not bolted together:

- Each Modbus segment installed in two sections of electrical equipment not bolted together includes a polarization at one point, and a Modbus line termination at each end:
 - The line polarization and a termination are integrated in the Modbus client.
 - A Modbus line termination must be connected at the other end (on the last IFM interface or other Modbus server).
- Maximum length (L_{max}) of the Modbus trunk cable (excluding tap links):
 - $L_{max} = 500$ m (1,640 ft) at 38,400 Baud
 - $L_{max} = 1,000$ m (3,281 ft) at 9,600 Baud

- A grounding terminal block must be connected to the DIN rail (for example, Linergy part number NSYTRR24DPE or Phoenix Contact part number 3211809). The following components are connected to the ground terminal block:
 - A shield coupling capacitor (for example, Kemet part number C981U103MZVDA7317).
 - A shield resistor (used to bleed off shield capacitor) with the same operating voltage rating as the shield coupling capacitor.
- The rules for power supply shield connection must be followed, page 63.

The following figure shows a Modbus link connecting three pieces of electrical equipment **S1**, **S2**, and **S3**:

- **S1** and **S2** are bolted together.
- **S3** is not bolted to **S1** and **S2**.

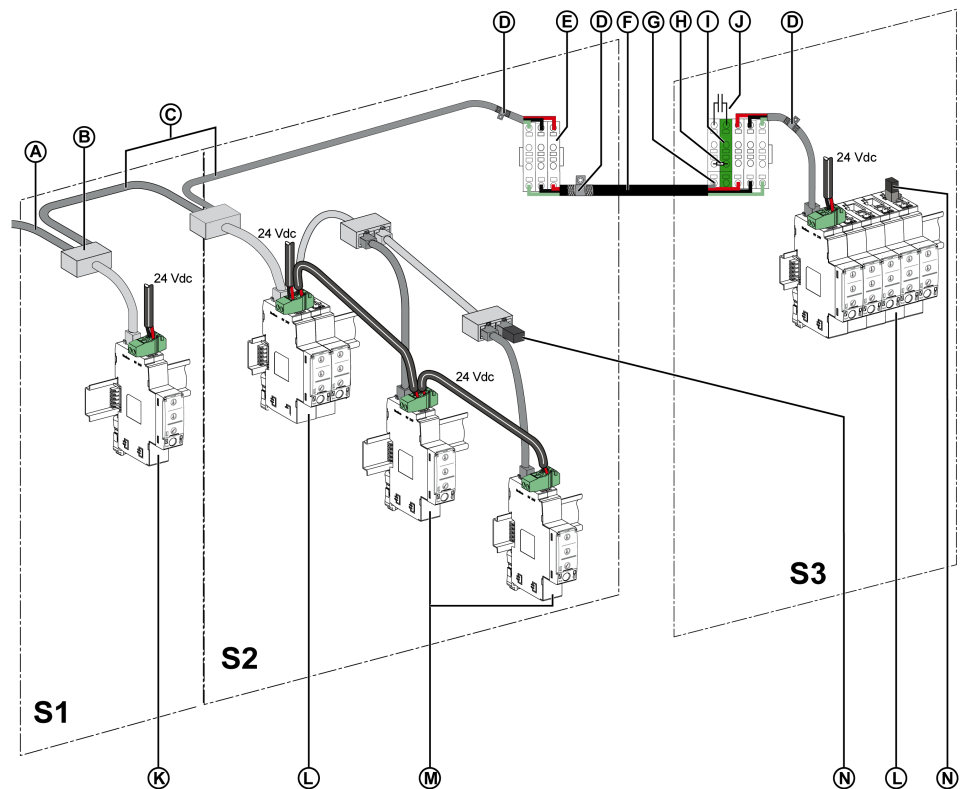

- A Modbus cable coming from Modbus client
- B RJ45 Modbus T-junction
- C RJ45 Modbus cable
- D Grounding clamp
- E Shunt terminal block
- F Modbus cable with drain wire and braided shield
- G Drain wire of Modbus cable
- H Shield resistor (used to bleed off shield capacitor)
- I Grounding terminal block connected to DIN rail (for example, Linergy part number NSYTRR24DPE or Phoenix Contact part number 3211809)
- J Shield coupling capacitor (for example, Kemet part number C981U103MZVDA7317)
- K Single IFM interface
- L IFM interfaces grouped in islands with the stacking accessory
- M IFM interfaces daisy-chained with the Modbus cable
- N Modbus line termination

Modbus-SL Network Including IFM Interfaces with Part Number LV434000, TRV00210, and Modbus SL Hub

IFM interfaces with part number LV434000 or TRV00210 can be installed on the same Modbus-SL network.

Modbus SL hub can be connected or stacked together with IFM interfaces with part number TRV00210 or LV434000.

Modbus SL Wiring Diagram Examples


The following wiring diagram examples include:

- Example 1: IFM interfaces or Modbus SL hubs grouped in islands and Modbus client in the electrical equipment
- Example 2: IFM interfaces or Modbus SL hubs grouped in islands and Modbus client in a separate section of electrical equipment
- Example 3: IFM interfaces in daisy-chain or star connection
- Example 4: two sets of Modbus SL hubs stacked connected via a terminal block

Example 1: Modbus-SL Network with Stacked Modules Contained in Electrical Equipment

The following wiring diagram is an example. It shows the connections for the Modbus cable and the 24 Vdc power supply:

- The IFM interfaces and the Modbus SL hubs with part number LV434000 and TRV00210 are grouped in islands via stacking accessories.
- The Modbus client is installed in the same electrical equipment as the IFM interfaces and Modbus SL hubs.

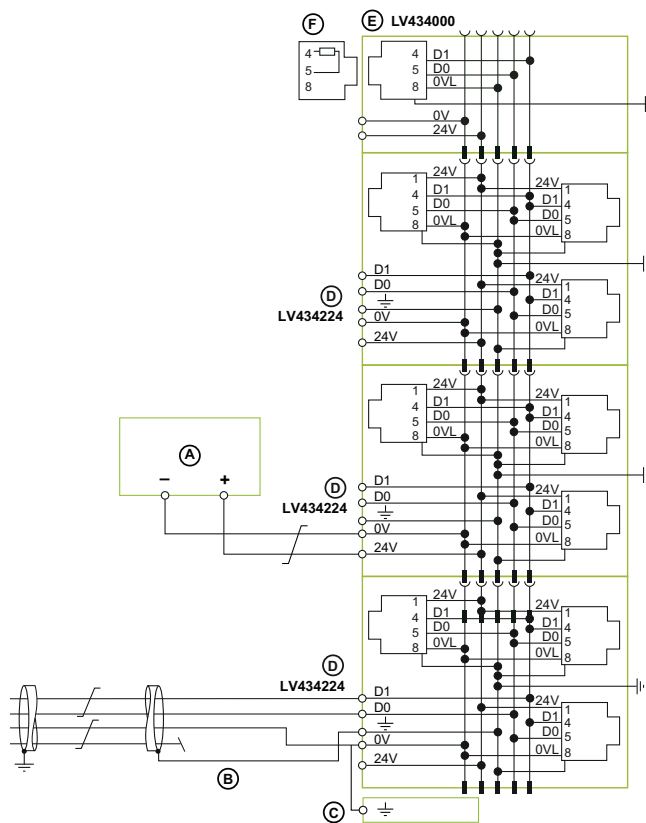

- A 24 Vdc power supply
- B Modbus cable coming from Modbus client
- C Functional ground terminal block
- D Modbus SL hub
- E IFM interface
- F Modbus line termination

Example 2: Modbus-SL Network with Stacked Modules Not Contained in Electrical Equipment


The following wiring diagrams are examples. They show the connections for the Modbus cable and the 24 Vdc power supply:

- The IFM interfaces with part number LV434000 or Modbus SL hubs are grouped in islands via stacking accessories.
- The Modbus client is installed in a separate section of electrical equipment from the IFM interfaces and Modbus SL hubs where the two sections of electrical equipment are not bolted together.


Example 1: 0 V of power supply is floating.

Section 1 of electrical equipment

Section 2 of electrical equipment

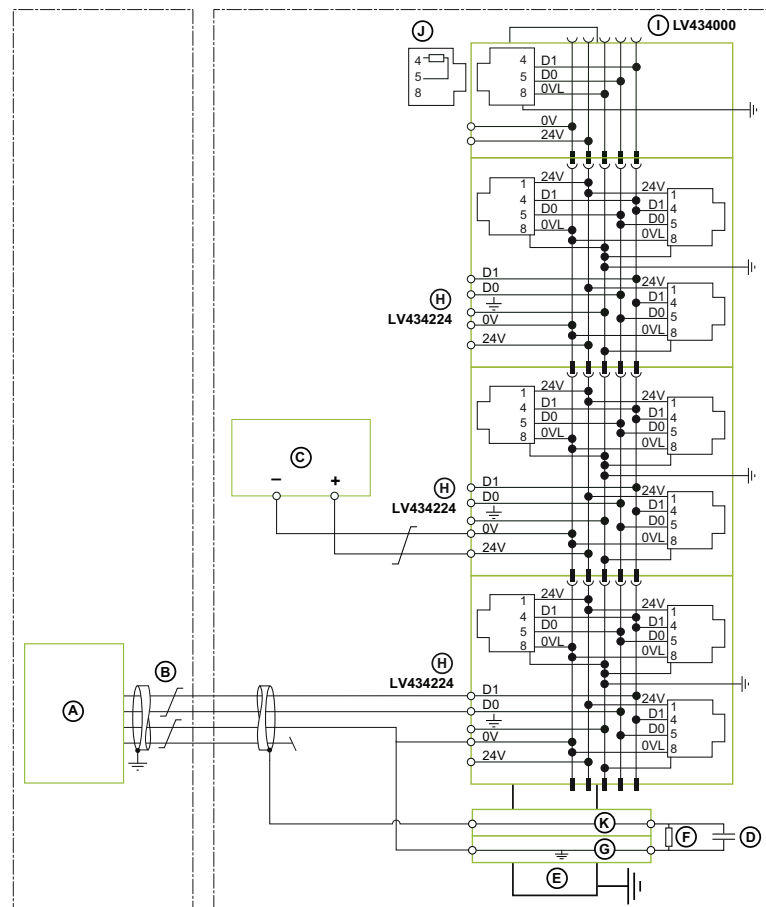

- A** Modbus client installed in a separate section of electrical equipment from the Modbus SL hub or IFM interfaces where the two sections of equipment are not bolted together
- B** Shielded Modbus cable coming from Modbus client
- C** 24 Vdc power supply
- D** Shield coupling capacitor (for example, Kemet part number C981U103MZVDA7317)
- E** DIN rail
- F** Shield resistor (used to bleed off shield capacitor)
- G** Grounding terminal block connected to DIN rail (for example, Linergy part number NSYTRR24DPE or Phoenix Contact part number 3211809)
- H** Modbus SL hub
- I** IFM interface
- J** Modbus line termination
- K** Terminal block connected to DIN rail (for example, Linergy part number NSYTRV24D)

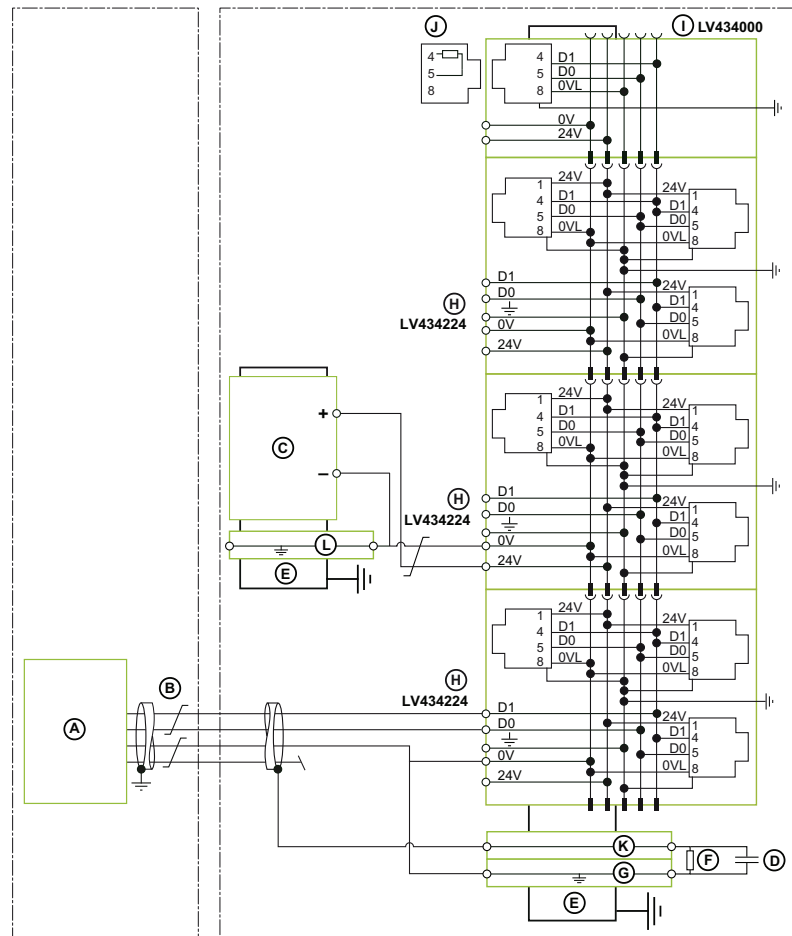
Example 2: 0 V of power supply is connected to local ground.**Section 1 of electrical equipment****Section 2 of electrical equipment**

- A** Modbus client installed in a separate section of electrical equipment from the Modbus SL hub or IFM interfaces where the two sections of equipment are not bolted together
- B** Shielded Modbus cable coming from Modbus client
- C** 24 Vdc power supply
- D** Shield coupling capacitor (for example, Kemet part number C981U103MZVDAA7317)
- E** DIN rail
- F** Shield resistor (used to bleed off shield capacitor)
- G** Grounding terminal block connected to DIN rail (for example, Linergy part number NSYTRR24DPE or Phoenix Contact part number 3211809)
- H** Modbus SL hub
- I** IFM interface
- J** Modbus line termination
- K** Terminal block connected to DIN rail (for example, Linergy part number NSYTRV24D)
- L** Grounding terminal block connected to DIN rail (for example, Linergy part number NSYTRV22PE)

Example 3: Modbus-SL Network with Modules in Daisy-Chain or Star Connection

The following wiring diagram is an example. It shows the connections for the Modbus cable and the 24 Vdc power supply:

- The IFM interfaces with part number LV434000 and Modbus SL hubs are connected in a daisy-chain or in a star connection.
- The Modbus client is installed in the same electrical equipment as the Modbus SL hub or IFM interfaces.

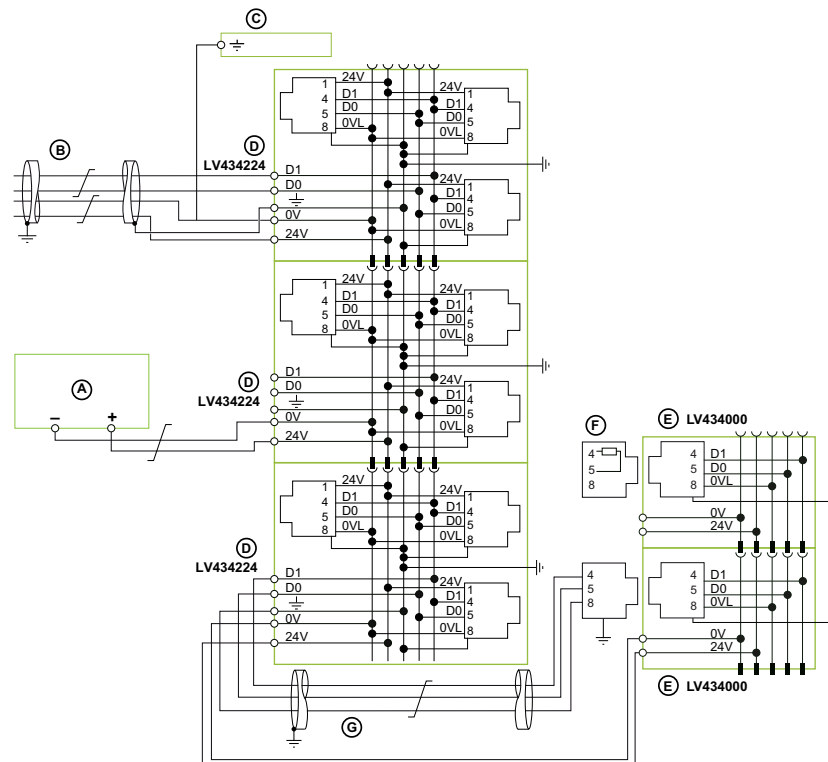


- A 24 Vdc power supply
- B Modbus cable coming from Modbus client
- C Functional ground terminal block
- D Modbus SL hub
- E IFM interface
- F Modbus line termination
- G Shielded, Category 5e or Category 6 Modbus cable

For information about cable shield management, refer to the rules for Modbus connection linking several pieces of electrical equipment, page 87.

Example 4: Modbus-SL Network with Modbus SL Hubs Connected Via a Terminal Block

The following wiring diagram is an example. It shows the connections for the Modbus cable and the 24 Vdc power supply:

- The Modbus cable has free wires.
- The Modbus SL hubs are connected in a daisy-chain or in a star connection.
- The Modbus client is installed in the same electrical equipment as the Modbus SL hub.

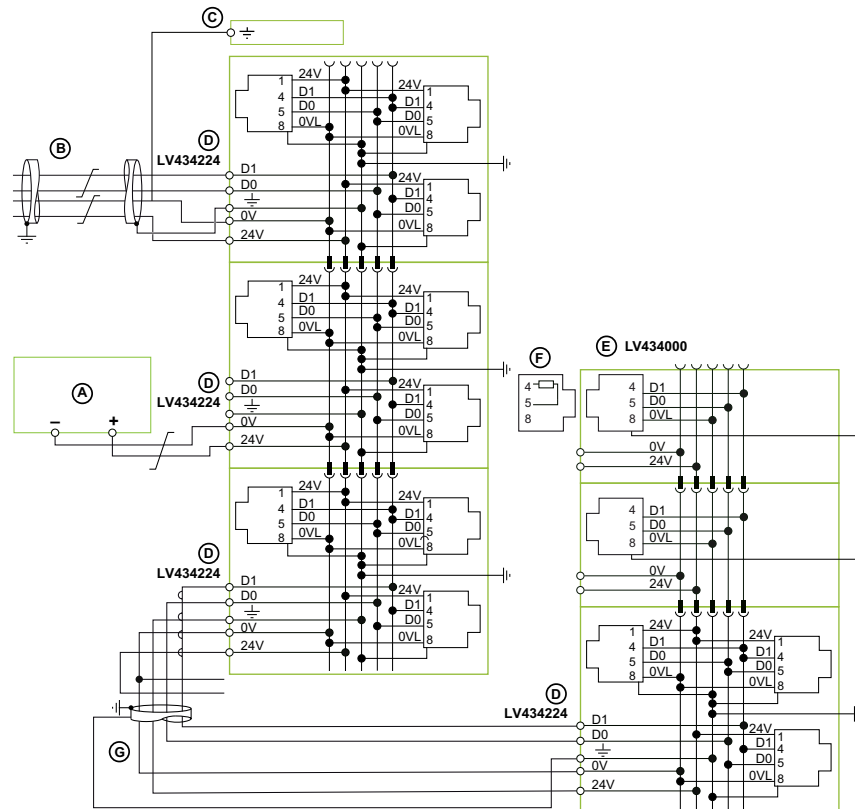

- A 24 Vdc power supply
- B Modbus cable coming from Modbus client
- C Functional ground terminal block
- D Modbus SL hub
- E Modbus line termination
- F Shielded Modbus cable with free wires connecting one set of Modbus SL hub to another set

Wiring rules:

- **0 VL** and **0V** of energized LV434000 IFM interface must follow auxiliary power supply rules detailed in ULP system power supply, page 63.
- Only one 0V shield connection of **SHLD** and **GND** terminals of LV434211 adapter must be connected to the Modbus client.

For information about cable shield management, refer to the rules for Modbus connection linking several pieces of electrical equipment, page 87.

ULP System Architectures

What's in This Chapter

Presentation of ULP System Architectures	96
Standalone Architecture.....	98
Centralized Modbus Architecture	100
Daisy-Chained Distributed Modbus Architecture	108
Tap-Linked Distributed Modbus Architecture.....	115
Ethernet Architectures	126

Presentation of ULP System Architectures

Introduction

The ULP system architecture is defined by the way in which the Ethernet or Modbus-SL network interconnects the intelligent modular units (IMUs).

The various possible ULP system connections define five architectures.

- [Standalone architecture, page 98](#): the IMUs are not communicating to communication interfaces (IFE, EIFE, IFM interfaces, or BSCM Modbus SL/ULP module with Modbus SL hub)
- [Centralized Modbus architecture, page 100](#): the IMUs are communicating to communication interfaces (IFE servers, IFM interfaces and BSCM Modbus SL/ULP module with Modbus SL hub). The IFE servers and IFM interfaces are grouped in islands, mounted side-by-side on a DIN rail and interconnected by the stacking accessory.
- [Distributed Modbus architecture](#): the IMUs are communicating to IFM interfaces and BSCM Modbus SL/ULP module with Modbus SL hub. The IFM interfaces are distributed as close as possible to the ULP modules in the IMU and linked by the Modbus cable.

There are two possible configurations for the distributed Modbus architecture:

- [Daisy-chained distributed Modbus architecture, page 108](#)
- [Tap-linked distributed Modbus architecture, page 115](#)

Both these distributed architectures can be combined to form a mixed architecture.

- [Daisy-chained Ethernet architecture, page 128](#): the IMUs are communicating to IFE or EIFE interfaces. The IFE and EIFE interfaces are distributed as close as possible to the ULP modules in the IMU and linked by the Ethernet cable.
- [Star Ethernet architecture, page 126](#): the IMUs are communicating to IFE or EIFE interfaces. The IFE or EIFE interfaces are distributed as close as possible to the ULP modules in the IMU and linked by the Ethernet cable to the switch.

The distributed and centralized architectures can be combined to adapt to the electrical installation and its restrictions.

The ULP system architectures follow rules for building low-voltage switchboards in compliance with IEC 61439-1 and IEC 61439-2 standards.

Choice of Architecture

The following table lists the advantages and disadvantages of ULP system architectures:

Architecture	Advantages	Disadvantages
Centralized Modbus	<ul style="list-style-type: none"> • Ease of wiring due to the stacking accessory. • Ease of maintenance due to the grouping of IFM interfaces and BSCM Modbus SL/ULP module with Modbus SL hub in the islands. • Option of connecting other Modbus devices through tap links, on the unused connectors of IFM interfaces and BSCM Modbus SL/ULP module with Modbus SL hub in the islands. • Minimized Modbus cable length. • Modbus SL hub or IFM interfaces could be stacked to an IFE server to get Modbus data through Ethernet. 	Need for a dedicated place in the cubicle where the IFM interfaces can be grouped.
Daisy-chained distributed Modbus	<ul style="list-style-type: none"> • No need for a dedicated place in the cubicle where the Modbus SL hub or IFM interfaces can be grouped. 	<ul style="list-style-type: none"> • Additional wiring needed for daisy-chaining the Modbus cable between the IFM interfaces. • Longer Modbus cable.

Architecture	Advantages	Disadvantages
		<ul style="list-style-type: none"> Space taken up in the cubicle by the upstream Modbus cables and downstream ULP cords.
Tap-linked distributed Modbus	<ul style="list-style-type: none"> No need for a dedicated place in the cubicle where the Modbus SL hub or IFM interfaces can be grouped. Ease of wiring by using a Modbus splitter block: up to eight IFM interfaces installed in several cubicles and connected to one Modbus splitter block. 	<ul style="list-style-type: none"> Additional wiring needed for daisy-chaining the Modbus cable between the IFM interfaces. In the case of an architecture with shunt terminal block, need for a shunt terminal block at the top of each cubicle.
Daisy-chained Ethernet	<ul style="list-style-type: none"> Ease of wiring by using only an Ethernet cable. Plug-and-play. No need for a dedicated place in the cubicle. 	<ul style="list-style-type: none"> Additional wiring needed for daisy-chaining the Ethernet cable between the IFE or EIFE interfaces. Long Ethernet cable. Space taken up in the cubicle by the upstream Ethernet cables and downstream ULP cords. Need two Ethernet ports (like on the IFE interface). Dependability in case of device detected failure.
Star Ethernet	<ul style="list-style-type: none"> Dependability in case of device detected failure. Ease of wiring by using only an Ethernet cable. Plug-and-play. No need for a dedicated place in the cubicle. Need only one Ethernet port. 	<ul style="list-style-type: none"> Long cables and space taken by Ethernet cables in the cubicle. Space taken up in the cubicle upstream by the Ethernet cables and downstream by the RJ45 plug/plug ULP cords.

Standalone Architecture


Introduction

When the intelligent modular units are not communicating to communication interfaces (IFE, EIFE, or IFM interfaces, or BSCM Modbus SL/ULP module with Modbus SL hub), the architecture is classified as standalone.



Standalone Architecture

The following figure shows an example of a standalone architecture with IMUs consisting of an FDM121 front display module for one circuit breaker or an IO input/output application module for one circuit breaker and a compatible circuit breaker equipped with a MicroLogic trip unit.

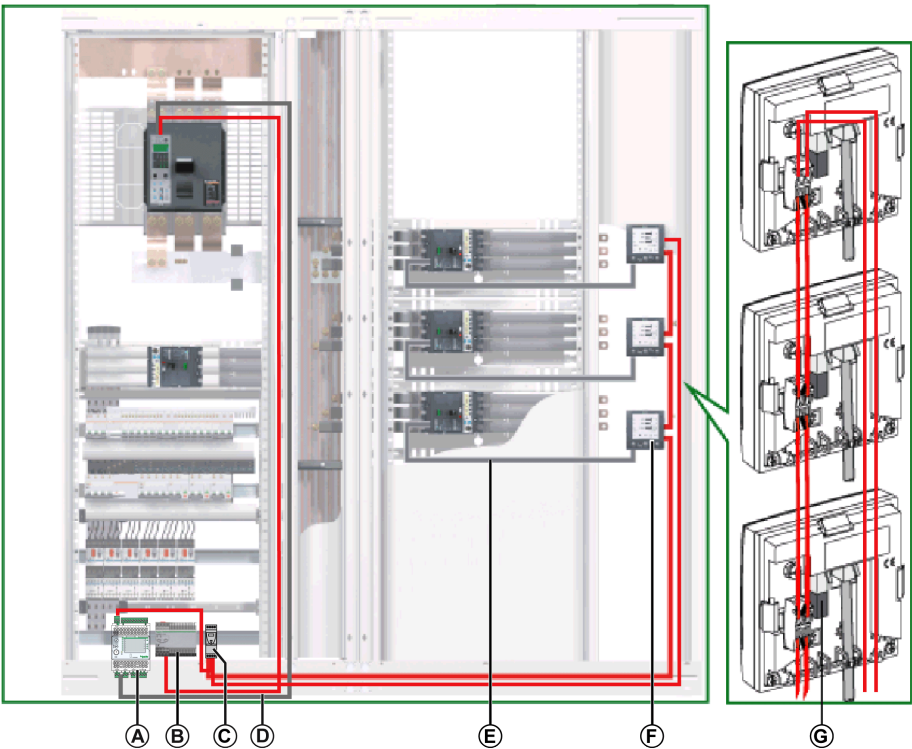The IMUs do not communicate to communication interfaces and do not therefore include an IFE or IFM interface. Power the IMUs by using an external power supply connected to the FDM121 display.



- A IO module
- B 24 Vdc AD power supply for MicroLogic trip units in MasterPacT NT/NW, ComPacT NS, or PowerPacT P- and R-frame circuit breakers
- C 24 Vdc ABL8 power supply for ULP modules
- D Circuit breaker BCM ULP cord
- E NSX cord
- F FDM121 display
- G ULP line termination

Cable	Description
	ULP network
	24 Vdc power supply

For FDM121 display mounting options, refer to QGH80971 *Enerlin'X FDM121 - Front Display Module for One Circuit Breaker - Instruction Sheet*.

The 24 Vdc power supply is selected from the list of recommended 24 Vdc power supplies, page 66. The power supply rating must be selected according to IMU consumption.

Centralized Modbus Architecture


Introduction

In a centralized Modbus architecture, the intelligent modular units (IMUs) are communicating to communication interfaces (IFE servers or IFM interfaces). The IFE servers and IFM interfaces are grouped in islands, mounted side-by-side on a DIN rail, and interconnected by the stacking accessory, page 148.

Centralized Modbus Architecture

The following figure shows an example of a centralized Modbus architecture with three IMUs:



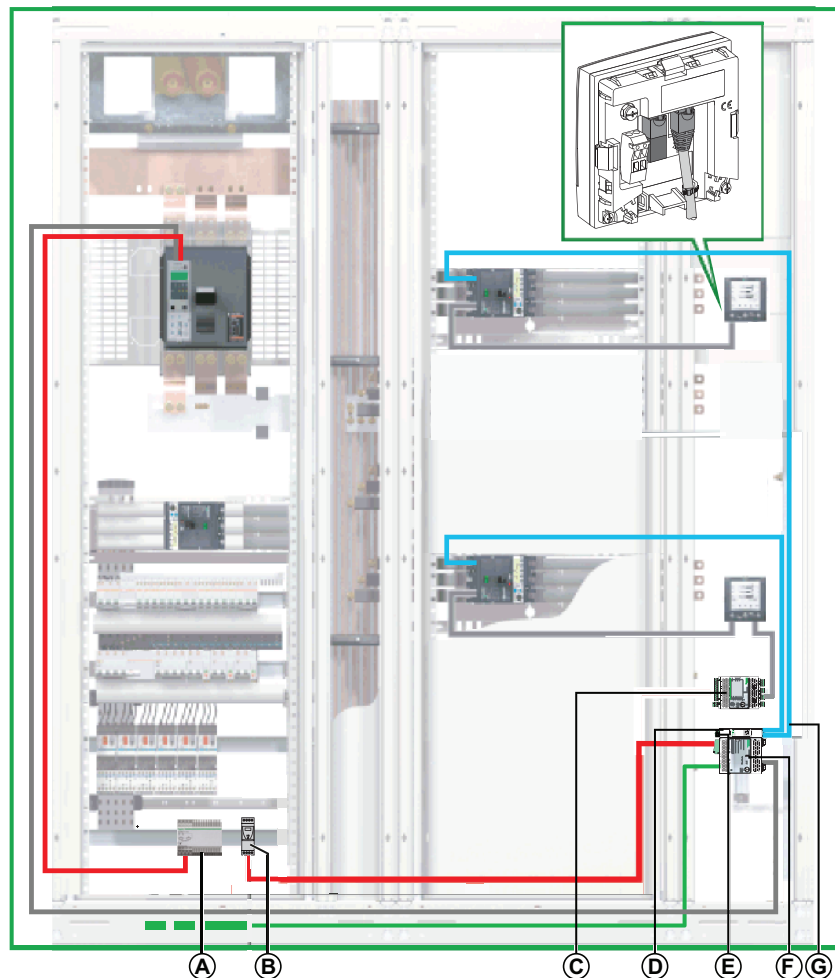

- An IMU consisting of a ComPacT NS or PowerPacT P- and R-frame circuit breaker, and an IFE Ethernet switchboard server to get an Ethernet connection.
- An IMU consisting of a ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker, an IFM interface, and an FDM121 display.
- An IMU consisting of a ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker, an IO module, an IFM interface, and an FDM121 display.



- A** 24 Vdc AD power supply for MicroLogic trip units in MasterPacT NT/NW, ComPacT NS, or PowerPacT P- and R-frame circuit breakers
- B** 24 Vdc ABL8 power supply for ULP modules
- C** IO module
- D** Modbus SL hub
- E** Modbus line termination


F IFE server

G BSCM Modbus SL cord

Cable	Description
	Ethernet network
	ULP network
	24 Vdc power supply
	Modbus and 24 Vdc line

Modbus Cable Connection

If there is no IFE server in the centralized architecture, connect the Modbus cable as shown in the following figure.

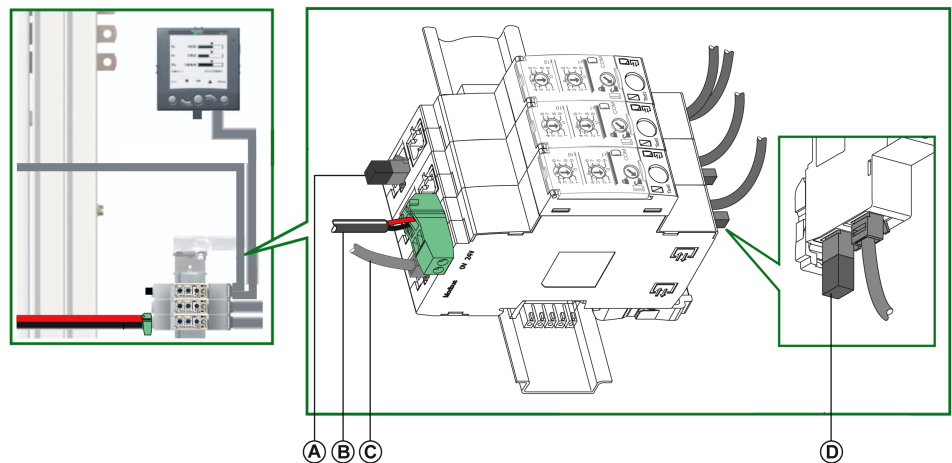




A Modbus line termination

B 24 Vdc power supply

C Modbus cable coming from Modbus client


D ULP line termination

Cable	Description
	Modbus network
	ULP network
	24 Vdc power supply

The Modbus cable coming from the Modbus client is connected to an IFM interface. It ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail).

Wiring Diagram

The following wiring diagram shows the connections for the Modbus cable and the 24 Vdc power supply:

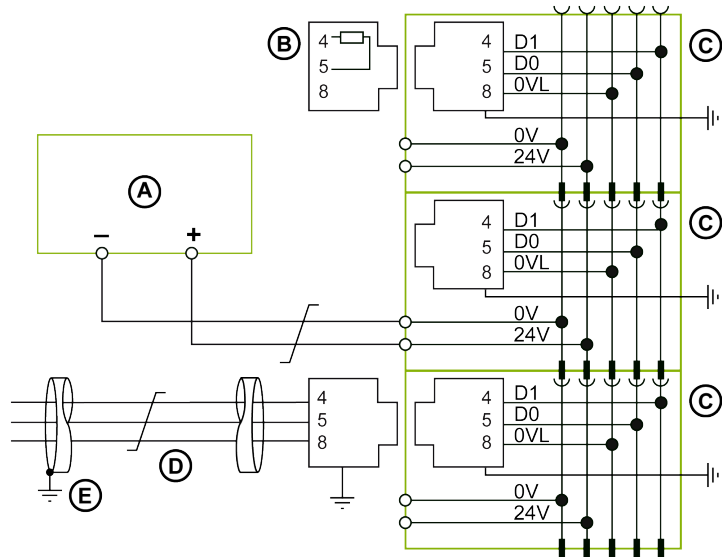





- A 24 Vdc power supply
- B Modbus line termination
- C IFM interface
- D Modbus cable coming from Modbus client
- E Ground connection at end of Modbus cable when the Modbus client is installed in the same electrical equipment as the IFM interfaces to which it is connected

For information about cable shield management, refer to the rules for Modbus connection linking several pieces of electrical equipment.

IFE Ethernet Switchboard Server Power Supply

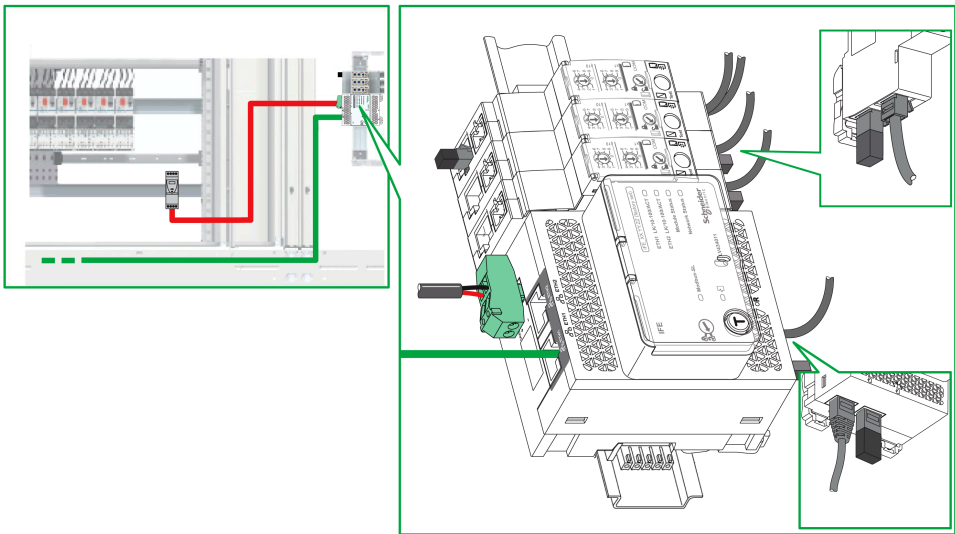
When the IFE server is stacked to the IFM interfaces, the 24 Vdc power supply of the IFE server and the serial line Modbus communication are distributed to the IFM interfaces.



Cable	Description
	Ethernet network
	ULP network
	24 Vdc power supply


Wiring Diagram for IFE Ethernet Switchboard Server

The following wiring diagram shows the connections for the IFE server and the 24 Vdc power supply in detail:

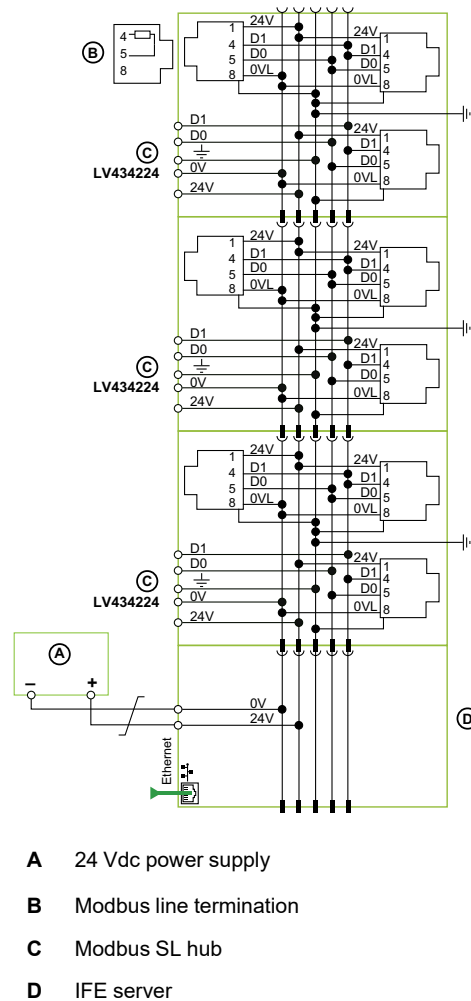



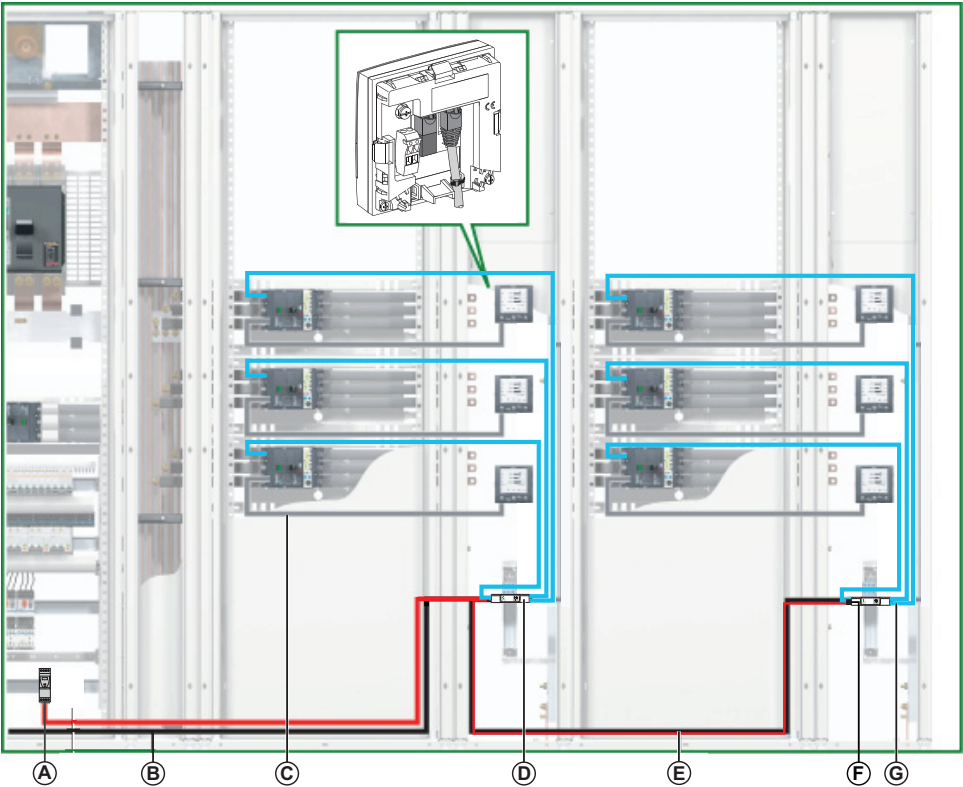

Case of a Single Power Supply Segment

The following figure shows a centralized Modbus architecture with two cubicles and a single power supply segment:



- A 24 Vdc ABL8 power supply for ULP modules
- B Modbus cable coming from Modbus client
- C NSX cord
- D Modbus SL hub
- E Modbus cable running to second cubicle
- F Modbus line termination
- G BSCM Modbus SL cord


Cable	Description
	Modbus network
	ULP network
	24 Vdc power supply
	Modbus and 24 Vdc line

Modbus Cable Connection with a Single Power Supply Segment

- The Modbus cable coming from the Modbus client is connected to an IFM interface or a Modbus SL hub. It ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail).
 - The Modbus cable running to the second cubicle can be connected to any IFM interface or Modbus SL hub in the group. It ensures continuity of the Modbus signal to the second cubicle and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail).
- The 24 Vdc power supply cable running to the second cubicle can be connected to any IFM interface or Modbus SL hub in the group. It ensures continuity of the 24 Vdc power supply to the second cubicle.

Wiring Diagram with a Single Power Supply Segment

The following wiring diagram shows the connections for the Modbus cables and the 24 Vdc power supply in the case of a single power supply segment:

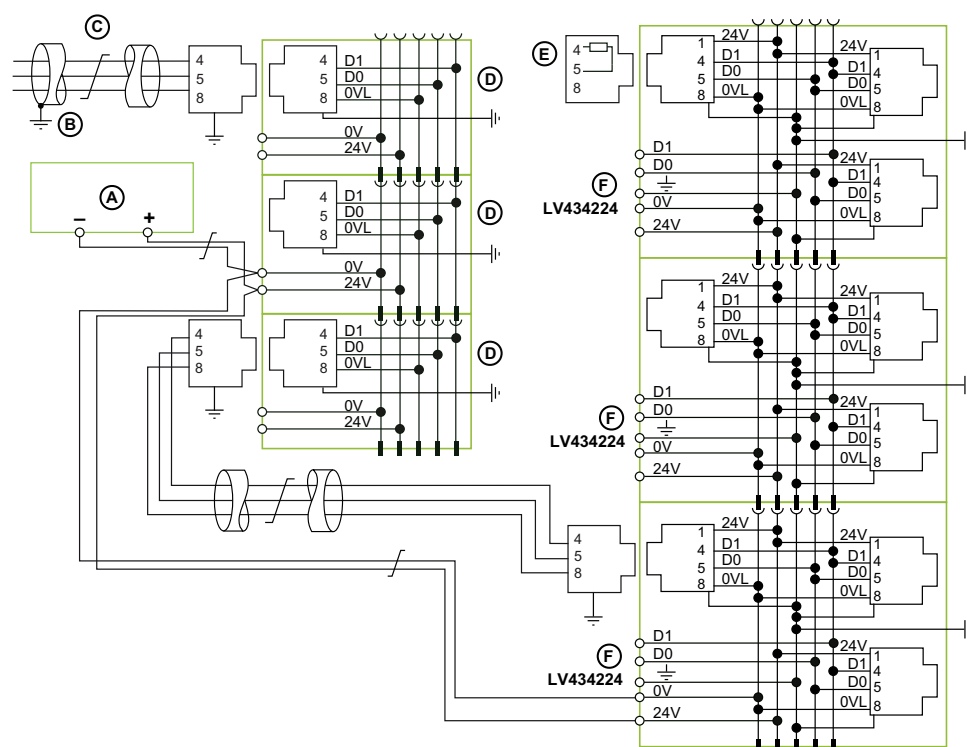


- A 24 Vdc power supply
- B Ground connection at end of Modbus cable when the Modbus client is installed in the same electrical equipment as the IFM interfaces to which it is connected
- C Modbus cable coming from Modbus client
- D IFM interface
- E Modbus line termination
- F Modbus SL hub

For more information, refer to [Modbus connection linking several pieces of electrical equipment](#).




Case of Several Power Supply Segments

When more than one 24 Vdc power supply is needed (refer to [segmented power supply](#), page 63), then several power supply segments are used along the Modbus cable.

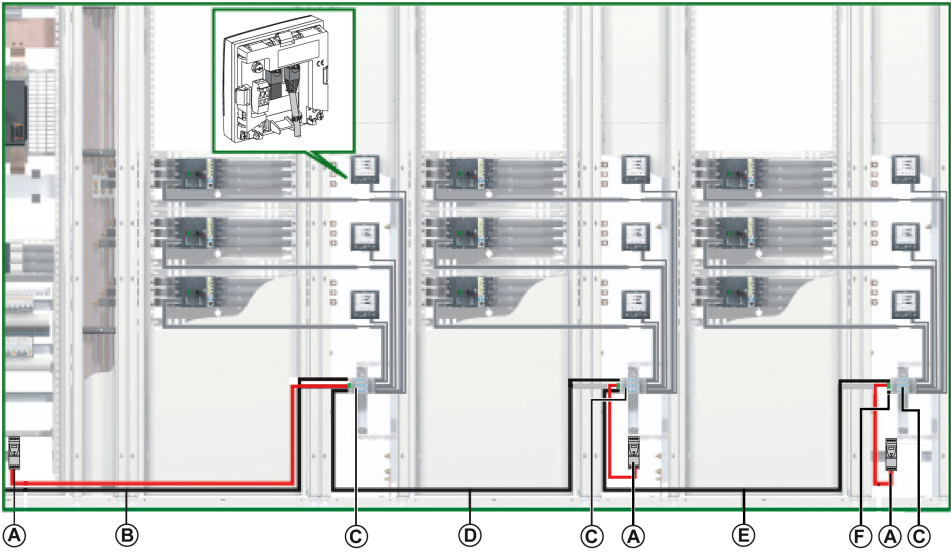The following figure shows a centralized Modbus architecture with three power supply segments:



- A 24 Vdc ABL8 power supply for ULP modules
- B Modbus cable coming from Modbus client
- C IFM interfaces grouped with stacking accessories
- D Modbus cable running to second cubicle
- E Modbus cable running to third cubicle
- F Modbus line termination

Cable	Description
	Modbus network
	ULP network
	24 Vdc power supply


NOTE: It is not recommended to connect multiple Modbus SL hubs with different 24 Vdc power supplies.

Connection of Modbus Cable with Several Power Supply Segments

- The Modbus cable coming from the Modbus client ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail).
- The Modbus cable running to the second cubicle ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail).
A separate 24 Vdc power supply is connected to the second cubicle.
- The Modbus cable running to the third cubicle ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail).
A separate 24 Vdc power supply is connected to the third cubicle.

Wiring Diagram with Several Power Supply Segments

The following wiring diagram shows the connections for the Modbus cables and the 24 Vdc power supply in the case of several power supply segments:

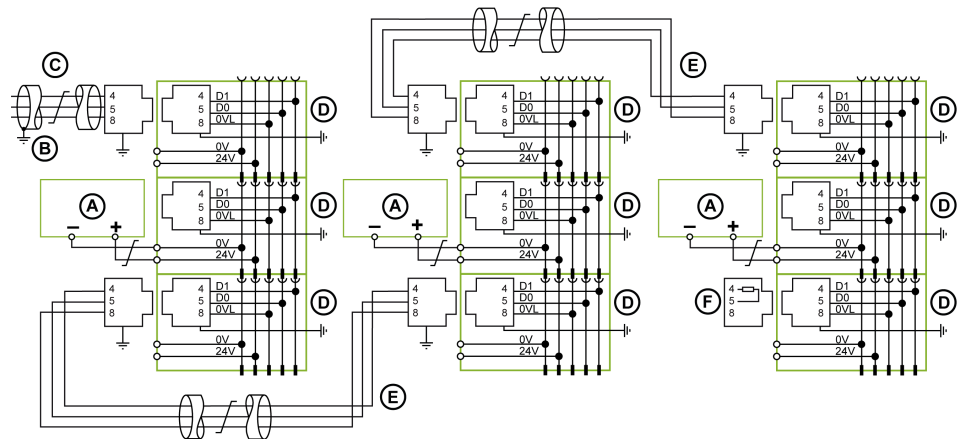


- A** 24 Vdc power supply
- B** Ground connection at end of Modbus cable when the Modbus client is installed in the same section of electrical equipment as the IFM interfaces to which it is connected
- C** Modbus cable coming from Modbus client
- D** IFM interface
- E** Modbus cable between pieces of electrical equipment
- F** Modbus line termination

For information about cable shield management, refer to the rules for Modbus connection linking several pieces of electrical equipment.




Daisy-Chained Distributed Modbus Architecture

The following figure shows an example of a daisy-chained distributed Modbus architecture with seven IMUs:

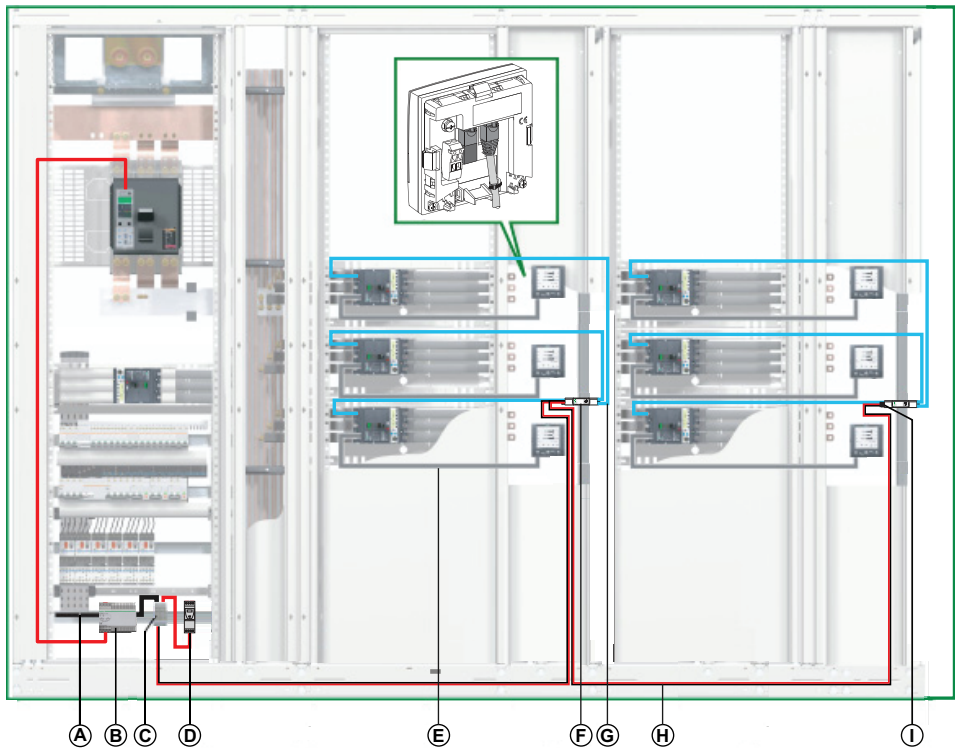- An IMU consisting of a ComPacT NS or PowerPacT P- and R-frame circuit breaker and an IFM interface.
- Three IMUs consisting of a ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker, a BSCM Modbus SL/ULP module, an NSX cord, an IFM interface, and an FDM121 display each.
- Three IMUs consisting of a ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker, a BSCM Modbus SL/ULP module, an NSX cord, an IFM interface, and an FDM121 display each, and one Modbus SL hub for the three IMUs.




- A Modbus cable coming from Modbus client
- B 24 Vdc AD power supply for MicroLogic trip units in MasterPacT NT/NW, ComPacT NS, or PowerPacT P- and R-frame circuit breakers
- C Shunt terminal block on the incoming supply
- D 24 Vdc ABL8 power supply for ULP modules
- E NSX cord
- F Modbus SL hub
- G BSCM Modbus SL cord
- H Modbus cable running to second cubicle
- I Modbus line termination

Cable	Description
	Modbus network
	ULP network
	24 Vdc power supply

For a distributed Modbus architecture, an RJ45 Modbus T-junction can be used to connect the upstream Modbus cable and the downstream Modbus cable.

NOTE: Recommendations for installing the Modbus T-junction:

- To route cables of the Modbus T-junction, take into account the cable bending radius.
- The Modbus T-junction must be installed on DIN rail using EMC clamps. Avoid excessive mechanical stress on the case when screwing the T-junction to the DIN rail.

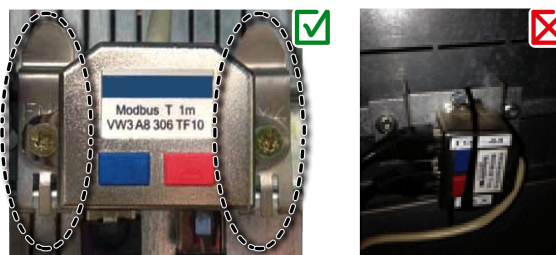


Shunt Terminal Block on the Incoming Supply

The shunt terminal block on the incoming supply can connect the Modbus cable and the power supply for all the IMUs.

The shunt terminal block consists of four 5-channel spring terminal blocks.

The following figure shows the shunt terminal block on the incoming supply in detail:

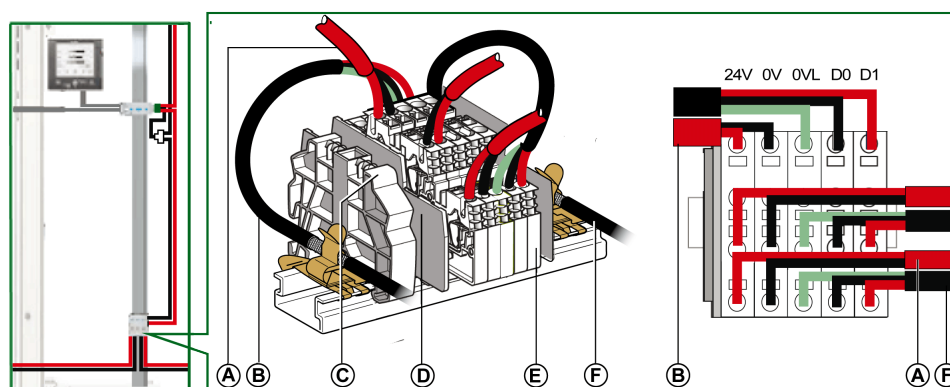

- A** 24 Vdc power supply
- B** Modbus cable coming from Modbus client
- C** Clip-on plastic end stop
- D** End plate
- E** Spring terminal block
- F** Modbus cable running to first cubicle

The following table lists the part numbers for the shunt terminal block:

Component	Nominal cross-section	Part number
5-channel spring terminal block	2.5 mm ² (14 AWG)	NSYTTR24D+NSYTRALV24 (gray)
End plate	—	AB1 RRNACE244
Clip-on plastic end stop	—	AB1 AB8R35


Modbus Cable Connection

- The Modbus cable coming from the Modbus client ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail).
- The Modbus cable running to the first cubicle ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail) for the cubicle.

The 24 Vdc power supply running to the first cubicle ensures continuity of the power supply.

- The unused channel on the shunt terminal block can be used to connect another Modbus server in the electrical equipment (a PM800 communicating power meter, for example).

Wiring Diagram of Shunt Terminal Block on the Incoming Supply

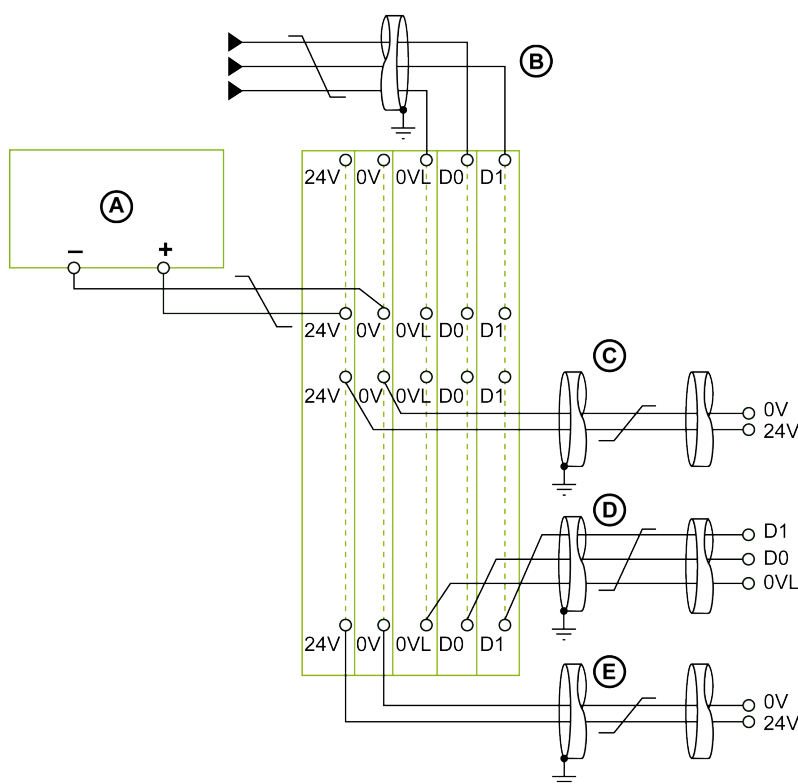


- A 24 Vdc power supply
- B Modbus cable coming from Modbus client
- C 24 Vdc power supply cable running from Modbus servers
- D Modbus cable running to Modbus servers
- E 24 Vdc power supply cable running to Modbus servers

NOTE: For information about shield connection, refer to the 24 Vdc power supply cable characteristics, page 69.

Modbus Cable Lengths for a Single Power Supply Segment

The following figure shows the Modbus cable lengths in detail for a daisy-chained distributed Modbus architecture with a single power supply segment:

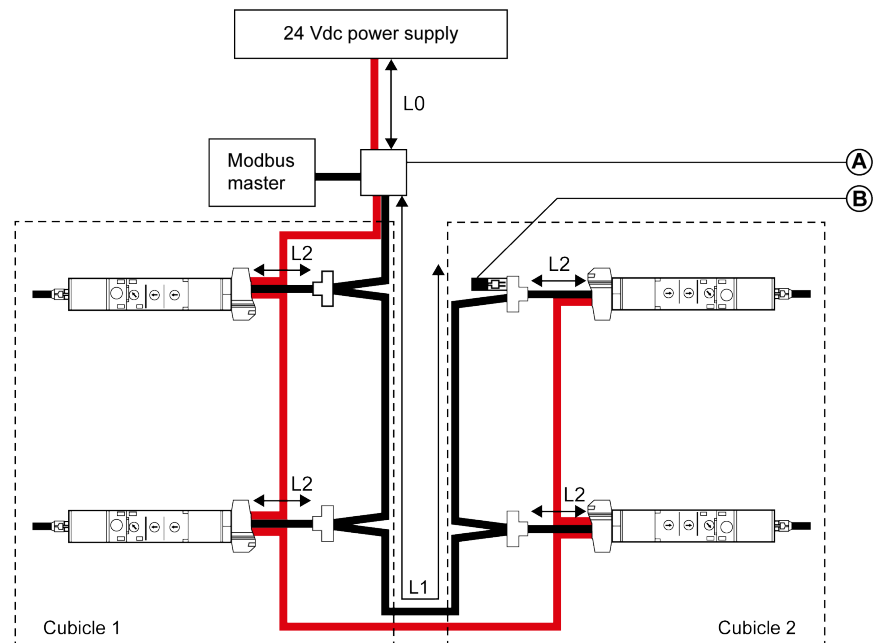


- A Shunt terminal block on the incoming supply
- B Modbus line termination

The total length of all L2s must be less than L1.




Case of Several Power Supply Segments

When more than one 24 Vdc power supply is needed (refer to [segmented power](#), page 63), then several power supply segments are used along the Modbus cable.

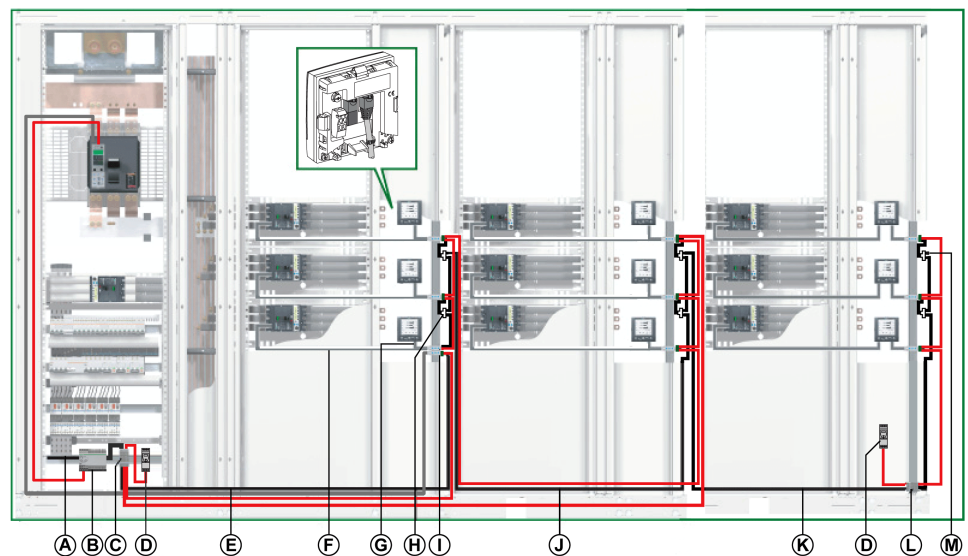The following figure shows a daisy-chained distributed Modbus architecture with two power supply segments:



- A** Modbus cable coming from Modbus client
- B** 24 Vdc AD power supply for MicroLogic trip units in MasterPacT NT/NW, ComPacT NS, or PowerPacT P- and R-frame circuit breakers
- C** Shunt terminal block on the incoming supply
- D** 24 Vdc ABL8 power supply for ULP modules
- E** Modbus cable running to first cubicle
- F** NSX cord
- G** RJ45 plug/plug ULP cord
- H** RJ45 Modbus T-junction
- I** IFM interface
- J** Modbus cable running to second cubicle
- K** Modbus cable running to third cubicle
- L** Shunt terminal block on the cubicle incomer
- M** Modbus line termination


Cable	Description
	Modbus network
	ULP network
	24 Vdc power supply

Shunt Terminal Block on the Incomer of the Third Cubicle

The shunt terminal block on the incomer of the third cubicle can be used to connect a new 24 Vdc power supply to power the IMUs in the third cubicle.

The shunt terminal block consists of four 5-channel spring terminal blocks.

The following figure shows the shunt terminal block on the incomer of the third cubicle in detail:

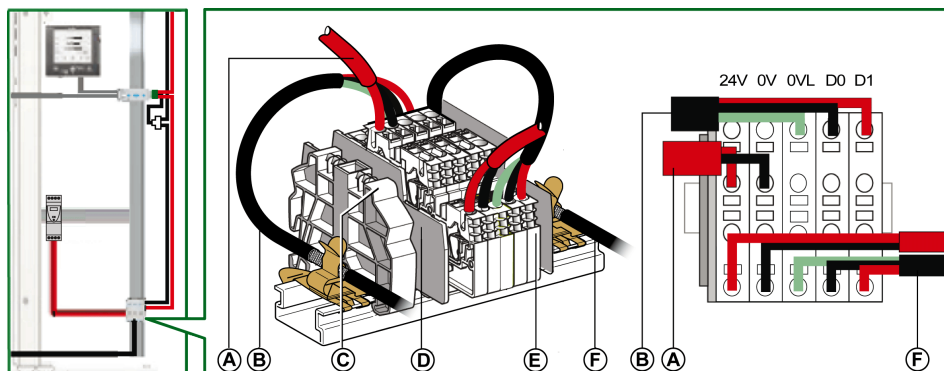

- A** 24 Vdc power supply
- B** Modbus cable coming from second cubicle
- C** Clip-on plastic end stop
- D** End plate
- E** Spring terminal block
- F** Modbus cable rising up the third cubicle

Modbus Cable Connection

- The Modbus cable from the Modbus client ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail).
- The Modbus cable running to the first cubicle ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail) for the cubicle.

The 24 Vdc power supply running to the first cubicle ensures continuity of the power supply for the cubicle.


- The Modbus cable running to the second cubicle ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail) for the second cubicle.

The 24 Vdc power supply running to the second cubicle ensures continuity of the power supply for the second cubicle.

- The Modbus cable running to the third cubicle ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail).

A separate 24 Vdc power supply is connected to the third cubicle.

Wiring Diagram of Shunt Terminal Block on the Incomer of the Third Cubicle

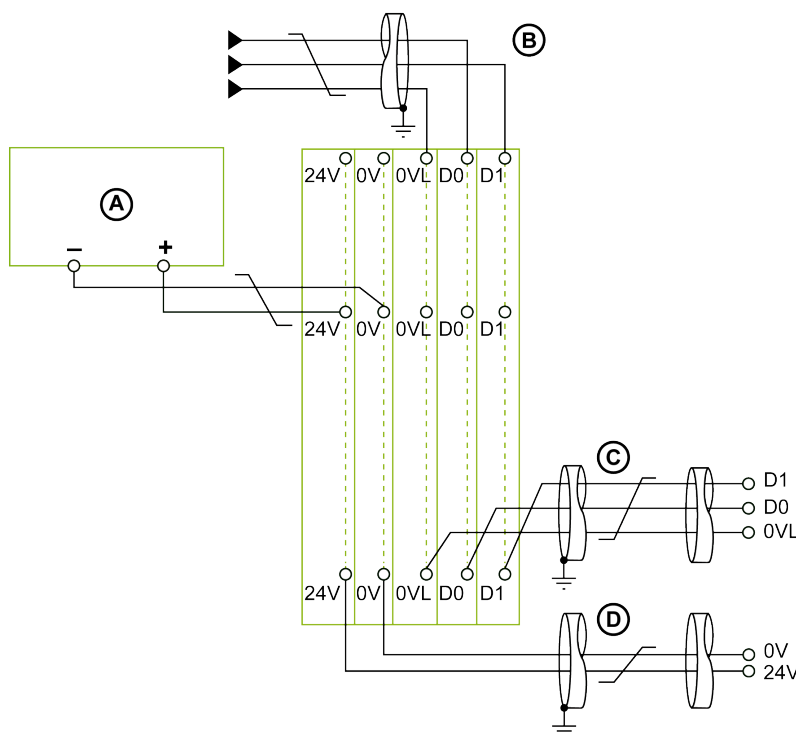


- A 24 Vdc power supply
- B Modbus cable coming from second cubicle
- C Modbus cable rising up the third cubicle
- D 24 Vdc power supply cable rising up the third cubicle

NOTE: For information about shield connection, refer to the 24 Vdc power supply cable characteristics, page 69.

Modbus Cable Lengths for Several Power Supply Segments

The following figure shows the Modbus cable lengths in detail for a daisy-chained distributed Modbus architecture with several power supply segments:

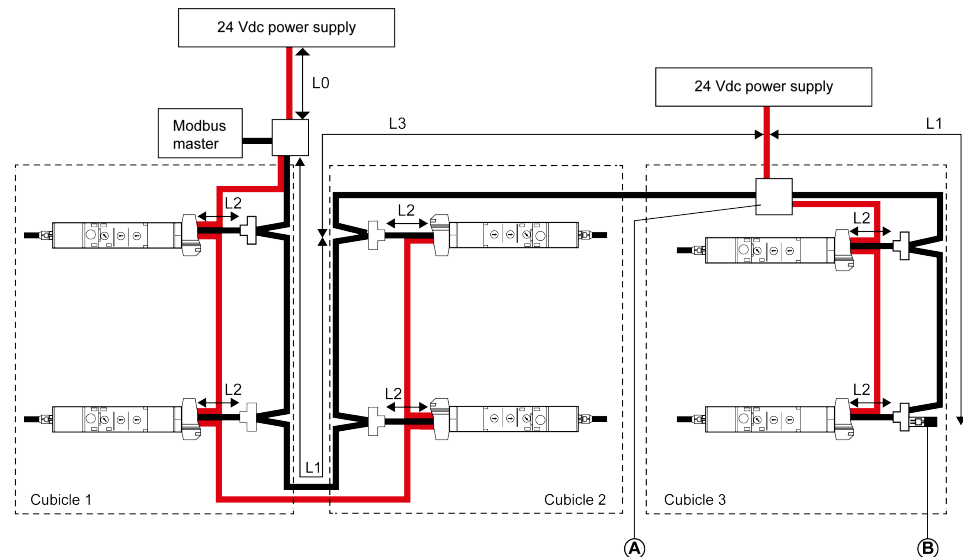

- A** Shunt terminal block on the cubicle incomer
- B** Modbus line termination

Modbus cable L3 ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail).

The total length of all L2s must be less than L1 in the corresponding installation.

Tap-Linked Distributed Modbus Architecture

Introduction


The tap-linked distributed Modbus architecture can be one of the following:

- A Modbuspitter block distributes Modbus cable-up to eight IFM interfaces.
- The main segment of the Modbus cable has a shunt terminal block on the incomer of each cubicle and the IFM interfaces are connected on a tap link cable.




Tap-Linked Distributed Modbus Architecture With Modbus Splitter Block

The following figure shows an example of a tap-linked distributed Modbus architecture with nine IMUs:

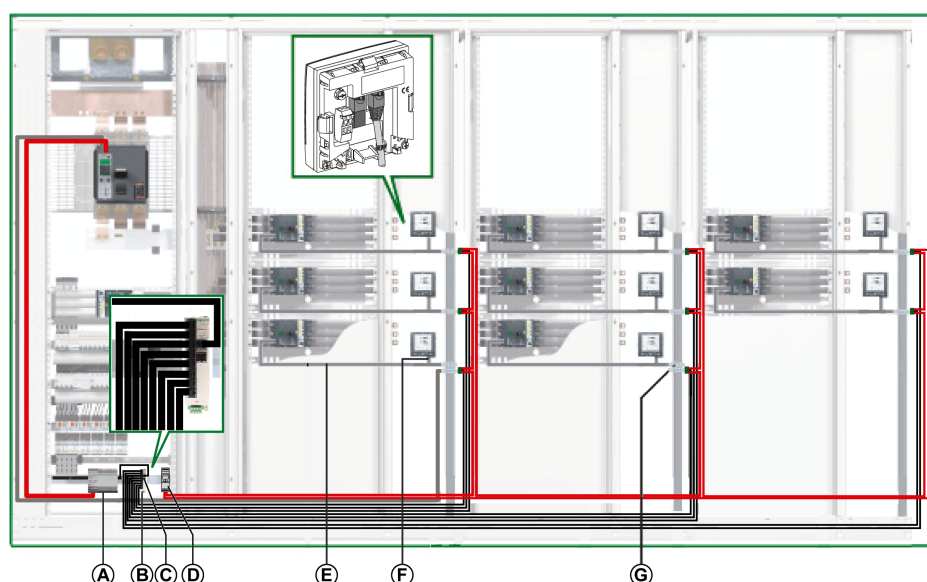- An IMU consisting of a ComPacT NS or PowerPacT P- and R-frame circuit breaker and an IFM interface.
- Eight IMUs consisting of a ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker, an IFM interface, and an FDM121 display each.




- A** 24 Vdc AD power supply for MicroLogic trip units in MasterPacT NT/NW, ComPacT NS, or PowerPacT P- and R-frame circuit breakers
- B** Modbus splitter box
- C** Modbus line termination
- D** 24 Vdc ABL8 power supply for ULP modules
- E** NSX cord
- F** RJ45 plug/plug ULP cord
- G** IFM interface

Cable	Description
	Modbus network
	ULP network
	24 Vdc power supply




Tap-Linked Distributed Modbus Architecture with Modbus T-junctions

The following figure shows an example of a tap-linked distributed Modbus architecture with ten IMUs:

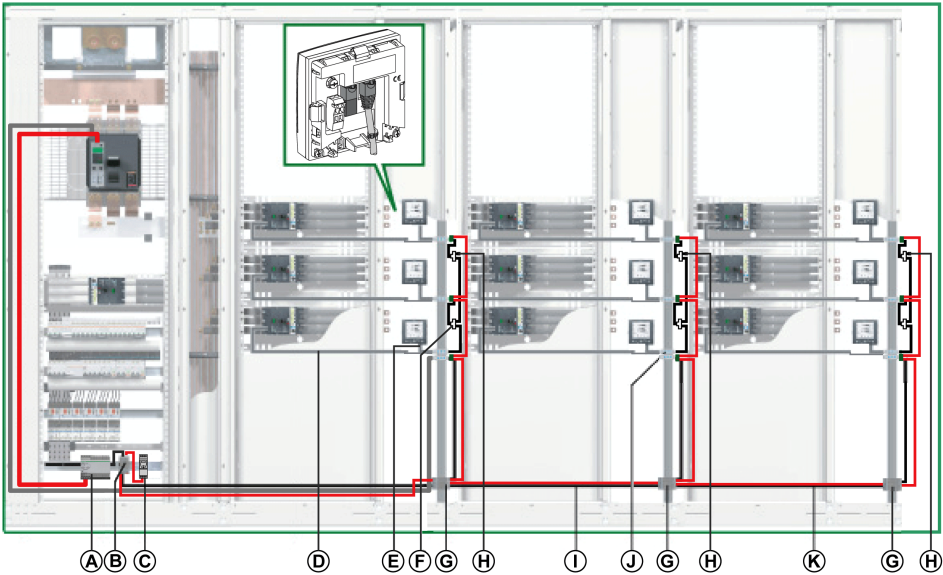- An IMU consisting of a ComPacT NS or PowerPacT P- and R-frame circuit breaker and an IFM interface.
- Nine IMUs consisting of a ComPacT NSX or PowerPacT H-, J-, and L-frame circuit breaker, an IFM interface, and an FDM121 display each.



- A 24 Vdc AD power supply for MicroLogic trip units in MasterPacT NT/NW, ComPacT NS, or PowerPacT P- and R-frame circuit breakers
- B Shunt terminal block on the incoming supply
- C 24 Vdc ABL8 power supply for ULP modules
- D NSX cord
- E RJ45 plug/plug ULP cord
- F RJ45 Modbus T-junction
- G Shunt terminal block on the cubicle incomer
- H Modbus line termination
- I Modbus cable running to the second cubicle
- J IFM interface
- K Modbus cable running to the third cubicle


Cable	Description
	Modbus network
	ULP network
	24 Vdc power supply

Shunt Terminal Block on the Incoming Supply

The shunt terminal block on the incoming supply can be used to connect the Modbus cable and the power supply for all the IMUs.

The shunt terminal block consists of four 4-channel spring terminal blocks and one functional ground terminal block offering grounding of the Modbus cable shielding by connection to the DIN rail.

The following figure shows the shunt terminal block on the incoming supply.

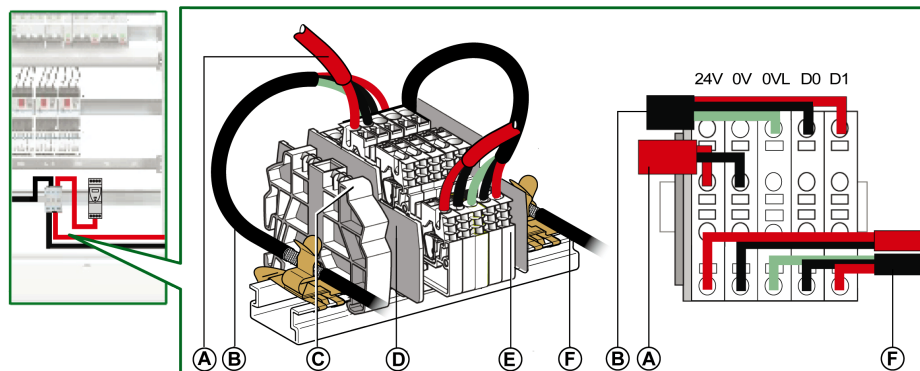

- A 24 Vdc power supply
- B Modbus cable coming from Modbus client
- C Clip-on plastic end stop
- D End plate
- E Spring terminal block
- F Modbus cable running to first cubicle

The following table lists the part numbers for the shunt terminal block:

Component	Nominal cross-section	Part number
4-channel spring terminal block	2.5 mm ² (14 AWG)	NSYTRR24D+NSYTRALV24 (gray)
End plate	—	AB1 RRNACE244
Clip-on plastic end stop	—	AB1 AB8R35


Modbus Cable Connection

- The Modbus cable coming from the Modbus client ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail).
- The Modbus cable running to the first cubicle ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail) for the cubicle.

The 24 Vdc power supply running to the first cubicle ensures continuity of the power supply.

- The unused channel on the shunt terminal block can be used to connect another Modbus server in the electrical equipment (a PM800 communicating power meter, for example).

Wiring Diagram of Shunt Terminal Block on the Incoming Supply

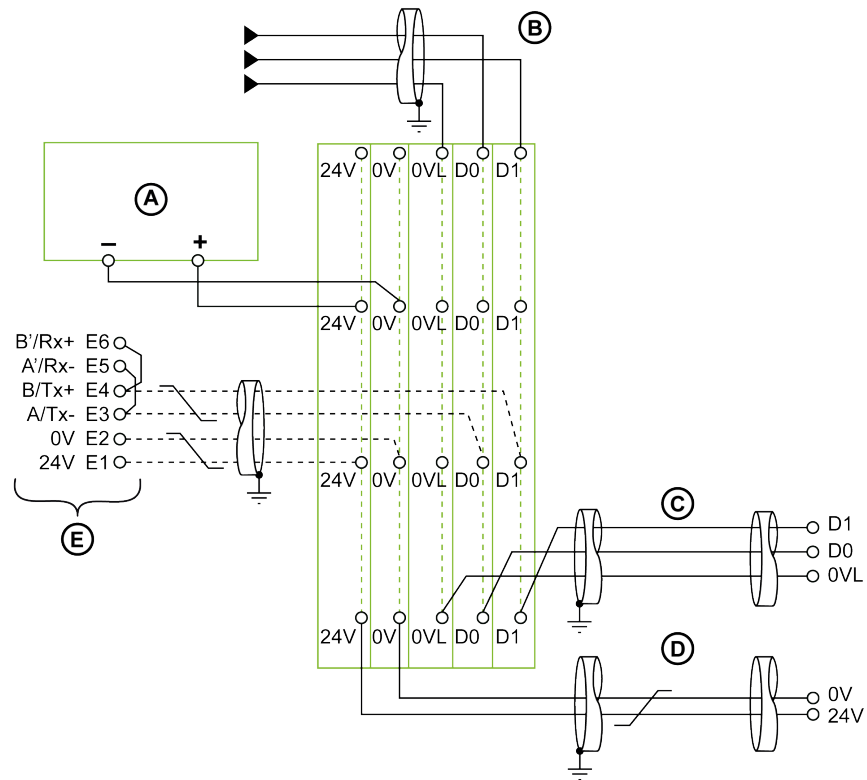

- A** 24 Vdc power supply
- B** Modbus cable coming from Modbus client
- C** Modbus cable running to first cubicle
- D** 24 Vdc power supply cable running to first cubicle
- E** Modbus server (for example, MasterPacT NT/NW circuit breaker)


NOTE: For information about shield connection, refer to the 24 Vdc power supply cable characteristics, page 69.

Shunt Terminal Block on the Cubicle Incomer

The shunt terminal block on the cubicle incomer distributes the Modbus signal and the 24 Vdc power supply to the cubicles in the electrical equipment.


The shunt terminal block is created using four 5-channel spring terminal blocks.

The following figure shows the shunt terminal block on the cubicle incomer.

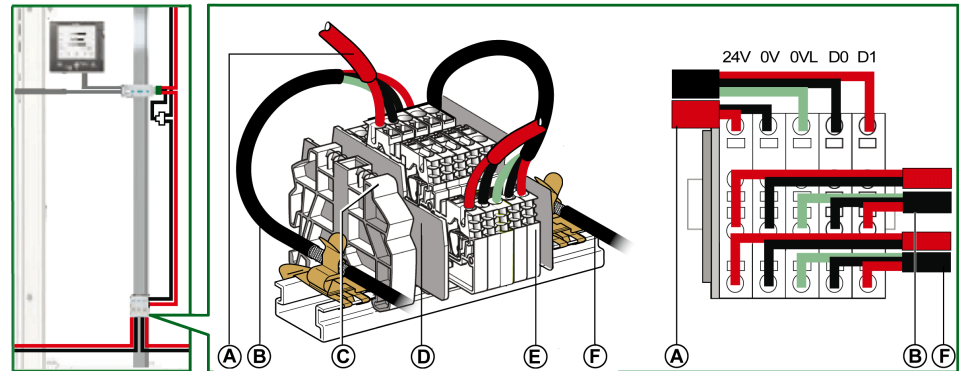

- A Modbus cable rising up the cubicle
- B Upstream Modbus cable
- C Clip-on plastic end stop
- D End plate
- E Spring terminal block
- F Downstream Modbus cable

Wiring Diagram of Shunt Terminal Block on the Cubicle Incomer

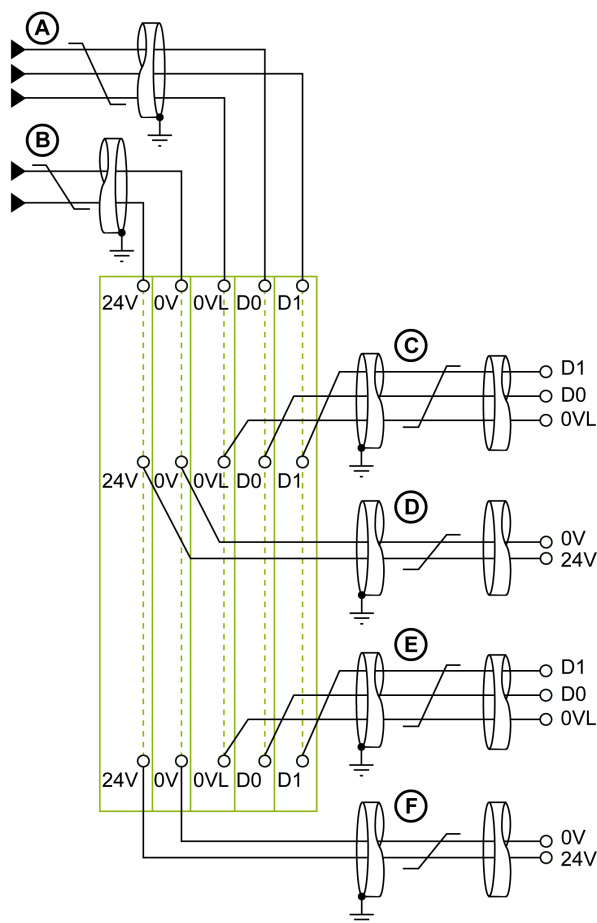


- A** Upstream Modbus cable
- B** Upstream 24 Vdc power supply cable
- C** Modbus cable rising up the cubicle
- D** 24 Vdc power supply cable rising up the cubicle
- E** Downstream Modbus cable
- F** Downstream 24 Vdc power supply cable

NOTE: For information about shield connection, refer to the 24 Vdc power supply cable characteristics, page 69.




Case of Several Power Supply Segments

When more than one 24 Vdc power supply is needed (refer to segmented power supply, page 63), then several power supply segments are used along the Modbus cable.

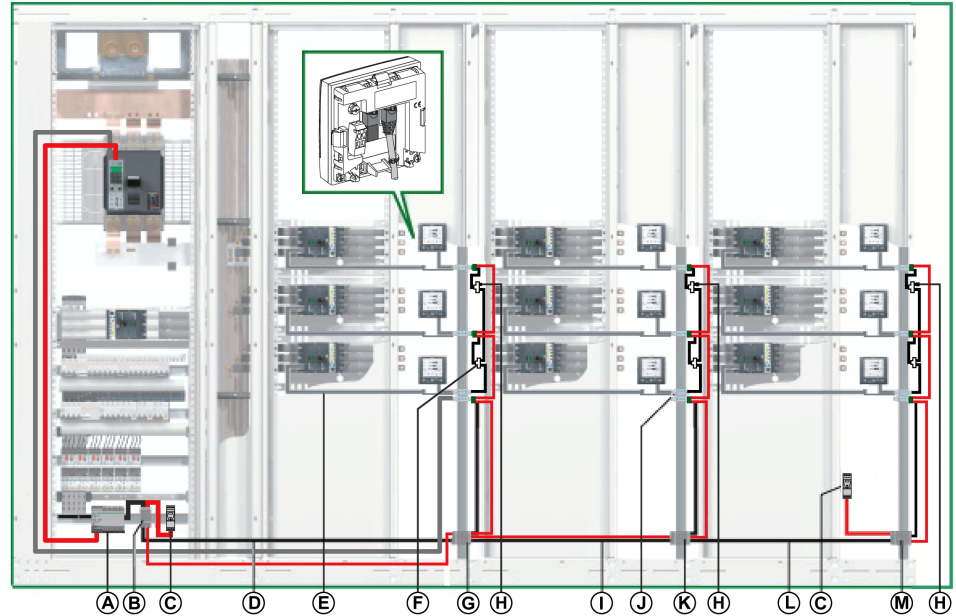The following figure shows a tap-linked distributed Modbus architecture with two power supply segments:



- A** 24 Vdc AD power supply for MicroLogic trip units in MasterPacT NT/NW, ComPacT NS, or PowerPacT P- and R-frame circuit breakers
- B** Shunt terminal block on the incoming supply
- C** 24 Vdc ABL8 power supply for ULP modules
- D** Modbus cable running to the first cubicle
- E** NSX cord
- F** RJ45 Modbus T-junction
- G** Shunt terminal block on the incomer of the first cubicle
- H** Modbus line termination
- I** Modbus cable running to the second cubicle
- J** IFM interface
- K** Shunt terminal block on the incomer of the second cubicle
- L** Modbus cable running to the third cubicle
- M** Shunt terminal block on the incomer of the third cubicle


Cable	Description
	Modbus network
	ULP network
	24 Vdc power supply

Shunt Terminal Block on the Incomer of the Second Cubicle

The shunt terminal block on the incomer of the second cubicle is created using four 4-channel spring terminal blocks and one functional ground terminal block offering grounding of the Modbus cable shielding by connection to the DIN rail.

For the shunt terminal block part numbers, refer to the appropriate component, page 117.

The following figure shows the shunt terminal block on the incomer of the second cubicle in detail:

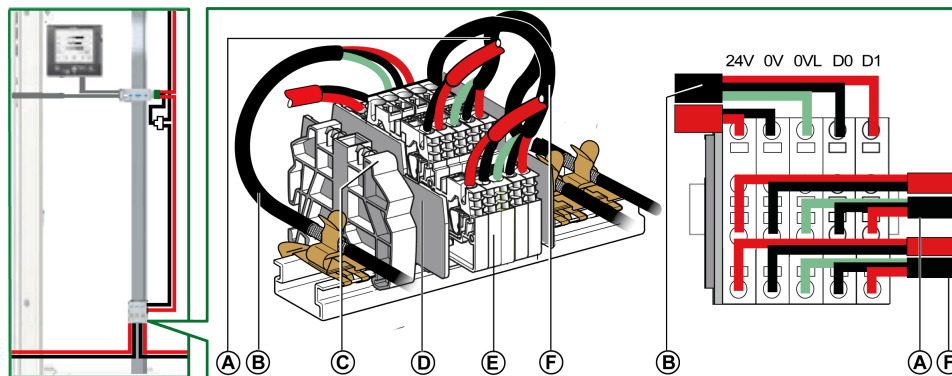

- A Modbus cable rising up the second cubicle
- B Modbus cable coming from the first cubicle
- C Clip-on plastic end stop
- D End plate
- E Spring terminal block
- F Modbus cable running to the third cubicle

Modbus Cable Connection


- The Modbus cable coming from the shunt terminal block on the incomer of the first cubicle ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail) for the second cubicle.

The 24 Vdc power supply coming from the shunt terminal block on the incomer of the first cubicle ensures continuity of the power supply for the second cubicle.

- The Modbus cable running to the third cubicle ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail).

The 24 Vdc power supply running to the third cubicle ensures continuity of the power supply.

Wiring Diagram of Shunt Terminal Block on the Incomer of the Second Cubicle

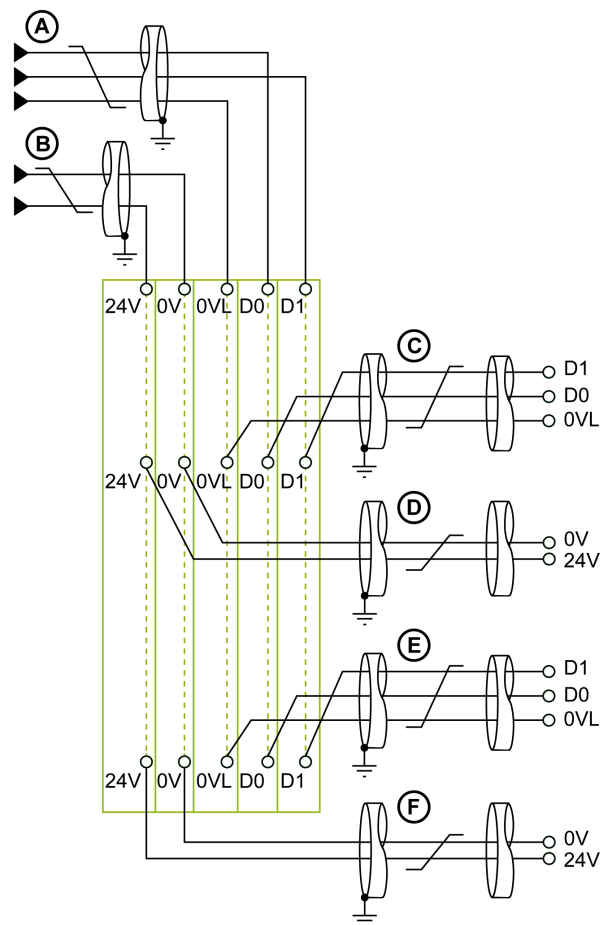

- A** Modbus cable coming from first cubicle
- B** 24 Vdc power supply cable coming from first cubicle
- C** Modbus cable rising up second cubicle
- D** 24 Vdc power supply cable rising up second cubicle
- E** Modbus cable running to third cubicle
- F** 24 Vdc power supply cable running to third cubicle


NOTE: For information about shield connection, refer to the 24 Vdc power supply cable characteristics, page 69.

Shunt Terminal Block on the Incomer of the Third Cubicle

The shunt terminal block on the incomer of the third cubicle can be used to connect a new 24 Vdc power supply to power the IMUs in the third cubicle.

The shunt terminal block is created using four 4-channel spring terminal blocks and one functional ground terminal block offering grounding of the Modbus cable shielding by connection to the DIN rail.

The following figure shows the shunt terminal block on the incomer of the third cubicle.

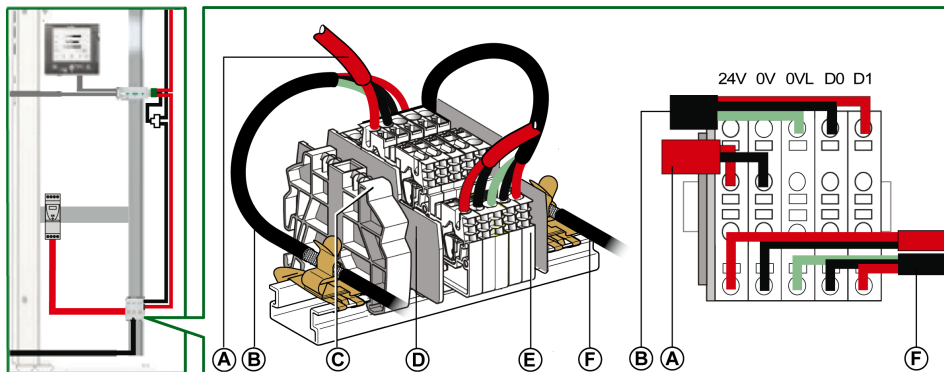


- A 24 Vdc power supply
- B Modbus cable coming from the shunt terminal block on the incomer of the second cubicle
- C Clip-on plastic end stop
- D End plate
- E Spring terminal block
- F Modbus cable rising up the third cubicle

Modbus Cable Connection

- The Modbus cable coming from the shunt terminal block on the incomer of the second cubicle ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail).
- The Modbus cable rising up the third cubicle ensures continuity of the Modbus signal (D0, D1, and 0 VL) and shield continuity by using brass clamps. The brass clamps must have suitable diameter for the cable type and fixings compatible with the installation (for example, screw or DIN rail) for the third cubicle.

The 24 Vdc power supply rising up the third cubicle ensures continuity of the power supply for the third cubicle.

Wiring Diagram of Shunt Terminal Block on the Incomer of the Third Cubicle

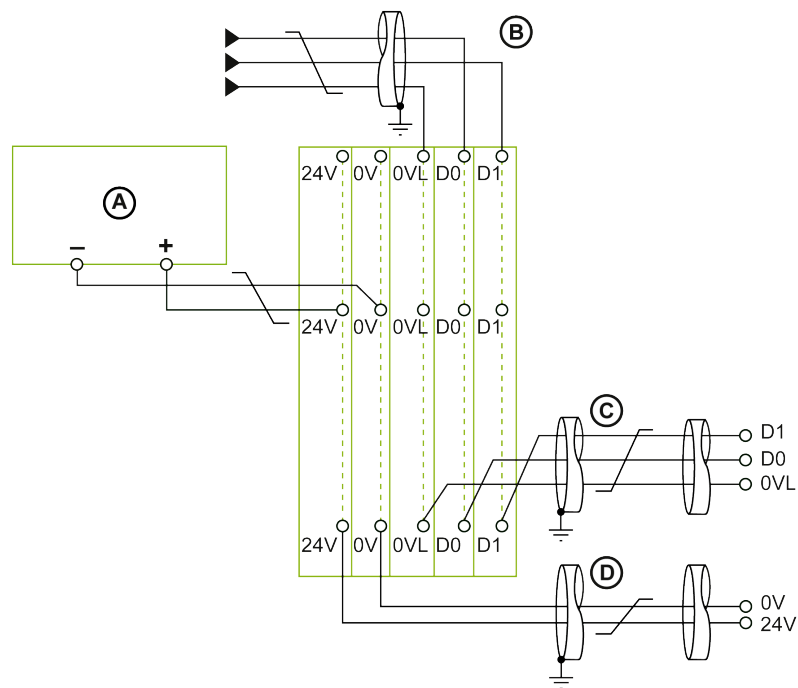

- A** 24 Vdc power supply
- B** Modbus cable coming from second cubicle
- C** Modbus cable rising up third cubicle
- D** 24 Vdc power supply cable rising up third cubicle

NOTE: For information about shield connection, refer to the 24 Vdc power supply cable characteristics, page 69.

Ethernet Architectures

Introduction

- Choosing an Ethernet topology depends on the requirements of the communication architecture:
- A star communication network offers an architecture with high dependability.
 - A daisy-chain architecture offers a competitive architecture.

Ethernet High Dependability


In the case of Ethernet high dependability, the architecture is event tolerant.




A high dependability Ethernet architecture is based around a event tolerant backbone ring (either optic fiber or copper) to which all the subsystems are connected via managed switches.

This communication architecture solution increases process availability with a high level of redundancy and performance. It is entirely based on devices with native Ethernet TCP or Ethernet/IP protocols, for power and motor management architecture. This architecture embeds the best performance for supporting RSTP protocols, and covers all detected events in communication.

This solution also allows power monitoring facilities with new communicating devices supporting web servers.

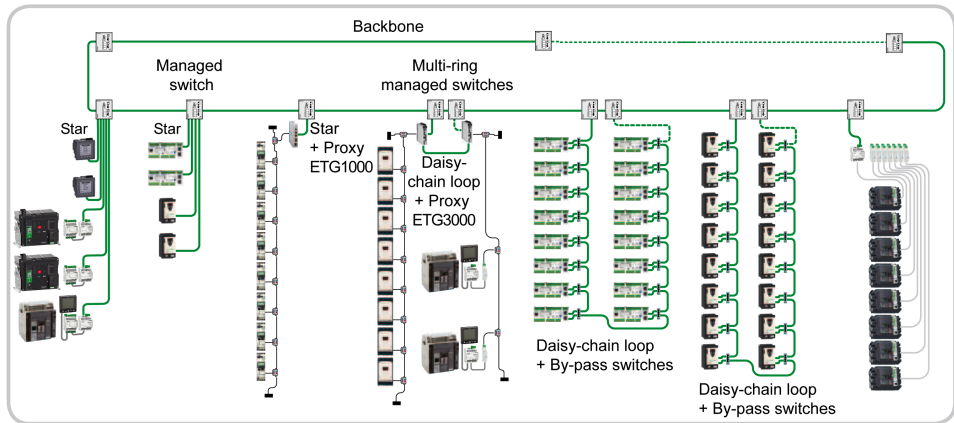The following diagram shows an example of a high dependability architecture:



Cable	Description
	Ethernet network
	Modbus network
	ULP network

Star Communication Architecture

The star communication architecture has a high level of dependability.

A star network is a Local Area Network (LAN) in which all nodes (that is, devices) are directly connected to a common central node (that is, the managed switch). Every device is indirectly connected to every other through the managed switch. In a star network, a cable problem isolates the device that links it to the switch, but only that device is isolated. All the other devices continue to function normally, except that they are not able to communicate with the isolated device.


If any device is inoperative, none of the other devices are affected. But if the switch is inoperative, the entire network suffers degraded performance or complete detected failure.

The example of the star architecture in the following diagram uses IFE interfaces and power meters which are directly connected to the managed switch. This switch is the central node and provides a common connection point for all devices (peripheral nodes) connected in the star.

The star topology reduces the damage caused by line problem. If this occurs, a problem of a transmission line linking any peripheral node to the central node results in the isolation of that peripheral node from all others, but the remaining systems are unaffected.

The managed switch makes the connection between the devices and the HiPER-Ring managed backbone.

The following diagram shows a star architecture:

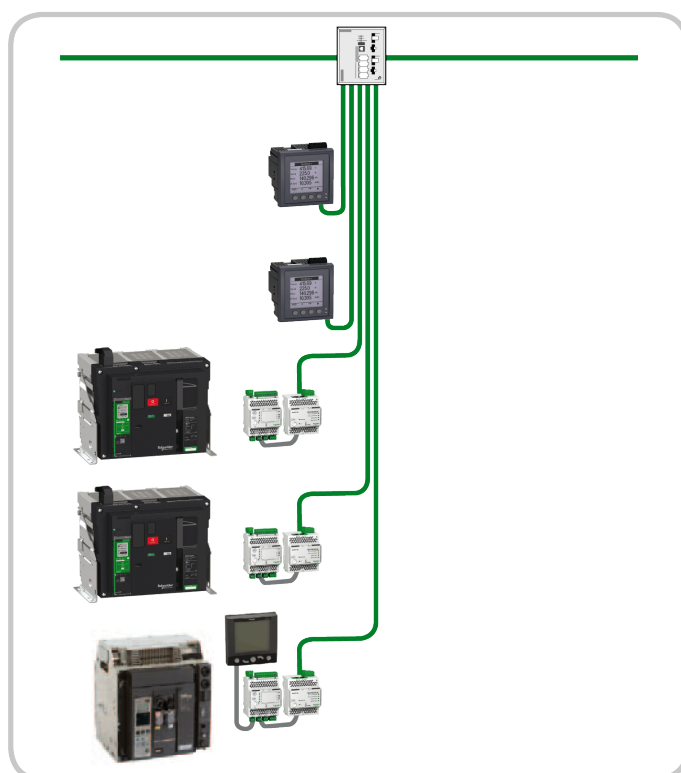


The following table presents the benefits of a star architecture for the user:




User values	Characteristics	Validity in the architecture	Benefit for the user
Dependability	Tolerant to first switch problem	–	✓
	Tolerant to first node problem	✓	
	Tolerant to second node problem	✓	
	Tolerant to several node problems	✓	
	One or more common mode noises	–	
	Additional problem nodes	✓	
Operability	Withdrawability of one functional unit	✓	✓
	Withdrawability of two functional units	✓	
	Withdrawability of several functional units	✓	

Ethernet Competitive Architecture

A competitive architecture is an optimized and recommended reference for some dedicated applications where redundancy is not required.

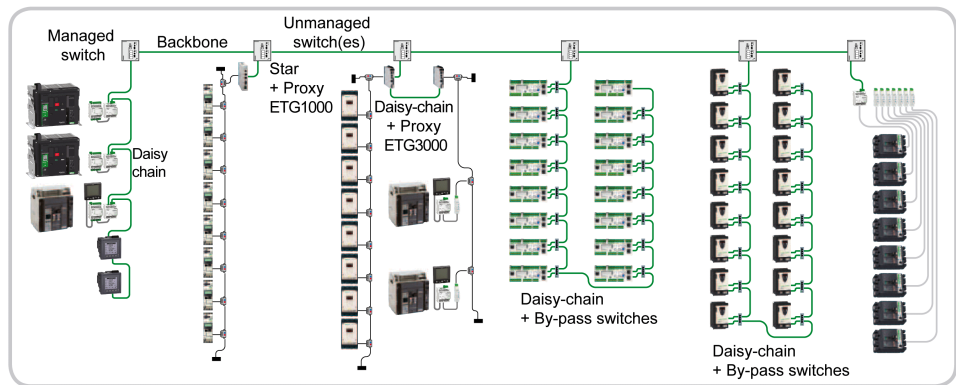The following diagram shows a competitive architecture:



Cable	Description
	Ethernet network
	Modbus network
	ULP network

Daisy Chain Communication Architecture

A daisy chain communication architecture is a competitive architecture.

A daisy chain is an interconnection of devices, peripherals, or network nodes in series, one after another. It is connected to the bus backbone via an unmanaged switch.

The daisy chain is a simple architecture, but devices must have two Ethernet communication ports.


If any device becomes inoperative, or if a cable problem occurs, it will isolate devices that are connected after the problem. The remaining devices (between the switch and the cable problem) continue to operate normally, but they are not able to communicate with the isolated devices.



But if the switch is inoperative, the entire daisy chain network suffers a complete detected failure.

This type of architecture for connecting devices is recommended in the case of competitive global architecture.

NOTE: Power meters are always connected at the end of the daisy chain, after the IFE interface, so that if a loss of communication occurs at the power meter level, there is no impact on communication with low voltage circuit breakers.

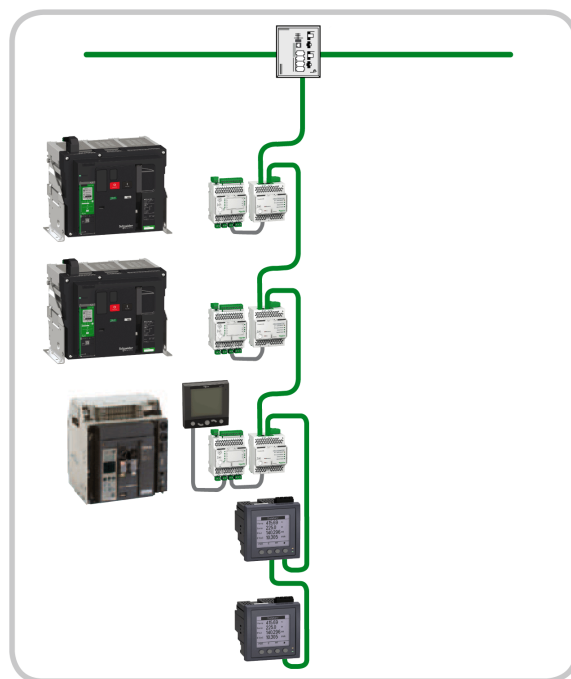The following diagram shows a daisy-chain architecture:



Cable	Description
	Ethernet network
	ULP network

The following table presents the benefits of a daisy-chain architecture for the user:

User values	Characteristics	Validity in the architecture	Benefit for the user
Dependability	Tolerant to first switch problem	—	—
	Tolerant to first node problem	—	
	Tolerant to second node problem	—	
	Tolerant to several nodes problems	—	
	One or more common mode noises	—	
	Additional problem nodes	—	
Operability	Withdrawability of one functional unit	✓	✓
	Withdrawability of two functional units	✓	
	Withdrawability of several functional units	✓	

Appendices

What’s in This Part

Technical Characteristics 131

IFM Interface with Part Number TRV00210 or STRV00210..... 137


Technical Characteristics

What's in This Chapter

Technical Characteristics of USB Maintenance Interface	132
RJ45 Plug/Plug ULP Cord Characteristics	134
Part Numbers for ULP System Components	135

Technical Characteristics of USB Maintenance Interface

Environmental Characteristics

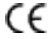Characteristic		Value
Conforming to standards		<ul style="list-style-type: none"> IEC/EN 60947-1 IACS E10
Certification		 and C-Tick marking
Ambient temperature	Storage	-40 °C to +85 °C (-40 °F to +185 °F)
	Operation	-10 °C to +55 °C (-14 °F to +131 °F)
Relative humidity	Conforming to IEC/EN 60068-2-78	4 days, 40 °C (104 °F), 93% RH, energized
Protective treatment	Conforming to IEC/EN 60068-2-30	6 cycles of 24 hours, 25/55 °C (77/131 °F), 95% RH, energized
Pollution		3
Corrosive atmosphere	Conforming to IEC 60068-2-60	4 gases (H ₂ S, SO ₂ , NO ₂ , Cl ₂)
Level of pollution	Access to hazardous parts and water penetration	Splashing outside the protective cover: IP4•
	Conforming to IEC/EN 60947-1 and IEC/EN 60529	Connectors: IP3•
	Conforming to IEC 62262/EN 50102	External mechanical impacts: IK05
Flame resistance	Conforming to IEC/EN 60947-1 and IEC/EN 60695-2-11	<ul style="list-style-type: none"> 650 °C (1202 °F) 30 s/30 s on de-energized insulating parts 960 °C (1760 °F) 30 s/30 s on de-energized insulating parts
	Conforming to UL94	V0

Mechanical Characteristics

Characteristic		Value
Shock resistance	Conforming to NF EN 22248 (free fall, in packaging)	H = 90 cm (35.4 in)
	Conforming to IEC 60068-2-27	15 g (0.53 oz)/11 ms 1/2 sinusoidal
Resistance to sinusoidal vibration	Conforming to IEC/EN 60068-2-6	1 g (0.035 oz)/5-150 Hz

Electrical Characteristics

Characteristics		Value
Power supply		24 Vdc -20%/+10% (19.2–26.4 Vdc)
Consumption	Typical	60 mA/24 Vdc at 20 °C (68 °F)
	Maximum with Bluetooth	100 mA/19.2 Vdc at 60 °C (140 °F)
Resistance to electromagnetic discharges	Conforming to IEC/EN 61000-4-2	<ul style="list-style-type: none"> 4 kV (direct) 8 kV (air)
Immunity to radiated electromagnetic interference	Conforming to IEC/EN 61000-4-3	10 V/m
Immunity to electrical fast transients/burst	Conforming to IEC/EN 61000-4-4	<ul style="list-style-type: none"> 2 kV (power) 8 kV (signal)

Characteristics		Value
Immunity to conducted RF fields	Conforming to IEC/EN 61000-4-6	10 V
Immunity to surges	Conforming to IEC/EN 61000-4-5	<ul style="list-style-type: none">• Input and Output DC power ports:<ul style="list-style-type: none">◦ Differential mode: 0.5 kV◦ Common mode: 0.5 kV• Signal ports: Common mode: 1 kV

Physical Characteristics

Characteristic	Value
Dimensions (W x D x H)	Without power supply terminal block: 112 x 164 x 42 mm (4.4 x 6.5 x 1.6 in)
Mounting	<ul style="list-style-type: none">• DIN rail• Magnetic
Weight	408 g (14.4 oz)

RJ45 Plug/Plug ULP Cord Characteristics

Characteristics

The common characteristics of ULP cords are as follows:

- Shielded cable with four twisted-pairs, 0.15 mm² (26 AWG) cross-section, with typical impedance of 100 Ω
- Shielded RJ45 plug connector at both ends, cable shielding connected to the connector cover (connector conforming to standard IEC 60603-7-1)
- Color and order of internal wires conforming to standard EIA/TIA568B.2 (refer to RJ45 pin connection)
- Insulation voltage of the outer sheath: 300 V⁽¹⁾
- Bending radius: 50 mm (1.97 in)⁽¹⁾

(1) Cable must be compliant with installation requirements for voltage and temperature ratings. It is the responsibility of the user to select the correct cable for the specific installation.

Part Numbers for ULP System Components

The following table lists the part numbers for the components of the ULP system.

Component	Description	Part number
NSX cord	L = 0.35 m (1.15 ft)	LV434200
	L = 1.3 m (4.27 ft)	LV434201
	L = 3 m (9.84 ft)	LV434202
Insulated NSX cord	L = 1.3 m (4.27 ft), U > 480 Vac or 480 Vdc (cord with RJ45 socket connector)	LV434204
BCM ULP circuit breaker communication module	—	33106
Circuit breaker BCM ULP cord	L = 0.35 m (1.15 ft)	LV434195
	L = 1.3 m (4.26 ft)	LV434196
	L = 3 m (9.84 ft)	LV434197
	L = 5 m (16.4 ft)	LV434198
BSCM Modbus SL/ULP module	—	LV434220
BSCM circuit breaker status control module	—	LV434205 or S434205
Modbus SL hub	—	LV434224
BSCM Modbus SL cord	L = 0.35 m (1.15 ft)	LV434221
	L = 1.3 m (4.26 ft)	LV434222
	L = 3 m (9.84 ft)	LV434223
FDM121 front display module for one circuit breaker	—	TRV00121 or STRV00121
Surface-mounting accessory for FDM121 display	—	TRV00128
IFM Modbus-SL interface for one circuit breaker	—	LV434000
IFE Ethernet interface for one circuit breaker	—	LV434001
IFE Ethernet switchboard server	—	LV434002
EIFE embedded Ethernet interface spare part for one for MasterPacT MTZ1 drawout circuit breaker	—	LV851100SP
EIFE embedded Ethernet interface full spare part kit for MasterPacT MTZ2/MTZ3 drawout circuit breaker	—	LV851200SP
ULP port module for MasterPacT MTZ2/MTZ3 fixed circuit breaker	—	LV850061SP
ULP port module for MasterPacT MTZ2/MTZ3 drawout circuit breaker	—	LV850062SP
ULP port module for MasterPacT MTZ1 fixed circuit breaker	—	LV850063SP
ULP port module for MasterPacT MTZ1 drawout circuit breaker	—	LV850064SP
IO input/output application module for one circuit breaker	—	LV434063
Two-wire RS 485 isolated repeater module	—	TRV00211
Stacking accessory	Ten stacking accessories	TRV00217
Service Interface kit	Service Interface, 24 Vdc external power supply unit, and associated cables	LV485500

Component	Description	Part number
Maintenance kit	USB maintenance interface, 24 Vdc external power supply unit, and associated cables	TRV00910
USB maintenance interface	–	TRV00911
Power supply unit for USB maintenance interface	–	TRV00915
MicroLogic test cable for USB maintenance interface	–	TRV00917
RJ45 plug/plug ULP cord	L = 0.3 m (0.98 ft) (ten cords)	TRV00803
	L = 0.6 m (1.97 ft) (ten cords)	TRV00806
	L = 1 m (3.28 ft) (five cords)	TRV00810
	L = 2 m (6.56 ft) (five cords)	TRV00820
	L = 3 m (9.8 ft) (five cords)	TRV00830
	L = 5 m (16.4 ft) (one cord)	TRV00850
RJ45 to open connector Modbus adapter	L = 0.2 m (0.66 ft)	LV434211
Modbus serial link cable with one RJ45 plug connector and free wires at other end	L = 0.3 m (0.98 ft)	VW3A8306D30
RJ45 socket connector	Ten RJ45 socket connectors	TRV00870
ULP line termination	Ten ULP line terminations	TRV00880
Modbus line termination	Two Modbus line terminations (150 Ω)	VW3A8306R
	Two Modbus line terminations with impedance of 120 Ω + 1 nF	VW3A8306RC
24 Vdc power supply	24/30 Vdc - 24 Vdc - 1 A - overvoltage category IV	LV454440
	48/60 Vdc - 24 Vdc - 1 A - overvoltage category IV	LV454441
	100/125 Vdc - 24 Vdc - 1 A - overvoltage category IV	LV454442
	110/130 Vac - 24 Vdc - 1 A - overvoltage category IV	LV454443
	200/240 Vac - 24 Vdc - 1 A - overvoltage category IV	LV454444
	100/500 Vac - 24 Vdc - 3 A - overvoltage category II	ABL8RPS24030
Cable for Modbus serial link (two RJ45 plug connectors)	L = 0.3 m (0.98 ft)	VW3A8306R03
	L = 1 m (3.28 ft)	VW3A8306R10
	L = 3 m (9.8 ft)	VW3A8306R30
Modbus splitter block	Ten RJ45 ports and one screw terminal block	LU9GC3
RJ45 Modbus T-junction	L = 0.3 m (0.98 ft)	VW3A8306TF03
	L = 1 m (3.28 ft)	VW3A8306TF10
Shunt terminal block	4-channel spring terminal block (gray)	NSYTRR24D+NSYTRALV24
	4-channel functional ground terminal block (green/yellow)	NSYTRR24DPE
	2-channel functional ground terminal block (green/yellow)	NSYTRV22PE
	End plate	NSYTRACRE24
	Clip-on plastic end stop	AB1AB8R35
	Phoenix Contact: Pluggable connector MSTB 2.5/5-STF-5.08	1778014
	Phoenix Contact: Base unit on DIN rail UMSTBVK 2.5/5-GF-5.08	1787953
	Phoenix Contact: Optional cable housing for pluggable connector KGG-MSTB 2.5/5	1803895

IFM Interface with Part Number TRV00210 or STRV00210

What's in This Chapter

IFM Interface with Part Number TRV00210 or STRV00210.....	138
Two-Wire RS 485 Isolated Repeater Module	148

IFM Interface with Part Number TRV00210 or STRV00210

Introduction


The IFM interface with part number TRV00210 or STRV00210 is substituted by the IFM interface with part number LV434000.

The following table shows the specificities for each IFM interface.

Characteristics	IFM interface TRV00210	IFM interface STRV00210	IFM interface LV434000
Circuit breaker compatibility	<ul style="list-style-type: none"> MasterPacT NT/NW ComPacT NS ComPacT NSX 	<ul style="list-style-type: none"> MasterPacT NT/NW PowerPacT P- and R-frame PowerPacT H-, J-, and L-frame 	<ul style="list-style-type: none"> MasterPacT MTZ MasterPacT NT/NW ComPacT NS PowerPacT P- and R-frame ComPacT NSX PowerPacT H-, J-, and L-frame
Modbus connector	5-pin	5-pin	RJ45
Cable	Free-ends Modbus cable	Free-ends Modbus cable	RJ45 Modbus cables
Modbus circuit	D0, D1, common C, power supply	D0, D1, common C, power supply	D0, D1, 0 VL common
Connection of the 0 V common to a ground terminal block	Yes, ground terminal block required.	Yes, ground terminal block required.	No, given that 0 VL is isolated.
Modbus isolation	Two-wire RS 485 isolated repeater required	Two-wire RS 485 isolated repeater required	No repeater required
Modbus line termination	Screwed	Screwed	RJ45

The specific features of IFM interface with part number TRV00210 or STRV00210, including rules for ULP connection and power supply, are detailed in this appendix.

Hardware Description

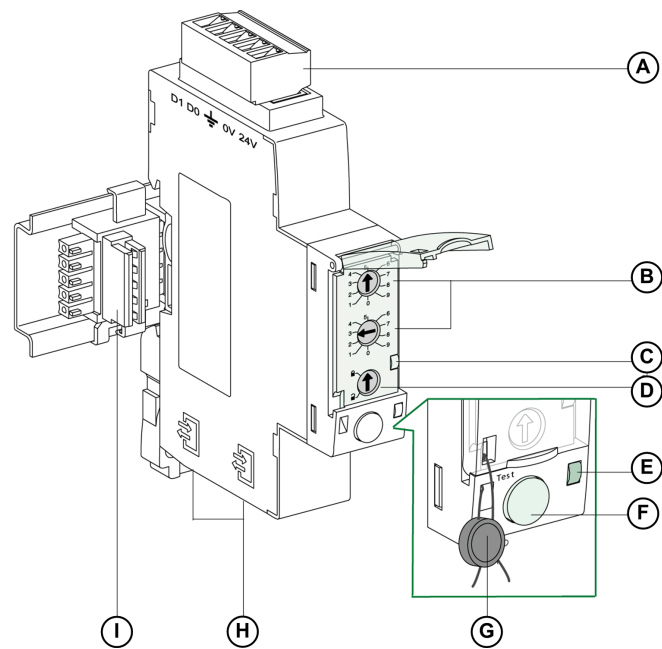

- A** 5-pin screw type connector (Modbus connection and power supply)
- B** Modbus address rotary switches
- C** Modbus traffic LED
- D** Modbus locking pad
- E** ULP LED
- F** Test button
- G** Mechanical lock
- H** Two RJ45 ULP ports
- I** Stacking accessory

Connection to the Modbus-SL Network with IFM Interface

Introduction


Use the Modbus cable, page 147 to interconnect the intelligent modular units comprising IFM interfaces TRV00210 or STRV00210, supply them with power, and connect them to the Modbus client.

In terms of power supply, to limit voltage drop, the maximum number of IFM interfaces stacked to one IFE server is 11.

In terms of Modbus communication, it depends on the performance requirement. As it takes approximately 500 ms at 19,200 Baud per device to refresh 100 registers, the more interfaces added the longer the minimum refreshment period. The minimum refreshment period depends on the number of IFM interfaces stacked to one IFE server. Multiply the time to refresh one device by the number of devices to find the minimum refreshment period expected in the application. For instance, an installation with eight IFM interfaces stacked to one IFE server at 19,200 Baud would take approximately 4 seconds to be read.

Composition of the Modbus Cable

The following figure shows the Modbus cable:

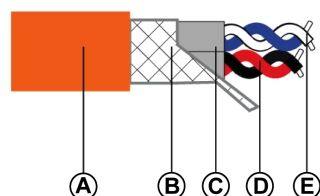

- A Outer sheath
- B Shielding braid
- C Twisted-pair sheaths
- D Communication pair (white/blue)
- E Power supply pair (red/black)

The characteristics of the Modbus cable are as follows:

- Shielded cable with two twisted-pairs:
 - One pair with 0.25 mm² (24 AWG) cross-section for the RS 485 signal (D0, D1).
 - One pair with 0.5 mm² (20 AWG) cross-section for the power supply (0 V, 24 Vdc).
- Shielding braid to be connected to the ground terminal of the 5-pin connector on the IFM interface.
- External diameter: 8.7–9.6 mm (0.35–0.38 in).
- Color of outer sheath: orange.



The 0 V terminal of the power supply pair is also the Modbus common, that is, the 0 V for the RS 485 signal (D0, D1).


The 0 V cable (Modbus common) must be distributed along the entire length of the network, right up to the Modbus client.

Other Modbus cable part numbers are given in appendix, page 147.

Connection of Modbus Cable to the IFM Interface

Each point on the 5-pin connector on the IFM interface has a specific marking to make it easier to connect the Modbus cable.

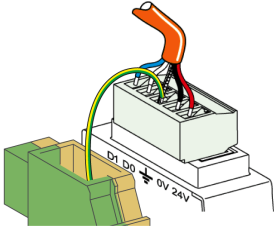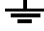Connector	Marking	Color	Description	Unsheathed length	Stripped length
	D1	Blue	RS 485 B/B' or Rx+/Tx+ signal	≤50 mm (1.96 in)	7 mm (0.27 in)
	D0	White	RS 485 A/A' or Rx-/Tx- signal		
		—	Modbus cable shielding braid, connected to the local machine ground in the IFM interface	≤20 mm (0.79 in) ⁽¹⁾	7 mm (0.27 in)
	0V	Black	0 V for Modbus common and power supply	≤50 mm (1.96 in)	7 mm (0.27 in)
	24V	Red	24 Vdc for the power supply		

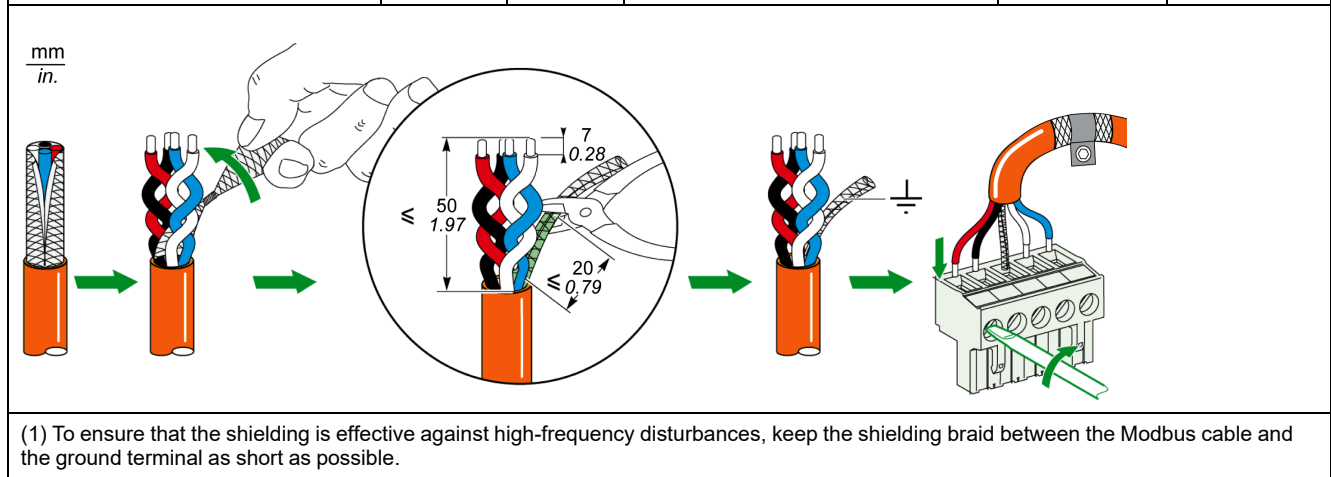

NOTE: Do not connect more than two wires in the same terminal on the 5-pin connector on the IFM interface.

Connection of the 0 V Terminal on IFM Interface to the Functional Ground Terminal Block


The 0 V terminal on IFM interfaces is connected to the functional ground terminal block at only one point of the Modbus line (first stacked IFM interface or at the Modbus client if IFM interfaces are not stacked with IFE server). No other devices must have 0 V connected to ground.

Modbus Line Termination

The Modbus cable communication pair has a typical impedance of 120 Ω. The Modbus cable must therefore be terminated at each end by a Modbus line termination with a 120 Ω impedance.

The Modbus client is at one end of the Modbus cable and usually has a switchable termination impedance. At the other end of the Modbus cable, a Modbus line termination with a 120 Ω impedance must be connected.

To obtain a 120 Ω impedance at high frequency without loading the cable with DC, optimize the Modbus line termination in the form of an RC cell: 120 Ω in series with a 1 nF capacitor and two 10 cm (3.9 in) wires for direct connection (between D0 and D1) to the 5-pin connector on the last IFM interface.

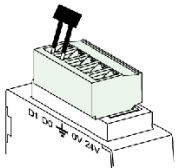Illustrations	Description	Part number
	Two Modbus line termination ($120\ \Omega + 1\ \text{nF}$)	VW3A8306DRC

General Rules for Modbus Cable Length

The maximum permitted length for the Modbus network (for the trunk cable, excluding tap links) is 500 m (1,640 ft) at 38,400 Baud and 1,000 m (3,281 ft) at 19,200 Baud.

The Modbus cable connecting the IFM interfaces in the ULP system incorporates both the Modbus communication network and the 24 Vdc power supply. Because of the stresses caused by a drop in the supply voltage, more restrictive limitations are imposed:

- The voltage drop between the power supply and the furthest point, both on the +24 V wire and on the 0 V wire, must be limited to 4 Vdc (2 Vdc on the +24 Vdc wire and 2 Vdc on 0 V wire).

A minimum supply of 24 Vdc -20% (19.2 Vdc) is thus obtained on the last IFM interface, with a 24 Vdc power supply regulated at:


- +/-3% (23.3–24.7 Vdc) for 3 A power supplies.
- +/-5% (22.8–25.2 Vdc) for 1 A power supplies.
- For optimum quality of the Modbus communication, the voltage on the 0 V terminal on each IFM interface (Modbus common) must not vary by more than +/-4 Vdc compared to the 0 V voltage of any other Modbus device in the installation. This restriction further limits length when the Modbus equipment is divided between a number of power supply segments.

The Modbus cable length depends on the architecture in the ULP system.

Rules for ULP Connection and Power Supply


Power Supply Connection Rules

- The 0 V terminal on IFM interfaces is connected to a functional ground terminal block at only one point of the Modbus line. This point of the Modbus line is either the first stacked IFM or the Modbus client if IFM interfaces are not stacked with IFE server. No other devices must have 0 V connected to ground.

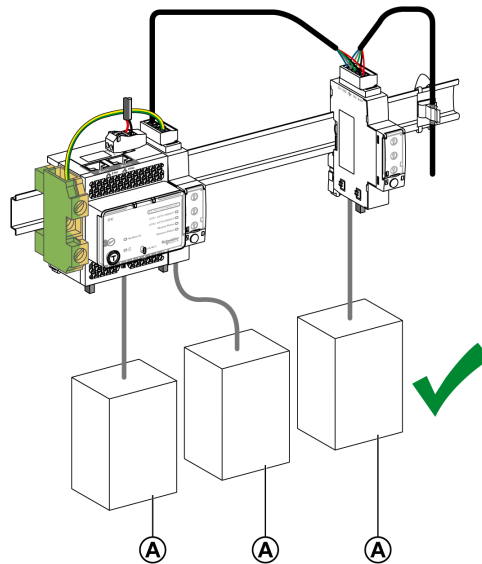

A ComPacT NSX, ComPacT NS, PowerPacT H-, J-, and L-frame, PowerPacT P- and R-frame, or MasterPacT NT/NW circuit breaker

- If no IFM interface is installed on the ULP system, 0 V must be connected to a ground terminal block at power supply level. No other devices must have 0 V connected to ground.
- No Modbus device with dedicated 0 V Modbus (for example, Acti 9 Smartlink device) must be connected to an IFM interface. The IFM interface has indeed no dedicated 0 V Modbus. The following diagram illustrates this rule for Acti 9 Smartlink devices:

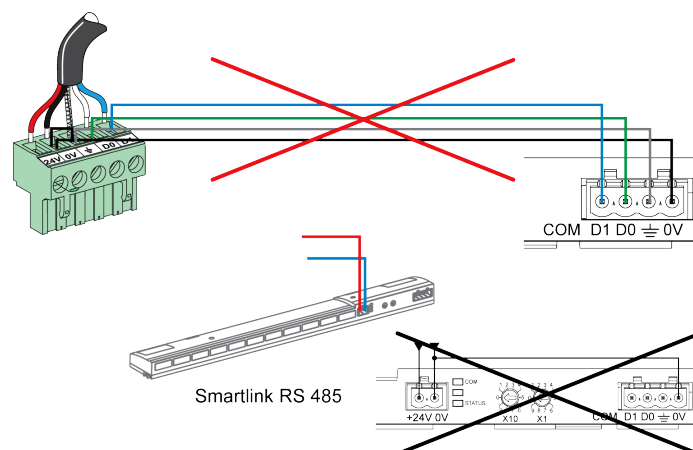

- If no IFM interface, ComPacT NSX, or PowerPacT H-, J-, and L-frame circuit breaker is installed on the ULP system, it is recommended to have a floating auxiliary power supply. Do not connect terminals + and - of the 24 Vdc auxiliary power supply output to ground.

Segmented Power Supply

Segmented power supplies are required in the following cases:

- When the IMUs communicate over Modbus by using the IFM interface, the Modbus cable distributes the 24 Vdc power.
 - If the length of the Modbus cable is such that the voltage drop is excessive (for example, cable longer than 15 m (49.2 ft) with a 3 A power supply), independently powered Modbus cable segments must be created:
 - Only the 24 Vdc wire is interrupted between two segments
 - The continuity of the 0 V wire (which is also the Modbus common) must be assured along the entire length of the Modbus network.
 - The maximum number of power supply segments is three segments for a single Modbus network.
- When an installation consists of a number of Modbus networks, one 24 Vdc power supply must be used for each Modbus network.

Since the 0 V of the 24 Vdc power supply is also the Modbus common, the power supplies must be separated to make the Modbus networks independent from one another.

The 24 Vdc external power supply for the MicroLogic 2.0 and 3.0 trip units for PowerPacT H-, J-, and L-frame circuit breakers may be shared with the ULP/communications system. This supply is connected to the protective ground as described below, page 144.

NOTE: The 24 Vdc external power supply for MicroLogic 0.0 A/P/H trip units for MasterPacT NT and NW and PowerPacT P- and R-frame circuit breakers must be a separate power supply than the ULP/communications power supply. Use one 24 Vdc external power supply per MicroLogic 0.0 A/P/H trip unit for MasterPacT NT and NW and PowerPacT P and R-frame circuit breakers. This supply is NOT connected to protective ground.

Connection of the 0 V Circuit

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH


Connect the 0 V circuit (Modbus common and 0 V of the 24 Vdc power supply) to the protective ground.

Failure to follow these instructions will result in death or serious injury.

The rules for connection of the 0 V circuit must be followed:

- For the power supply and for all ULP modules of an IMU, a stainless steel DIN rail is recommended rather than an aluminum one in order to provide the most consistent ground. Each DIN rail must be connected to the protective ground.
- If no IFM interface is installed on the ULP system, 0 V must be connected to a ground terminal block at power supply level. No other devices must have 0 V connected to ground.

- If there is at least one IFM interface in the architecture, connection on IFM interfaces must be done as follows:
 - If one or several IFM interfaces are stacked on an IFE server, then at least one of the IFM interfaces must have a jumper on its connector between the 0 V terminal and the protective ground.

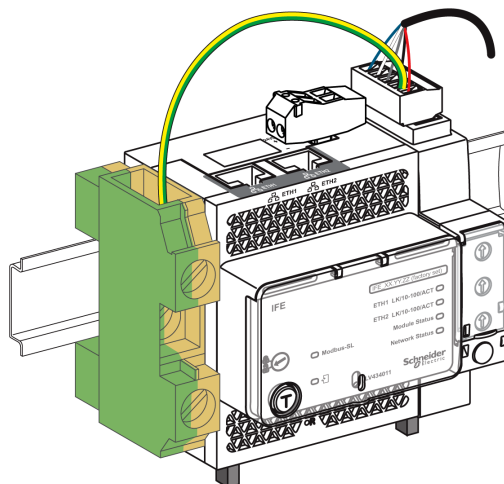


NOTICE

HAZARD OF SIGNIFICANT CURRENT LOOP ON THE SYSTEM

When IFM interfaces are present in the architecture, do not connect the 0 V of the power supply on the stainless steel DIN rail.

Failure to follow these instructions can result in equipment damage.


- Do not connect the 24 Vdc of the 24 Vdc power supply to the protective ground.
- In architectures with one or several IFM interfaces, no power supply should be grounded if there are one or several power supply segments on a single Modbus network.

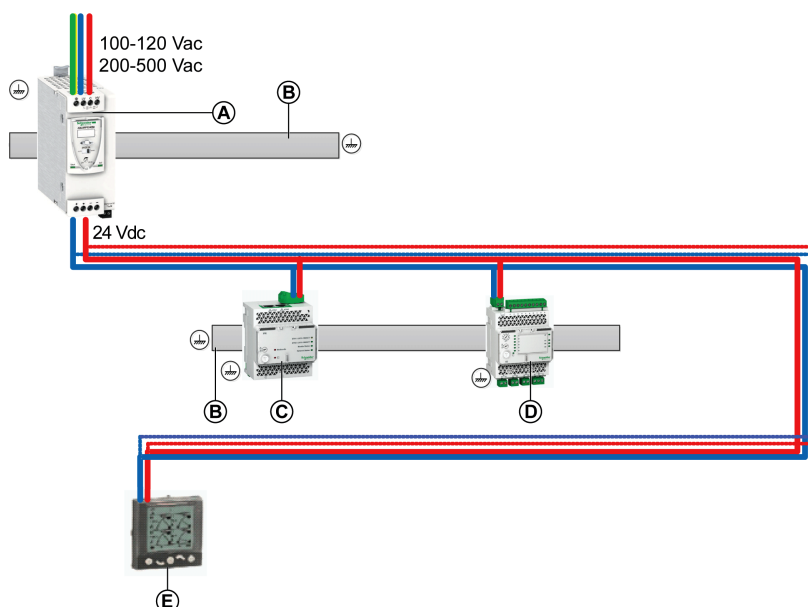

- A 24 Vdc ABL8 power supply for ULP modules
- B Stainless steel DIN rail
- C IFE interface or IFE server

- D IO module
- E FDM121 display

The following figure shows the daisy-chain power supply:

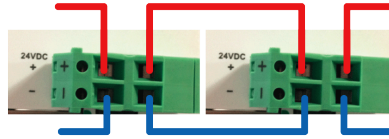

- In architectures without IFM interface, the power supply on the second and third segments should be grounded.

Modbus Cable Connection

- The Modbus cable coming from the Modbus client ensures continuity of the Modbus signal (D0, D1, and 0 V). The 24 Vdc wire is not connected when the Modbus client is powered separately.
- The Modbus cable running to the first cubicle ensures continuity of the Modbus signal (D0, D1, and 0 V) and the 24 Vdc power supply for the cubicle.
- The unused channel on the shunt terminal block can be used to connect another Modbus server in the electrical equipment (a PM800 communicating power meter, for example).

NOTE: The same rules apply when connecting the Modbus cable to a terminal block as for its connection to the 5-pin connector on the IFM interface (same order of connection, same unsheathed length, and same stripped length). For more information, refer to the connection of IFM interface, page 140.

Modbus Cable Characteristics

Introduction

When a Modbus cable other than Schneider Electric part number 50965 is used, it must have the following characteristics:

- Shielded cable with two twisted-pairs:
 - One communication pair for the RS 485 signal, with typical impedance of 120 Ω and minimum cross-section 0.25 mm² (24 AWG). The recommended colors for the wires are white and blue.
 - One 24 Vdc power supply pair. The cross-section depends on the current to be carried and the length of the Modbus cable required, with the following restrictions: 0.32 mm² (22 AWG) minimum for a 1 A 24 Vdc power supply, and 0.5 mm² (20 AWG) minimum for a 3 A 24 Vdc power supply.

The recommended colors for the wires are black and red.
- Shielding braid, with shielding drain wire (for connecting the shield to the ground terminal on the 5-pin connector of the IFM Modbus-SL interface for one circuit breaker).
- Nominal insulation voltage of the outer sheath: 300 V minimum.

Cable must be compliant with installation requirements for voltage and temperature ratings. It is the responsibility of the user to select for correct cable for the specific installation.

Connection Rules

The Modbus cable recommended below must follow the rules and recommendations for connection defined in this guide.

Part Numbers

The following table lists two recommended Modbus cable part numbers:

Type of installation	24 Vdc rating	Cross-section of power supply pair	Part number	Comment
Installation limited to a few IMUs	1 A	0.34 mm ² (22 AWG)	Belden part number 3084A1	External diameter limited to 7 mm (0.27 in) for ease of wiring
Large installation: all topologies	3 A	0.75 mm ² (18 AWG)	Belden part number 7895A1	Recommended cable with shielding drain wire and 9.6 mm (0.38 in) diameter
Cable must be compliant with installation requirements for voltage and temperature ratings. It is the responsibility of the user to select the correct cable for the specific installation.				

Two-Wire RS 485 Isolated Repeater Module

Introduction

The IFM interface with part number TRV00210 or STRV00210 is not isolated. A two-wire RS 485 isolated repeater module must be used to electrically isolate a 2-wire RS 485 Modbus network inside the electrical equipment from a two-wire RS 485 Modbus network outside the electrical equipment.


For information on installation, refer to S1A2181101 *Two-Wire RS 485 Isolated Repeater - Instruction Sheet*.

Hardware Compatibility

The two-wire RS 485 isolated repeater module is compatible with IFM interface with part number TRV00210 or STRV00210.

IFM interface with part number LV434000 does not require the use of a two-wire RS 485 isolated repeater module in a Modbus network.

Hardware Description

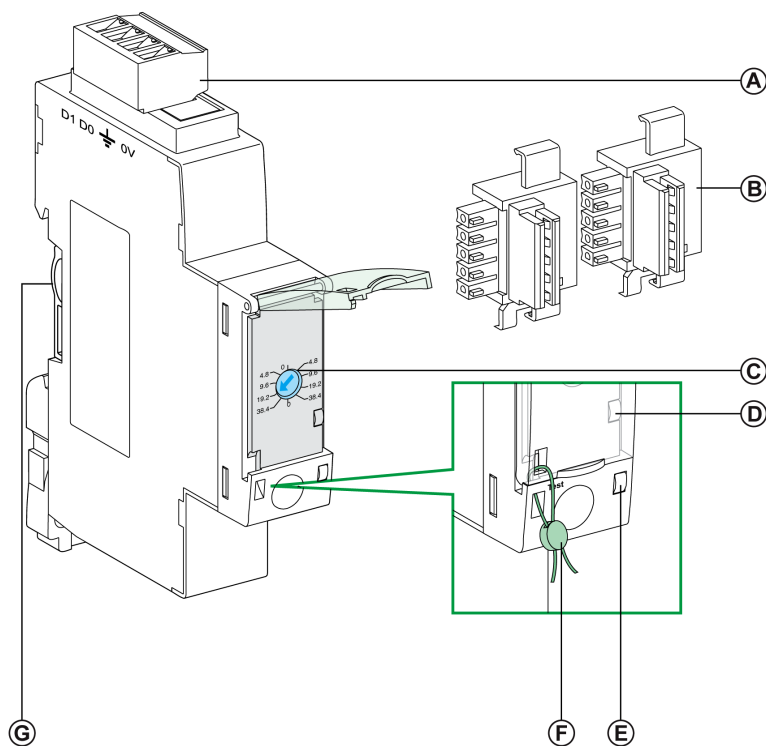


- A Modbus 4-pin connector
- B 2 stacking accessories (supplied with the repeater)
- C Rotary switch (to set the transmission speed and format)
- D Modbus traffic LED
- E Status LED
- F Mechanical lock
- G Stacking accessory connection

Modbus Connection Linking Two Pieces of Electrical Equipment

When the Modbus network is not contained within the electrical equipment, the two-wire RS 485 isolated repeater module must be inserted between the Modbus network inside the electrical equipment and the Modbus network outside the electrical equipment.

The following figure shows a Modbus link connecting three pieces of electrical equipment **S1**, **S2**, and **S3** via two-wire RS 485 isolated repeater modules. In this example, the Modbus 0 V terminal must be connected to the Modbus client at only one point of the Modbus line, and no other devices must have 0 V connected to ground.

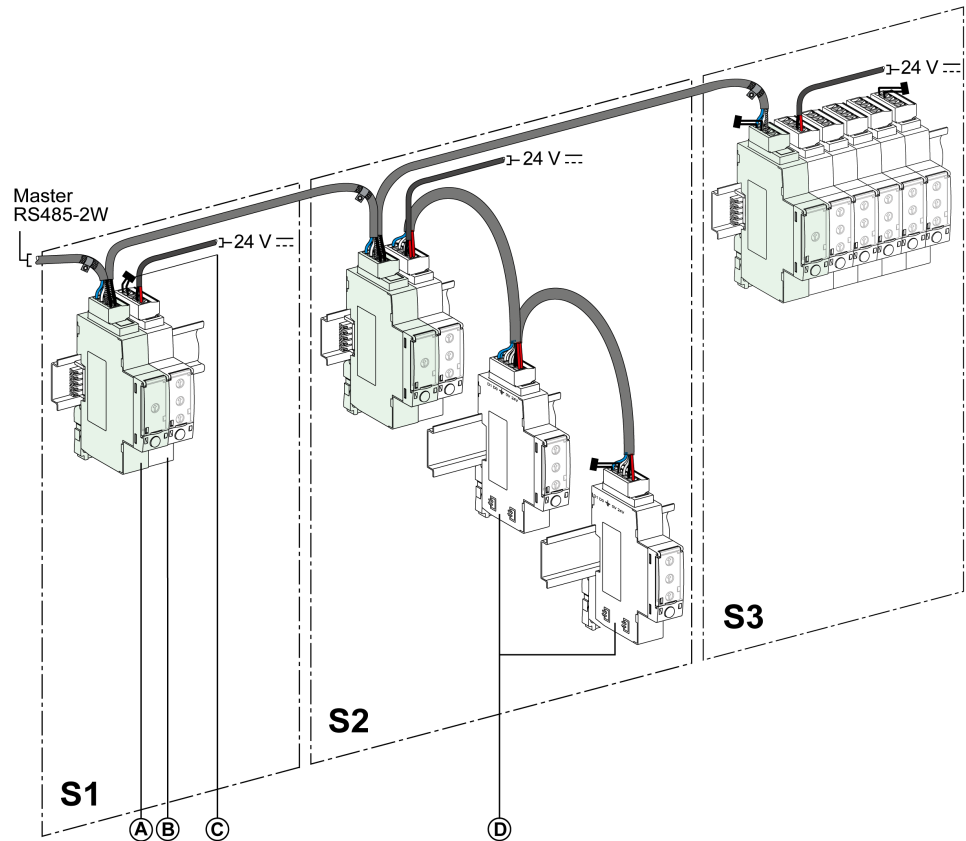

- A Two-wire RS 485 isolated repeater module
- B IFM interfaces grouped in islands with the stacking accessory
- C Modbus line termination
- D IFM interfaces daisy-chained with the Modbus cable

These rules must be followed:

- Each isolated Modbus segment must include a polarization at one point, and a Modbus line termination at each end:
 - On the segment outside the electrical equipment, the line polarization and a termination are integrated in the Modbus client, and a Modbus line termination must be connected at the other end, that is, on the last two-wire RS 485 isolated repeater module (the one on electrical equipment **S3** in this case).
 - On the segment inside the electrical equipment, the polarization and a Modbus line termination must be integrated in the two-wire RS 485 isolated repeater module.


A Modbus line termination must be connected at the other end, that is, on the last IFM interface or other Modbus server (on the last IFM interface in pieces of electrical equipment **S1** and **S2** in this case).

- Maximum length (Lmax) of the Modbus trunk cable (excluding tap links):
 - Lmax = 500 m (1,640 ft) at 38,400 Baud
 - Lmax = 1,000 m (3,281 ft) at 19,200 Baud

Case of Several Power Supply Segments In Several Pieces of Electrical Equipment

It is mandatory to install a two-wire RS 485 isolated repeater in each electrical equipment when the Modbus network is distributed in several pieces of electrical equipment.

The following figure shows an example of a centralized Modbus architecture installed in three pieces of electrical equipment:

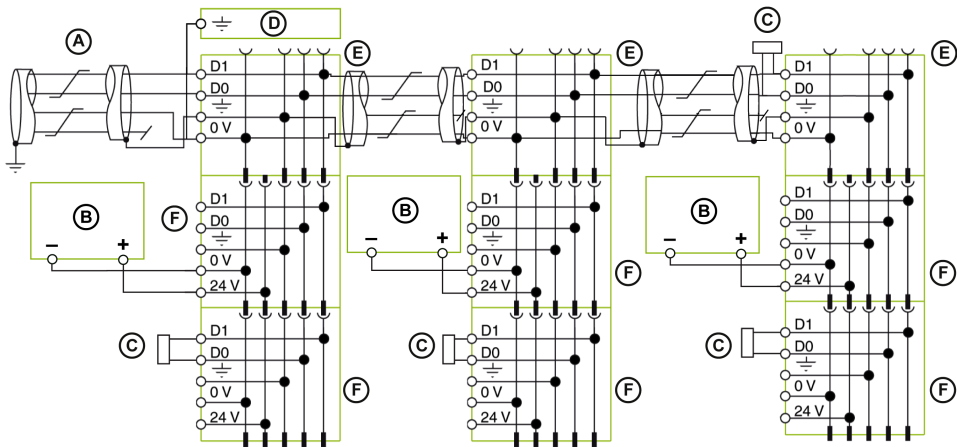

- A Modbus cable coming from Modbus client
- B 24 Vdc power supply
- C Modbus line termination
- D Functional ground terminal block
- E Two-wire RS 485 isolated repeater
- F IFM interface with part number TRV00210 or STRV00210

Technical Characteristics of Two-Wire RS 485 Isolated Repeater Module

Environmental Characteristics

Characteristic		Value
Conforming to standards		<ul style="list-style-type: none">IEC/EN 60947-1IACS E10UL 508CSA C22.2 no.14-10
Certification		<ul style="list-style-type: none">CE and C-Tick markingUL 508 - Industrial Control EquipmentCSA no. 142-M1987 - Process Control EquipmentCAN/CSA C22.2 no. 0-M91 - General requirements - Canadian Electrical Code PartCAN/CSA C22.2 no. 14-05 - Industrial Control Equipment
Ambient temperature	Storage	-40 °C to +85 °C (-40 °F to +185 °F)

Characteristic		Value
	Operation	-25 °C to +70 °C (-13 °F to +158 °F)
Relative humidity	Conforming to IEC/EN 60068-2-78	4 days, 40 °C (104 °F), 93% RH, energized
Protective treatment	Conforming to IEC/EN 60068-2-30	6 cycles of 24 hours, 25/55 °C (77/131°F), 95% RH, energized
Pollution		3
Corrosive atmosphere	Conforming to IEC 60068-2-60	4 gases (H ₂ S, SO ₂ , NO ₂ , Cl ₂)
Level of pollution	Access to hazardous parts and water penetration	Splashing outside the protective cover: IP4•
	Conforming to IEC/EN 60947-1 and IEC/EN 60529	Connectors: IP2• Other module parts: IP3•
	Conforming to IEC 62262/EN 50102	External mechanical impacts: IK05
Flame resistance	Conforming to IEC/EN 60947-1 and IEC/EN 60695-2-11	<ul style="list-style-type: none"> 650 °C (1202 °F) 30 s/30 s on de-energized insulating parts 960 °C (1760 °F) 30 s/30 s on de-energized insulating parts
	Conforming to UL94	V0

Mechanical Characteristics

Characteristic		Value
Shock resistance	Conforming to NF EN 22248 (free fall, in packaging)	H = 90 cm (35.4 in)
	Conforming to IEC 60068-2-27	15 g (0.53 oz)/11 ms 1/2 sinusoidal
Resistance to sinusoidal vibration	Conforming to IEC/EN 60068-2-6	1 g (0.035 oz)/5-150 Hz

Electrical Characteristics

Characteristics		Value
Power supply		24 Vdc -20%/+10% (19.2–26.4 Vdc)
Consumption	Typical	15 mA/24 Vdc at 20 °C (68 °F)
	Maximum	19 mA/19.2 Vdc to 24 Vdc at 60 °C (140 °F)
Resistance to electromagnetic discharges	Conforming to IEC/EN 61000-4-2	<ul style="list-style-type: none"> 4 kV (direct) 8 kV (air)
Immunity to radiated electromagnetic interference	Conforming to IEC/EN 61000-4-3	10 V/m
Immunity to electrical fast transients/burst	Conforming to IEC/EN 61000-4-4	<ul style="list-style-type: none"> 2 kV (power) 8 kV (signal)
Immunity to radiated fields	Conforming to IEC/EN 61000-4-6	10 V
Immunity to surges	Conforming to IEC/EN 61000-4-5	<ul style="list-style-type: none"> Input and Output DC power ports: <ul style="list-style-type: none"> Differential mode: 0.5 kV Common mode: 0.5 kV Signal ports: Common mode: 1 kV

Physical Characteristics

Characteristic		Value
Dimensions (W x D x H)	Without power supply terminal block	18 x 72 x 89 mm (0.7 x 2.8 x 3.5 in)
	With power supply terminal block	18 x 72 x 99 mm (0.7 x 2.8 x 3.9 in)
Mounting		DIN rail
Weight		90 g (3.17 oz)

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison
France

+ 33 (0) 1 41 29 70 00

www.se.com

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2025 – Schneider Electric. All rights reserved.

DOCA0093EN-06