

Exxact – Uppkopplad persiennstyrningsbrytare

Användarhandbok för Wiser Home-enhet

Information om enhetens egenskaper och funktioner.

05/2025



Juridisk information

Informationen i det här dokumentet innehåller allmänna beskrivningar, tekniska egenskaper och/eller rekommendationer för produkter/lösningar.

Detta dokument är inte avsett att ersätta en detaljerad studie eller en verksamhets- och platsspecifik utveckling eller schematisk plan. Det ska inte användas för att avgöra om produkterna/lösningarna är lämpliga eller tillförlitliga för specifika användarapplikationer. Det är användarens skyldighet att utföra eller låta en professionell expert av eget val (integratör, specificerare eller likvärdigt) utföra en lämplig och omfattande riskanalys, utvärdering och testning av produkterna/lösningarna med avseende på den relevanta specifika tillämpningen eller användningen av dem.

Varumärket Schneider Electric och alla varumärken som tillhör Schneider Electric SE och dess dotterbolag som det finns hänvisningar till i det här dokumentet tillhör Schneider Electric SE eller dess dotterbolag. Alla andra varumärken kan vara varumärken som tillhör respektive ägare.

Det här dokumentet och innehållet i det skyddas av tillämpliga upphovsrättslagar och tillhandahålls endast i informationssyfte. Ingen del av det här dokumentet får reproduceras eller överföras i någon form eller på något sätt (elektroniskt, mekaniskt, kopiering, inspelning, eller på något annat sätt) för något ändamål utan skriftligt tillstånd från Schneider Electric.

Schneider Electric utfärdar ingen rätt eller licens för kommersiell användning av dokumentet eller dess innehåll i den med undantag för en icke-exklusiv och personlig licens att rådfråga den i "befintligt skick".

Schneider Electric förbehåller sig rätten att när som helst och utan förvarning göra ändringar eller uppdateringar av innehållet i detta dokument eller dess format.

I den utsträckning det är tillåtet enligt gällande lag har inte Schneider Electric eller dess dotterbolag något ansvar och ingen ansvarsskyldighet för eventuella fel eller utelämnanden i informationsinnehållet i det här dokumentet eller för oavsiktlig användning eller felaktig användning av dess innehåll.

Innehållsförteckning

Säkerhetsinformation	4
Exxact – Uppkopplad persiennstyrningsbrytare.....	5
För din säkerhet	5
Om enheten	5
Installera enheten	5
Quick Home Connect.....	6
Parkoppla trådlös omkopplare med persiennstyrningsbrytare	6
Använda persiennstyrning	8
Återställa enheten i Quick Home Connect.....	9
Lysdiodsindikeringar i Quick Home Connect	9
Felsökning i Quick Home Connect.....	9
Pairing the device with the Wiser Hub	10
Konfigurera enheten	13
Selecting the device location.....	13
Renaming the device	14
Selecting device type	14
Ställa in standardkörtid	15
Shutter Calibration	17
Seasonal Comfort Mode.....	21
Identifying the device	38
Removing the device from Wiser system	38
Resetting the device	39
Använda enheten	40
Operating the device manually	40
Opening/Closing the shutter using app	40
Schema	41
Scenarion.....	44
Automation.....	49
LED Indication.....	55
Troubleshooting	56
Technical Data	57
Efterlevnad.....	58
Produktens miljödata	58
Försäkran om överensstämmelse	58
Varumärken	58

Säkerhetsinformation

Viktig information

Läs igenom de här instruktionerna noggrant och titta på utrustningen för att bekanta dig med enheten innan du försöker installera, använda, serva eller underhålla den. Följande särskilda meddelanden kan visas i den här handboken eller på utrustningen för att varna för potentiella risker eller för att uppmärksamma information som klargör eller förenklar ett arbetsmoment.



Om någon av symbolerna läggs till på en säkerhetsmärkning av typen "Fara" eller "Varning" innebär detta att det finns en elrisk som kommer att resultera i personskada om instruktionerna inte följs.



Detta är symbolen för säkerhetsvarning. Den används för att varna dig för potentiella risker för personskada. Följ alla säkerhetsmeddelanden som åtföljer symbolen för att undvika möjliga skador eller dödsfall.

FARA

FARA visar på en farlig situation som, om den inte undviks, **kommer att leda till dödsfall eller allvarlig skada.**

Om anvisningarna inte följs leder det till dödsfall eller allvarlig skada.

VARNING

VARNING visar på en farlig situation som, om den inte undviks, **skulle kunna leda till dödsfall eller allvarlig skada.**


OBSERVERA

IAKTTA FÖRSIKTIGHET visar på en farlig situation som, om den inte undviks, **skulle kunna leda till lindrig eller måttlig skada.**

OBS!

OBSERVERA ger information om arbetsmoment som inte är förknippade med fysisk personskada.

Exxact – Uppkopplad persiennstyrningsbrytare

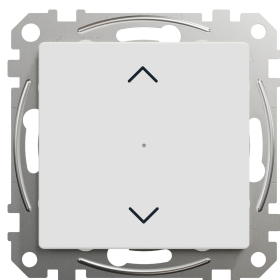

WDE00x384

För din säkerhet

FARA

RISK FÖR ELSTÖTAR, EXPLOSION ELLER LJUSBÄGE

Av säkerhetsskäl skall installation endast utföras av utbildad personal. Utbildad personal skall uppvisa djupt kunnande inom följande områden:

- Anslutning till installationsnätverk
- Anslutning av flera elektriska apparater
- Dragning av elkablar
- Säkerhetsstandarder, lokala ledningsregler och bestämmelser

Om anvisningarna inte följs leder det till dödsfall eller allvarlig skada.

Om enheten

Du kan använda den anslutna persiennstyrningsbrytaren (nedan kallad **persiennstyrningsbrytare**) för att styra en persienn- eller rulljalousimotor som är utrustad med ändlägesbrytare.

Styrningsalternativ

Hemstyrning med Wiser Home-appen: För att styra omkopplaren för persiennstyrning via Wiser-appen behöver du Wiser Gateway. Se [Pairing the device with the Wiser Hub](#), sida 10.

Direktdrift: Persiennstyrningsbrytaren kan alltid styras direkt på plats. Du kan även ansluta den med mekanisk dubbeltryckknapp. Se [Manuell drift](#), sida 40.

Installera enheten

Se medföljande installationsanvisning.

Se Uppkopplad persiennstyrningsbrytare.

Quick Home Connect

Quick Home Connect är en trådlös anslutningslösning för Zigbee-enheter utan behov av en Hub/Gateway eller en smartphoneapp. Quick Home Connect är din startpunkt för automatisering av trådlösa hemnätverk. Den utför funktioner som omkoppling, dimring och jalousistyrning med hjälp av ansluten trådlös omkopplare (nedan kallad trådlös omkopplare) via ett Zigbee-nätverk.

Den **trådlösa omkopplaren** är en batteridrivnen tryckknappsomkopplare som används för att styra Zigbee-enheter (som dimmer, jalousi, brytare och uttag) i ett och samma Zigbee-nätverk.

Begränsningar

- Quick Home Connect fungerar endast som en rumsstyrningslösning.
- Med en 1-kanals trådlös omkopplare kan du inte blanda belysnings- och jalousistyrning. Men med en 2-kanals trådlös omkopplare kan du tilldela ett uttag för dimring/omkoppling och det andra för jalousistyrning, eller tvärtom.
- Den här lösningen stöder inte fjärrstyrning, användning av smartphone-appar eller schemalägningsfunktioner.

Parkoppla trådlös omkopplare med persiennstyrningsbrytare


Du kan parkoppla 2-kanals eller 1-kanals trådlös omkopplare med 2 persiennstyrningsbrytare enligt dina behov.

Parkoppla 1-kanals med 1 eller 2 persiennstyrningsbrytare


OBS: Om du vill parkoppla en trådlös brytare med 1 kanal med en persiennstyrningsbrytare följer du stegen upp till steg 2. Fortsätt med en andra persiennstyrningsbrytare genom att följa stegen nedan.

1. Tryck kort på den övre tryckknappen 5 gånger i snabb följd på den trådlösa brytaren.

Statuslysdioden blinkar grönt.

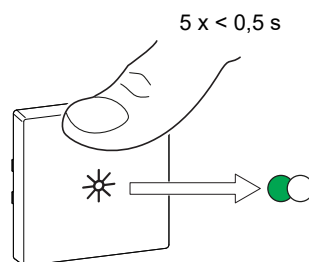

- Tryck kort på den första persiennstyrningsbrytaren 5 gånger i snabb följd.
Statuslysdioden blinkar grönt.

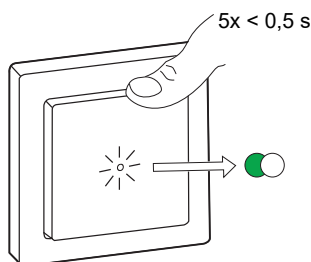

Jalusin kommer att gå upp och ner några gånger. Vid genomförd parkoppling slocknar statuslysdioden på den trådlösa brytaren och persiennstyrningsbrytaren stängs av.

VIKTIG: Kontrollera att parkopplingen lyckades innan du fortsätter med samma kanal.

- Upprepa steg 1.
- Upprepa steg 2 på den andra persiennstyrningsbrytaren.

Jalusin kommer att gå upp och ner några gånger. Vid genomförd parkoppling slocknar statuslysdioden på den trådlösa brytaren och persiennstyrningsbrytaren stängs av.


Parkoppla 2 kanals med 2 persiennstyrningsbrytare

Om du vill parkoppla den trådlös brytaren med 2 kanaler med 2 persiennstyrningsbrytare måste du ändra din trådlösa brytare till 2-kanalsdrift. Se Växla från 1-kanals- till 2-kanalsdrift.


OBS: Ta inte bort vippan från persiennstyrningsbrytarna.

- Tryck kort på den högra övre tryckknappen 5 gånger i snabb följd på den trådlösa brytaren.

Statuslysdioden blinkar grönt.

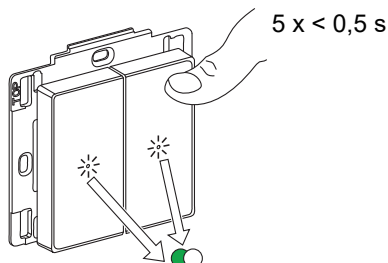

- Tryck kort på den första persiennstyrningsbrytaren 5 gånger i snabb följd.
Statuslysdioden blinkar grönt.

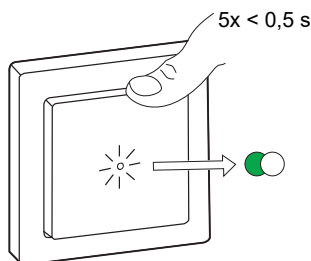


Jalusin kommer att gå upp och ner några gånger. Vid genomförd parkoppling slocknar statuslysdioden på den trådlösa brytaren och persiennstyrningsbrytaren stängs av.

VIKTIG: Kontrollera att parkopplingen lyckades innan du fortsätter med den vänstra kanalen.

3. Tryck kort på den övre vänstra tryckknappen 5 gånger i snabb följd på den trådlösa brytaren.

Statuslysdioden blinkar grönt.

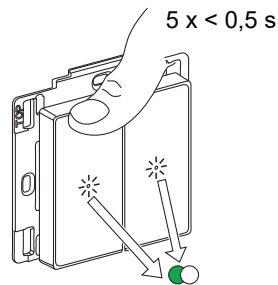


4. Upprepa steg 2 på den andra persiennstyrningsbrytaren.

Jalusin kommer att gå upp och ner några gånger. Vid genomförd parkoppling slocknar statuslysdioden på den trådlösa brytaren och persiennstyrningsbrytaren stängs av.


Använda persiennstyrning

Du kan styra persiennerna med den trådlösa omkopplaren.

- Tryck länge på den trådlösa omkopplaren ($> 0,5$ s) för att flytta persiennstyrningen uppåt eller nedåt.
 - Tryck för att öppna persiennstyrningen (A)
 - Tryck för att stänga persiennstyrningen (B)

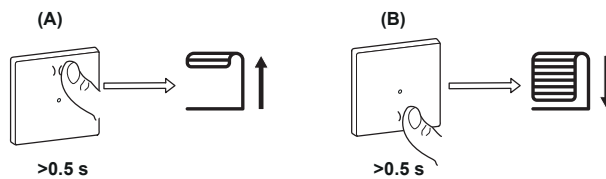

- Tryck kort på ovansidan eller undersidan av den trådlösa omkopplaren ($< 0,5$ s) för att stoppa rörelsen på persiennstyrningen (C).
- Tryck kort på ovansidan eller undersidan av den trådlösa omkopplaren ($< 0,5$ s) för att justera lamellpositionen (D).

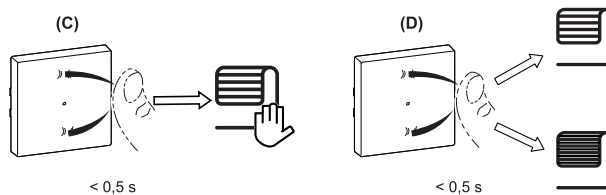

Återställa enheten i Quick Home Connect

Enheterna måste återställas i följande fall:

- Ta bort parkopplingen i Quick Home Connect:
- Referera till
 - Återställa den trådlösa omkopplaren
 - Återställa persiennstyrningsbrytaren

När återställningen är klar: Den trådlösa omkopplaren och enheten återgår till fabriksinställningarna.

- Integrering i ett Wiser-system
 - Om du vill integrera enheterna i Wiser-systemet ska du återställa alla enheter i Quick Home Connect och se parkoppla enheten med Wiser Hub.

Lysdiodsindikeringar i Quick Home Connect

Parkoppla enheten i Quick Home Connect

Användaråtgärd	Lysdiodindikering	Status
Tryck på tryckknappen 5 gånger i snabb följd.	Lysdioden blinkar grönt en gång i sekunden. 	Parkopplingsläget är aktivt i 60 sekunder. När parkopplingen är slutförd slutar lysdioden att blinka. 

Felsökning i Quick Home Connect

Symptom	Möjlig orsak	Lösning
Lysdioden lyser gult på enheten.	Parkopplingen slutfördes inte och fabriksinställningarna återställdes.	Parkoppla den trådlösa brytaren och enheten igen. Se • Persiennstyrningsbrytare, sida 6
Den trådlösa brytaren kan inte styra enheten på ett tillförlitligt sätt.	Den trådlösa brytaren och enheten är för långt ifrån varandra.	Placera den trådlösa brytaren närmare enheten.
	Den trådlösa tryckknappen har förlorat parkopplingen.	Parkoppla enheten igen. Se • Persiennstyrningsbrytare, sida 6
	Batteriet i den trådlösa brytaren är slut.	Byt ut batteriet till den trådlösa brytaren

Scenario	Procedur
Styr flera enheter med en trådlös tryckknapp.	Om du vill styra flera enheter med en enda trådlös brytare börjar du med att parkoppla den med en enhet. Använd sedan samma trådlösa tryckknapp för att parkoppla den med ytterligare enheter. OBS: Du kan parkoppla upp till 7 enheter till en enda trådlös brytare.
1-kanals trådlös brytare med enheter (strömställare, dimmer, jalousistyrning eller vägguttag).	Parkoppla den trådlösa brytaren med någon av enheterna (strömställare, dimmer, jalousistyrning eller uttag).
2-kanals trådlös brytare med enheter (strömställare, dimmer, jalousistyrning eller vägguttag).	Parkoppla antingen vänster eller höger trådlös brytare med någon av enheterna (strömställare, dimmer, jalousistyrning eller uttag). Du kan också parkoppla en annan vippa från den trådlösa brytaren med en annan enhet.

Pairing the device with the Wiser Hub


Using the Wiser Home app, pair your blind control switch with the **Wiser Hub** to access and control the blind control switch.

1. On the **Home** screen, tap .
2. Tap **Devices** >  > **Shutters** > **1-Gang Switch**.

FÖRSLAG: You can also navigate by tapping **Control** >  > **Shutters** > **1-Gang Switch**.


3. Tap **Scan QR code** and allow the Wiser Home app to access your camera. Then, scan the QR code located on the device.

OBS: If you are unable to find the correct QR code, tap **I can't find the correct QR code** to pair the device manually and proceed to step 4.

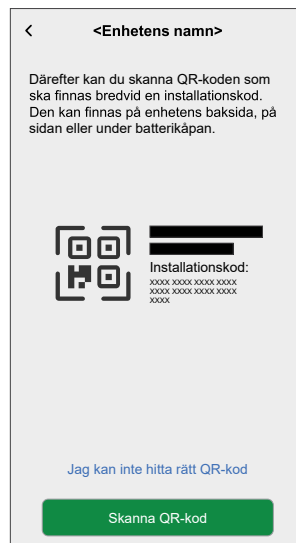


If the QR code is incorrect, a message **Incorrect QR code scanned** will appear. Tap **I can't scan the QR code** and choose one of the following options:


- **(A):** Enter the **Mac Address/EUI-64** and **Install Code**, then tap **Connect**. The app will verify if the Mac Address/EUI-64 and Install code are valid.
- **(B):** Tap this option if you are unable to find the Mac Address/EUI-64 and Install code.

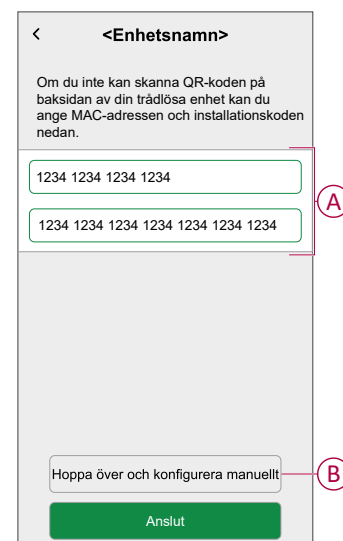

4. Once the device is validated, tap **Next**, short-press the push button on the blind control switch 3 times and make sure that the LED blinks amber.

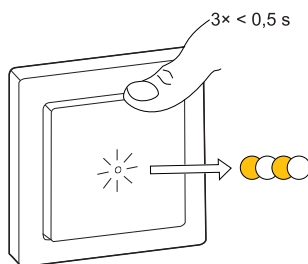

Wait for a few seconds until the LED turns green and the app confirms that the device is joined.

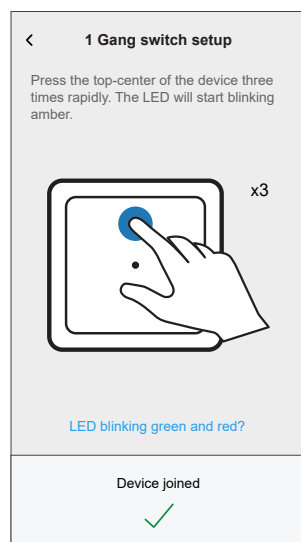

OBS: If the LED is blinking green and red, see the instructions by tapping **LED blinking green and red?**.

5. Tap , enter a name of the device.
6. Tap **Next** and assign the device to a new room or an existing room and tap **Submit**.
7. Tap **Next** >  and select a **Device Type**:
 - **Shutter**: Proceed to step 8.
 - **Shutter with tilting slats**: Proceed to step 9 to 11.
8. Tap **Shutter** > **Next** and enter the open/close duration of shutter. Refer to Setting default run time, sida 15.
9. Tap **Shutter with tilting slats** > **Slat Type**, select a slat type and tap **Set**:
 - Horizontal
 - Tilted
 - Vertical
10. Tap **Next** and enter the following durations:
 - a. **Open duration**: Time taken to open the shutter.
 - b. **Close duration**: Time taken to close the shutter.
 - c. **Tilt duration**: Time taken to rotate the slats completely from closed to open position.

Refer to Setting default run time, sida 15.
11. Tap **Submit**.

Once the pairing process is completed, the device name is listed on the **Control** tab under the **All** and **Room** tabs.

Konfigurera enheten


Selecting the device location

Using the Wiser Home app, you can add the blind control switch to any room (such as living room, bedroom, kitchen etc).

1. On the **Home** screen, tap .
2. Tap **Devices > Shutters > Blind control switch or Shutter slat > Location** (A) to assign the blind control switch to an existing room or a new room (B) and tap **Submit**.

OBS:


- If the device is already assigned, you can remove it from the existing room by tapping **Remove from Room**.
- Blind control switch is the name given to the device when pairing with the **Wiser Hub**. You can assign a name according to your shutter type. Example, Shutter slat.

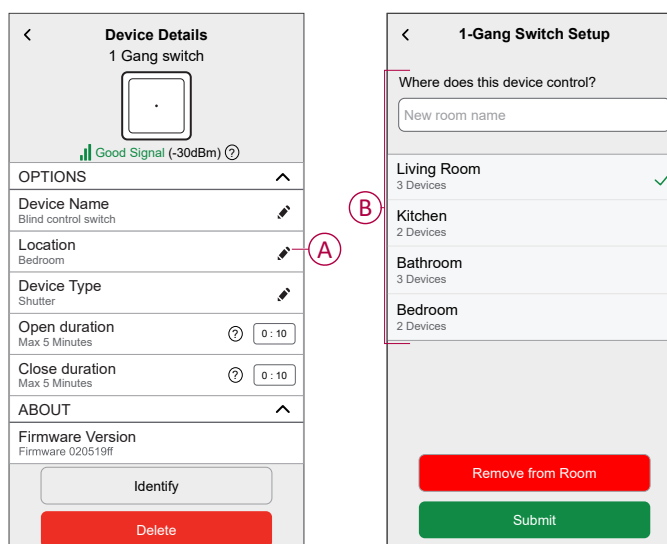

Renaming the device

You can rename the device using the Wiser Home app.

1. On the **Home** screen, tap .
2. Tap **Devices > Shutters > Blind control switch > Device Name (A)** to rename the device.

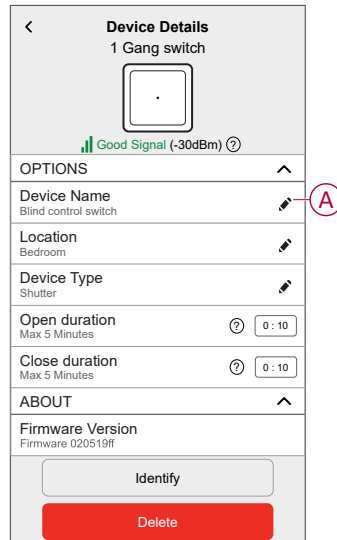


Selecting device type

Using the Wiser Home app, you can change the device type according to your need.

OBS: The device type was selected as **Shutter** when pairing with the **Wiser Hub**. You can change the device type as **Shutter with tilting slats** if it has a tilt function.

1. On the Home screen, tap .
2. Tap **Devices > Shutters > Blind control switch**.
3. Tap  (A) and select a device type.
4. If the device type is selected as **Shutter with tilting slats**, tap  (B) and select a slat type (C).

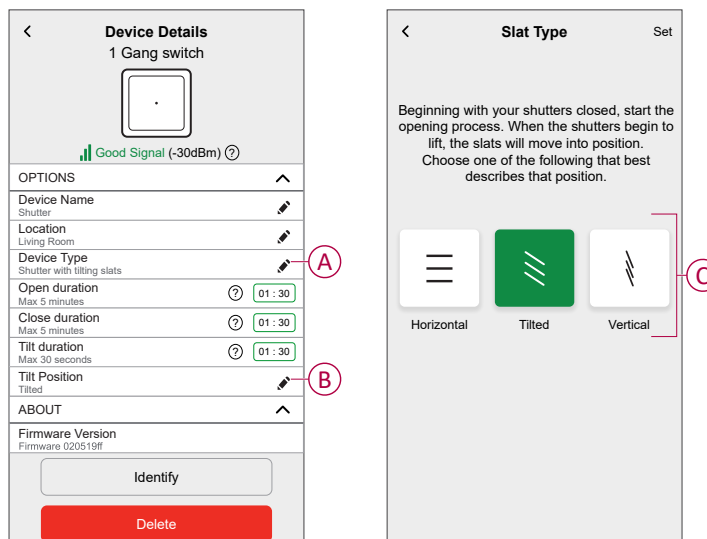5. Tap **Set**.

Ställa in standardkörtid

Varje jalusimotor varierar i den tid det tar att slutföra öppnings-/stängningsrörelsen. Därför måste man ställa in jalusins öppnings-/stängningstid i appen.

Om du vill fastställa standardkörtiden öppnar/stänger du jalusin manuellt.

1. Registrera hur lång tid det tar att öppna/stänga slutaren helt.
2. Registrera hur lång tid det tar att vrida lamellerna helt från stängda till öppna lägen för slutare med lutningslatur.

Följ proceduren enligt slutartypen:

- Jalousi, sida 15
- Jalousi med lutningslameller, sida 17

Shutter

1. On the Home screen, tap .
2. Tap **Devices > Shutters > Blind control switch**.

3. Tap **Open duration/Close duration** (A) and enter the recorded shutter opening/closing time.

Enhetsdetaljer
1-kanals jalousi

Bra signal (-30 dBm) ?

ALTERNATIV ^

Enhetsnamn Jalousi

Plats Vardagsrum

Enhetsyp Jalousi

Öppningstid ? 01:30
Max. 5 minuter

Stängningstid ? 01:30
Max. 5 minuter

OM ^

Firmware-version
Firmware 020519ff


Identifiera

Ta bort

Shutter with tilting slats

1. On the Home screen, tap .
2. Tap **Devices > Shutters > Shutter with tilting slats**.
3. Tap **Open duration/Close duration (A)** and enter the recorded shutter opening/closing time.
4. Tap (B) and enter the slat tilt duration according to the tilt position.

VIKTIG: The minimum value to set the default time for Tilt duration is 01.00 s. If you set a value less than 01.00 s, it will not be saved.

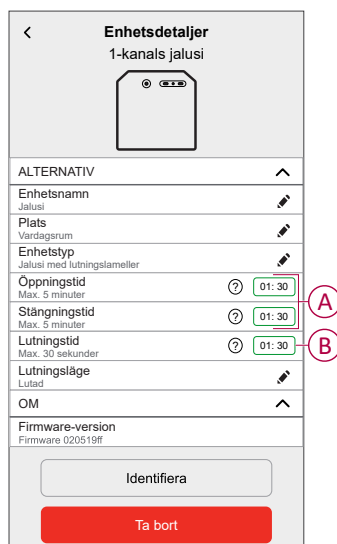

Enhetsdetaljer
1-kanals jalousi

ALTERNATIV

Enhetsnamn
Jalousi

Plats
Vardagsrum

Enhets typ
Jalousi med lutningslameller

Öppningstid
Max. 5 minuter 01:30

Stängningstid
Max. 5 minuter 01:30

Lutningstid
Max. 30 sekunder 01:30

Lutningsläge
Lutad

OM

Firmware-version
Firmware 020519ff

Identifiera

Ta bort

Shutter Calibration

Shutter calibration with Wiser app

The shutter motor is supplied in an uncalibrated state. Each shutter motor varies in the time it takes to complete the opening/closing movement (i.e., edge to edge).


VIKTIG:

- It is necessary to select the device type and set the default run time before proceeding with shutter calibration. Refer to *Selecting device type*, sida 14 and *Setting default run time*, sida 15 .
- Do not use the shutter either manually or on the app during calibration to avoid interruption.
- Follow the procedure for shutter calibration according to the device type: **Shutter** or **Shutter with tilting slats**.

Shutter


1. Upon setting the default run time, go to the **Control** tab, tap **All** devices or the room tab where the device is located.
2. On the device control screen, drag the sliding bar up/down to set the desired shutter opening percentage (A).

The shutter opens completely and then it reaches to the desired position set in step 2. The shutter is now calibrated.

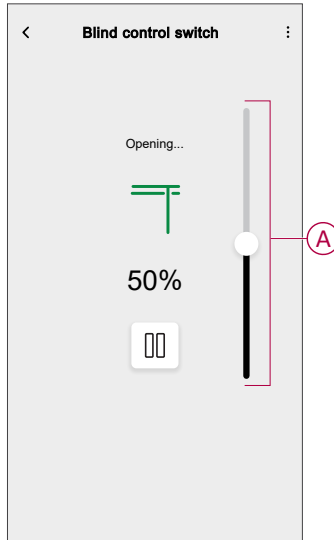


Shutter with tilting slats

1. On the **Control** tab, tap **All** devices or the room tab where the device is located.
2. On the device control screen, in the **Position** tab, drag the sliding bar up/down to set the desired shutter opening percentage (A).

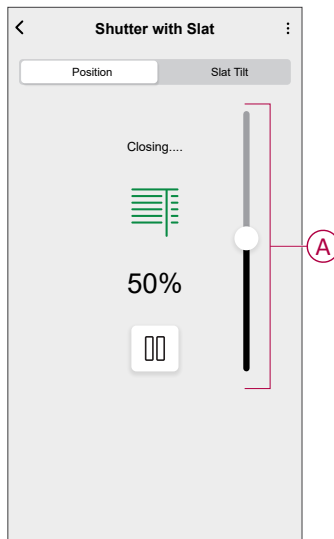

3. Tap **Slat Tilt** tab, drag the sliding bar up/down to set the desired shutter opening percentage (B) according to any one of the following tilt position:

- Horizontal
- Tilted
- Vertical

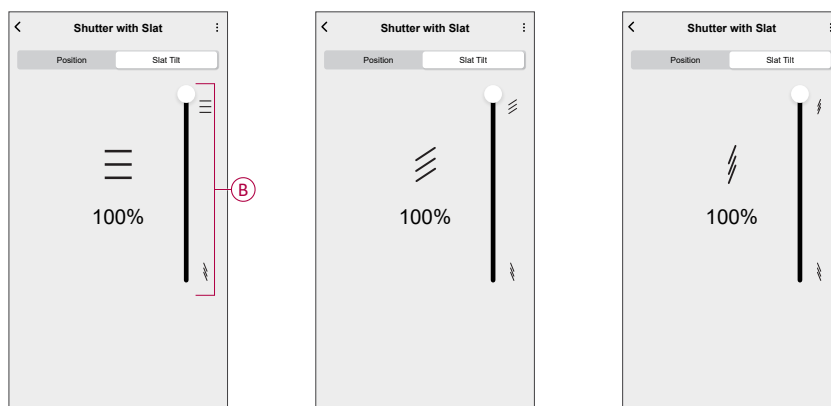

Jalusikalibrering utan Wiser-app


För att ställa in kalibreringen utan Wiser-app:

1. Tryck in de nedre och övre tryckknapparna i 3 sekunder.

Statuslysdioden blinkar grönt.


- Om jalousin inte är helt öppen börjar den att öppnas och når toppositionen.
- Om jalousin redan befinner sig i öppet läge rör sig inte jalousin.

OBS: Lysdioden blinkar grönt genom hela kalibreringsprocessen.

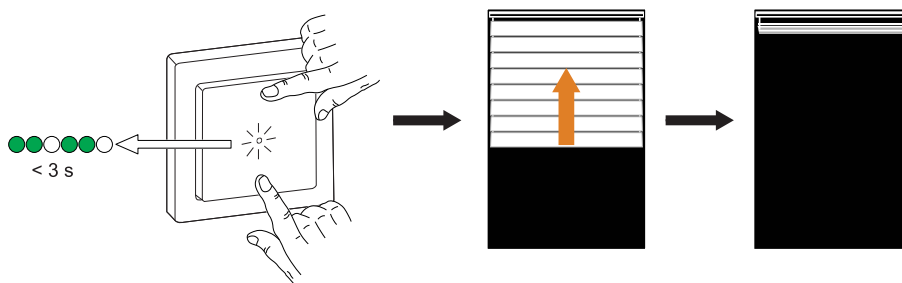


2. Tryck kort på den övre tryckknappen när jalousin är helt öppen.

Jalousin börjar stängas och når det nedre läget.

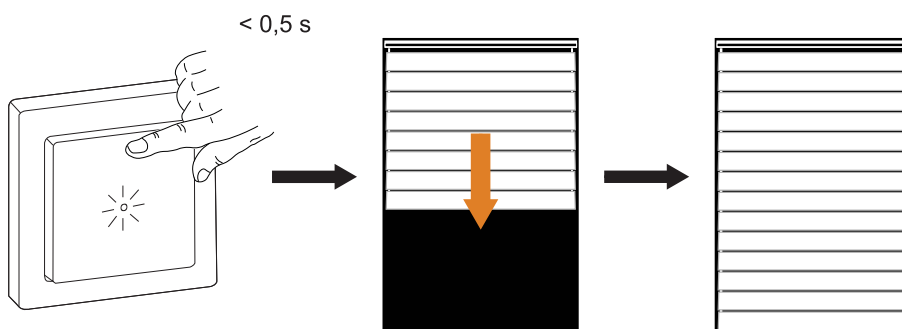

3. När jalousin når det nedre läget trycker du omedelbart in den övre tryckknappen en gång.


Jalousin börjar öppnas och når toppositionen.

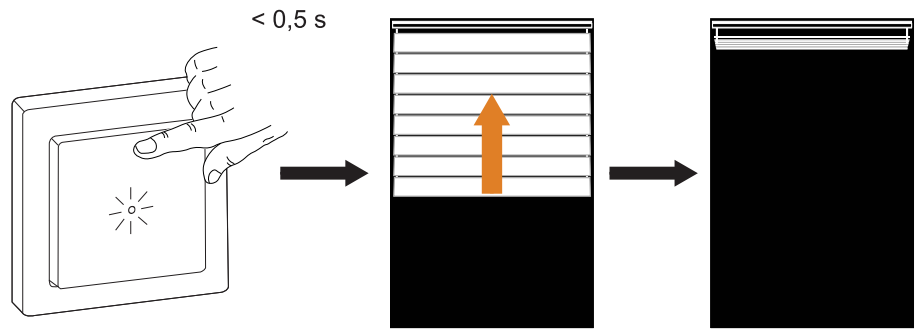

4. När jalousin når det övre läget trycker du omedelbart in den övre tryckknappen en gång.

Jalousin börjar röra sig och når automatiskt en mittposition för att slutföra kalibreringen.

OBS: Det exakta jalousiläget beror på jalousityp, motor och mekanisk konstruktion. Baserat på detta kommer mittpositionen att skilja sig åt.

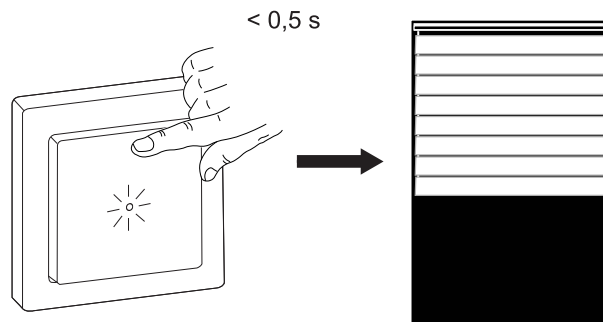

Seasonal Comfort Mode

The seasonal comfort mode uses the predicted temperature of a location or information from the light and temperature sensors to determine the temperature of a room and maintain a desired temperature in it by opening or closing the shutters.

It is a solution that efficiently maintains the desired temperature of a room in all seasons:

- Winter: In winters, the shutters stay open during days and close after sunset. This uses the maximum natural heat to maintain the desired room temperature.
- Summer: In time summers, the shutters close during the day such that the desired temperature is maintained in a room while allowing a good level of light inside the room.
- Mid-seasons: In seasons other than summer or winter:
 - If the highest temperature of a day reaches 22° C or above, the seasonal comfort mode operates the shutters the same as in summers.
 - If the highest temperature of a day is below 22° C, the seasonal comfort mode operates the shutters the same as in winters.

The Seasonal Comfort Mode adapts its operation based on the devices available in your system, offering three levels of algorithm efficiency. Each level improves the comfort and energy savings by integrating additional data sources:

- Basic level - Control based on time & geographical location:

At this level, it uses your home's geographical location and the time of day to manage shutters automatically based on the estimated sunrise and sunset times. This maintains the optimum light and temperature at home. This level is ideal for users who want a simple, automated solution without additional sensors.
- Enhanced Level - Temperature - Driven Optimization:

At this level, it uses the local indoor and outdoor temperature in addition to the time and your home's geographical location. It manages the shutters dynamically based on the real-time temperature conditions to improve comfort.
- Advanced Level - Best-in-class optimization with light sensors:

At this level, it further improves the shutter management by using the real-time light intensity measured by the outdoor motion sensors and the indoor and outdoor temperature.

It offers maximum efficiency by adapting shutter movements based on actual temperature and natural light, rather than relying only on the estimated sunrise/sunset times.

FÖRSLAG: Choosing the right level for shutter operation:

The Seasonal Comfort Mode adapts to the devices installed in your system. Even if you don't have all the required sensors, you can still benefit from the feature at a basic level. This flexible approach ensures that you can experience optimized comfort and energy efficiency, regardless of your system setup.

However, for the best results, we recommend using the full set of compatible devices.

OBS: The seasonal comfort mode performs accurately when the indoor and outdoor temperature sensors (Temperature/Humidity Sensor) and outdoor motion sensors are installed at home.

VIKTIG: The IP rating of the sensors used for the seasonal comfort mode are as follows:

Sensors	IP rating
Outdoor Motion Sensor	IP66 - Sensor is protected against dust and water ingress.
Temperature/Humidity Sensor	IP20 - Sensor is protected against solid objects of size more than 12mm.

Therefore, they should be installed at a suitable location at home.

Configuring the seasonal comfort mode


Using the Wiser Home app, you can configure the seasonal comfort mode to define the desired temperature and location of the shutters and sensors in the home.

Pre-requisite:

- Shutters must be installed at home.
- Add your address to the account. Tap  > **Account** > **My Home**.
- Calibrate your shutters. Refer to [Shutter calibration](#), sida 17 or [Shutter calibration with tilting slats](#), sida 17 based on the shutter type.
- The Outdoor Motion Sensor detects light and external temperature.
- Make sure that the Outdoor Motion Sensor is facing towards the floor and not facing the sun.


To configure the seasonal comfort mode:

1. On the **Home** screen, tap  > **Smart Modes** > **Seasonal Comfort Mode**.

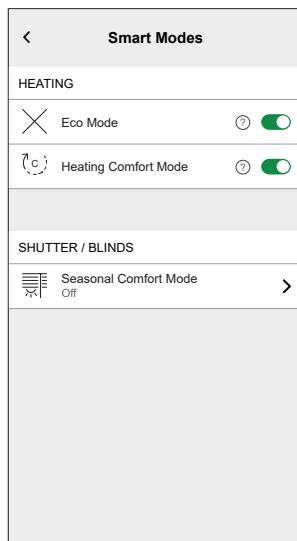


Details about the seasonal comfort mode are displayed.


2. Swipe left to see the additional details and tap **Next > Continue** to start configuring the seasonal comfort mode.

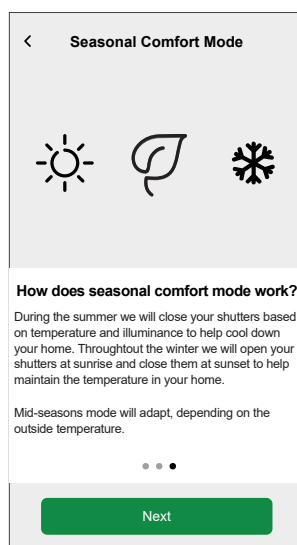

3. Define the orientation in which the shutters are installed at home:
 - a. Select the orientation in which each shutter is installed at home and tap **Next**.

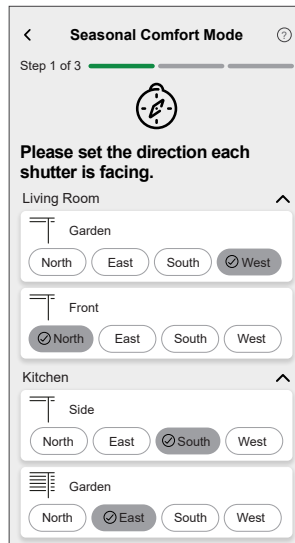

- b. If any shutter is covering a door, tap **Yes I have shutters over a door**.
FÖRSLAG: If no shutter is covering a door or you have an alternative way to enter your home, tap **No, next step** and continue with step 4. In this case, the seasonal comfort mode close the shutters fully while you're outside.
 - c. Select the shutters covering the doors from the list (A) and then tap **Next**.

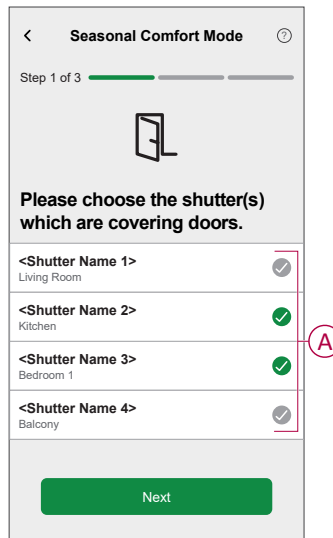

The selected shutters will close up to 50% in order to make sure that you do not get locked out when doors are covered by shutters.

4. Set the desired inside and outside discomfort temperatures and then tap **Next**.

< Seasonal Comfort Mode ⓘ

Step 2 of 3

Please choose Your discomfort temperatures.

INDOOR DISCOMFORT TEMPERATURE

24°

25°

26°

OUTSIDE DISCOMFORT TEMPERATURE

26°

27°

28°

Next

OBS: Discomfort temperature refers to a temperatures above which an individual feels uncomfortable. When the ambient temperature raises above the set inside and outside discomfort temperatures, the seasonal comfort mode closes the shutters to maintain the indoor temperature. Maintaining a comfortable indoor temperature helps improve well-being and productivity.

5. Select the orientation in which the light sensors and the outside temperature sensors are installed at home:
 - a. Select the orientation in which the light sensors are installed and tap **Next**.

Seasonal Comfort Mode

Step 3 of 3

Please set the direction your light sensors are facing. (Optional)

Back Balcony

<Sensor Name>

North East South West

Side Balcony

<Sensor Name>

North East South West

Next

OBS: If the light sensors are not installed, this page will not appear.

- b. Tap **Yes** to select the orientation of the outside temperature sensors.

Outside Temperature Sensors

Do you currently have any temperature sensors installed outside?

No Yes

Seasonal Comfort Mode

Step 3 of 3

Please make sure environmental conditions are compatible with the sensor considered. You can check the user manual for further detail.

Please set the direction your outside temperature sensors are facing. (Optional)

Back Balcony

<Temp and Hum Sensor 1>

North East South West

Side Balcony

<Outdoor Motion Sensor 1>

North East South West

Next

OBS: You can tap **No** if the outside temperature sensors are not installed.

6. Tap **Next** to define the time when the seasonal comfort mode will **BEGIN AT** and the time when it will **FINISH AT**.

Seasonal Comfort Mode ⓘ

Step 3 of 3



Please select when you would like your seasonal comfort mode to begin and finish.

BEGIN AT

-10 minutes

Sunrise

+10 minutes

FINISH AT

-10 minutes

Sunset

+10 minutes

Next

OBS: You can start and stop the seasonal comfort mode some time before or after the sunrise/sunset.

This improves the accuracy of the settings when light sensors are not installed and your building is blocked by another building or a mountain that obstructs the sunlight from reaching your location.

7. Tap **Next**.

If all the rooms in the home have temperature sensors, configuration of the seasonal comfort mode is done.

8. If shutters are available in rooms without temperature sensors, you can control those shutters as follows:

OBS: Wiser Home app displays the rooms without temperature sensors in list (B).

Seasonal Comfort Mode

We have noticed you have shutters setup in rooms that do not have a temperature sensor or thermostat.

To be able to close these shutters, you can choose another room's temperature.

You can also choose not to set this and we will close the shutters in these rooms based on the outside temperature and light levels.

- Bedroom 1
- Bedroom 2
- Kitchen

Next

- Select a room from the list (B) and tap **Next**.
 - You can use one of the following as a reference temperature for the selected room:
 - Temperature detected by temperature sensor of another room.
 - Average temperature detected by all the temperature sensors at home.
- A. To use the temperature of another room as the reference temperature:
- Select a room from the list (C).

OBS: The temperature of the selected room will be considered as the reference temperature.

Seasonal Comfort Mode

Which other room in your home would you like to use to record the temperature for <Room Name>?

- Living Room
- Bedroom
- Kitchen

Use average home temp

- Go back to the previous page and tap **Next** to complete the setup.

< **Seasonal Comfort Mode**

We have noticed you have shutters setup in rooms that do not have a temperature sensor or thermostat.

To be able to close these shutters, you can choose another room's temperature.

You can also choose not to set this and we will close the shutters in these rooms based on the outside temperature and light levels.

Bedroom 1
Using temperature from the <Room Name> 

Bedroom 2
Using average home temperature 

Kitchen 

Next

B. To use the average temperature detected by all the temperature sensors as the reference temperature:

1. Tap **Use average home temp** (D).

< **Seasonal Comfort Mode**

Which other room in your home would you like to use to record the temperature for <Room Name>?

Living Room 

Bedroom 

Kitchen 

Use average home temp 

2. Tap **Yes, i'm sure** to complete the setup.

c. Tap **Done** to see the updated configuration.

Seasonal Comfort Mode



You're all good to go..

Seasonal comfort mode will now adjust your shutters to optimise heating and cooling in your home based on:

- ✓ The seasons of the year
- ✓ The brightness outside your home
- ✓ The time of day
- ✓ The temperature in and outside your home

You can come back here anytime to change these settings.

Done

< **Seasonal Comfort Mode** 

Seasonal Comfort Mode 

Shutters
3 active 

Temperature
Indoor 25°, Outdoor 27° 

Time
Sunrise +10, Sunset -10 

Light (LUX) sensors
2 active 

Outside temp sensors
2 active 

Other room sensors
3 active 

Seasonal comfort mode has been successfully configured. Your supported devices will now be adjusted to optimize heating and cooling in your home.

Setting the seasonal comfort mode


Using the Wiser Home app, you can change the configuration of the seasonal comfort mode.

Pre-requisite:

- Calibrate your shutters. Refer to [Shutter calibration](#), sida 17 or [Shutter calibration with titling slats](#), sida 17 based on the shutter type.

On the **Home** screen, tap  > **Smart Modes** > **Seasonal Comfort Mode**.

The **Seasonal Comfort Mode** set-up page is displayed, where you can update the following configurations:

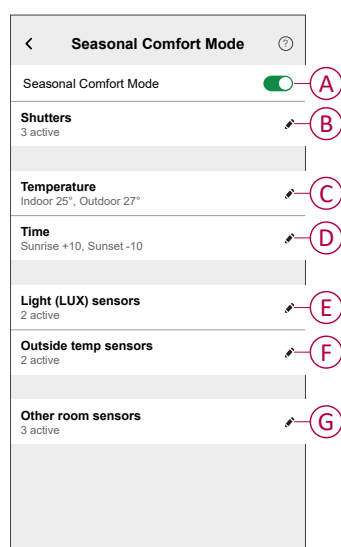

To change the configuration of the seasonal comfort mode:


A	Seasonal Comfort Mode: Tap the toggle switch to turn the seasonal comfort mode ON/OFF.
B	Shutters: Tap to change the orientation and location of the shutters in the Wiser Home app. Refer to Changing the shutter orientation and location , sida 30 for more details.
C	Temperature: Tap to change the threshold inside and outside temperatures in the Wiser Home app. Refer to Setting the threshold temperature , sida 31 for more details.
D	Time: Tap to change the start and end time of the seasonal comfort mode in the Wiser Home app. Refer to Setting the start and end time , sida 32 for more details.
E	Light (LUX) sensors: Tap to change the orientation of the light sensors in the Wiser Home app. Refer to Changing the orientation of the light sensors , sida 32 for more details.
F	Outside temp sensors: Tap to change the orientation of the outside temperature sensors in the Wiser Home app. Refer to Changing the orientation of the outside temperature sensors , sida 33 for more details.
G	Other room sensors: Tap to manage the shutter operation without temperature sensors. Refer to Managing the shutter operation without temperature sensor , sida 34 for more details.

Changing the shutter orientation and location

You can change the orientation and location of the shutter in Wiser Home app.

To change the orientation and location of the shutters:


1. In the **Seasonal Comfort Mode** set-up page, tap **Shutters**.
2. Update the orientation of the shutters and tap **Set**.

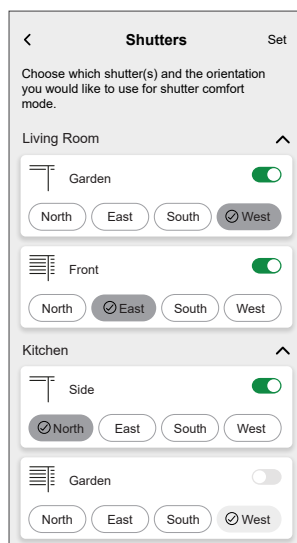

3. If any shutter is covering a door, tap **Yes I have shutters over a door** to define its location.

OBS: If no shutters cover a door, tap **No**.

4. Select the shutters covering the doors from the list (A) and tap **Finish**.

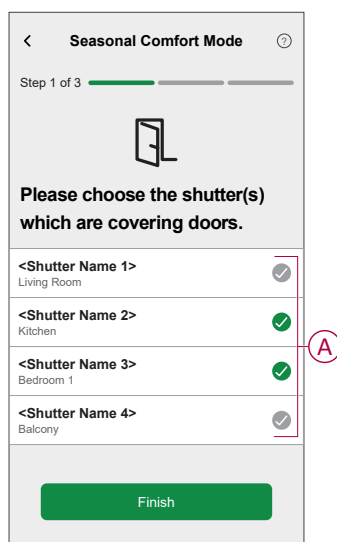

Setting the threshold temperature

Using the Wiser Home app, you can define the inside and outside temperature of a room above which the shutters shall close.

To set the threshold inside and outside temperature:

1. In the **Seasonal Comfort Mode** set-up page, tap **Temperature**.

2. Set the inside and outside desired temperatures and tap **Set**.

Setting the start and end time

Using the Wiser Home app, you can define the start and end time of the seasonal comfort mode.

To set the start and end time of the seasonal comfort mode:

1. In the **Seasonal Comfort Mode** set-up page, tap **Time**.
2. Select the time when the seasonal comfort mode will **BEGIN AT** and the time when it will **FINISH AT**.

OBS: You can start and stop the seasonal comfort mode some time before or after the sunrise/sunset.

3. Tap **Set**.


Changing the orientation of light sensors

You can change the orientation of the light sensors in the Wiser Home app.


To change the orientation of the light sensors:

1. In the **Seasonal Comfort Mode** set-up page, tap **Light (LUX) sensors**.

2. Tap  to see the available light sensors in Wiser Home app.

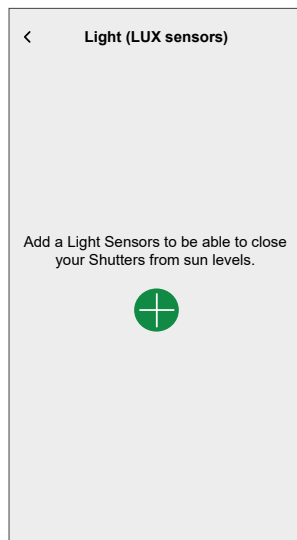

3. Select the orientation in which the light sensors are facing and tap **Set**.

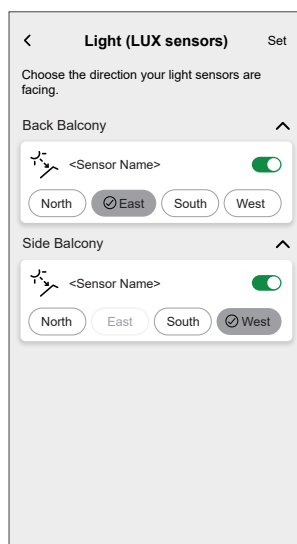


Changing the orientation of outside temperature sensors

You can change the orientation of the outside temperature sensors in the Wiser Home app.


To change the orientation of the outside temperature sensors:

1. In the **Seasonal Comfort Mode** set-up page, tap **Outside temp sensors**.

2. Tap  to see the available outside temperature sensors in Wiser Home app.

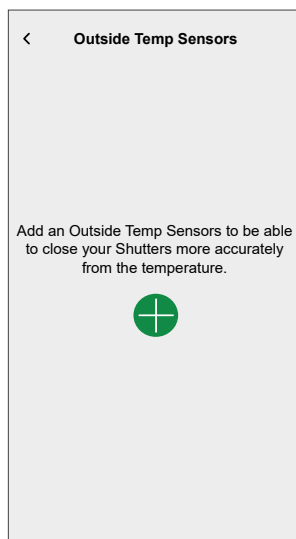

3. Select the orientation in which the outside temperature sensors are facing and tap **Set**.

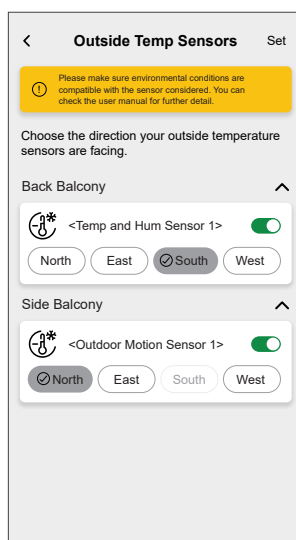


Managing shutter operation without temperature sensor

Using the Wiser Home app, you can manage the shutter operation of a room where no temperature sensor is installed.

To define the reference temperature:

1. In the **Seasonal Comfort Mode** set-up page, tap **Other room sensors**.


OBS: Wiser Home app displays the rooms without temperature sensors in list (A).

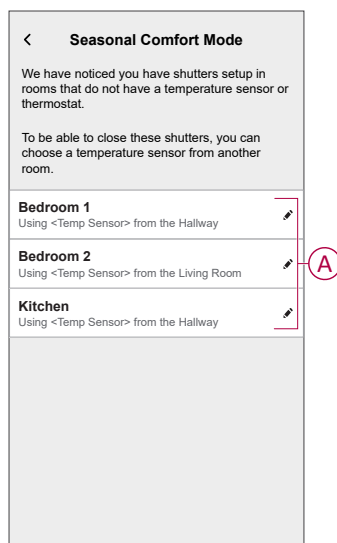

2. Select a room from the list (A).


3. You can use one of the following temperatures as a reference temperature for the selected room:
- Temperature detected by temperature sensor of another room.
 - Average temperature detected by all the temperature sensors at home.
- A. To use the temperature of another room as the reference temperature select a room from the list (B).

OBS: The temperature of the selected room will be considered as the reference temperature.

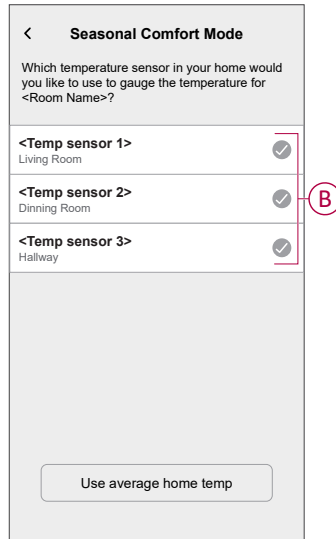

- B. To use the average temperature detected by all the temperature sensors as the reference temperature:

1. Tap **Use average home temp** (C).

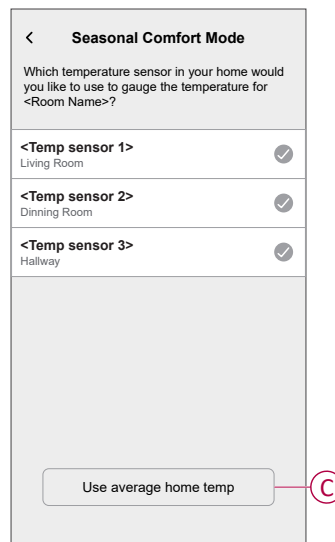

2. Tap **Yes, i'm sure**.


Pausing the seasonal comfort mode

Using the Wiser Home app, you can set the shutter position and pause the seasonal comfort mode for some time.



To pause the seasonal comfort mode:

1. On the **Control** tab, select the shutter for which you want to pause the seasonal comfort mode.

FÖRSLAG: Tap up/down button (A) to move the shutter to required position.

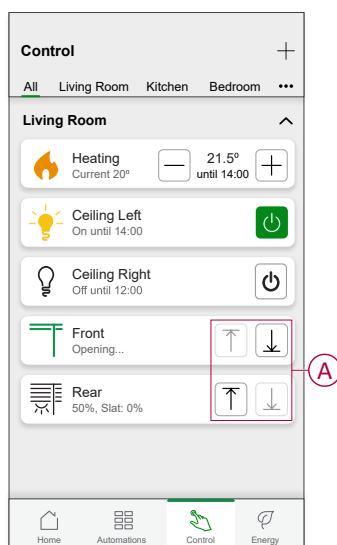

2. Tap the pause button to select the time for which you want to pause the seasonal comfort mode.

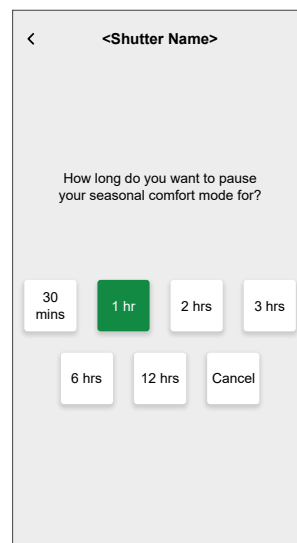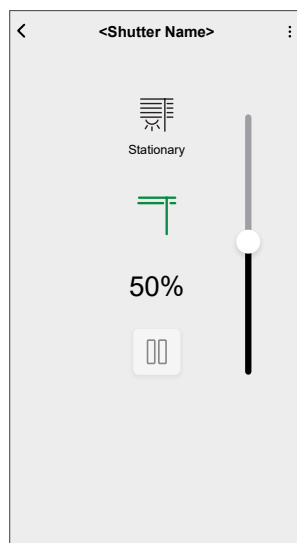


FÖRSLAG: You can tap **Cancel** at any time to stop the pause.

VIKTIG: If you manually override the shutter, the system will pause for 1 hour from the time of the first manual adjustment. However, we recommend to pause the seasonal comfort mode using the Wiser Home app.

Identifying the device

Using the Wiser Home app, identify the blind control switch among the devices available in a home.

1. On the **Home** screen, tap .
2. Tap **Devices > Shutters > Blind control switch** or **Shutter slat > Identify (A)**.

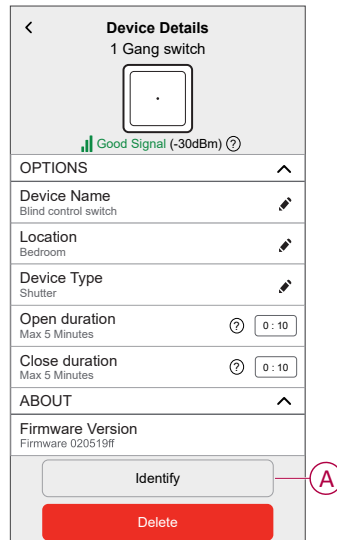


The status LED blinks red and the shutter opens/closes gradually, upon successful identification of the blind control switch or shutter slat.

3. Tap **OK** to finish identifying the device.

Removing the device from Wiser system

Using the Wiser app, you can remove the blind control switch from the system. To remove the device:

1. On the **Home** screen, tap .

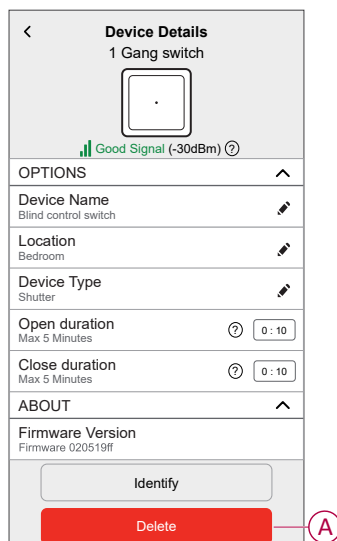2. Tap **Devices > Shutters > Blind control switch** or **Shutter slat > Delete** (A).**OBS:**

- Removing the device will reset the blind control switch. The LED starts blinking amber indicating that the blind control switch is ready for pairing.
- If there is a problem while pairing or resetting the blind control switch, refer to [Resetting the device](#), sida 39.

Resetting the device


You can reset the device to factory default manually.

Short-press the push button 3 times (<0.5 s) and then long-press the push button once (>10 s).

The LED blinks red after 10 s, and then release the push button.

Upon successful reset, the LED stops blinking. Then, the device restarts and blinks green for a few seconds.


OBS: After reset, the LED turns amber indicating that it is ready for pairing.

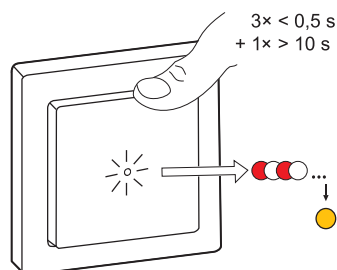

Använda enheten

Operating the device manually


- Long press the blind control switch ($> 0,5$ s) to move the shutter up or down (A).
 - Press (Λ) to open the shutter.
 - Press (v) to close the shutter.
- Short press ($< 0,5$ s) to stop the moving shutter (B).
- **For shutter with tilting slats:** When the shutter is not moving short press ($< 0,5$ s) the blind control switch to adjust the slat position (C).

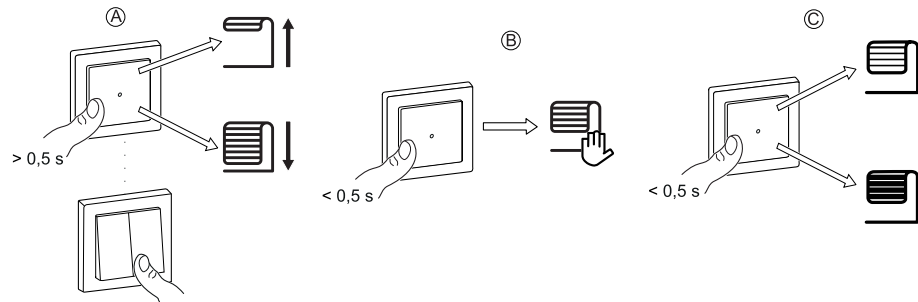

Opening/Closing the shutter using app

To open/close the shutter:

1. On the **Control** tab, tap **All** devices or the room tab where the device is located.
2. Tap ↑ ↓ (A) or (B) of the shutter or shutter slat to open/close it.

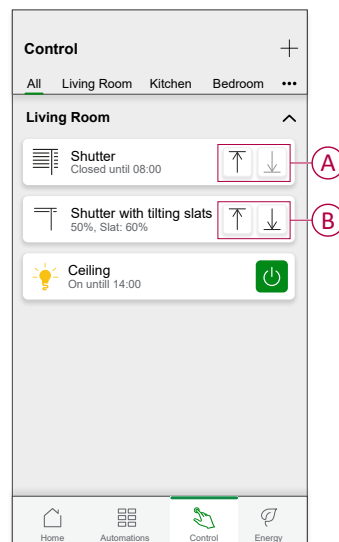

FÖRSLAG: You can also open/close the shutter or shutter slat:

- By selecting of the shutter or shutter slat and using the slider in the device control screen to open/close it.
- When you add it to your **Favourites**. To know more about **Favourite**, refer to **Managing Favourite** topic in the respective System User Guide.

OBS: If you only have a single device in the Wiser System, the **Control** tab will not be visible. All functions will be accessible through the **Home** screen.

Schema


Du kan ställa in scheman för att ange de tider då ett enhetsläge ändras.

Setting up a schedule

The shutter can be controlled and triggered by a schedule. Once the schedule is set, your system will follow the active schedule. You can create or modify the schedules at any time. The devices can be fully controlled by schedule. Once the schedule is set, the devices operates at a given time.


To create a schedule:

1. On the **Home** screen, tap  > **Schedules** > .
2. Enter a name of the schedule (A).
3. Select a device type (B).
4. Select the list of devices (C) to which the schedule must apply.
5. Tap **Create**.

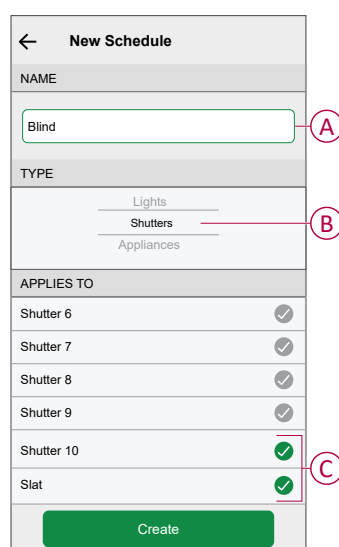

6. Tap  to add an event.

7. Select a state (Open/Closed/percentage) (D), time period (E) and tap **Set**.

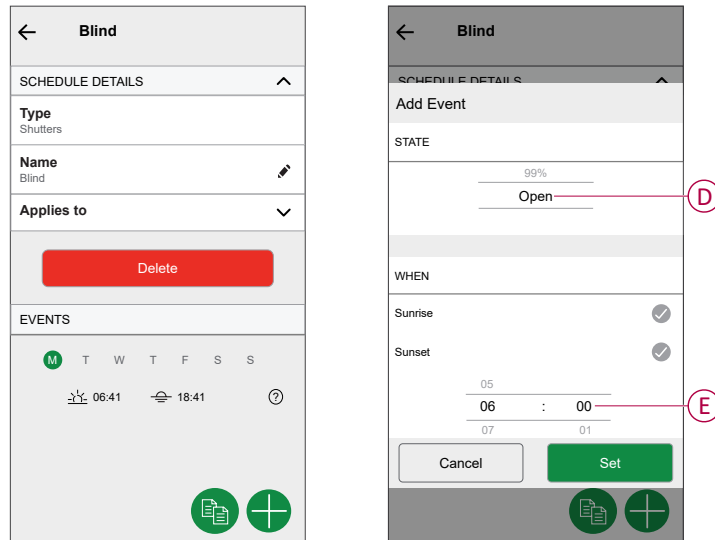

FÖRSLAG:

- You can add multiple schedules based on your requirement. Select days, tap , set on/off state and time.
- You can copy the existing schedule to another schedule or to the days of your choice. Tap .
 - Tap **Schedule** and select an existing schedule and tap **Copy**.
 - Tap **Day** and select the days you want to assign and tap **Copy**.
 - When the schedule begins, you can see the until time on the **Control** tab under the device name.
- On the top-right screen, tap  and select **Follow Schedule** toggle switch to turn On/Off the schedule.
- When the schedule begins, you can see the **until time** in the following screens:
 - Device Control Screen.
 - Control tab under the device name.
 - Favourite devices section on the home screen.

Redigera ett schema

- På skärmen **Hem** trycker du på **Automatiseringar**  > **Scheman**.
- Tryck på schemat som du vill redigera.

3. Tryck på **DETALJER FÖR SCHEMA** så kan du göra följande:
- Byt namn på schemat (A).
 - Inom menyn **Gäller för** (B) kan du välja bland de enheter som visas eller avmarkera de som redan är markerade.

OBS: När du redigerar ovanstående ändringar sparas schemat automatiskt.

4. Under menyn **HÄNDELSE** (C) kan du göra följande:
- Tryck på för att uppdatera en händelse, till exempel **STAT** (belysningen släckt eller dimningen i %), **NÄR** (soluppgång/solnedgång eller ett visst tidsintervall) och du kan också ta bort en händelse.
 - Tryck på **Ställ in** för att spara schemat.

Ta bort ett schema

1. På skärmen **Hem** trycker du på **automationer** > **Scheman**.
2. Tryck på schemat som du vill ta bort.
3. Tryck på **SCHEMAINFORMATION** trycker du på **Radera** och väljer sedan **OK**.

Scenarion


Med ett scenario kan du gruppera flera åtgärder som vanligtvis utförs tillsammans. Med appen Wiser Home kan du skapa scenarion utifrån dina behov.

Creating a moment

1. On the **Home** screen, tap .
2. Go to **Moments** and then tap  to create a moment.
3. Enter the name of the moment (A).
TIP: You can choose the cover image that represents your moment by tapping .
4. Tap **Add actions** (B) to select the list of devices.




5. Select the devices (C) you want to set an action and tap **Done**.

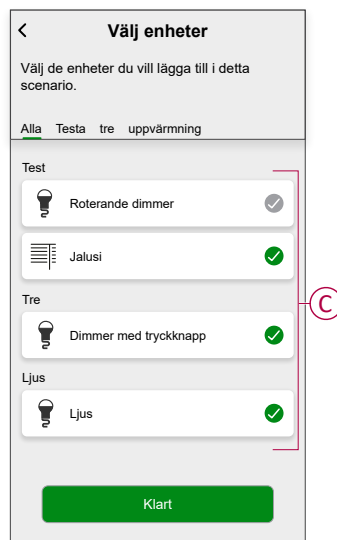

6. On the **Moment creator** page, select any one of the following device and set actions.


– **For shutter:**

- Drag the sliding bar up/down to open/close the shutter completely (D, E).
- Drag the sliding bar to keep the shutter in the preferred position.

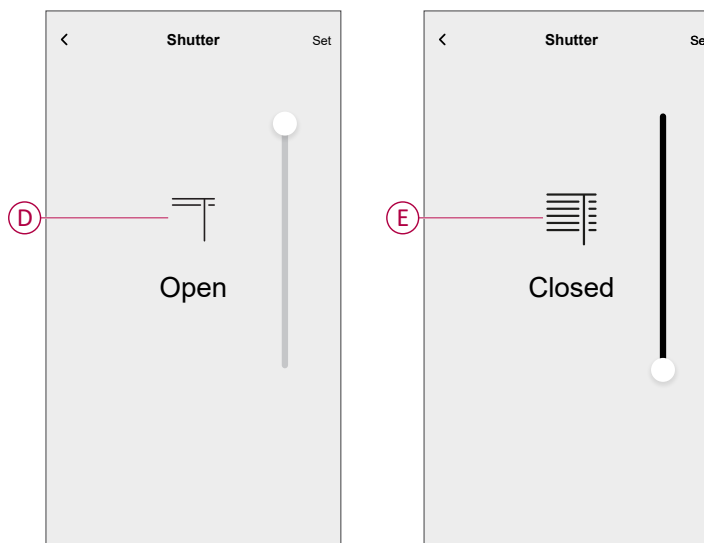

– **For Shutter slat:**

- Select **Position** (F) and drag the sliding bar up/down to open/close the shutter (G).
- Select **Slat Tilt** (F) and drag the sliding bar up/down to adjust the tilt position of the shutter (H).

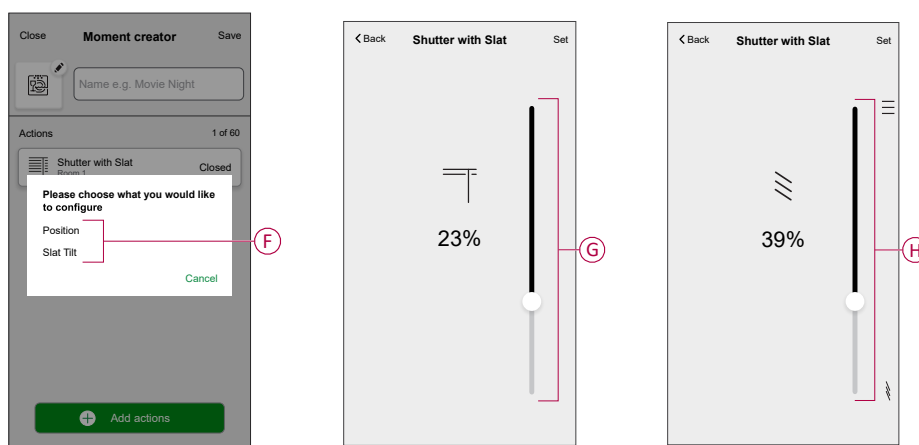

7. Tap **Set**.

8. Once all conditions are set, tap **Save**.

Once the moment is saved, it is visible on the **Moments** tab. You can tap on the moment to enable it.


FÖRSLAG:

- If you want to see the created moments on the **Home** screen, go to **Home** >  > **Home Screen** > **Moments** and enable the **Moments** toggle switch.
- You can also rearrange the moments by tapping **Edit** from the **Moments** tab on the **Home** screen, or by tapping **Automation** > **Moments** > **Reorder**.

Editing a moment

To edit a moment:

1. On the **Home** screen, tap .
2. Go to **Moments**, locate the moment you want to edit and tap .
3. On the **Moment Editor** page, you can perform following changes:
 - Change the icon .
 - Rename the moment.
 - Tap each action to change the settings.
 - To remove an action, slide the action to the left and then tap  (A) to delete it.
 - Tap  **Add actions** (B) to add new action.

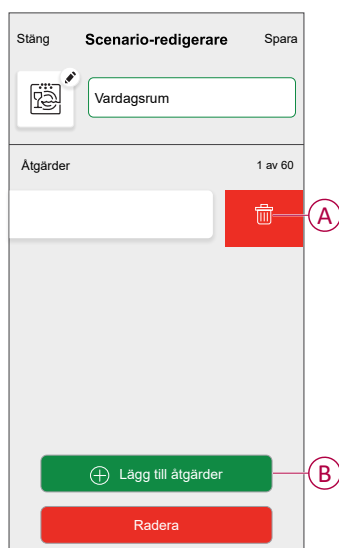

4. Tap **Save** to save the changes.

Deleting a moment

To delete a moment:

1. On the **Home** screen, tap .
2. Go to **Moments**, locate the moment you want to delete and tap  (A).

3. On the Moment Editor page, tap **Delete** (A) and tap **OK** (B).



Automation


Med en automation kan du utlösa en åtgärd automatiskt eller vid schemalagda tider när vissa villkor är uppfyllda. Med appen Wiser Home kan du skapa automationer utifrån dina behov. I det här exemplet visas hur en enhet fungerar när villkoret är uppfyllt.

Creating an automation

Follow the steps to create an automation:


1. On the **Home** screen, tap .
2. Go to **Automation** and then tap  to create an automation.
3. Enter the name of the automation (A) and select any of the following conditions to trigger an automation.
 - **All conditions:** All conditions must be met to trigger an automation.
 - **Any condition:** Any one of the condition must be met to trigger an automation.

TIP: You can choose the cover image that represents your automation by tapping .

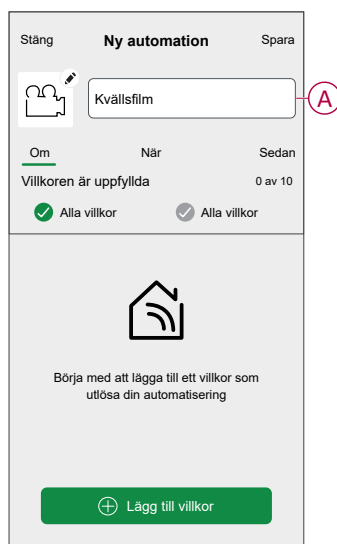


4. Tap **Add conditions** (B) and select any of the following (C).
 - **Device status change** (Select the device): An automation will be triggered based on a device status, such as the opening of a shutter or the detection of movement by a motion sensor.
 - **Away Mode** (Enable or Disable): Away mode can also trigger an automation to turn on the lights, close the shutter etc. For more information about **Away Mode**, refer to the system user guide.

OBS: Maximum 10 conditions can be added.

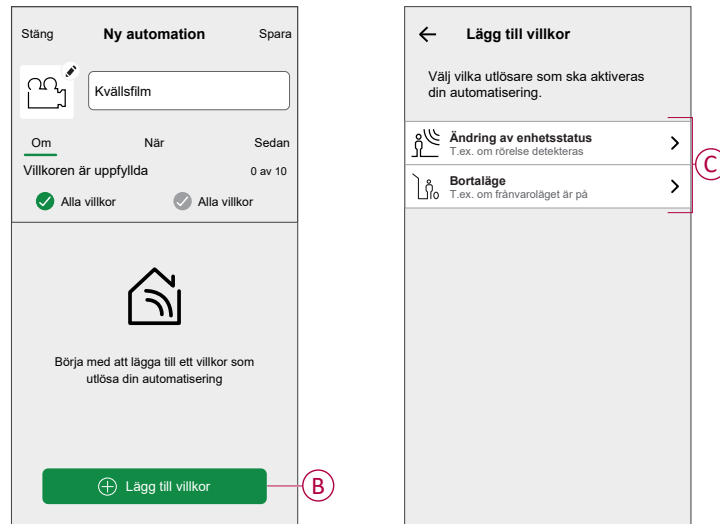

- a. In this example, we will select **Device status change** and choose a device to set the condition. Then, we will select the state of the device that will trigger the automation, such as the ON state of a relay switch.

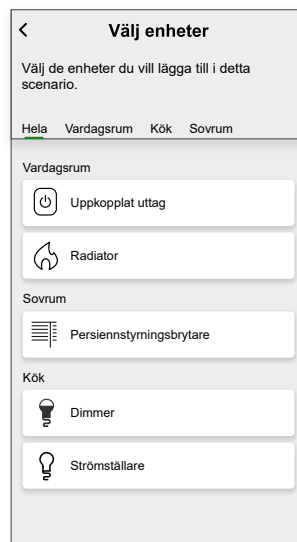

- b. After selecting the device, tap **Set** on the top-right screen.

FÖRSLAG: If you want to change the condition, swipe it to the left and tap the bin icon. Then add a new condition with the required parameters.

5. To start your automation at a particular time, tap **When > Add time** and select any of the following (D):



OBS: Maximum 10 time entries can be added.

- **Specific time of day** - The automation will trigger at a specific time of the day, such as at sunrise, sunset, or at 8:00 AM.
- **Period of time** - The automation will be trigger during time periods such as from sunrise to sunset, or sunset to sunrise, or from 8:00 AM to 5:00 PM.

6. To add an action, tap **Then > Add an action** and select any of the following (E):



OBS: Maximum 10 actions can be added.

- **Control a device** - Select the device and set the desired state of the device.
- **Send notification** - You will be notified if the condition is met.
- **Activate a moment** - Select a Moment to activate during the automation.
- **Wait** - This option allows you to add a delay in an automation sequence. You can set the wait time in increments of 1 hour and 1 minute, up to a maximum of 24 hours. This feature is useful for delaying actions within an automation.

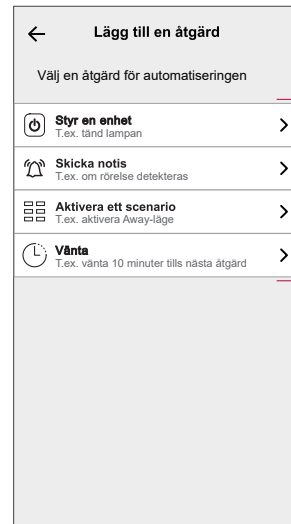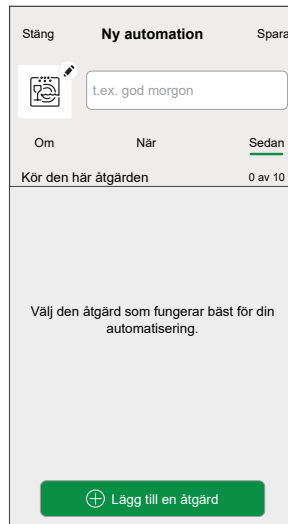


- a. In this example, we will initially select **Control a device** and select **Shutter (F)** as the device to trigger an action, later, we will select for the **Wait** option to add a delay in the automation.

VIKTIG: You cannot select the same device that you selected for **Add conditions** in Step 4. The device should be different.

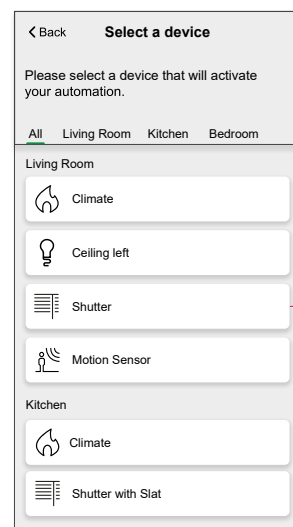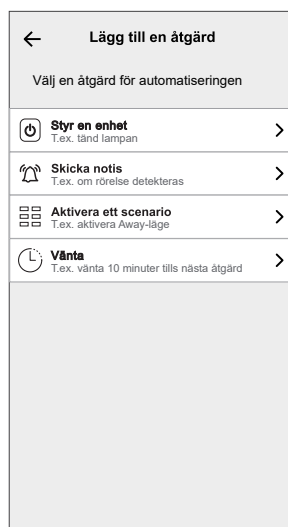

- b. Set the state, such as the Open or Closed state of the Shutter. Then, tap **Set** located on the top-right screen.

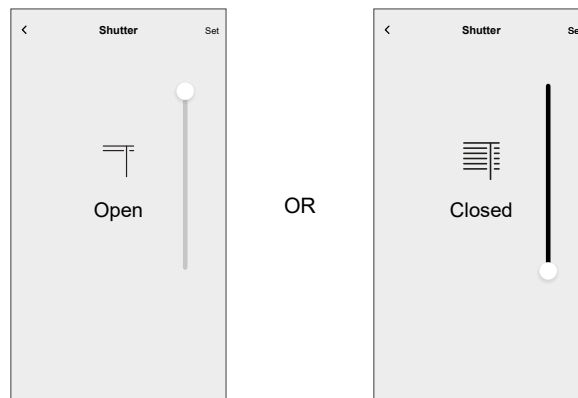


- c. Again, tap **Add an action** and select **Wait** option.
- d. Scroll through the minutes and set the wait time to 1 minute. Then, tap **Set** located on the top-right screen.



7. Tap **Save**.


The saved Automation is displayed on the **Automation** page. Tap the toggle switch (G) on the Automation page to enable/disable the Automation.

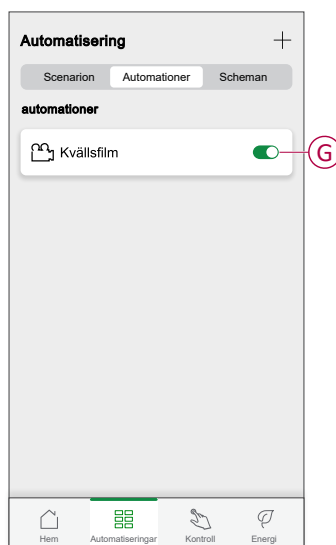


Editing an automation

Follow the steps to edit an automation:

1. On the **Home** screen, tap .
2. Go to **Automation**, tap the automation you want to edit (A).

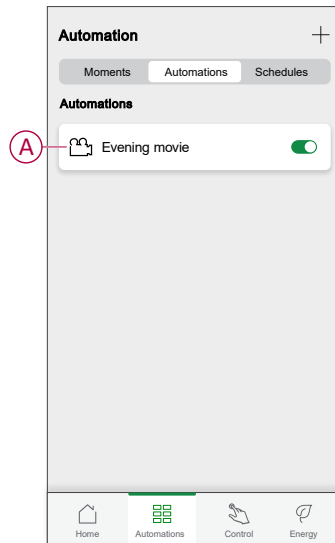

3. On the **Edit automation** page, you can:
 - Change the icon.
 - Rename the automation.
 - Change the condition or action.
4. Remove the Condition or Action by swiping it to the left and tapping the **bin** icon (B).

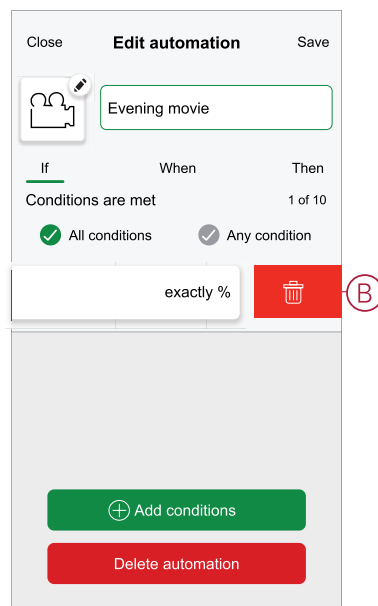


5. Add a new condition or action and then tap **Save**.

Deleting an automation

Follow the steps to delete an automation:

1. On the **Home** screen, tap .
2. Go to **Automation**, you want to delete and tap .

3. On the Edit automation page, tap **Delete Automation** (A) and read the confirmation message and then tap **Ok** (B).

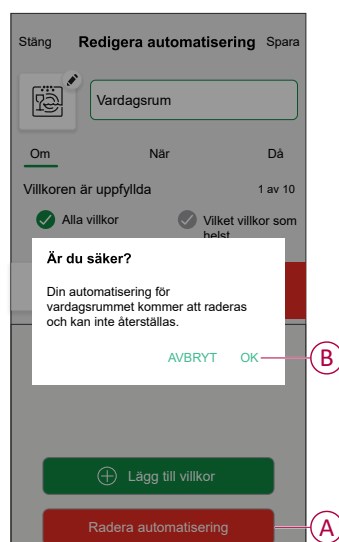

LED Indication

Pairing

User Action	LED Indication	Status
Press the push button 3 times	LED blinks amber per second. 	Pairing mode is active for 30 seconds. When pairing is completed, LED glows green for some time before turning Off. 


Resetting

User Action	LED Indication	Status
Press the push button 3 times and hold it down once for > 10 s.	After 10 s, the LED blinks red. 	The device is in reset mode. It is reset to the factory settings after 10 seconds. The device then restarts and the LED blinks green for a few seconds and then stays amber. 

Identifying the device

LED Indication	Status
The LED blinks red. 	The shutter opens/closes gradually, upon successful identification of the Blind control switch.

Different connectivity mode

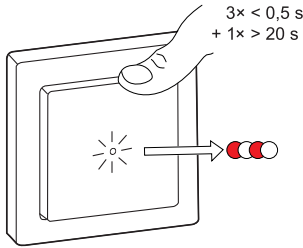LED Indication	Status
The LED blinks green and red while pairing. 	The device is trying to connect to other connectivity mode. Short press the push button 3 times and then hold for 20 seconds. When the LED blinks red rapidly, release the push button.  3x < 0,5 s + 1x > 20 s

Troubleshooting

Symptom	Solution
Connected shutter cannot be controlled.	• Check power supply. • Remove power to the blind control switch and then re-connect power again. • Check the load. • In the case of an external push button, check the wiring. • Re-couple devices.
Shutter is not driving to the desired position.	Reset to factory default settings, refer to Resetting the device , sida 39
Shutter is not moving in set time.	Calibrate again.

Technical Data

Nominal voltage	AC 230 V, 50 Hz		
Nominal power	Load type	Load name	Load value
		Motor	500 W
Standby	Maximum 0.4 W		
Connecting Terminals	Screw terminals for max. 2 x 2.5 mm ² , 0.5 Nm		
Extension unit	Mechanical Double push-buttons, unlimited number, max. 50 m		
External fuse protection	10 A circuit breaker		
Nominal current	4 A, cosφ = 0.6		
Operating frequency	2405 - 2480 MHz		
Max. radio-frequency power transmitted	< 10 mW		
Communication protocol	Zigbee 3.0 certified		

Efterlevnad

Produktens miljödata

Hitta och ladda ned heltäckande miljödata för dina produkter, inklusive RoHS- och REACH-deklarationer, PEP-dokument (Product Environmental Profile), EOLI-instruktioner (End-of-Life Instructions) och mycket mer.

<https://www.se.com/myschneider>



Allmän information om Schneiders miljödataprogram

Klicka på länken nedan för att läsa om Schneider Electric's miljödataprogram.

<https://www.se.com/ww/en/about-us/sustainability/environmental-data-program/>



Försäkran om överensstämmelse

Härmed försäkrar Schneider Electric Industries SAS att denna produkt överensstämmer med krav och relevanta bestämmelser i RADIOUTRUSTNINGSDIREKTIVET 2014/53/EU .

Försäkran om överensstämmelse kan laddas ned på:

- <https://www.go2se.com/ref=WDE002384>

Varumärken

I den här handboken hänvisas det till system- och märkesnamn som är varumärken som tillhör respektive ägare.

- Zigbee® är ett registrerat varumärke som tillhör Connectivity Standards Alliance.
- Apple® och App Store® är registrerade varumärken som tillhör Apple Inc.
- Google Play™ Store och Android™ är märkesnamn eller registrerade varumärken som tillhör Google Inc.

- Wi-Fi® är ett registrerat varumärke som tillhör Wi-Fi Alliance®.
- Wiser™ är ett varumärke som tillhör Schneider Electric, dess dotterbolag och närstående företag.

Andra registrerade varumärken tillhör respektive ägare.

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison
Frankrike

+33 (0) 1 41 29 70 00

www.se.com

Standarder, specifikationer och utformning kan variera emellanåt. Du ombeds därför att be om bekräftelse av informationen i denna publikation.

© 2025 – 2025 Schneider Electric. Alla rättigheter förbehålles.

DUG_Exxact – Persiennstyrningsbrytare_WH-00