

# Wiser Home

## System User Guide (France)

05/2026



# Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric and its subsidiaries referred to in this document are the property of Schneider Electric or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

**To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.**

---

# Table of Contents

Table of Contents .....	3
Safety Information.....	7
About the Document.....	8
Reading the System User Guide Online .....	11
Migration from Wiser Energy to Wiser Home .....	12
Energy.....	13
Getting to Know the Wiser System.....	15
List of Wiser Devices .....	16
Device compatibility list.....	16
Climate .....	16
Lights.....	17
Shutters .....	20
Appliances .....	21
Safety & Security .....	22
Energy .....	23
Hubs .....	25
Climate.....	27
Lights .....	28
Shutters.....	30
Appliances.....	31
Safety & Security.....	33
Energy.....	34
Setting-up the Wiser System.....	36
System Requirements.....	36
Support for battery-powered devices.....	37
Limitations of the Wiser System.....	37
Third party devices.....	39
Selecting the mounting location .....	40
Wiser Home App .....	42
Downloading the Wiser Home App .....	42
Roles in the Wiser Home App .....	42
Cybersecurity Principles.....	46
Getting to know the Hub.....	48
Wiser Hub <sup>R</sup> 2 <sup>nd</sup> Generation.....	48
Operating Elements .....	48
LED Behavior .....	49
Updating .....	50
Resetting to factory defaults.....	50
Wiser Hub 2 <sup>nd</sup> Generation .....	50
Operating Elements .....	51
LED Behavior .....	51
Updating .....	52
Resetting to factory defaults.....	52
Setting up the Hub .....	53
Setting up as a Professional Installer.....	53
Downloading hub firmware into the app.....	55

Connecting to the Temporary Wi-Fi® Network of Hub .....	58
Wiser Hub 2 <sup>nd</sup> Generation.....	58
Wiser Hub <sup>R</sup> 2 <sup>nd</sup> Generation .....	62
Updating the firmware .....	69
Connecting to Wi-Fi®.....	72
Creating an Account.....	76
Connecting Devices to the Hub .....	81
Matter.....	82
Compatible Wiser Devices for Matter Bridge .....	82
Commissioning Wiser Hub to Matter Ecosystem .....	83
Managing Matter Connection .....	85
Configuring the Wiser System .....	89
Devices .....	89
List of Devices .....	89
Adding a Device.....	93
Device Details .....	97
Rooms.....	99
List of Rooms .....	99
Adding a Room.....	100
Room Details.....	101
Moments.....	103
Creating a Moment .....	104
Editing a Moment.....	107
Deleting a Moment.....	108
Automations.....	109
Creating an Automation.....	111
Editing an Automation .....	122
Deleting an Automation .....	124
Schedules.....	125
Adding a Schedule.....	127
Editing a Schedule .....	129
Deleting a Schedule .....	130
Modes .....	131
Away Mode .....	131
Boost Mode .....	133
Smart Modes.....	134
App Settings .....	139
Support.....	141
App Theme .....	142
Setting Tariff.....	144
Configuring - flat rate.....	146
Configuring - (peak/off-peak) rate.....	148
Configuring - feed in tariff.....	151
Account settings.....	152
Notifications and Alarms.....	154
Setting-up Overconsumption Alarm .....	155
Setting-up No Consumption Alarm .....	158
App Language.....	160
Controlling the Wiser System.....	161
Home Screen .....	161

---

Managing Favourites.....	162
Tips and Advice .....	164
Home Screen Settings .....	167
Device control .....	168
Climate control .....	172
Compatible third party devices .....	176
Voice Control.....	177
Amazon Alexa .....	177
Google Home .....	178
Insights.....	181
Energy overview .....	181
Activity and environment .....	182
Weather and Heating .....	183
Heat report.....	183
Energy Centre.....	188
Energy Domain with Grid.....	188
Energy Domain without Grid .....	194
Wiser Home AI .....	198
Anti-Tripping Management.....	211
EcoWatt.....	216
<b>Additional Information .....</b>	<b>220</b>
About Signal Strength .....	220
Understanding Control Mode Priorities .....	222
Changing home Wi-Fi login information .....	224
Troubleshooting .....	225
Decommissioning a Wiser System.....	226
eSetup App .....	227



# Safety Information

## Important Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that accompany this symbol to avoid possible injury or death.

### **DANGER**

**DANGER** indicates a hazardous situation which, if not avoided, **will result in death or serious injury**.

**Failure to follow these instructions will result in death or serious injury.**

### **WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, **could result in death or serious injury**.

### **CAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, **could result in minor or moderate injury**.

### **NOTICE**

NOTICE is used to address practices not related to physical injury.

---

# About the Document

## Document Scope

This document provides comprehensive guidance on setting up and using the Wisier Home System, including configuring the Wisier Home App, and managing smart home features such as lighting, climate, shutters, and appliances. It explains how to create automations, schedules, and moments, integrate with voice assistants, and utilize energy monitoring tools. Users are introduced to advanced features like Matter protocol support, Wisier Home AI for optimizing energy usage, and Anti-Tripping Management. The guide also covers app customization, troubleshooting, and system decommissioning, offering a complete reference for managing a connected home environment.

## Validity Note

This documentation supports the Wisier Home app functionality on following device platforms:

- Mobile phone/tablet: Android™ Version 8 and later
- iPhone/iPod touch: Apple® iOS Version 15 and later
- iPad: Apple® iPadOS Version 15 and later
- Apple Vision: Apple® visionOS 1.0 or later.

## General Cybersecurity Information

In recent years, the growing number of networked machines and production plants has seen a corresponding increase in the potential for cyber threats, such as unauthorized access, data breaches, and operational disruptions. You must, therefore, consider all possible cybersecurity measures to help protect assets and systems against such threats.

To help keep your Schneider Electric products secure and protected, it is in your best interest to implement the cybersecurity best practices as described in the Cybersecurity Best Practices document.

Schneider Electric provides additional information and assistance:

- [Subscribe to the Schneider Electric security newsletter.](#)
- [Visit the Cybersecurity Support Portal web page to:](#)
  - [Find Security Notifications.](#)
  - [Report vulnerabilities and incidents.](#)
- [Visit the Schneider Electric Cybersecurity and Data Protection Posture web page to:](#)
  - [Access the cybersecurity posture.](#)
  - [Learn more about cybersecurity in the cybersecurity academy.](#)
  - [Explore the cybersecurity services from Schneider Electric.](#)

## Environmental Data

Find and download comprehensive environmental data about your products, including RoHS compliance and REACH declarations as well as Product Environmental Profile (PEP), End-of-Life instructions (EOLI) and much more.

<https://www.se.com/myschneider>



### General information about Schneider Environmental Data Program

Click the link below to read about Schneider Electric's Environmental Data Program.

<https://www.se.com/ww/en/about-us/sustainability/environmental-data-program/>



## Available Languages of the Document

The document is available in these languages:

- English
- French

## Information on Non-Inclusive or Insensitive Terminology

As a responsible, inclusive company, Schneider Electric is constantly updating its communications and products that contain non-inclusive or insensitive terminology. However, despite these efforts, our content may still contain terms that are deemed inappropriate by some customers.

## Declaration of Conformity

Hereby, Schneider Electric Industries SAS, declares that this product is in compliance with the essential requirements and other relevant provisions of RADIO EQUIPMENT DIRECTIVE 2014/53/EU.

Declaration of conformity can be downloaded on: <https://www.go2se.com/ref=> and add your product number at the end of the URL.

**Example:** If your product is Wisser Hub 2<sup>nd</sup> Generation (CCT501801), go to <https://www.go2se.com/ref=CCT501801>

## Trademarks

- Zigbee® is a registered trademark of the Connectivity Standards Alliance.


- Apple® and App Store® are brand names or registered trademarks of Apple Inc.
- Google Play™ Store and Android™ are brand names or registered trademarks of Google Inc.
- Wi-Fi® is a registered trademark of Wi-Fi Alliance®.
- Wiser™ is a trademark and the property of Schneider Electric, its subsidiaries and affiliated companies.
- Airzone is a trademark of Equip Outdoor Technologies UK Limited.
- Aidoo is a trademark of CORPORACIÓN EMPRESARIAL ALTRA S.L. company.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.
- Amazon Alexa is a trademark of Amazon.com, Inc. or its affiliates.

Other brands and registered trademarks are the property of their respective owners.

# Reading the System User Guide Online

Navigating through the System User Guide and getting to know the functions.

The System User Guide is optimized for online presentation. Several functions are available to help you navigate.

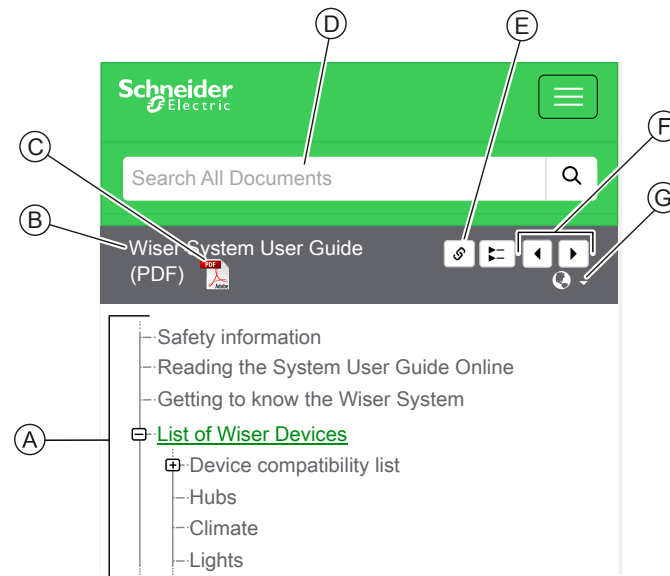


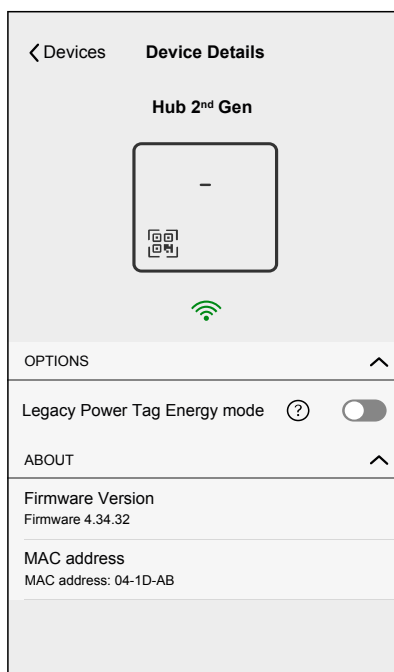
<b>A</b>	<b>Table of Contents</b>	Tap/Click to navigate through the topics. Tap/Click the + and - icons to expand/collapse a chapter.
<b>B</b>	<b>Document name</b>	Tap/Click to navigate to the first page of the document.
<b>C</b>	<b>PDF Icon</b>	Tap/Click to open the document as a PDF file.
<b>D</b>	<b>Search field</b>	Enter a search term and tap/click the magnifying icon.
<b>E</b>	<b>Copy Link</b>	Tap/Click to generate a link for the current chapter displayed on the screen.
<b>F</b>	<b>Previous / Next</b>	Tap/Click to navigate through the previous and next topics.
<b>G</b>	<b>Language selection</b>	Tap/Click to select your country.

# Migration from Wiser Energy to Wiser Home




Migration video: [Click here](#) for migration video.



**IMPORTANT:** If you have an older PowerTag with firmware version 3.x.x and earlier (the firmware version will be printed on the device or can be provided by customer support), enable the **Legacy PowerTag Energy mode** toggle switch on the Wiser Hub's **Device Details** screen to allow the system to pair with them.

1. On the **Home** screen of the Wiser Home app, tap .
2. Tap **Devices > Hub 2<sup>nd</sup> Gen** to navigate to the **Device Details** screen.
3. Tap the toggle switch and enable the **Legacy PowerTag Energy mode** to commission the old PowerTag.




# Energy
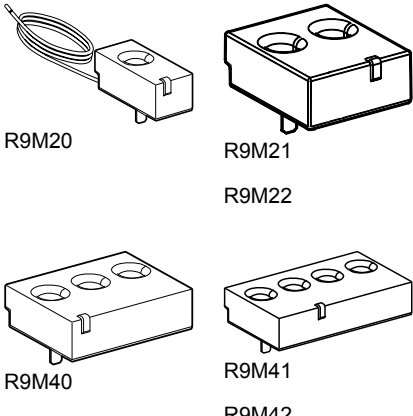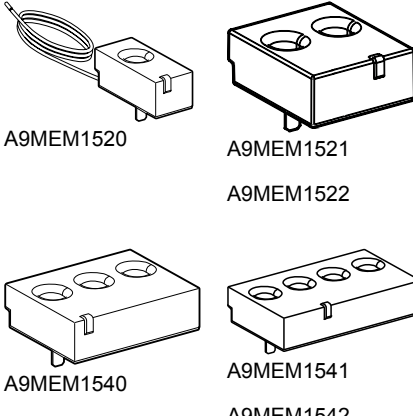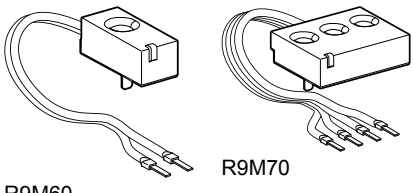
<p><b>PowerLogic™ - PowerTag Resi9 M63</b></p>  <p>R9M20</p> <p>R9M21 R9M22</p> <p>R9M40</p> <p>R9M41 R9M42</p>	<p>Wireless-communication energy sensor</p>	<p>Instruction Sheet Device User Guide</p>
<p><b>PowerLogic™ - PowerTag Acti9 M63</b></p>  <p>A9MEM1520</p> <p>A9MEM1521 A9MEM1522</p> <p>A9MEM1540 A9MEM1543</p> <p>A9MEM1541 A9MEM1542</p>	<p>Wireless-communication energy sensor</p>	<p>Instruction Sheet Device User Guide</p>
<p><b>PowerLogic™ - PowerTag Resi9 F63</b></p>  <p>R9M60</p> <p>R9M70</p>	<p>Wireless-communication energy sensor</p>	<p>Instruction Sheet Device User Guide</p>
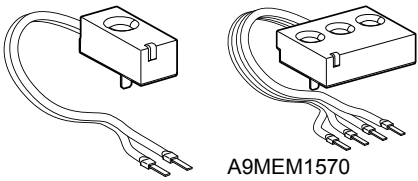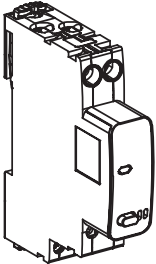
<p><b>PowerLogic™ - PowerTag Acti9 F63</b></p>  <p>A9MEM1560      A9MEM1570</p>	<p>Wireless-communication energy sensor</p>	<p>Instruction Sheet Device User Guide</p>
<p><b>PowerTag C</b></p>  <p>A9XMC1D3</p>	<p>Control and monitoring wireless communication module</p>	<p>Instruction Sheet Device User Guide</p>

# Getting to Know the Wiser System

The Wiser system provides an easy, convenient and flexible solution for controlling home devices using the Wiser Home App.

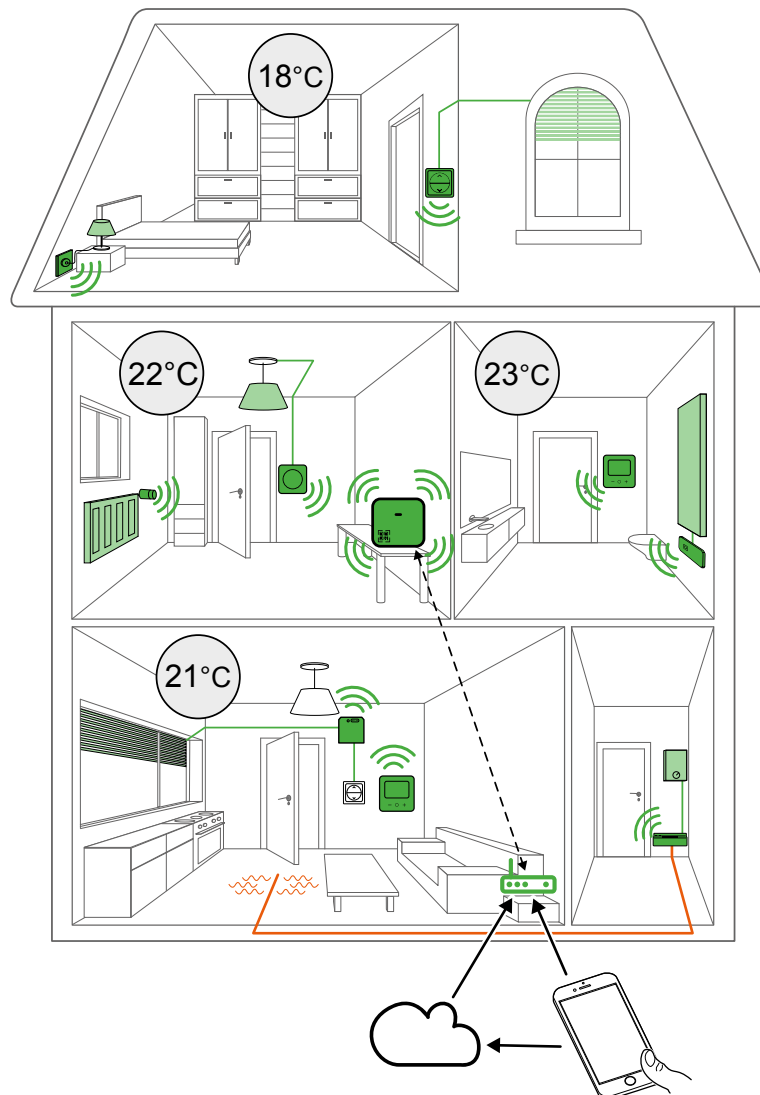

The Hub is the center of the system, processing control requests and status reports for connected Wiser devices, page 16.

With a personal account and the Wiser Home App on a smartphone you can control and monitor connected Wiser devices from anywhere where the internet is available for both mobile phone and the Hub.

# List of Wiser Devices

 

 

 

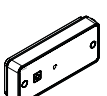 
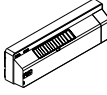 
The devices listed in the following table are compatible Wiser devices.






Follow the device Instruction sheet links for installation instructions and device user guide links for more details on the device configuration.

## Device compatibility list

   
 
 


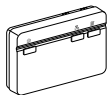Not all Wiser Devices can be added to all Hubs. Check the tables in these chapters to find out which Devices can be added to your Hub.


 
 




### Climate






 
	Wiser Hub <sup>R</sup>  CCTFR6311	Wiser Hub  CCTFR6310	Wiser Hub 2 <sup>nd</sup> Generation  CCT501801	Wiser Hub <sup>R</sup> 2 <sup>nd</sup> Generation  CCTFR6311G2
Wiser Radiator Thermostat  CCTFR6100 CCTFR6101	✓	✓	✓	✓
Wiser Room Thermostat with display  CCTFR6400 CCTFR6401	✓	✓	✓	✓
Wiser 16 A Relay for Temperature Control  CCTFR6700	✓	✓	✓	✓
Wiser Underfloor Heating Connection Strip  CCTFR6600 CCTFR6610 CCTFR6620	✓	✓	✓	✓

<p>Wiser Boiler Relay</p>  <p>CCTFR6001</p>	✗	✗	✓	✗
<p>Wiser Micromodule for Fil Pilote Radiators</p>  <p>THG CCTFR6710</p>	✗	✗	✓	✓
<p>Wiser Temperature/ Humidity Sensor</p>  <p>CCT593012</p>	✗	✗	✓	✓
<p>Connected Thermostat 2 A</p>  <p>S5x0619</p>	✗	✗	✓	✓
<p>Connected Thermostat 2 A</p>  <p>S920502 S940502</p>	✗	✗	✓	✓

## Lights



 




	<p>Wiser Hub<sup>R</sup></p>  <p>CCTFR6311</p>	<p>Wiser Hub</p>  <p>CCTFR6310</p>	<p>Wiser Hub 2<sup>nd</sup> Generation</p>  <p>CCT501801</p>	<p>Wiser Hub<sup>R</sup> 2<sup>nd</sup> Generation</p>  <p>CCTFR6311G2</p>
<p>Connected Relay Switch 10A</p>  <p>S5x0530W</p>	✓	✓	✓	✓


<p>Connected Relay Switch 10A</p>  <p>S920530 S940530</p>	✓	✓	✓	✓
<p>Connected Relay Switch 10A</p>  <p>S3x0530W</p>	✓	✓	✓	✓
<p>Connected Relay Switch 10A</p>  <p>NU3537xxW</p>	✓	✓	✓	✓
<p>Connected Universal Push-Button Dimmer LED</p>  <p>S5x0522W</p>	✓	✓	✓	✓
<p>Connected Multiwire Universal Pushbutton Dimmer LED</p>  <p>S920522 S940522</p>	✓	✓	✓	✓
<p>Connected Universal Push-Button Dimmer LED</p>  <p>S3x0522W</p>	✓	✓	✓	✓
<p>Connected Universal Push-Button Dimmer LED</p>  <p>NU3515xxW</p>	✓	✓	✓	✓

<p>Connected Universal Rotary Dimmer LED</p>  <p>S5x0513W</p>	✓	✓	✓	✓
<p>Connected Multiwire Universal Rotary Dimmer LED</p>  <p>S920513 S940513</p>	✓	✓	✓	✓
<p>Connected Universal Rotary Dimmer LED</p>  <p>NU3516xxW</p>	✓	✓	✓	✓
<p>Wiser Micro Module Light Switch</p>  <p>CCT5011-0002W</p>	✓	✓	✓	✓
<p>Wiser Micro Module Dimmer</p>  <p>CCT5010-0002W</p>	✓	✓	✓	✓
<p>Wiser Multiwire Micro Module LED Dimmer</p>  <p>CCT5010-0003</p>	✗	✗	✓	✓










<p>Connected Motion Sensor with Switch 10 A</p>  <p>NU352654 NU352630 NU352618</p>	✓	✓	✓	✓
<p>Connected Motion Sensor with Dimmer LED</p>  <p>NU352718 NU352730 NU352754</p>	✓	✓	✓	✓

    
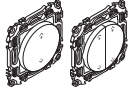 
 
 
## Shutters

	<p>Wiser Hub<sup>R</sup></p>  <p>CCTFR6311</p>	<p>Wiser Hub</p>  <p>CCTFR6310</p>	<p>Wiser Hub 2<sup>nd</sup> Generation</p>  <p>CCT501801</p>	<p>Wiser Hub<sup>R</sup> 2<sup>nd</sup> Generation</p>  <p>CCTFR6311G2</p>
<p>Connected Blind Control Switch</p>  <p>S5x0567W</p>	✓	✓	✓	✓
<p>Connected Blind Control Switch</p>  <p>S920567 S940567</p>	✓	✓	✓	✓
<p>Connected Blind Control Switch</p>  <p>S3x0567W</p>	✓	✓	✓	✓

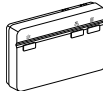 

 

 

<p>Connected Blind Control Switch</p>  <p>NU3508xxW</p>	✓	✓	✓	✓
<p>Wiser Micro Module Shades Control</p>  <p>CCT5015-0002W</p>	✓	✓	✓	✓





## Appliances

	<p>Wiser Hub<sup>R</sup></p>  <p>CCTFR6311</p>	<p>Wiser Hub</p>  <p>CCTFR6310</p>	<p>Wiser Hub 2<sup>nd</sup> Generation</p>  <p>CCT501801</p>	<p>Wiser Hub<sup>R</sup> 2<sup>nd</sup> Generation</p>  <p>CCTFR6311G2</p>
<p>Wiser Plug</p>  <p>CCTFR6500</p>	✓	✓	✓	✓
<p>Wiser Power Micromodule</p>  <p>CCTFR6730</p>	✗	✗	✓	✓
<p>Connected single socket outlet</p>  <p>S5x0559</p>	✗	✗	✓	✓
<p>Connected single socket outlet</p>  <p>S3x0559</p>	✗	✗	✓	✓
<p>Connected single socket outlet</p>  <p>NU5559xx</p>	✗	✗	✓	✓

 
 
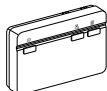 

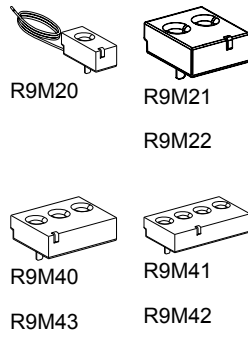
<p>Connected Wireless Switch 1-gang/2-gang</p>  <p>S5x0531</p>	✗	✗	✓	✓
<p>Connected Wireless Switch 1-gang/2-gang</p>  <p>S920531 S940531</p>	✗	✗	✓	✓
<p>Connected Wireless Switch 1-gang/2-gang</p>  <p>S3x0531</p>	✗	✗	✓	✓
<p>Connected Wireless Switch 1-gang/2-gang</p>  <p>NU5571xxW</p>	✗	✗	✓	✓

 
 
 

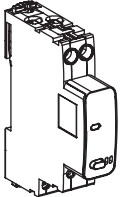
## Safety & Security




	<p>Wiser Hub<sup>R</sup></p>  <p>CCTFR6311</p>	<p>Wiser Hub</p>  <p>CCTFR6310</p>	<p>Wiser Hub 2<sup>nd</sup> Generation</p>  <p>CCT501801</p>	<p>Wiser Hub<sup>R</sup> 2<sup>nd</sup> Generation</p>  <p>CCTFR6311G2</p>
<p>Wiser Window/Door Sensor</p>  <p>CCT591012</p>	✗	✗	✓	✓
<p>Wiser Motion Sensor</p>  <p>CCT595012</p>	✗	✗	✓	✓

<p>Wiser Water Leakage Sensor</p>  <p>CCT592012</p>	✗	✗	✓	✓
<p>ARGUS Motion Sensor Outdoor 360</p>  <p>CCT564114 CCT564119</p>	✗	✗	✓	✓
<p>Wiser Smoke Alarm - Battery</p>  <p>CCT599002</p>	✗	✗	✓	✓
<p>Wiser Smoke Alarm 230 V</p>  <p>CCT599502</p>	✗	✗	✓	✓

## Energy

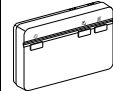
 
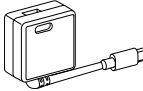 
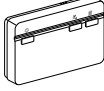 

	<p>Wiser Hub<sup>R</sup></p>  <p>CCTFR6311</p>	<p>Wiser Hub</p>  <p>CCTFR6310</p>	<p>Wiser Hub 2<sup>nd</sup> Generation</p>  <p>CCT501801</p>	<p>Wiser Hub<sup>R</sup> 2<sup>nd</sup> Generation</p>  <p>CCTFR6311-G2</p>
<p>PowerLogic™ - PowerTag Resi9 M63</p>  <p>R9M20      R9M21 R9M22</p> <p>R9M40      R9M41 R9M43      R9M42</p>	✗	✗	✓	✓
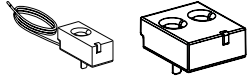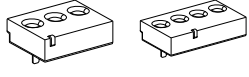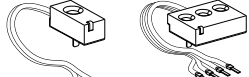
<p>PowerLogic™ - PowerTag Acti9 M63</p>  <p>A9ME-M1520      A9ME-M1521 A9ME-M1522</p>  <p>A9ME-M1540      A9ME-M1541 A9ME-M1543      A9ME-M1542</p>	✘	✘	✔	✔
<p>PowerLogic™ - PowerTag Resi9 F63</p>  <p>R9M60      R9M70</p>	✘	✘	✔	✔
<p>PowerLogic™ - PowerTag Acti9 F63</p>  <p>A9ME-M1560      A9ME-M1570</p>	✘	✘	✔	✔
<p>PowerTag C</p>  <p>A9XMC1D3</p>	✘	✘	✔	✔
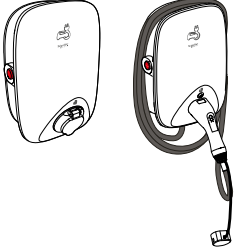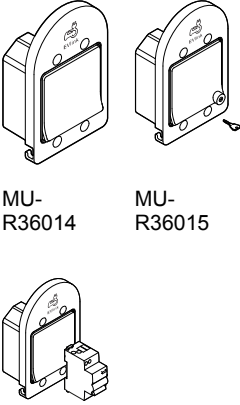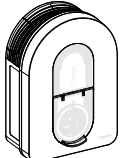
<p>EVlink Home Smart</p>  <p>EV-H4AxxN2    EV-H4AxxNC</p> <p>EV-H4Axx-N400F</p>	✘	✘	✔	✔
<p>Mureva EVlink</p>  <p>MU-R36014    MU-R36015</p> <p>MU-R36016</p>	✘	✘	✔	✔
<p>Schneider Charge</p>  <p>EVH5A22N440F</p>	✘	✘	✔	✔

## Hubs

 
 
 
 
 

 
The Hub monitors and controls the Devices of your Home via the Wiser Home app, using Wi-Fi®.



<p>Wiser Hub<sup>R</sup> 2<sup>nd</sup> Generation</p>  <p>CCTFR6311G2</p>	<p>The Wiser Hub<sup>R</sup> is used to connect all the Wiser devices. This version is used where central heating (e.g. boiler or heat pump) is used.</p>	<p>Instruction Sheet (PDF)</p> <p>Getting to know the Hub, page 48</p>
<p>Wiser Hub 2<sup>nd</sup> Generation</p>  <p>CCT501801</p>	<p>The Wiser Hub 2<sup>nd</sup> Generation monitors and controls the Devices of your Home via the Wiser Home App. It is connected to the Wiser Cloud for remote control via Wi-Fi®.</p> <p>The Wiser Wiser Hub 2<sup>nd</sup> Generation is compatible with all Wiser Devices</p>	<p>Instruction Sheet (PDF)</p> <p>Getting to know the Hub, page 48</p>
<p>Wiser Wall Box Power Supply</p>  <p>CCT501800-0001</p>	<p>Alternative power supply for the Wiser Hub 2<sup>nd</sup> Generation, placed in a wall box.</p>	<p>Instruction Sheet (PDF)</p>
<p>Wiser Hub<sup>R</sup></p>  <p>CCTFR6311</p>	<p>The Wiser Hub<sup>R</sup> is used to connect all the Wiser devices. This version is used where central heating (e.g. boiler or heat pump) is used.</p> <p><b>NOTE:</b> Certain Wiser Devices can not be added to the Hub.</p> <p>Check the Device compatibility list, page 16.</p>	<p>Instruction Sheet (PDF)</p> <p>System User Guide</p>
<p>Wiser Hub</p>  <p>CCTFR6310</p>	<p>The Wiser Hub is used to connect and control all the Wiser devices.</p> <p><b>NOTE:</b> Certain Wiser Devices can not be added to the Hub.</p> <p>Check the Device compatibility list, page 16.</p>	<p>Instruction Sheet (PDF)</p> <p>System User Guide</p>

# Climate
 
## NOTE:

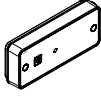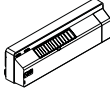


Not all Devices can be added to all Wiser Hubs. To find out if a Device can be added to your Hub, please check chapter Device compatibility list, page 16
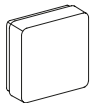
<p>Wiser Radiator Thermostat</p>  <p>CCTFR6100 CCTFR6101</p>	<p>Provides individual temperature control for radiators.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Wiser Room Thermostat with display</p>  <p>CCTFR6400 CCTFR6401</p>	<p>Wireless, battery-powered, colored touch-button display to set the room temperature.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Wiser 16 A Relay for Temperature Control</p>  <p>CCTFR6700</p>	<p>Control electrical heaters with On/Off commands (Relay output) or Fil Pilote commands.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Wiser Underfloor Heating Connection Strip</p>  <p>CCTFR6600 CCTFR6610 CCTFR6620</p>	<p>Control thermal actuator valve heads to regulate the flow of hot water in the underfloor pipes.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Wiser Boiler Relay</p>  <p>CCTFR6001</p>	<p>Allows control of a domestic boiler in water based central heating applications.</p>	<p>Instruction Sheet Device User Guide</p>
<p>Connected Thermostat 2 A</p>  <p>S5x0619</p>	<p>Used for water-based heating and cooling applications, such as water-based underfloor heating and radiator heating.</p>	<p>Instruction Sheet Device User Guide</p>
<p>Wiser Micromodule for Fil Pilote Radiators</p>  <p>THG_CCTFR6710</p>	<p>The Wiser Micromodule for Fil Pilote Radiators is intended for controlling FIP compatible electric heaters.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>

<p>Wiser Temperature/ Humidity Sensor</p>  <p>CCT593012</p>	<p>Measures temperature and humidity</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Thermostat 2 A</p>  <p>S920502 S940502</p>	<p>Used for water-based heating and cooling applications, such as water-based underfloor heating and radiator heating.</p>	<p>Instruction Sheet Device User Guide</p>

### Third party devices



Devices that are compatible with a Wiser system, but not provided by Schneider Electric.









<p>Airzone Plenum</p> 	<p>Zoning system for HVAC (heating, ventilation, and air conditioning) used in buildings that regulates the indoor temperature.</p>	<p>Device User Guide</p>
<p>Aidoo Pro Air conditioner</p> 	<p>It is a solution that lets you control individual air conditioner through the Wiser Home app. An Aidoo Pro Air conditioner is wired to the AC and connects to the Wiser Home app via Wi-Fi®.</p>	<p>Device User Guide</p>
<p>Aidoo Pro Heat Pump</p> 	<p>It is a solution that lets you control the heat pump through the Wiser Home app. An Aidoo Pro Heat Pump is wired to the heat pump and connects to the Wiser Home app via Wi-Fi®.</p>	<p>Device User Guide</p>


 
 



## Lights

### NOTE:

Not all Devices can be added to all Wiser Hubs. To find out if a Device can be added to your Hub, please check chapter [Device compatibility list](#), page 16

<p>Connected Relay Switch 10A</p>  <p>S5x0530W</p>	<p>Switch ohmic, inductive or capacitive loads.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Relay Switch 10A</p>  <p>S920530 S940530</p>	<p>Switch ohmic, inductive or capacitive loads.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>

 


 
 
<p>Connected Relay Switch 10A</p>  <p>S3x0530W</p>	<p>Switch ohmic, inductive or capacitive loads.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Relay Switch 10A</p>  <p>NU3537xxW</p>	<p>Switch ohmic, inductive or capacitive loads.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Universal Push- Button Dimmer LED</p>  <p>S5x0522W</p>	<p>Switch and dim ohmic, inductive or capacitive loads.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Multiwire Universal Pushbutton Dimmer LED</p>  <p>S920522 S940522</p>	<p>Switch and dim ohmic, inductive or capacitive loads.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Universal Push- Button Dimmer LED</p>  <p>S3x0522W</p>	<p>Switch and dim ohmic, inductive or capacitive loads.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Universal Push- Button Dimmer LED</p>  <p>NU3515xxW</p>	<p>Switch and dim ohmic, inductive or capacitive loads.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Universal Rotary Dimmer LED</p>  <p>S5x0513W</p>	<p>Switch and dim ohmic, inductive or capacitive loads.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Multiwire Universal Rotary Dimmer LED</p>  <p>S920513 S940513</p>	<p>Switch and dim ohmic, inductive or capacitive loads.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>

<p>Connected Universal Rotary Dimmer LED</p>  <p>NU3516xxW</p>	<p>Switch and dim ohmic, inductive or capacitive loads.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Wiser Micro Module Light Switch</p>  <p>CCT5011-0002W</p>	<p>The Wiser Micro Module Light Switch is used to switch ohmic, inductive or capacitive loads.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Wiser Micro Module Dimmer</p>  <p>CCT5010-0002W</p>	<p>The Wiser Micro Module Dimmer is used to switch ohmic, inductive or capacitive loads.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Wiser Multiwire Micro Module LED Dimmer</p>  <p>CCT5010-0003</p>	<p>The Wiser Multiwire Micro Module LED Dimmer is used to switch and dim LED lamps, as well as ohmic or capacitive loads.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Motion Sensor with Switch 10 A</p>  <p>NU352654 NU352630 NU352618</p>	<p>Controls the lights in a room, or automatically switch lights On or Off in response to detected motion, a specified condition or other event.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Motion Sensor with Dimmer LED</p>  <p>NU352718 NU352730 NU352754</p>	<p>Controls the lighting level in a room, or automatically set lighting to a desired level in response to detected motion, a specified condition or other event.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>

## Shutters

### NOTE:


 
Not all Devices can be added to all Wiser Hubs. To find out if a Device can be added to your Hub, please check chapter *Device compatibility list*, page 16








<p>Connected Blind Control Switch</p>  <p>S5x0567W</p>	<p>Control one blind or roller shutter motor that is equipped with an end position switch.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Blind Control Switch</p>  <p>S920567 S940567</p>	<p>Control one blind or roller shutter motor that is equipped with an end position switch.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Blind Control Switch</p>  <p>S3x0567W</p>	<p>Control one blind or roller shutter motor that is equipped with an end position switch.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Blind Control Switch</p>  <p>NU3508xxW</p>	<p>Control one blind or roller shutter motor that is equipped with an end position switch.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Wiser Micro Module Shades Control</p>  <p>CCT5015-0002W</p>	<p>Controls blinds thru connected push-buttons or the Wiser Home app.</p>	<p>Instrucion Sheet (PDF) Device User Guide</p>

## Appliances





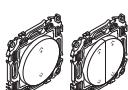   

### NOTE:

Not all Devices can be added to all Wiser Hubs. To find out if a Device can be added to your Hub, please check chapter Device compatibility list, page 16


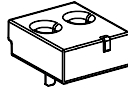 
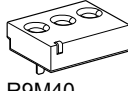 
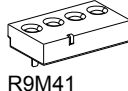 
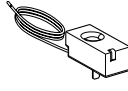 
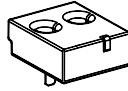 
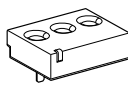 
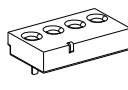 
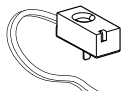 
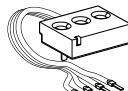 
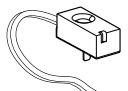 
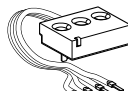 
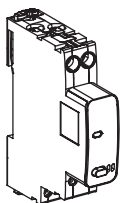
<p>Wiser Plug</p>  <p>CCTFR6500</p>	<p>Remotely control and monitor the power consumption of the plugged-in load.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Wiser Power Micromodule</p>  <p>CCTFR6730</p>	<p>The Wiser Power Micromodule is for switching loads (up to 3000 W resistive) such as a hot water tank or a socket outlet.</p> <p>In combination with the Wiser app, the energy consumption can be measured and the module can be used for load shedding or demand response.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>




<p>Connected single socket outlet</p>  <p>S5x0559</p>	<p>Control and monitor the power consumption of the plugged-in load.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected single socket outlet</p>  <p>S3x0559</p>	<p>Control and monitor the power consumption of the plugged-in load.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected single socket outlet</p>  <p>NU5559xx</p>	<p>Control and monitor the power consumption of the plugged-in load.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Wireless Switch 1-gang/2-gang</p>  <p>S5x0531</p>	<p>Battery powered push-button switch.</p> <p>Buttons can be freely assigned with functions with the Wiser Home App.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Wireless Switch 1-gang/2-gang</p>  <p>S920531 S940531</p>	<p>Battery powered push-button switch.</p> <p>Buttons can be freely assigned with functions with the Wiser Home App.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Wireless Switch 1-gang/2-gang</p>  <p>S3x0531</p>	<p>Battery powered push-button switch.</p> <p>Buttons can be freely assigned with functions with the Wiser Home App.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Connected Wireless Switch 1-gang/2-gang</p>  <p>NU5571xxW</p>	<p>Battery powered push-button switch.</p> <p>Buttons can be freely assigned with functions with the Wiser Home App.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>

## Safety & Security

<p>Wiser Window/Door Sensor</p>  <p>CCT591012</p>	<p>Can be used to detect if a door or window is opened or closed.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Wiser Motion Sensor</p>  <p>CCT595012</p>	<p>Reports the detection of movement and measures the luminance of the environment.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Wiser Water Leakage Sensor</p>  <p>CCT592012</p>	<p>Detects water on a surface.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>ARGUS Motion Sensor Outdoor 360</p>  <p>CCT564114 CCT564119</p>	<p>It offers advanced motion detection, LUX measurement, and temperature sensing capabilities. It allows you to automate and enhance your smart home environment effortlessly.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Wiser Smoke Alarm - Battery</p>  <p>CCT599002</p>	<p>The Wiser Smoke Alarm - Battery uses a photoelectric sensor to detect smoke generated by fire. It also includes a temperature sensor that detects heat caused by rapid increase in temperature. When connected to the Wiser system, the device sends notifications to the user via the Wiser app.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>
<p>Wiser Smoke Alarm 230 V</p>  <p>CCT599502</p>	<p>The Wiser Smoke Alarm 240 V Square uses a photoelectric sensor to detect smoke generated by fire and a temperature sensor that detects heat caused by rapid increase in temperature. It also includes a backup battery that allows the device to work if the power supply is disconnected. When connected to the Wiser system, the device will send notifications via the Wiser app.</p>	<p>Instruction Sheet (PDF) Device User Guide</p>

# Energy

<p>PowerLogic™ - PowerTag Resi9 M63</p>  <p>R9M20</p>  <p>R9M21</p> <p>R9M22</p>  <p>R9M40</p>  <p>R9M41</p> <p>R9M43</p> <p>R9M42</p>	<p>It is a compact, robust, and easy-to-install Class 1 wireless communication energy sensor. It is used together with the Wiser Hub to collect information from every equipped circuit to measure how much energy is consumed in the circuit.</p>	<p>Instruction Sheet</p> <p>Device User Guide</p>
<p>PowerLogic™ - PowerTag Acti9 M63</p>  <p>A9MEM1520</p>  <p>A9MEM1521</p> <p>A9MEM1522</p>  <p>A9MEM1540</p>  <p>A9MEM1541</p> <p>A9MEM1543</p> <p>A9MEM1542</p>	<p>It is a compact, robust, and easy-to-install Class 1 wireless communication energy sensor. It is used together with the Wiser Hub to collect information from every equipped circuit to measure how much energy is consumed in the circuit.</p>	<p>Instruction Sheet</p> <p>Device User Guide</p>
<p>PowerLogic™ - PowerTag Resi9 F63</p>  <p>R9M60</p>  <p>R9M70</p>	<p>It is a compact, robust, and easy-to-install Class 1 wireless communication energy sensor. It is used together with the Wiser Hub to collect information from every equipped circuit to measure how much energy is consumed in the circuit.</p>	<p>Instruction Sheet</p> <p>Device User Guide</p>
<p>PowerLogic™ - PowerTag Acti9 F63</p>  <p>A9MEM1560</p>  <p>A9MEM1570</p>	<p>It is a compact, robust, and easy-to-install Class 1 wireless communication energy sensor. It is used together with the Wiser Hub to collect information from every equipped circuit to measure how much energy is consumed in the circuit.</p>	<p>Instruction Sheet</p> <p>Device User Guide</p>
<p>PowerTag C</p>  <p>A9XMC1D3</p>	<p>It is a wireless-communication module explicitly designed for controlling and monitoring applications. It is part of PowerTag System and Wiser System, turning a distribution board into a connected panel.</p>	<p>Instruction Sheet</p> <p>Device User Guide</p>
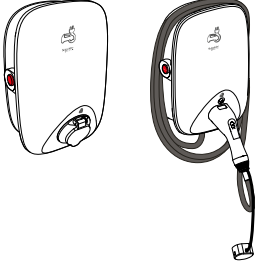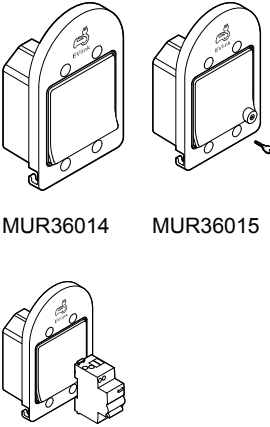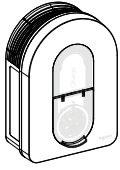
<p>EVlink Home Smart</p>  <p>EVH4AxxN2 EVH4AxxNC</p> <p>EV-H4AxxN400-F</p>	<p>Supplies electric energy to charge plug-in electric vehicles</p>	<p>Instruction Sheet EVlink Home Smart EVH4AxxN2, EVH4AxxNC</p> <p>Instruction Sheet EVlink Home Smart EVH4AxxN400F</p> <p>Device User Guide</p>
<p>Mureva EVlink</p>  <p>MUR36014 MUR36015</p> <p>MUR36016</p>	<p>The Mureva EVlink is a connected socket outlet to charge electric vehicles. You can also remotely control the EV Socket with Wiser Home app.</p>	<p>Instruction Sheet</p> <p>Device User Guide</p>
<p>Schneider Charge</p>  <p>EVH5A22N440F</p>	<p>Supplies electric energy to charge plug-in electric vehicles</p>	<p>Instruction Sheet</p> <p>Device User Guide</p>

# Setting-up the Wiser System

The following chapters guide you through the initial setup of your Wiser system.

## System Requirements

For a Wiser system you need at least the following devices and conditions.

### Wiser Hub

The hub communicates with all Wiser devices and the Wiser Home app.

You can find more information about the available hubs in Chapter List of Wiser Devices, page 16

### Internet access for the Hub

In order to properly control Wiser Devices, the hub needs to be connected to the internet via your router.

#### IMPORTANT:

- The hub requires IPv4 network features to function correctly. To ensure full functionality, make sure that IPv4 is enabled in your local area network and internet settings on your internet provider's router. Systems configured as IPv6-only will impact your hub's ability to communicate and receive software updates, and may affect your ability to remotely control the hub.
- The Hub also requires certain ports to be opened for internet access. Refer to the Troubleshooting, page 225 section for a list of all required ports.

### Wiser devices

You can find more information about the available Wiser Devices in Chapter List of Wiser Devices, page 16

### Wiser Home App

For more information, please read chapter Downloading the Wiser Home App, page 42.

### A valid e-mail address.

To set up your Wiser system, you will need to register an account at Schneider Electric with a valid e-mail address.

## Operating Systems and Versions

To use the app, your device must support particular operating systems and versions.

Supported operating systems

- Mobile phone/tablet: Android™ Version 8 and later
- iPhone/iPod touch: Apple® iOS Version 15 and later
- iPad: Apple® iPadOS Version 15 and later
- Apple Vision: Apple® visionOS 1.0 or later.

**NOTE:**

- When a new version of an operating system is released, it may take some time before the Wiser system is fully compatible with that version.
- Using Schneider Electric applications with an Android phone that has bypassed restrictions, or a jailbroken iPhone, voids all warranties associated with the application.
- The compatibility of the interfaces with your devices depends on the software version installed and may change with a software upgrade. Due to the wide variety of options available in the market, the compatibility and functionality of your device with the app cannot be guaranteed.

## Data localization

Data Localization in general refers to a mandatory legal or administrative requirement directly or indirectly requiring that data be stored or processed, exclusively or non-exclusively, within a specified jurisdiction.

If data localization laws apply in your region, we strongly recommend setting up this device or system in a way that would not conduct a data cross-border transfer directly or through other channels. Details of data localization laws may vary in different regions. Your legal team is the best resource to give you compliance advice for your specific situation.

## Support for battery-powered devices

By default, a system with a hub can support up to 20 battery-powered devices, such as sensors. Systems that also include mains-powered devices can support additional battery-powered devices.

The reason for this is that mains-powered devices in the system also act as system network extenders.

**TIP:** Install and commission all mains-powered devices before commissioning battery-powered devices. This provides maximum hosting capacity prior to adding the battery-powered devices.

## Limitations of the Wiser System

When commissioning a Wiser system, it is important to understand the system limits, such as the maximum number of supported devices.

**NOTE:** The limits listed below only apply to the following hubs:

- Wiser Hub 2<sup>nd</sup> Generation, page 50
- Wiser Hub<sup>R</sup> 2<sup>nd</sup> Generation, page 48

### System Limits

Maximum number of	
Devices Zigbee	63
Hub	1
PowerTag E	20
EV Charger / Schneider charge	1
Airzone devices	16
Rooms	16
Moments	20

**System Limits (Continued)**

<b>Maximum number of</b>	
Automations	10
Schedules:	
Climate Schedules (e.g. for room setpoint)	16
On/Off Schedules (e.g. On/Off of appliances)	16
Level Schedules (e.g. % shutter position, % Light dimming)	32

**Device Limits With Respect to Single Hub**

<b>Climate</b>	<b>Maximum overall</b>	<b>Maximum per Room</b>
Room Thermostat	16	1
Radiator Thermostat	32	4
Underfloor Connection Strip	3	-
Boiler Relay	1	-
Flush-mounted Thermostat	16	4
16A Relay	48	4
FIP Micromodule	48	4
Flush-mounted Thermostat + 16A Relay (Combination)	48	Individually specified limits

<b>Lights</b>	<b>Maximum overall</b>	<b>Maximum per Room</b>
Lighting devices	32	32

<b>Shutters</b>	<b>Maximum overall</b>	<b>Maximum per Room</b>
Shutter Devices	32	32

<b>Appliances</b>	<b>Maximum overall</b>	<b>Maximum per Room</b>
Any combination of the following ON/OFF appliances <ul style="list-style-type: none"> <li>• Smart Plugs</li> <li>• Connected Sockets</li> <li>• Wiser Power Micromodule</li> </ul>	20	20
1-gang / 2-gang Connected Wireless Switch	10	10
Wiser Power Micromodule	20	20

<b>Safety and Security</b>	<b>Maximum overall</b>	<b>Maximum per Room</b>
Window + Door Sensor	10	10
Motion Sensor	10	10
Water Leakage Sensor	10	10
Temperature + Humidity Sensor	10	10
ARGUS Motion Sensor Outdoor 360	10	10
Smoke Alarm DC	10	10
Smoke Alarm AC	16	16

<b>Energy</b>	<b>Maximum overall</b>	<b>Maximum per Room</b>
EV Charger / Schneider Charge	1	1
Mureva Evlink	2	-

---

PowerTag C	20	-
PowerTag E	20	-

## Third party devices

### Device Limits

Device	Maximum overall	Maximum per Room
Airzone Plenum + Aidoo Pro Air Conditioner	16	4
Aidoo Pro Heat Pump	1	-
Combination of following: <ul style="list-style-type: none"><li>• Airzone Plenum</li><li>• Aidoo Pro Air Conditioner</li><li>• Aidoo Pro Heat Pump</li></ul>	16	4

## Selecting the mounting location


The Hub is the controller of the system and must be within a range of all devices in order for the system to work properly.

The ideal location for the Hub is determined by the following:

- Layout of the building where the system is installed
- Location of other devices that will be used in the system

## General Instructions for Hub and Device Mounting

Referring to the diagram, it is most important to locate the **Hub** (A) as central as possible to the area occupied by all **mains-powered devices** (B), such as switches and dimmers. Proximity to **battery-powered devices** (C) should also be considered in context with the tip mentioned after the diagram.

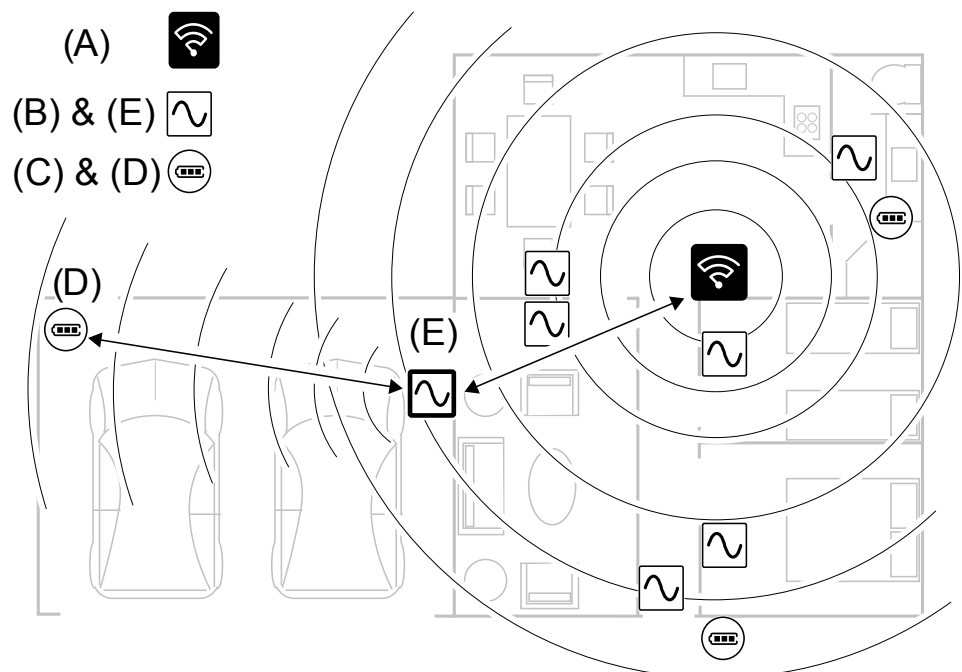


**TIP:** The **battery-powered motion sensor** in the **garage** (D) is a long way from the Hub. However, the sensor can connect to the hub via the **mains-powered device** being used as the **garage light switch** (E). This is because mains-powered devices also act as system network extenders. Consider this when deciding where to locate the Hub.

## PowerTag Mounting Requirements

The Wiser Hub (A) is recommended to be installed within 3 meters of PowerTag (B) devices to ensure the strong connection.

- (A) 
- (B) 

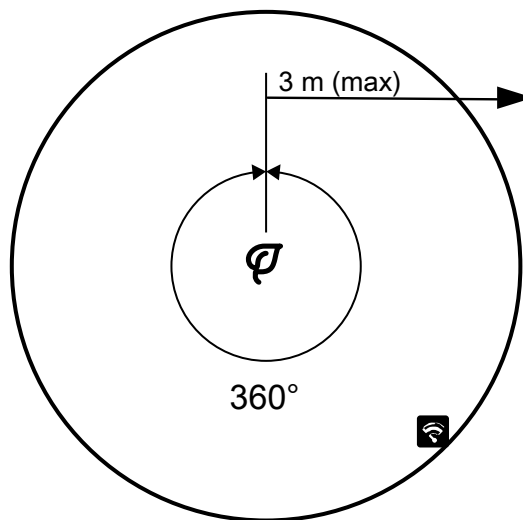

## Wiser Home App

Use the Wiser Home app to set up the Wiser system, control Wiser devices and receive notifications.

## Downloading the Wiser Home App

Before you can set up your home, you need the Wiser Home app.


Download the Wiser Home app from the relevant app store:

### iOS

iPhone/iPod touch: Apple® iOS Version 15 and later  
 iPad: Apple® iPadOS Version 15 and later  
 Apple Vision: visionOS 1.0 or later.

Search term: Wiser Home

<https://apps.apple.com/app/wiser-heat/id1222853887>

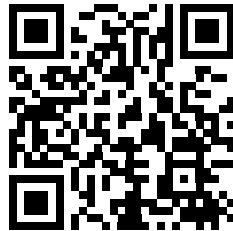

### Android

Mobile phone/tablet: Android 8.0 or later

Search term: Wiser Home

[https://play.google.com/store/apps/details?id=com.schneider\\_electric.WiserHeat](https://play.google.com/store/apps/details?id=com.schneider_electric.WiserHeat)



## Roles in the Wiser Home App

In the Wiser Home app, you can perform various tasks in the app, depending on the access level.

Function	Supported Features	Home owner	Professional Installer
Creating an account	Create an account by providing email address and setting up the password	Yes	No
Setting up the Wiser System	Adding and configuring the hub and devices.	Yes	Yes
Manual Firmware Update	Updating the hub firmware manually	No	Yes
Manage Rooms	Add or delete Rooms	Yes	Yes

Function	Supported Features	Home owner	Professional Installer
	Name or rename Rooms	Yes	Yes
<b>Manage devices</b>	Add or delete devices	Yes	Yes
	Configure device feature setting and schedule	Yes	Yes
	Change device icon, name and location	Yes	Yes
	Control device	Yes	Yes
	Receive device notifications and alarms	Yes	Yes
<b>Manage Moments, Schedule and Automations</b>	Create Moments, and Automations	Yes	Yes
	Create or assign a Schedule.	Yes	Yes
	Assign devices to Moments/Automations	Yes	Yes
	Adjust device settings in Moments/Automations	Yes	Yes
	Set Trigger conditions in Moments/Automations	Yes	Yes
	Receive Moment/Automation trigger notifications	Yes	Yes

**IMPORTANT:**

1. As a professional installer, the app offers for setting up a Wisier System and adding devices without having to be logged in.
2. Any user can log in to the app, if the home owner provides the login credentials.

## Professional Installer


This is a setup role by the Professional Installer. The main task of the Professional Installer is to set up the Wisier system.

To use the App as a Professional Installer:

1. Tap **Get started** (A).



## 2. Tap **Professional Installer** (B).

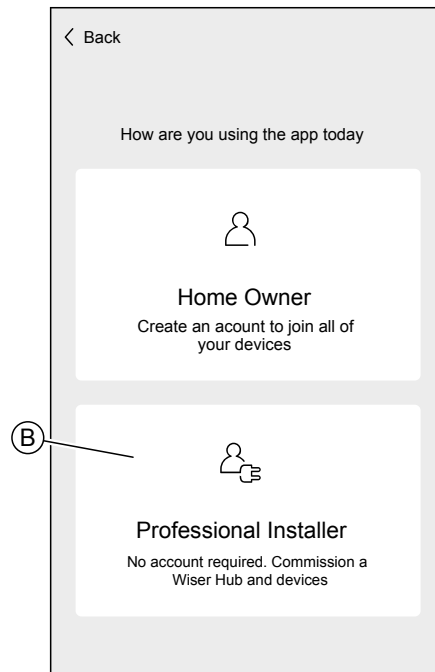

## Home Owner


The Home Owner can create an account and set-up the Wiser system.

To use the App as a Home Owner:

1. Tap **Get started** (A).



2. Tap **Home Owner** (B) and create an account. Refer to *Creating an Account*, page 76 for information on how to create an account.

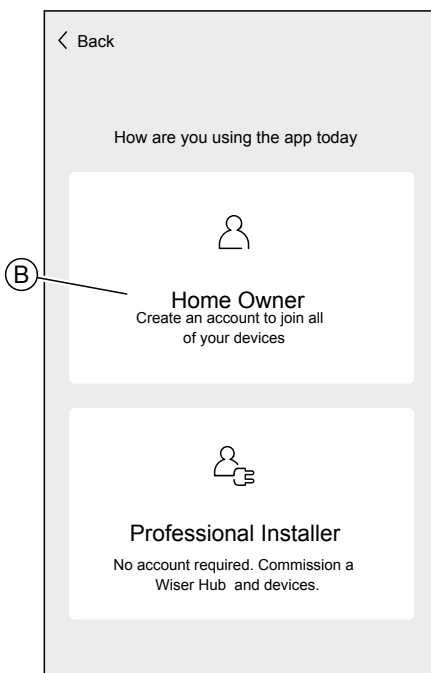


**NOTE:** After successfully creating your account using your email address and password, log in to the app and start using the Wiser system with your credentials.

## Login to the App

1. To login to the app, tap **Login** (A).



2. Enter your credentials and tap **Login (B)**.

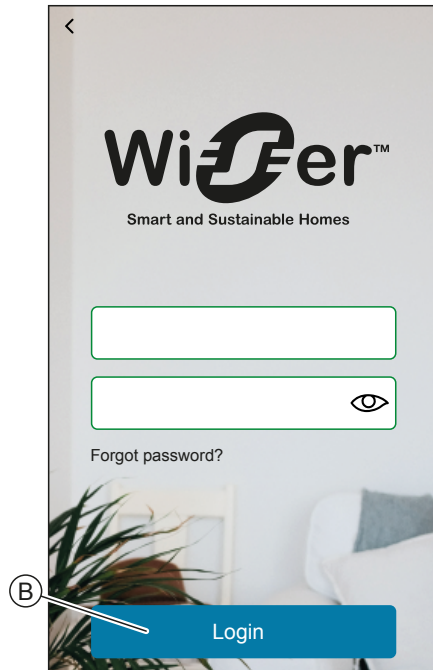

**NOTE:** You only have to log in to the app once. Each time you use the app again, you will be automatically logged in. You can log out of your account in the Account Settings, page 152.

## Cybersecurity Principles

These best practices help improve the security of your system by focusing on password management and network configuration.

### Password Guidelines

- Use a combination of uppercase letters, lowercase letters, numbers, and special characters.
- Ensure passwords are at least 10 characters long.
- Avoid dictionary words, use a passphrase when possible.
- Change passwords regularly—at least once a year.
- Change the default admin password immediately after receiving it or performing a factory reset.
- Do not reuse passwords across different accounts or systems.
- Change the default local access password after the first login.

### Network Guidelines

- Connect IoT devices only to your personal home internal network.
- IoT devices should not be made directly accessible from internet. Ensure that you DO NOT use port forwarding to access an IoT device from the public internet.
- Place IoT devices on a separate network segment. If your router supports VLANs or other network segmentation, use them.
- Use the strongest Wi-Fi® encryption available.

### Software Guidelines

- Always use the latest software for all devices in order to get new features, cyber security fixes and improvements.

- Keep your devices up to date.

# Getting to know the Hub

## Wiser Hub<sup>R</sup> 2<sup>nd</sup> Generation




CCTFR6311G2

You can connect a heating or hot water system directly to the Wiser Hub<sup>R</sup> 2<sup>nd</sup> Generation.

The app will guide you through the process to configure and add the devices to the system.

Once configured and added, the system connected to the Wiser Hub<sup>R</sup> 2<sup>nd</sup> Generation will show up as a device in the app and can be configured and operated accordingly.

## Operating Elements

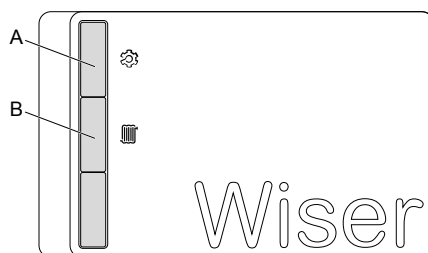







A	<b>Setup</b>	Activates the temporary Wi-Fi® network of the Hub. It is used during the commissioning process and troubleshooting.
B	<b>Heating Override*</b>	Turning on the heating override will turn on the connected heating system for 2 hours regardless of any settings in the app or thermostats.  To start override: press and hold button for more than 3 seconds.  To stop override, short press the button.



\* **NOTE:** The heating override switches off when the temperature is close to set point. However, in the app, the heating flame symbol will continue to display until the set point is reached. This is normal operation and will not affect the heating.

## LED Behavior

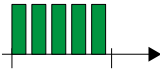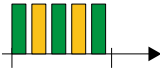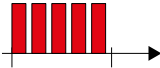   
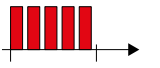 
### Setup LED


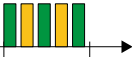 
LED	Description
 <p>Solid    Flashing    Breathing    Solid</p>	Hub is starting up or booting.
	Hub is powered on and operating as normal.
	Temporary Wi-Fi® network of Hub is enabled
	The Hub is actively searching for the device to pair.
	<p><b>Wi-Fi® Error</b></p> <p>Hub is unable to connect to your Wi-Fi® network.</p> <p>Check if your router is powered on and operating as normal. If you have changed your Wi-Fi® credentials or installed a new router, configure the hub accordingly.</p> <p><b>Firmware update</b></p> <p>During the firmware update process, Hub will disconnect from Wi-Fi®.</p>
	<p>Hub cannot connect to Wiser Cloud.</p> <p>The hub continues to control the connected devices as normal.</p> <p>The App will only connect to the Hub when your smartphone is in the same Wi-Fi® network as the Hub.</p>

### Heating LED

LED	Description
	Connected heating is active.
	Override is active.

### Other LED Indications

LED	Description
<p>Solid Red</p> 	The Hub is connected to Wi-Fi only, with no internet.
<p>Blinking Red</p> 	The Hub is searching for a Wi-Fi network.

LED	Description
Solid Green 	The Hub is connected to the internet.
Long blinking Green and Amber 	The Hub has connectivity issue. Turn off the Hub and turn on after some time.

## Updating

Firmware updates are intended for security and functional updates to help ensure that the System is always up to date. The firmware updates automatically and it runs in the background.

## Resetting to factory defaults


You can reset the Hub to it's factory defaults.

**NOTE:** Resetting the Hub will delete the Wisier System you have set up. If you want to reinstall your System, you will have to also reset all your Connected Devices and add them again to your System. Refer to resetting the device chapter in the Device User Guide of the respective Device. [List of Wisier Devices, page 16](#) provides the links to Device user guide for each devices. You will have to recreate all schedules, moments, automations, etc.

Only use the reset when you want to decommission your Wisier System or if all other troubleshooting measures failed.


To reset the Hub to factory defaults:

Press and hold the **Setup (A)** button. The Setup LED blinks green for a few seconds, turns solid red, and after a few seconds all LEDs on the Hub blink green once before turning off. Then release the **Setup (A)** button.

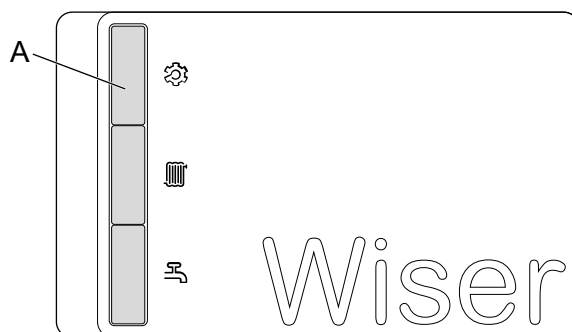

This indicates that the Hub is successfully reset.


## Wiser Hub 2<sup>nd</sup> Generation

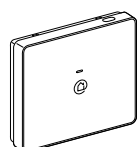

CCT501801


The Wiser Hub 2<sup>nd</sup> Generation monitors and controls the Devices of your Home via the Wiser Home App. It is connected to the Wiser Cloud for remote control via Wi-Fi®.

## Operating Elements

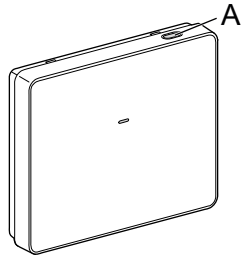

A	<b>Setup button</b>	For commissioning and resetting the Hub
---	---------------------	---

## LED Behavior

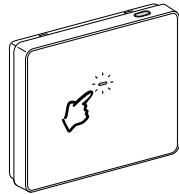

LED	Description
	Hub is starting up or booting.
	Hub is powered on and operating as normal.
	Temporary Wi-Fi® network of Hub is enabled
	The Hub is actively searching for the device to pair.
	<p><b>Wi-Fi® Error</b></p> <p>Hub is unable to connect to your Wi-Fi® network.</p> <p>Check if your router is powered on and operating as normal. If you have changed your Wi-Fi® credentials or installed a new router, configure the hub accordingly.</p> <p><b>Firmware update</b></p> <p>During the firmware update process, Hub will disconnect from Wi-Fi®.</p>
	<p>Hub cannot connect to Wiser Cloud.</p> <p>The hub continues to control the connected devices as normal.</p> <p>The App will only connect to the Hub when your smartphone is in the same Wi-Fi® network as the Hub.</p>

## Updating

Firmware updates are intended for security and functional updates to help ensure that the System is always up to date. The firmware updates automatically and it runs in the background.

## Resetting to factory defaults


You can reset the Hub to its factory defaults.

**NOTE:** Resetting the Hub will delete the Wiser System you have set up. If you want to reinstall your System, you will have to also reset all your Connected Devices and add them again to your System. Refer to resetting the device chapter in the Device User Guide of the respective Device. [List of Wiser Devices, page 16](#) provides the links to Device user guide for each devices. You will have to recreate all schedules, moments, automations, etc.

Only use the reset when you want to decommission your Wiser System or if all other troubleshooting measures failed.

To reset the Hub to factory defaults:

Press and hold the **Setup** button. The LED blinks green and amber for a few seconds, then turns solid red before turning off. Then release the **Setup** button.

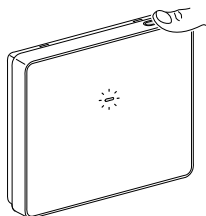

This indicates that the Hub is successfully reset.

## Setting up the Hub

In order to be able to control the system via your smartphone, the hub must be connected to the internet.

You can set up the Hub by using the app as Home Owner and Professional Installer.

The app offers the Professional Installer menu for setting up a Wisier System and adding devices without having to be logged in.

You can also setup the Wisier System by using the app as a Home Owner after creating an account. Refer to [Setting up an Account](#), page 76 for information on how to create an account.

## Setting up as a Professional Installer

The app offers the Professional Installer menu for setting up a Wisier System and adding devices without having to be logged in.


**NOTE:** The option to act as a Professional Installer is only available if you are logged out of the app. To log out of the app, navigate to the [Account settings](#), page 152 and tap **Logout**.

To set up the Wisier System as Professional Installer:


1. On the welcome screen, tap **Get started** (A).



## 2. Tap **Professional Installer** (B).

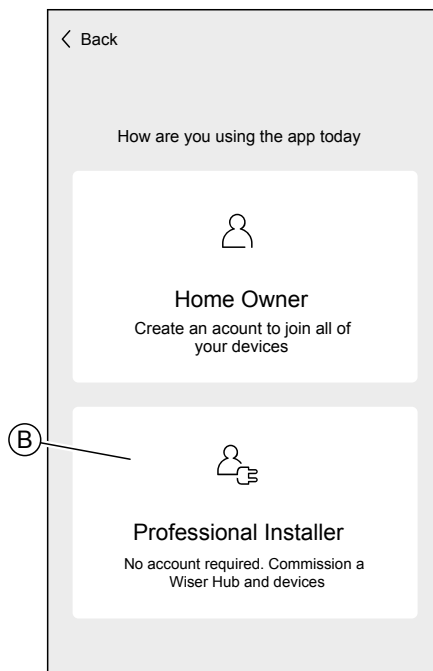


## 3. Select your country from the list.

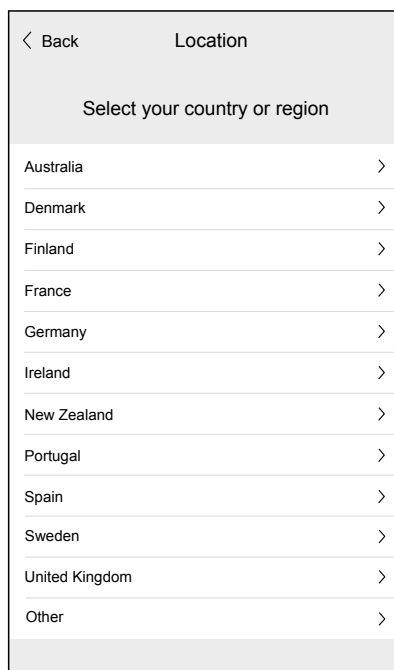

The **Add Devices** screen allows you to add a hub to the system. Refer to [Connecting to the Temporary Wi-Fi® Network of Hub](#), page 58 and [Connecting to Wi-Fi®](#), page 72 to add and setup the hub.

You can also download firmware into your app that will update the hub during setup. See [Downloading hub firmware into the app](#), page 55.

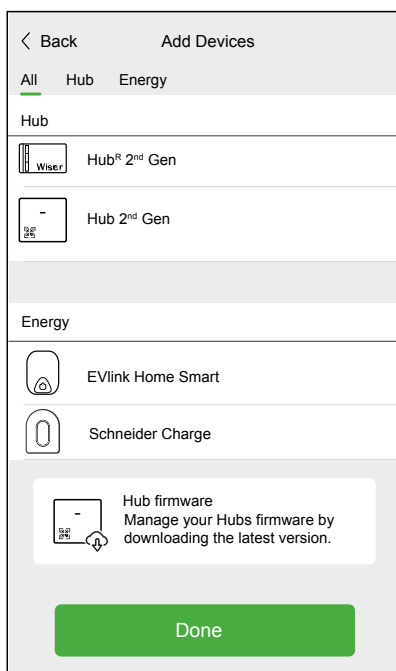

## Downloading hub firmware into the app


When the hub is connected to the Wisier cloud, it automatically updates the latest firmware.

If you want to update the hub manually before connecting to the cloud, you can use the app as a professional installer.


**IMPORTANT:** The Hub firmware download is available only for the Wisier Hub 2<sup>nd</sup> Generation and Wisier Hub<sup>R</sup> 2<sup>nd</sup> Generation.

As a professional installer, page 53:


## 1. Tap **Hub Firmware** (A).

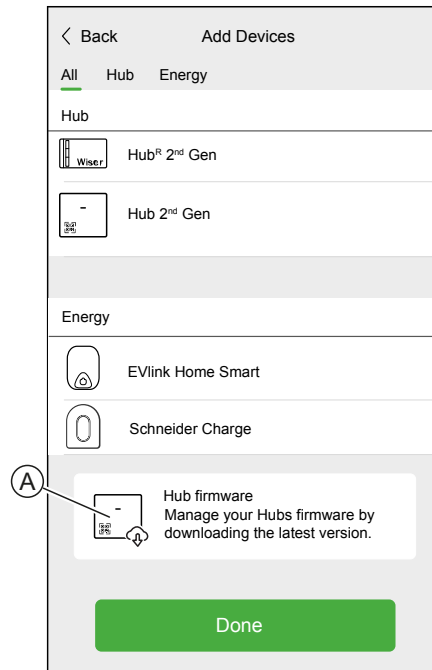

## 2. Tap **Check for updates** (B).

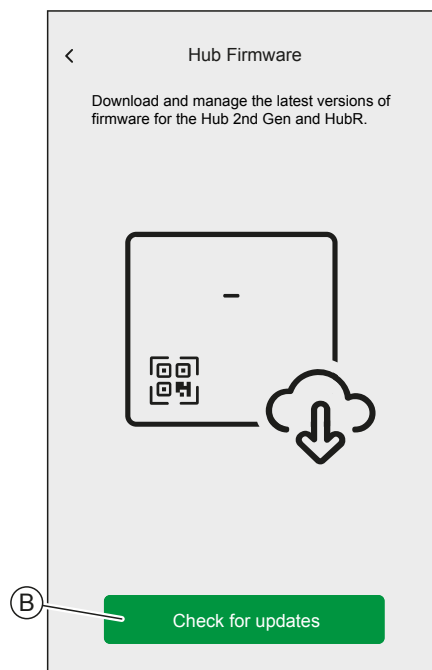


3. If there is a new version of firmware, it will be downloaded into the app.

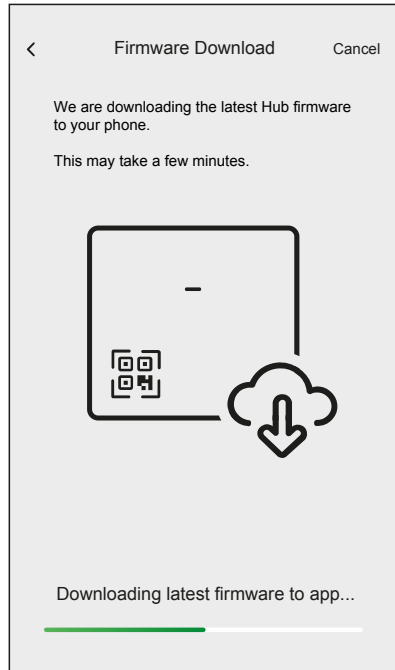

**NOTE:** If a firmware is saved in the app, you can check the version number and expiry date.

- To check if a newer version is available, tap **Update firmware** (A).
- To remove a firmware from your app, tap the **bin** (B).

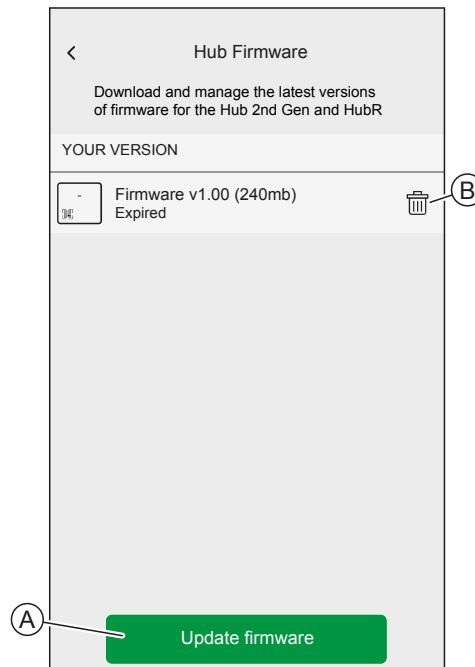


## Connecting to the Temporary Wi-Fi® Network of Hub

The hub will create a temporary Wi-Fi® network. To connect your smartphone to this network, follow the instructions provided in this section specific to the type of hub you have at home.

### Wiser Hub 2<sup>nd</sup> Generation


Using app as a Professional Installer, page 53 or Home Owner:

1. Select your hub in the app. Tap **Hub 2<sup>nd</sup> Gen (A)**.

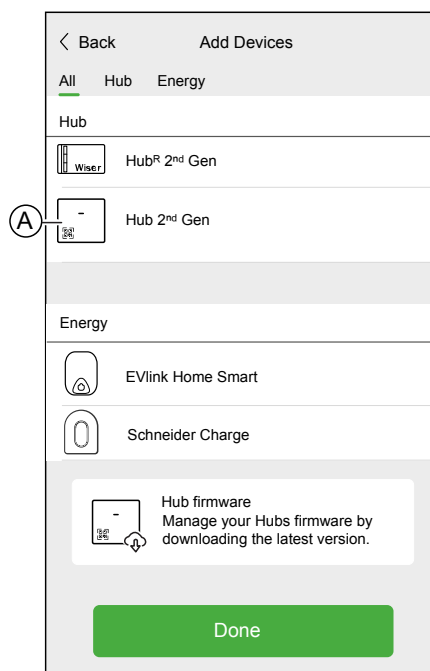

**NOTE:** If you have logged in as a Professional Installer, page 53, the app checks for the latest firmware. If the hub is not on the latest version, you will be prompted to update before proceeding with the setup.

- Put the Hub into setup-mode as per the instruction provided by the app. Then tap **Next** (A).

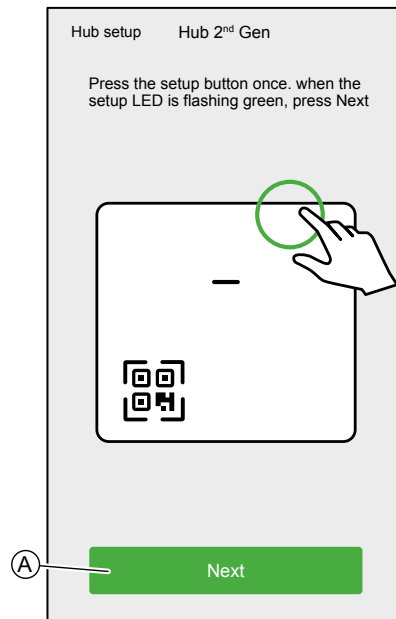


3. Connect your smartphone to the Hub's temporary Wi-Fi® network either by QR Code connection or Manual connection.

**TIP:** If you cannot find the password, tap **I can't find the password** to open the Schneider Electric FAQ site in your browser.

**QR Code Connection:**

- a. Tap on **Open Camera** and scan the QR Code from the device.

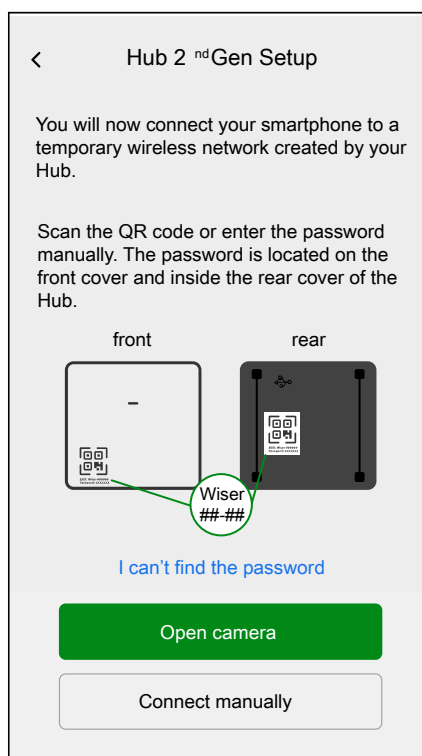


**IMPORTANT:** Allow the app to access your camera when prompted.

- b. A pop-up will appear, requesting permission to use a temporary WiFi network. Tap **Connect** to establish the connection.

**Manual Connection:**

- a. Tap on **Connect Manually**.
- b. Navigate to your smartphone's settings or tap **Open Wi-Fi Settings (C)**.
- c. Connect to the Hub Wi-Fi® and enter password located on the front cover and inside the rear cover of the Hub.
- d. Return to the Wisier Home App and tap **Continue (D)** to establish the connection.

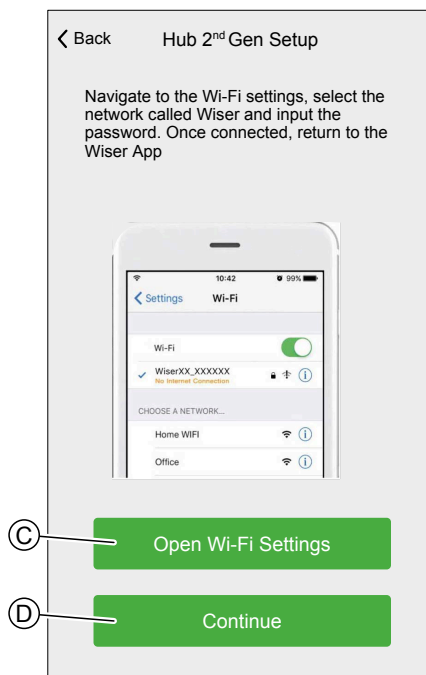


**NOTE:** The **Continue** (D) button is enabled only after joining the Hub Wi-Fi network.

4. If you want to check if the Hub has the latest version of firmware or complete the installation process without connecting to the network, tap **Skip** (F) and continue with chapter *Updating the firmware*, page 69.

**NOTE:**

- The **Skip** (F) option is not available if you login to the app as a Home Owner. Refer to *Roles in the Wiser Home App*, page 42 to find more information on the access levels.
- The Professional Installer has the ability to skip the Wi-Fi® setup and complete the installation process. However, this means you won't be able to connect the hub to Wi-Fi®, register for an account, or control your devices outside of your home.


- To connect the hub with your Wi-Fi® network and continue the setup, tap **Continue** (G) and continue with chapter Connecting to Wi-Fi®, page 72.

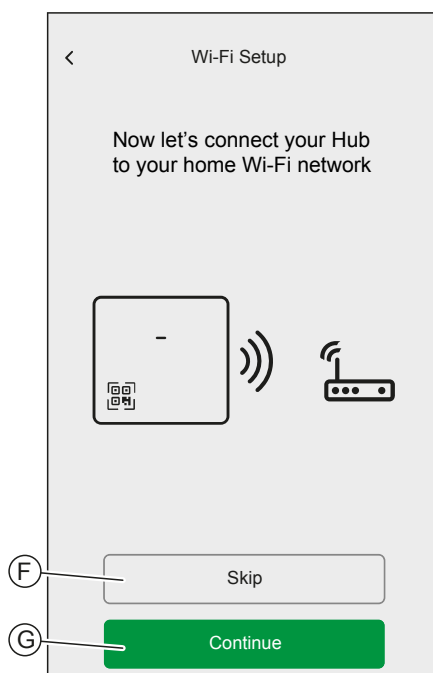

## Wiser Hub<sup>R</sup> 2<sup>nd</sup> Generation


Using app as a Professional Installer, page 53 or Home Owner:

- Select your hub in the app. Tap **Hub 2<sup>nd</sup> Gen** (A).

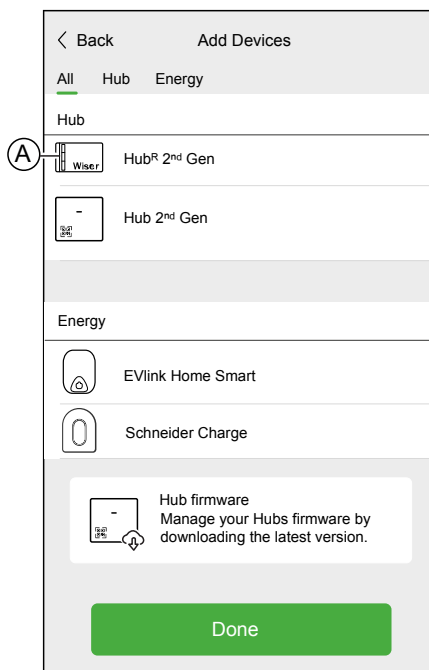

**NOTE:** If no firmware is saved in the app, you will be asked if you want to download the latest firmware.

- Put the Hub into setup-mode as per the instruction provided by the app. Then tap **Next** (A).

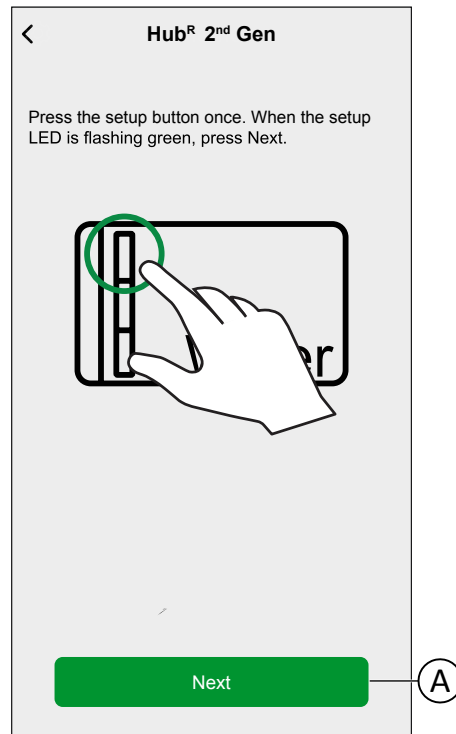

3. Connect your smartphone to the Hub's temporary Wi-Fi® network either by QR Code connection or Manual connection.

**TIP:** Tap **I can't find the password** to open the Schneider Electric FAQ site in your browser.

**QR Code Connection:**

- a. Tap on **Open Camera** and scan the QR Code from the device.




**IMPORTANT:** Allow the app to access your camera when prompted.

- b. A pop-up will appear, requesting permission to use a temporary WiFi network. Tap **Connect** to establish the connection.


**Manual Connection:**

- a. Tap on **Connect Manually**.
- b. Navigate to your smartphone's settings or tap **Open Wi-Fi Settings (C)**.
- c. Connect to the Hub Wi-Fi® and enter password located on the front cover and inside the rear cover of the Hub.
- d. Return to the Wisier Home App and tap **Continue (D)** to establish the connection.

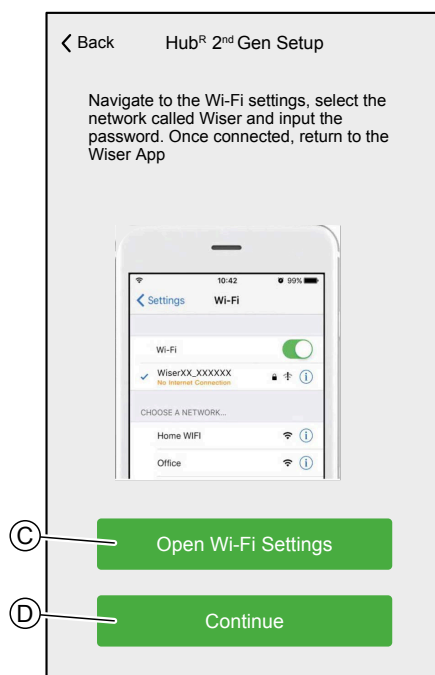


**NOTE:** The **Continue** (D) button is enabled only after joining the Hub Wi-Fi network.


4. Select your options from the **Device Details** screen of the Hub<sup>R</sup> 2<sup>nd</sup> Gen and tap **Next**.

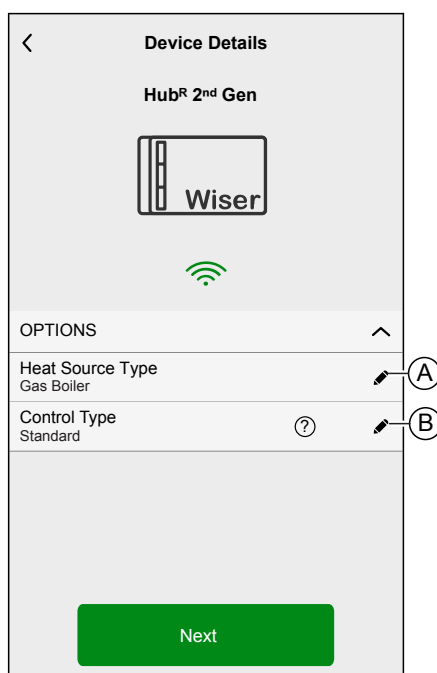

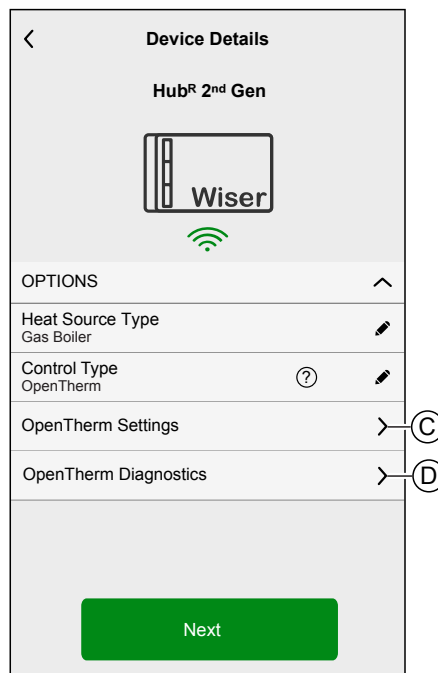

- a. **Heat Source Type (A)**: Tap and select the type of heating system available in your home from the drop-down, and then tap **OK**.
- Gas Boiler (cycle time: 10 min)
  - Oil Boiler (cycle time; 20 min)
  - Electric Boiler (cycle time: 5 min)
  - Heat Pump (no cycle)
- b. **Control Type (B)**: Tap and select the type of control your heating system uses, and then tap **OK**.
- **Standard**: Select this option if your heating system uses the basic On/Off control. Standard controls typically use simple On/Off commands to control the boiler. The thermostat signals the boiler to turn On when heating is needed and to turn Off when the desired temperature is reached.
  - **OpenTherm**: Select this option if your heating system supports OpenTherm. OpenTherm is a digital communication protocol that allows continuous communication between the boiler and thermostat. As a result, the boiler can determine the room's current temperature and heat accordingly as required, thereby improving energy efficiency and providing more consistent heating.
- NOTE:** It is recommended to use OpenTherm with the one-channel HubR and a combi boiler, as effective operation cannot be guaranteed on other models.
- c. If you choose **OpenTherm** control type, following additional options will appear:

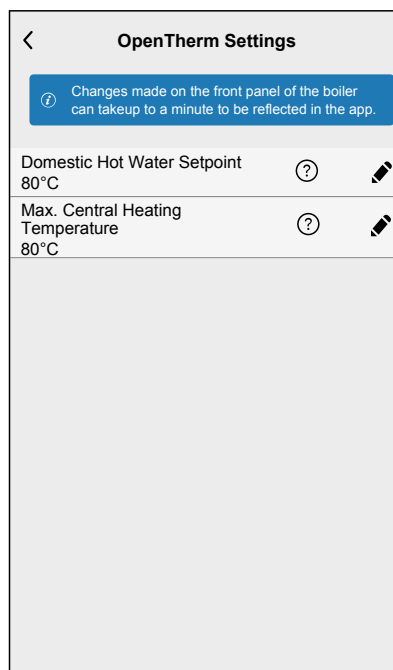

- **OpenTherm Settings (C):**



**IMPORTANT:**


- (1) If the options are editable, the App will display the  symbol and allows you to set the temperature. In this case:
  - If the temperature displayed on your boiler does not match the setpoint shown in the app, rely on the value in the app. The app's setpoint takes precedence and ensures the boiler operates as expected.
- (2) If the options are NOT editable, the App will NOT display the  symbol and will not allow you to set the temperature. In this case:

- If the temperature displayed on your boiler does not match the setpoint shown in the app, rely on the value on your boiler. The boilers setpoint takes precedence for this value.

<b>Domestic Hot Water Setpoint</b>	Set the desired temperature for domestic hot water. This option allows you to control the temperature of the hot water used for domestic purpose such as showers, baths, and other domestic uses.
<b>Max Central Heating Water Temperature</b>	Set the maximum temperature for the water circulating through your central heating system. This will help control the heat output of your radiators or underfloor heating.

- **OpenTherm Diagnostics (D):** Tap to view the live status of your heating system. The diagnostic information helps the technician to identify faults and resolve problems related to heating system.

**NOTE:** If some of the diagnostic information appears as unrealistic values, this indicates that your boiler does not support this information.

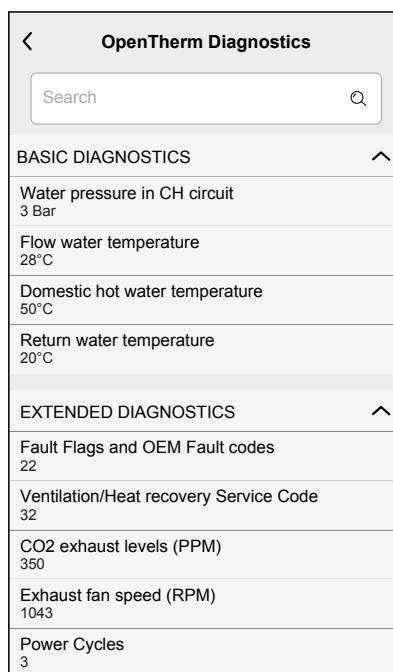


5. If you want to check if the Hub has the latest version of firmware or complete the installation process without connecting to the network, tap **Skip (F)** and continue with chapter [Updating the firmware](#), page 69

**NOTE:**

- The **Skip (F)** option is not available if you login to the app as a Home Owner. Refer to [Roles in the Wiser Home App](#), page 42 to find more information on the access levels.
- The Professional Installer has the ability to skip the Wi-Fi® setup on all Hubs and complete the installation process. However, this means you won't be able to connect the hub to Wi-Fi®, register for an account, or control your devices outside of your home.

6. To connect the hub with your Wi-Fi® network and continue the setup, tap **Continue** (G) and continue with chapter Connecting to Wi-Fi®, page 72.

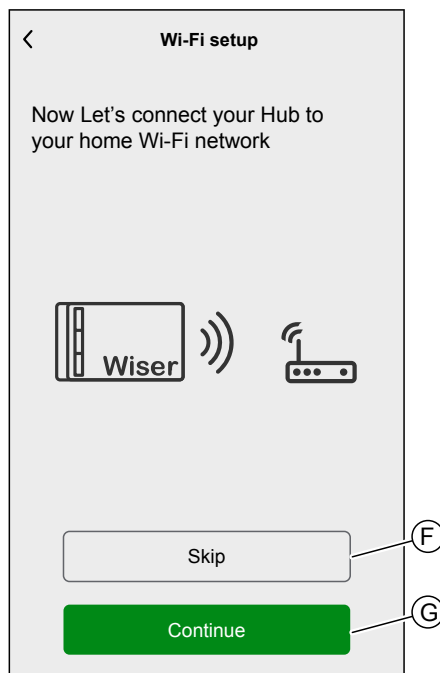


## Updating the firmware

When the hub is connected to the Wiser cloud, it automatically updates the latest firmware. For the first time installation, if you want to check and update the firmware manually, use the app as a professional installer.

To check and update the firmware manually:

1. Use the Wiser Home App as a professional installer, page 53.
2. Download the latest hub firmware to the app. Refer to Downloading hub firmware into the app, page 55.
3. Follow the steps in chapter Connecting to the Temporary Wi-Fi® Network of Hub , page 58.




- When asked to connect your hub to your home internet network, tap **Skip** (A).

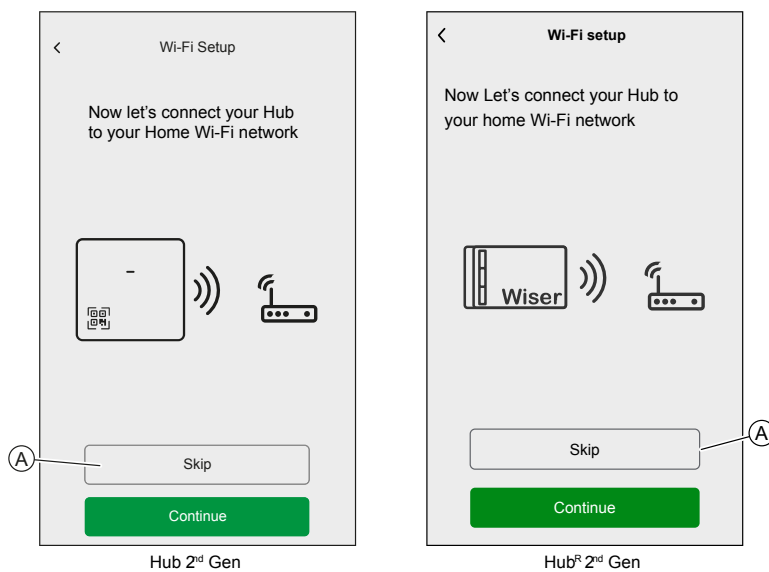

- You will receive a pop-up notification to confirm your choice. Tap **Yes** to continue.

6. Tap **Yes, check and update** (B) to install the latest firmware.


**NOTE:** Tap **No, skip** if you want to skip the downloading and complete the setup with the current version.

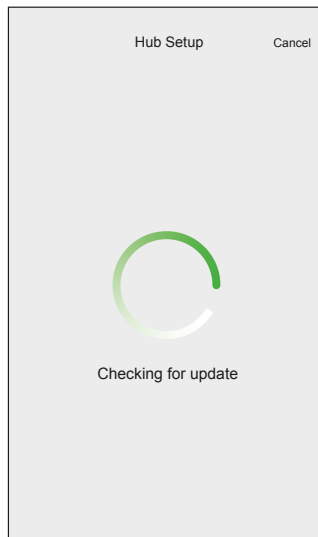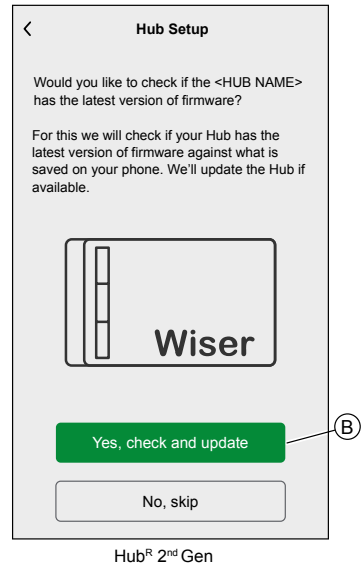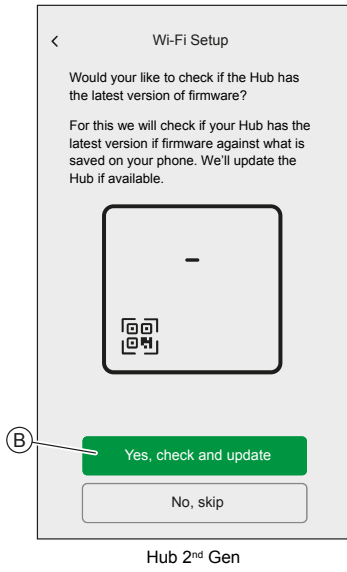

## 7. Here are the possible conditions:

- If the firmware version on your smartphone matches the one on the hub, your setup is complete.
- If the firmware version on your smartphone doesn't match the one on the hub, the hub will automatically update to the latest firmware version.

**IMPORTANT:** The firmware update may take some time. Do not close the Wisier Home App during this process, and ensure that your phone screen remains unlocked. You can set your phone's Auto-Lock to Never in the device settings to prevent the screen from locking while the update is in progress.

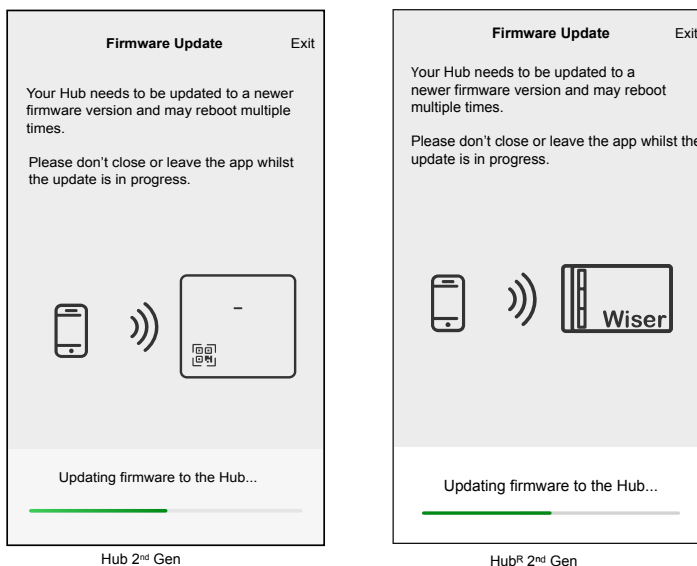

If you experience issues with the offline firmware update, refer to the Troubleshooting: Not able to perform offline firmware update, page 225.


## Connecting to Wi-Fi®

Once you are connected to the hub's temporary Wi-Fi® network, enter the login information of your home Wi-Fi® into the hub.

To enter the Wi-Fi® login information:


1. Use the Wisier Home App as a Professional Installer, page 53 or a Home owner.
2. Follow the steps in chapter Connecting to the Temporary Wi-Fi® Network of Hub , page 58.

- When asked to connect your hub to your home Wi-Fi® network, tap **Continue** (A).

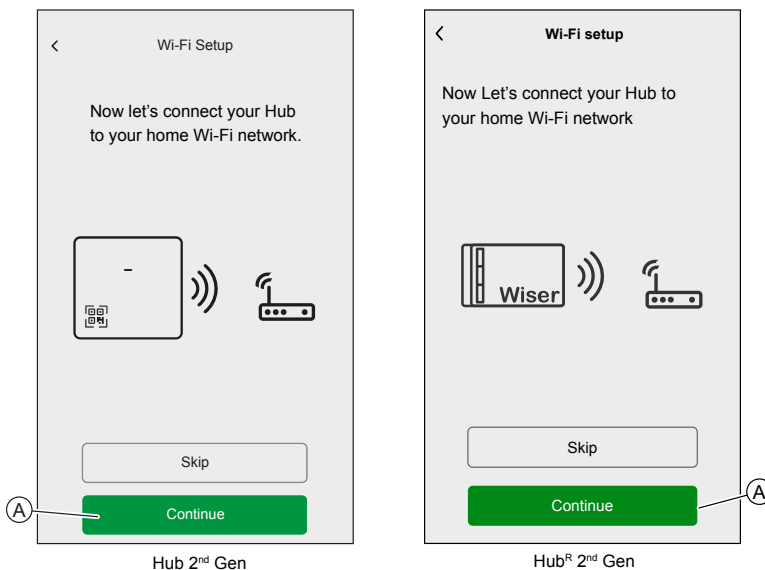


- Select your Wi-Fi® network from the list.

**NOTE:** If your home network does not appear in the list of available network, tap **Can't see your network?** to allow you to manually enter your network credentials to easily connect to your home network.

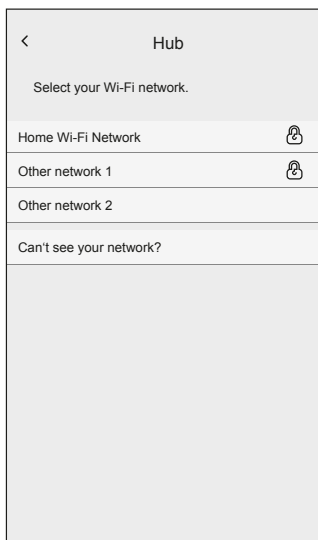

5. Enter the Wi-Fi® password and tap **Join** (B).


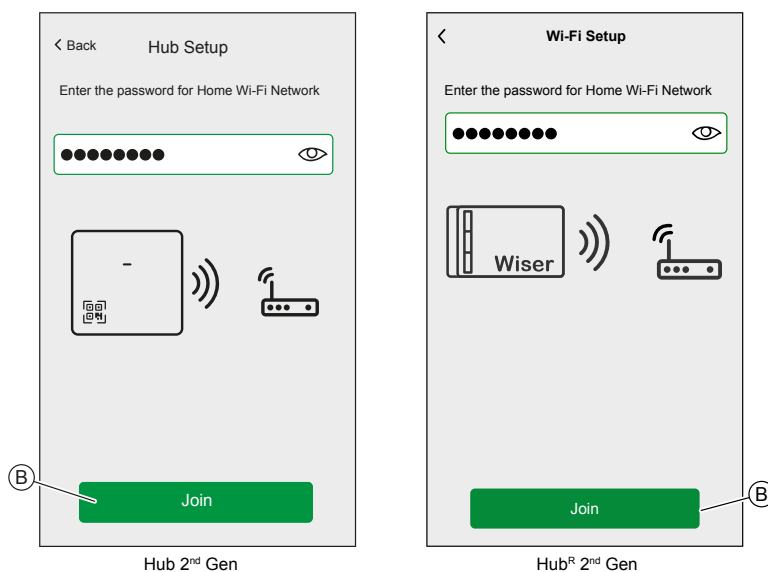


- If you have logged in as a **Professional Installer**, follow Step 6.
  - If you have logged in as a **Home Owner**, follow Step 7.
6. When the hub is connected to your Wi-Fi® network, you can start adding devices to your hub.


**NOTE:**


- a. The hub only operates in the 2.4 GHz range.
- b. For more information about adding devices to the hub, refer to chapter Adding a Device, page 93.

7. Choose one of the following options:

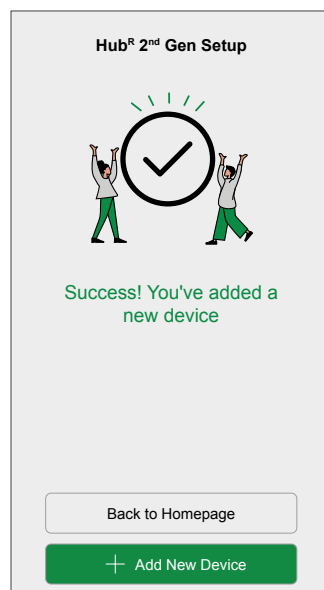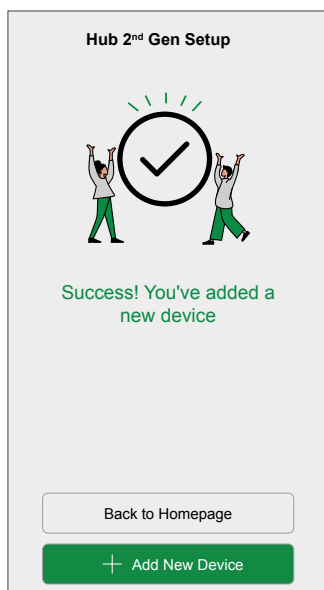

- **Back to Homepage:** Tap to return to the Home screen.

**TIP:** Tap  to start adding devices to control your home. Refer to Adding a Device, page 93.

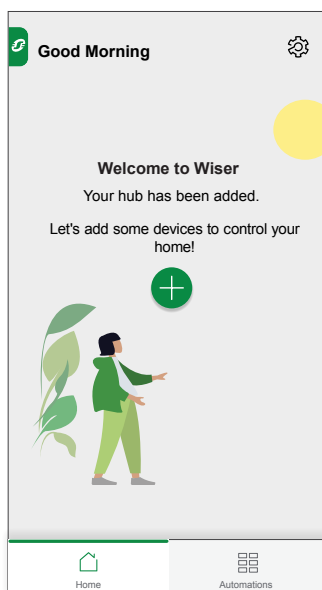

- **Add a New Device:** Tap to start adding devices to control your home. Refer to Adding a Device, page 93.

# Creating an Account

To be able to control the system from your smartphone, you need to create an account and log in.

Once the professional installer sets up the Wiser system, they will hand it over to the homeowner. Subsequently, the homeowner will create an account to have control over the Wiser system. Refer to the chapter [Setting-up the Wiser System](#), page 36 for information on how to setup the wiser system.


If the homeowner decides to set up the Wiser system independently, they need to begin by creating an account before proceeding with setting up the Wiser system.

**IMPORTANT:** Only a Homeowner has access to create an account.

1. On the welcome screen, tap **Get started** (A).



2. Tap **Home Owner** (B) to create an account.

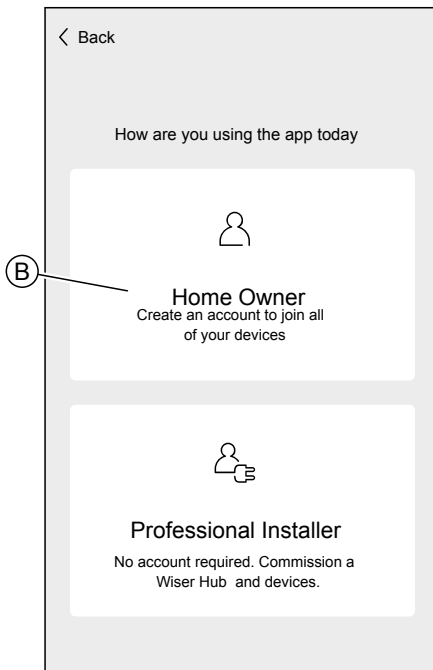

3. Enter your name and email address

4. Enter a password

**NOTE:** The password must meet at least the following criteria:


- Eight characters long
- Contain at least one uppercase and one lower case letter
- Contain at least one number

**TIP:** Increase the security of your password by observing the following points:

- Do not use any personal information such as a name, birthday, e-mail address, etc. These data are publicly visible and make it easier to guess the password.
- Use a long password. It should contain at least six characters; longer passwords help increase security.
- Do not use a password that you have already assigned for another service.
- If possible, include numbers, special characters and differences in upper and lower case.
- Change the password frequently.

**TIP:** For more information about securing your network, read chapter Cybersecurity Principles, page 46

5. Select the country in which your home is located.

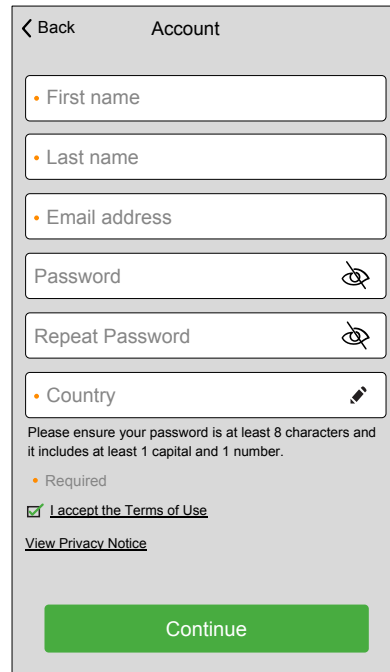6. Tap **Continue** .

## 7. Activate account.


An email will be sent to the specified address. Check your inbox and click the confirmation link.

**TIP:** If you do not see the email in your inbox, check your spam or junk folder.


You can update your information and request the email again if needed.

Once confirmed, the Wisier Home app will display a message indicating that the setup is complete.


## 8. Tap ✓ icon.

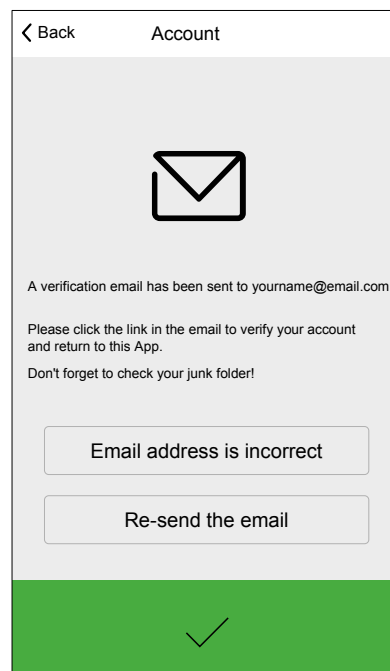

9. Read and tick the check box to agree with the **User Agreement** and **Privacy Notice** and tap **I accept**.

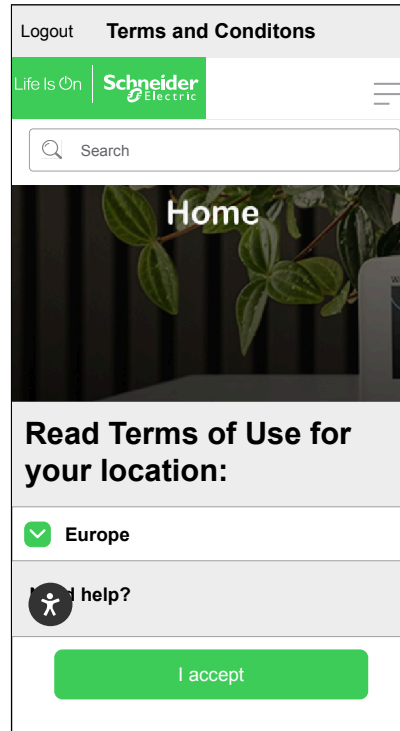


10. Personalize your consents and tap **Continue**.

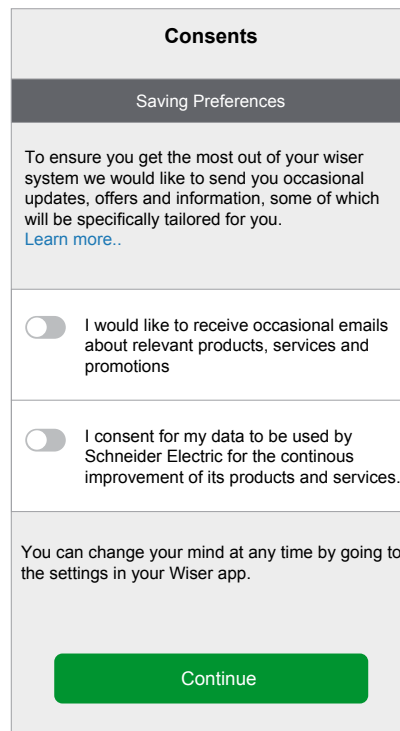

11. Enter your home address and tap **Continue**.

The home address is required so that functions dependent on the location (e.g. to predict the outdoor temperature for Eco-Mode) work properly.

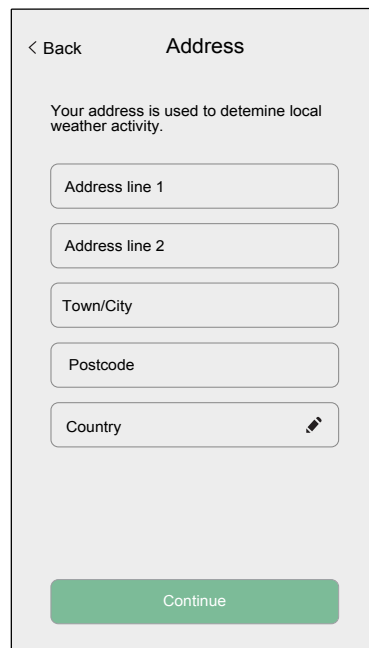

< Back      Address


Your address is used to determine local weather activity.

Address line 1


Address line 2


Town/City

Postcode

Country 

Continue

12. Tap  to start adding devices to your system. Refer to Adding a Device, page 93.

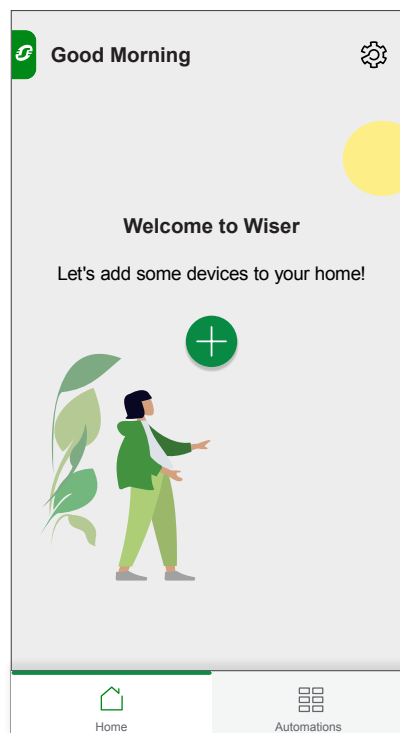

## Connecting Devices to the Hub

For the Wiser devices to be controlled by the hub, they must be connected to the hub.

Connecting devices to the hub is part of the set up process. You can add devices to the hub at any time. The app guides you through the process of adding devices.


You can find detailed information about the necessary steps for adding the device in the chapter [Adding a Device](#), page 93.

# Matter

Matter is a new communication standard for IoT devices that allows devices from different manufacturers to communicate through third-party apps such as Google Home, Apple Home, and Amazon Alexa. Its goal is to simplify the smart home ecosystem by allowing internet-connected devices from different manufacturers to communicate seamlessly and securely. Matter promotes interoperability, meaning Matter-certified devices from different brands can easily work together without compatibility issues.

## Matter Bridging

A Matter Bridge acts as an intermediary between non-Matter devices (using various communication protocols like Zigbee®) and the Matter network. It allows non-Matter IoT devices to seamlessly integrate into a Matter ecosystem (Matter Fabric). The Bridge translates signals between Matter and other protocols, enabling Matter nodes to communicate with these Bridged Devices. By using a Matter Bridge, consumers can maintain compatibility and unify their existing non-Matter devices with Matter-certified ones in their smart home setup.

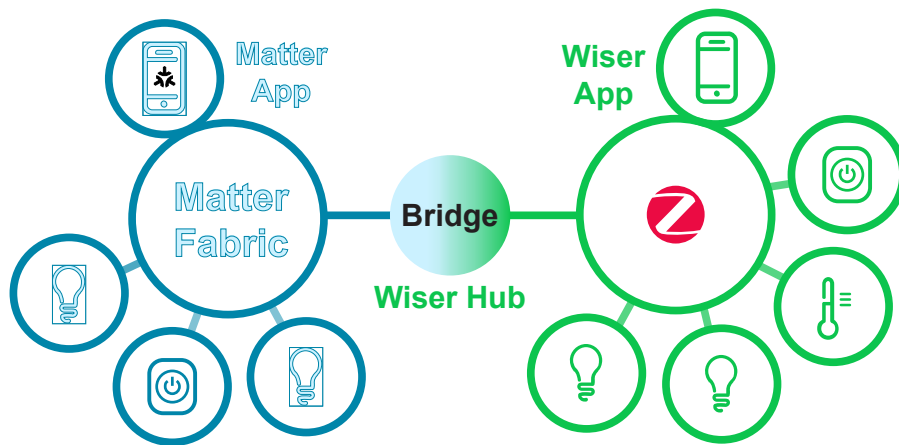

In this case, Wiser Hub 2<sup>nd</sup> Generation / Wiser Hub<sup>R</sup> 2<sup>nd</sup> Generation acts as the Matter Bridge. By adding the hub to a third-party Matter app (Google/Amazon/Apple etc.), you can integrate your Wiser Zigbee® devices into the Matter Fabric (network) and control them from the third-party app.

## Compatible Wiser Devices for Matter Bridge

Following are the Matter bridge compatible devices:


Refer to List of Wiser Devices, page 16 for the links to Device user guide for each devices.


Sensors	Wiser Window/Door Sensor Wiser Water Leakage Sensor Wiser Motion Sensor Wiser Temperature/Humidity Sensor
Lights	Wiser Micro Module Light Switch Connected Relay Switch 10 A

Dimmers	Wiser Micro Module Dimmer Wiser Multiwire Micro Module LED Dimmer Connected Universal Rotary Dimmer LED Connected Universal Push-button Dimmer LED
Shutters	Wiser Micro Module Shades Control Connected Blind Control Switch
Appliances Wiser Radiator Thermostat  Wiser Room Thermostat  Wiser Underfloor Heating Connection Strip  Wiser 16 A Relay for Temperature Control	Connected Single Socket Outlet  Wiser Plug  Connected Wireless Switch 1-gang/2-gang
Climate	Wiser Radiator Thermostat  Wiser Room Thermostat  Wiser Underfloor Heating Connection Strip  Wiser 16 A Relay for Temperature Control
Safety	Wiser Smoke Alarm - Battery  Wiser Smoke Alarm 230 V
Energy	PowerTag E  PowerTag C

## Commissioning Wiser Hub to Matter Ecosystem

This section outlines the steps to commission your Wiser Home system to the Matter network.

1. On the Home screen of the Wiser Home app, tap .
2. Tap **Account > App and Connections > Matter**.



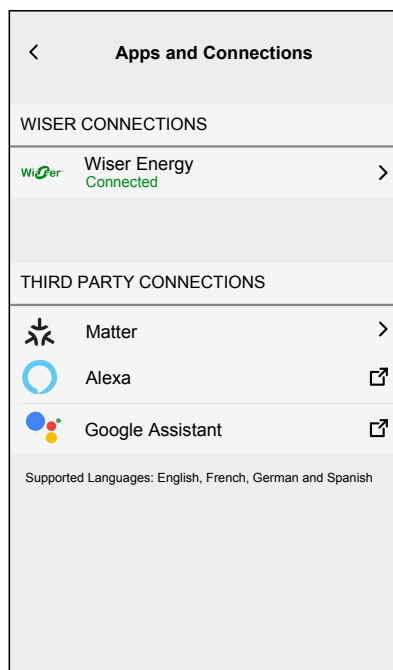


### 3. Tap **Add a new connection**.



A screen will appear with instruction how to join the Matter network using the QR code on the Wiser Hub 2<sup>nd</sup> Generation/ Wiser HubR 2<sup>nd</sup> Generation or the pairing code.


4. Tap **Allow Matter Joining** and wait for the hub to connect to the Matter network (this may take up to 15 minutes).

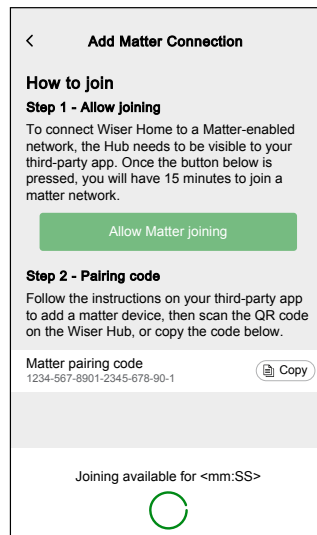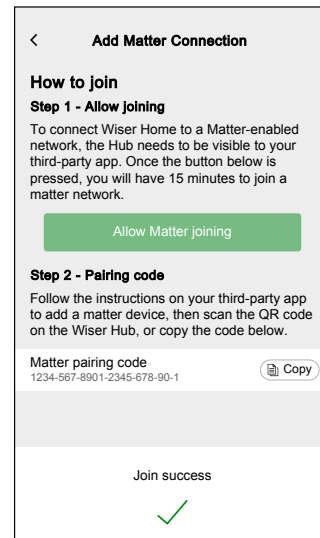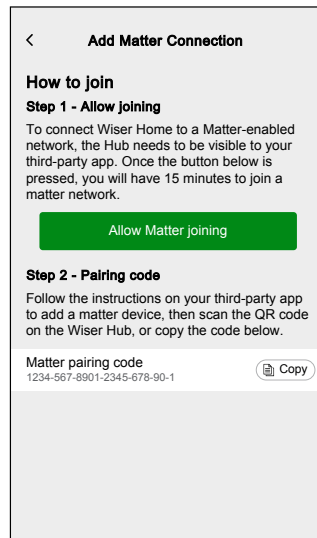


5. Choose one of the following options to prepare for connecting:
  - **Option 1 (Pairing Code):** Copy the pairing code shown on the screen.
 

**TIP:** Once the pairing code is copied, you will receive a confirmation message on your screen saying, **Copied to clipboard**.
  - **Option 2 (QR Code):** Locate the QR code on the hub, ready to be scanned.
6. Follow the instructions from the third-party app to add a Matter device. When prompted, either enter the pairing code from the Wiser app into the third-party app or scan the QR code on the hub to successfully add the hub to the Matter network.

## Managing Matter Connection

1. On the Home screen of the Wiser Home app, tap .

## 2. Tap **Account > App and Connections > Matter**.

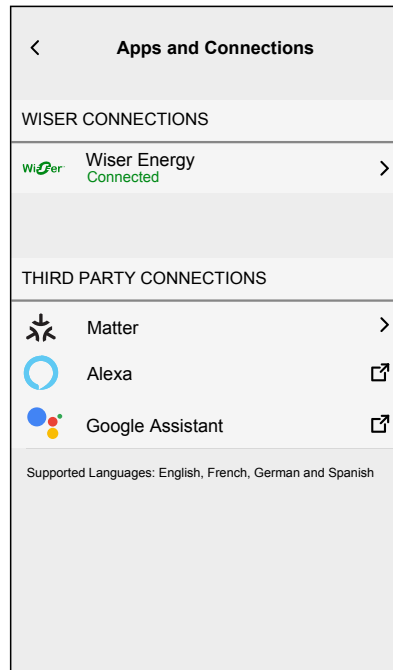

3. Choose one of the following options:




- a. **Manage your connections:** Here you can see all Wisier Home system that are currently joined to the Matter network.

**NOTE:** This option is available only if you have already connected to Matter network.

Tap **Remove** for the following reasons:

- If you experience difficulties adding your Wisier Home system to the Matter network and can see the desired network in the list, tap this option to remove the network and try connecting again. Refer to [Commissioning Wisier Hub to Matter Ecosystem](#), page 83 to rejoin the matter network.

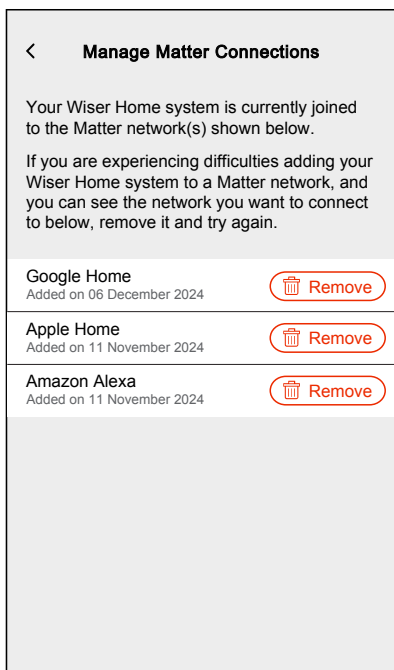

- If you want to completely remove the network from the Matter network.

**NOTE:** Make sure you remove the network from your third-party app as well.

- b. **Add a new connection:** Tap this option to add new connections to the Matter network. Refer to *Commissioning Wisier Hub to Matter Ecosystem*, page 83 to add new connection.

# Configuring the Wiser System

## Devices


Adding new Devices / Assigning Devices to Rooms / Device settings / Removing a Device


## List of Devices

In the Devices page, you can find all installed Devices of your Home, sorted by their device type.


The Devices will also display their Name, their Room location and, if applies, other information, e.g. the charge level of the battery and the indication of zigbee signal strength.

Tap a Device in the List to navigate to the Device Details, page 97.


1. Login to the app.
2. On the Home Screen, tap .

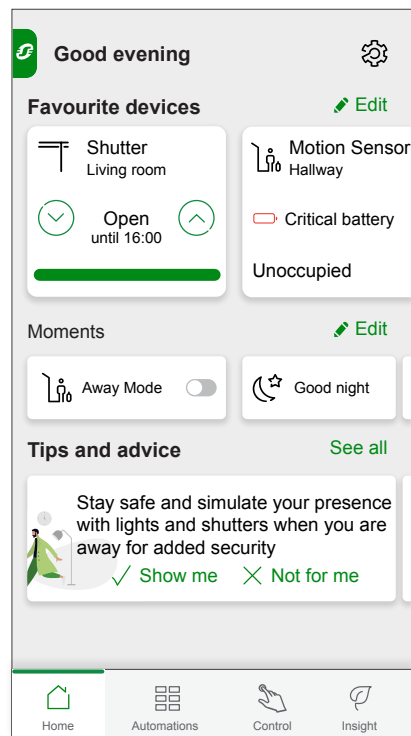


### 3. Tap **Devices**.

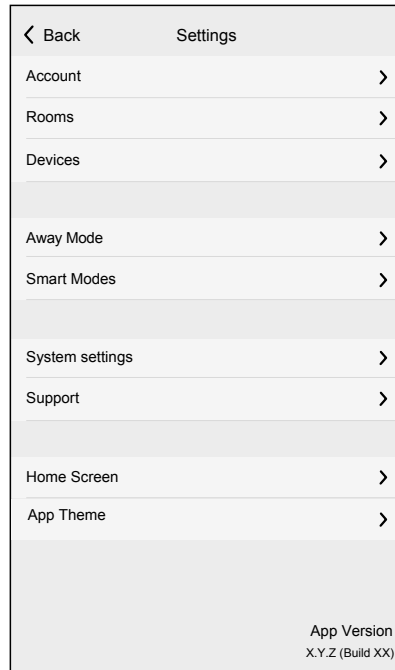


List of Devices:

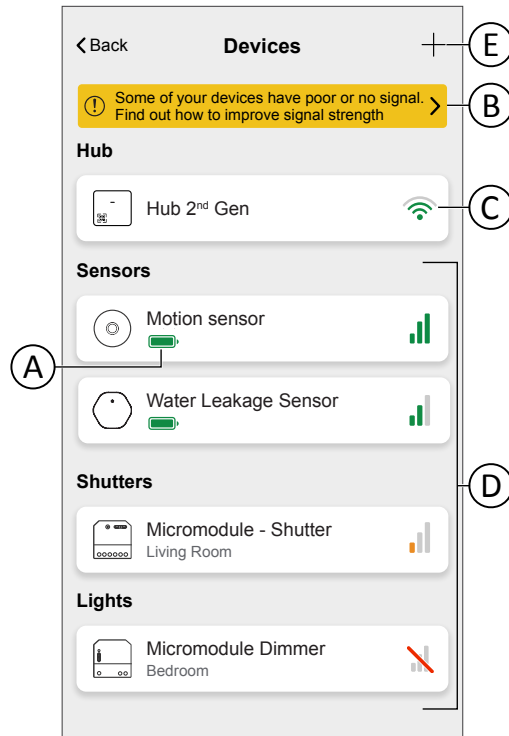


A	The battery charge level indicator which displays the current battery status for battery-powered devices.
B	Tap/click on the banner to get details about devices experiencing signal issues. Refer to <i>Device With Signal Issues</i> , page 91 for details on devices facing the signal issues and refer to <i>About Signal Strength</i> , page 220 to know more about the Zigbee® signal strength.
C	Hub Wi-Fi® signal strength indicator which displays your hub's connection to your Wi-Fi® network. When the indicator displays  , it signifies that there is no signal or connection.
D	Zigbee® signal strength indicator which displays the current signal strength of the zigbee devices.
E	Tap/click to add new devices.

## Device With Signal Issues


You can view devices which are currently offline and those with poor signal strength. Additionally, you'll find information regarding signal strength and solutions.

1. On the Home Screen, tap  > **Devices**.

2. Tap on the banner to get details about devices experiencing signal issues.

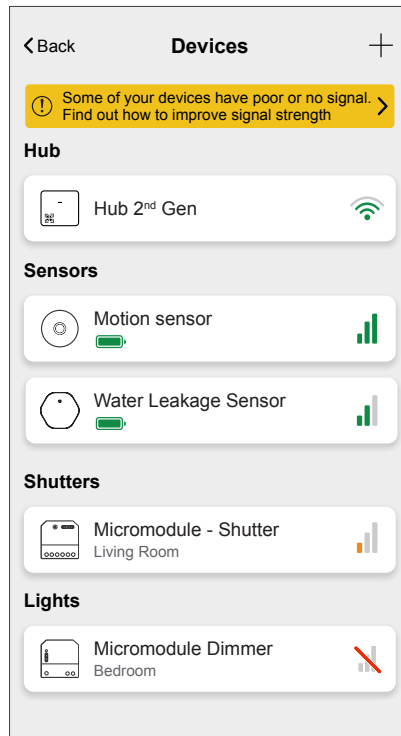

Device with signal issues:

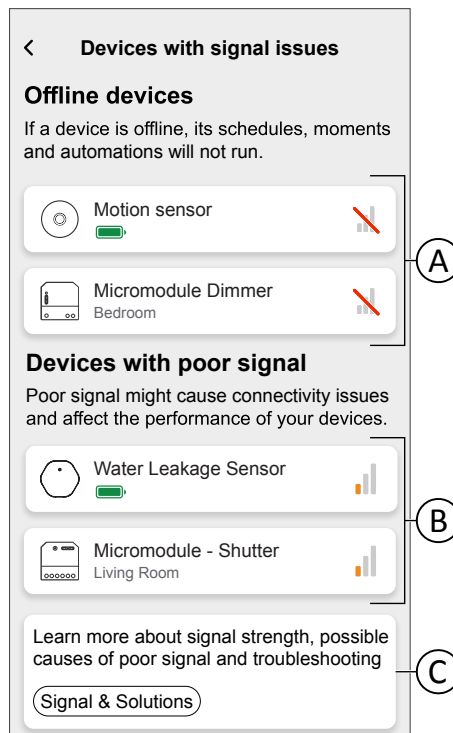

A	Displays a list of all devices that are currently offline.
B	Lists devices experiencing weak signal strength.
C	Tap <b>Signal &amp; Solutions</b> for detailed information about Zigbee signal strength and possible solutions.


## Adding a Device

You can add a new Device at any time.


**NOTE:**

- The hub must be installed before adding a Wiser device.
- Add mains-powered devices before battery-powered devices. Refer to *Selecting the mounting location*, page 40.
- The instructions provided for adding the device are generic. Some steps may vary based on the device types. You can find detailed information in the *Device User Guide* of the respective device. Refer to *List of Wiser Devices*, page 16 for the links to Device user guide for each devices.

1. Tap + (A) in the List of Devices, page 89.

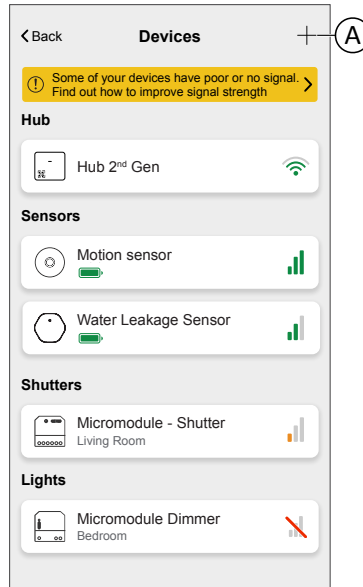

2. Find your device by navigating the categories at the top of the screen (B).
3. Tap the **type of Device** (C) you want to add and follow the instruction in the app.

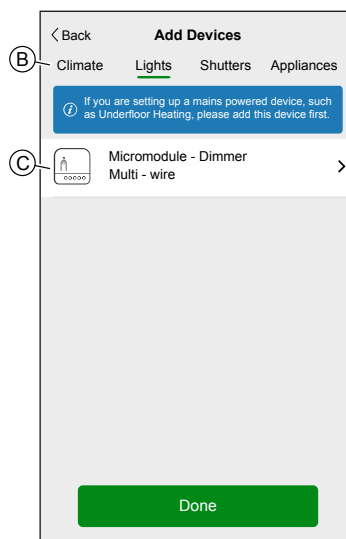

4. Tap **Scan QR code** and allow the Wiser Home app to access your camera. Then, scan the QR code located on the device.




**IMPORTANT:**

1. The QR code scanning is not applicable to following hub / devices.

Hub	Wiser Hub <sup>R</sup>
Device	<ul style="list-style-type: none"> <li>• Airzone Devices</li> <li>• EV Link Home Smart</li> <li>• PowerTag Energy</li> <li>• Schneider Charge</li> <li>• Wiser Plug</li> <li>• Wiser Radiator Thermostat</li> <li>• Wiser Room Thermostat</li> <li>• Wiser Underfloor Heating Controller / Connection Strip</li> </ul>


2. If you are facing difficulties in scanning the QR code, refer to [Handling QR code Issues](#), page 97.

5. Tap **Next**.

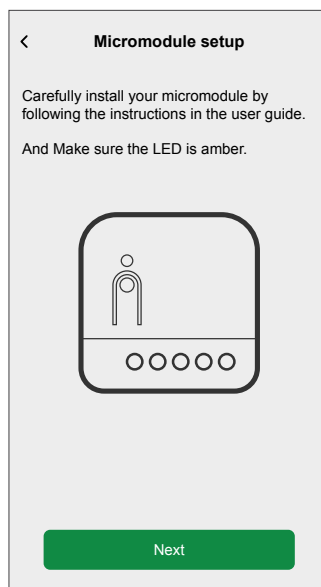

6. Set the Device into pairing mode.


The Wiser Home App will guide you through the pairing process. You can find detailed information about the pairing mode in the Device User Guide of the respective device. Refer to [List of Wiser Devices](#), page 16 for the links to Device user guide for each devices.

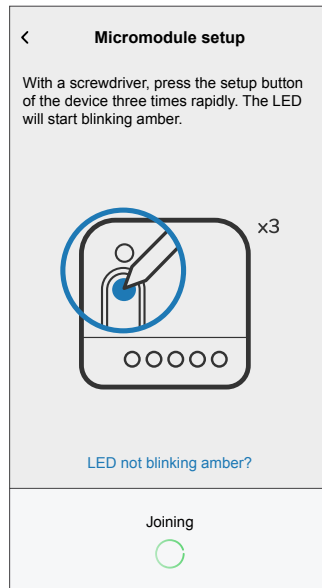


When the pairing is complete, you can give the device a name.

7. Enter a name for the Device.

8. Tap **Next**.

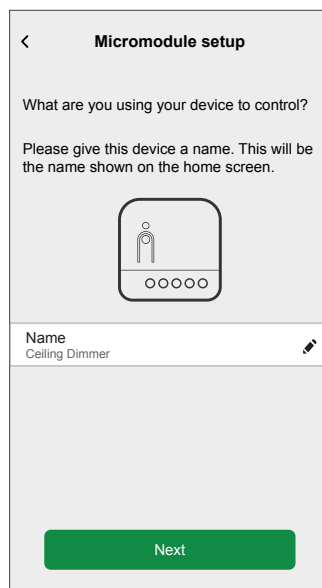

9. Assign the Device to an existing Room, page 99 or create a new Room by entering a name in the field.

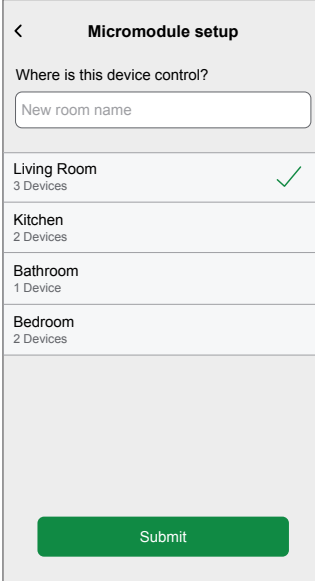**10. Tap Submit.**

**Micromodule setup**

Where is this device control?

New room name

Living Room  
3 Devices ✓

Kitchen  
2 Devices

Bathroom  
1 Device

Bedroom  
2 Devices


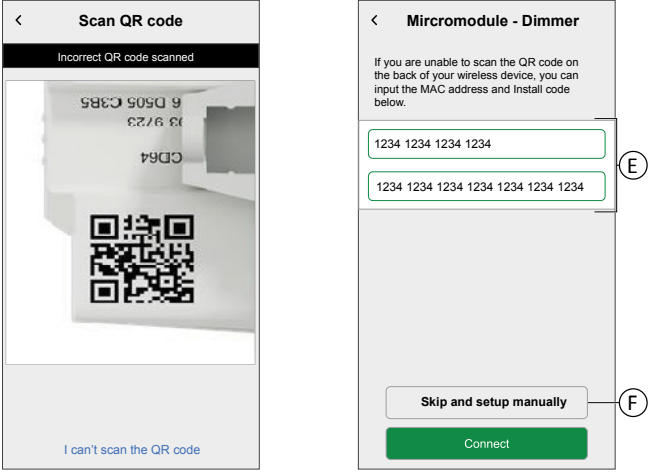
Submit

11. Configure the dimmer settings, such as dimming mode, power-on behavior, and brightness level, according to your preferences, then tap **Submit**.

You can now control the Device with the Wiser Home App. You can find detailed information about controlling your Devices in chapter *Controlling the Wiser System*, page 161

**NOTE:** Depending on the type of Device, there are further features available. You can find detailed information in the Device User Guide of the respective device. Refer to *List of Wiser Devices*, page 16 for the links to Device user guide for each devices.


## Handling QR code Issues


Condition	Action
<p>If you are unable to find the QR code or if your hub is Wiser HubR, which does not support QR code scanning.</p>	<p>Tap <b>I can't find the correct QR code</b> and proceed to <b>Step 5 Adding a Device</b>, page 94.</p> 
<p>If the QR code is incorrect, a message <b>Incorrect QR code scanned</b> will appear.</p>	<p>Tap <b>I can't scan the QR code</b> and choose one of the following options:</p> <ul style="list-style-type: none"> <li>• <b>(E):</b> Enter the <b>Mac Address/EUI-64</b> and <b>Install Code</b>, then tap <b>Connect</b>. The app will verify if the Mac Address/EUI-64 and Install code are valid.</li> <li>• <b>(F):</b> Tap this option if you are unable to find the Mac Address/EUI-64 and Install code.</li> </ul> 

## Device Details

You can find all relevant settings of a Device in the Device details.

You can navigate to the Device details from the **List of Devices**, page 89 by tapping the Device or from the **Device control**, page 168 by tapping the device setting.

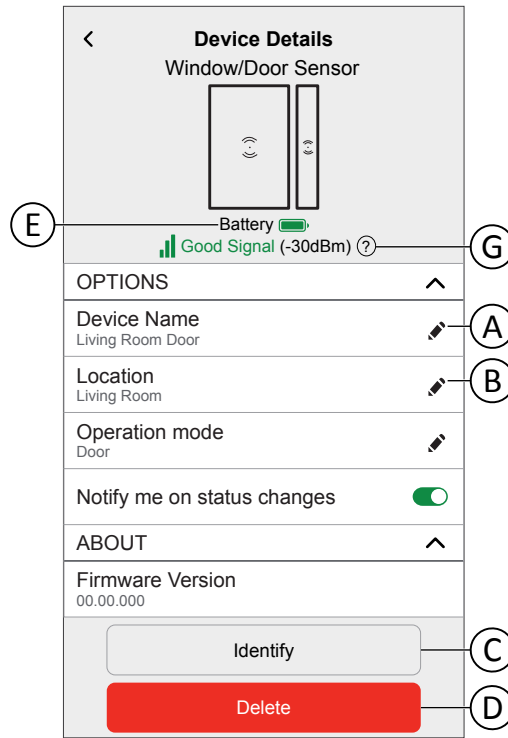

A	Tap to change the name of the device.
B	<p>Tap to change the location of the of the device</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• A Device can only be assigned to one Room.</li> <li>• Devices (except the Climate devices) which you remove from the room are listed as <b>unassigned</b>.</li> <li>• Climate Devices must be assigned to a Room in order to function. Climate Devices will combine into a single Climate Control when assigned to the same room. You can find detailed information about the Climate Control in chapter: <a href="#">Climate Control</a>, page 172.</li> </ul>
C	<p>Tap to identify the device.</p> <p><b>NOTE:</b> Most of the devices will light up their status LED to help locate them. You can find the detailed information about this behavior in the Device User Guide of the respective device. Refer to <a href="#">List of Wiser Devices</a>, page 16 for the links to Device user guide for each devices.</p>
D	<p>Tap to remove the device from the Wiser system.</p> <p><b>NOTE:</b> Removing a device should only be necessary if it needs to be replaced or as part of troubleshooting, for example, if you need to reconnect the device to the hub.</p>
E	The battery charge level indicator which displays the current battery status for battery-powered devices.
G	<p>Zigbee Signal strength indicator which displays the current signal strength of the zigbee devices. Refer to <a href="#">About Signal Strength</a>, page 220 to know more about the zigbee signal strength.</p> <p><b>NOTE:</b> This feature is not applicable for Wiser Plug device.</p> <p><b>IMPORTANT:</b> The signal strength is not displayed for Wi-Fi® devices (except for Hubs). It will only display no-signal (  ) if the device is offline.</p>

Some devices have specific features and settings. For example, Shutter devices have an option to set the duration for opening and closing. You can find detailed information in the Device User Guide of the respective device. Refer to [List of Wiser Devices](#), page 16 for the link to device user guide of each devices.

## Rooms

Adding new Rooms / Changing Room Information / Room settings / Removing a Room

## List of Rooms


In the Rooms page, you can find all your Rooms in a condensed list.

You can add new Rooms.

Tap a Room in the list to navigate to the Room options.

On the Setting menu, page 139:

1. Tap **Rooms** (A).

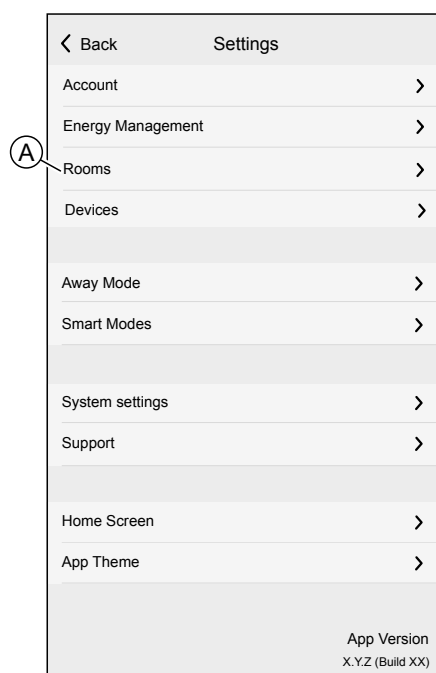

## List of Rooms:

< Back	Rooms
Bedroom 5 Devices	>
Entrance 3 Devices	>
Kitchen 4 Devices	>
Living room 5 Devices	>
Office 2 Devices	>
+	

**NOTE:** When calculating the number of Devices in a Room, each Climate Device of a Climate control, page 172 will be counted individually.

For certain multi-gang Devices, each gang will be counted as a single Device.


## Adding a Room

You can add a new Room when assigning a device or from the List of Rooms, page 99:

1. Tap  (A) icon.

< Back	Rooms
Bedroom 5 Devices	>
Entrance 3 Devices	>
Kitchen 4 Devices	>
Living room 5 Devices	>
Office 2 Devices	>
+	

2. Enter a name in the **text field (B)**.
3. Tap **Submit (C)**

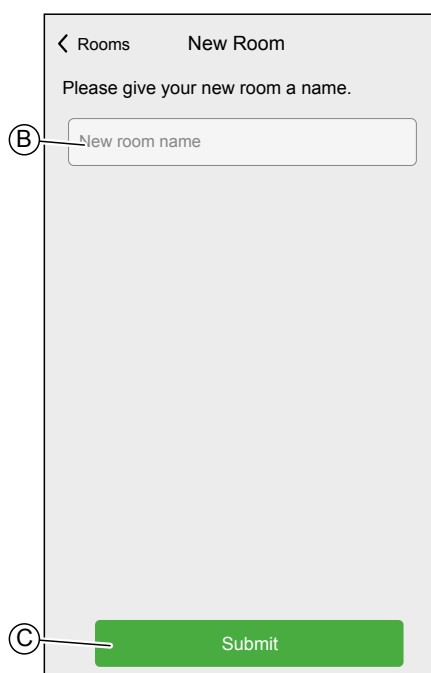

## Room Details


In the Room details screen, you can check and change Room specific options, like a list of Devices assigned to a Room or changing the name of the Room.

Some devices have specific options and settings. For example **Open Window Detection**, when a Radiator Thermostat is assigned to the Room. You can find detailed information in the Device User Guide of the respective device. Refer to [List of Wiser Devices](#), page 16 for the links to Device user guide for each devices.


Tap a Device to navigate to the Device Options.

In the [List of Rooms](#), page 99:

1. Tap a **Room (A)**.

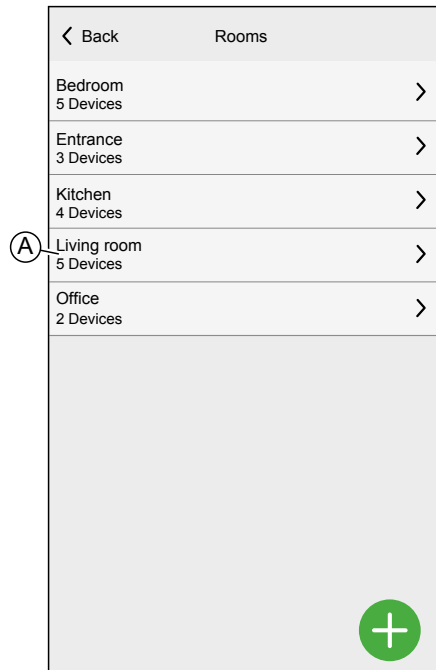

Room Details:

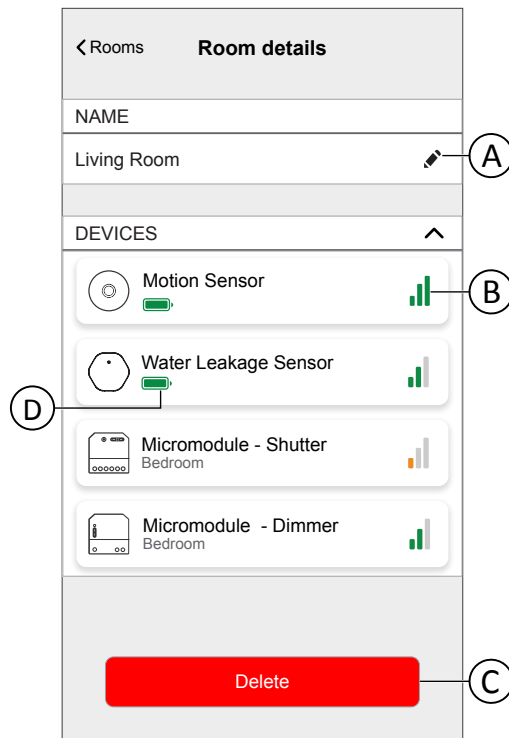


A	Tap to change the name of the room
B	Zigbee® Signal strength indicator which displays the current signal strength of the Zigbee® devices. Refer to <i>About Signal Strength</i> , page 220 to know more about the Zigbee® signal strength. <b>NOTE:</b> This feature is not available for the Wiser Plug device.
C	Tap to delete the room. <b>NOTE:</b> <ul style="list-style-type: none"> <li>Deleting a Room should not be necessary after you set up your Home, but you can do so at any time.</li> <li>When you delete a Room, all the devices (except the climate device) assigned to that room will be listed as <b>Unassigned</b> in the Home screen.</li> </ul>
D	The battery charge level indicator which displays the current battery status for battery-powered devices.

## Moments

Create a Moment to change the state of multiple devices with a single tap. Moments act like scenes, allowing you to control several devices all at the same time.

Moments are created and edited on the **Automation** screen (A)

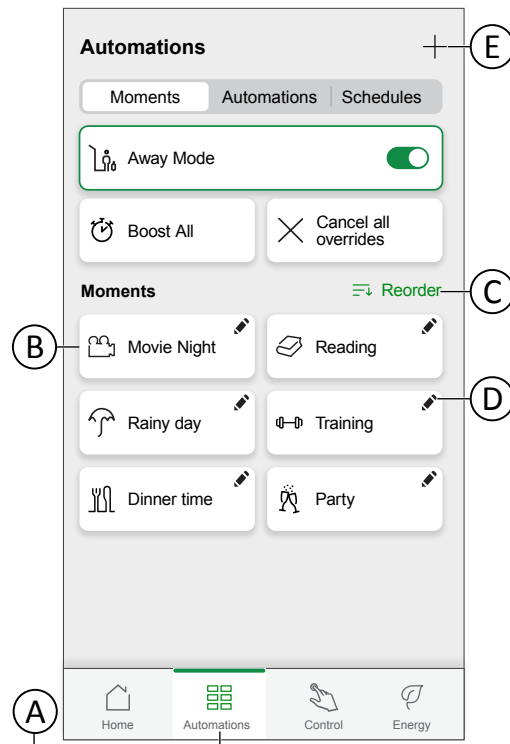

<b>A</b>	Navigate to the automations screen.
<b>B</b>	Activate a Moment.
<b>C</b>	Rearrange the order of Moments. Also affects the list on the Home Screen, page 161.
<b>D</b>	Edit a Moment.
<b>E</b>	Add a Moment

**NOTE:**


- A Moment will only set the status of devices. In order to put the affected devices in another status, you need to change it manually or create a reversing Moment.
- If you added a Climate device to the Moment, you can reverse the change of the Climate device by tapping **Cancel all overrides**.
- If a device follows a *Schedule*, page 125, the Moment of that device will only last to the next scheduled setting.

Moments can also be assigned to push buttons of specific devices (e.g. Connected Wireless Switch). Find more information about this feature in the respective device user guide. Refer to *List of Wiser Devices*, page 16 for the links to Device user guide for each devices.


## Creating a Moment

On the **Automation** screen:

1. Tap **+** icon to navigate to **moment creator** screen.

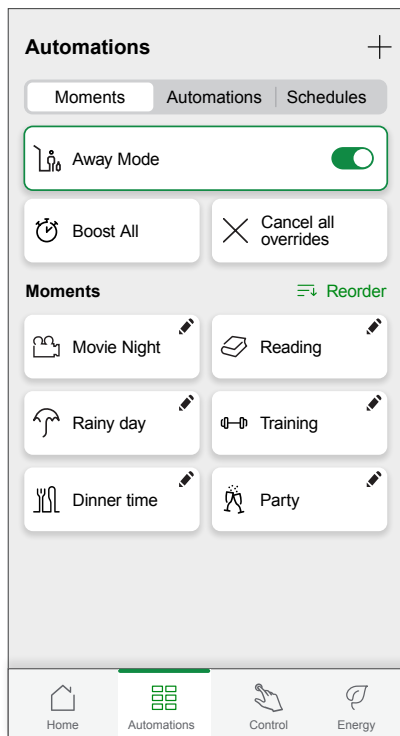


2. Select an **icon** from the list (A).
3. Enter a name for the Moment into the **text field**. (B).
4. Tap **Add actions** (C).

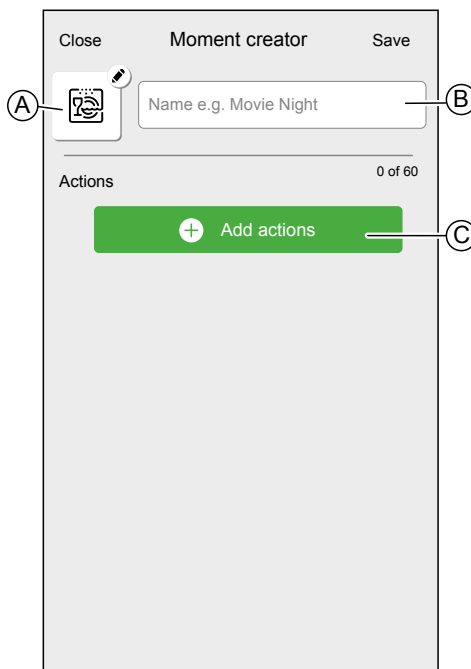



5. Tap the Device you want to add to the Moment.

**TIP:**


- Tap a selected Device again to remove it from the Moment.
- You can add any device from your home to create a moment. The maximum number of devices you can add to a moment is 60.

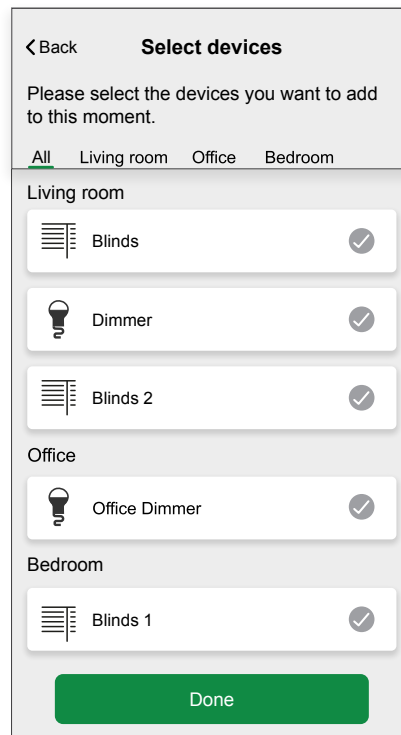
6. Tap **Done**.7. Tap a Device to open the **Device Control** and set the state you want to put the device into and tap **Set** in the upper right corner.

Repeat for all devices.

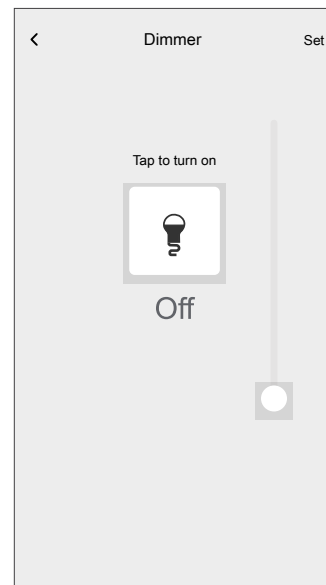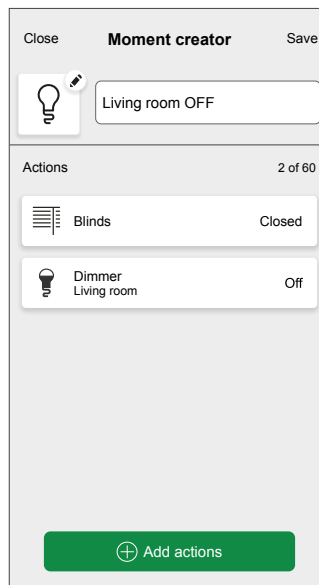

8. Tap **Save**.


**TIP:** You can remove a Device by swiping it left and tapping the  icon.

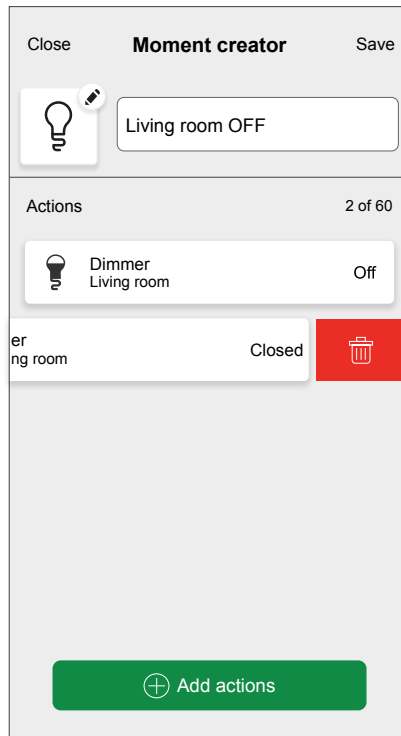


## Editing a Moment

On the **Automation** screen:


1. Tap  icon.

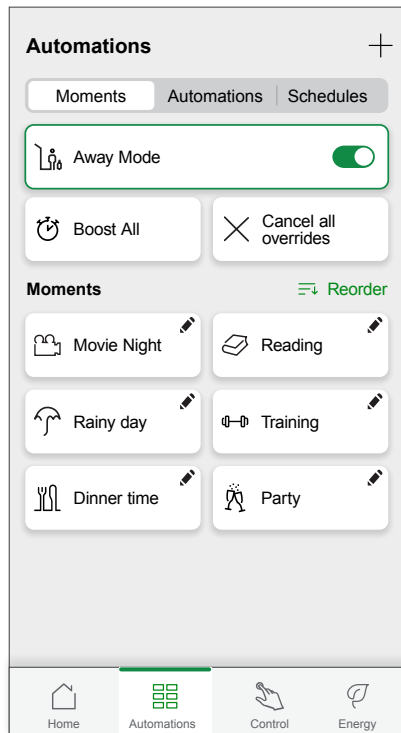

You can:

- Change the **Icon** (A).
- Change the **name** (B).
- Tap the Device to open the Device Control screen (C) and change the state of the device.
- Tap the **Add actions** (D) and more Devices to the Moment.
- Swipe the Device left and tap the  (E) to remove a device from the Moment


Tap **Save**(F) to save the changes to the Moment

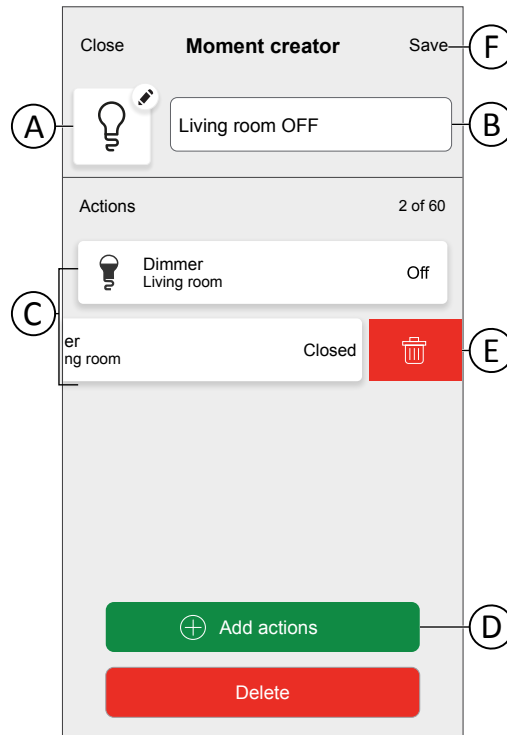


## Deleting a Moment

On the **Automation** screen:

1. Tap .

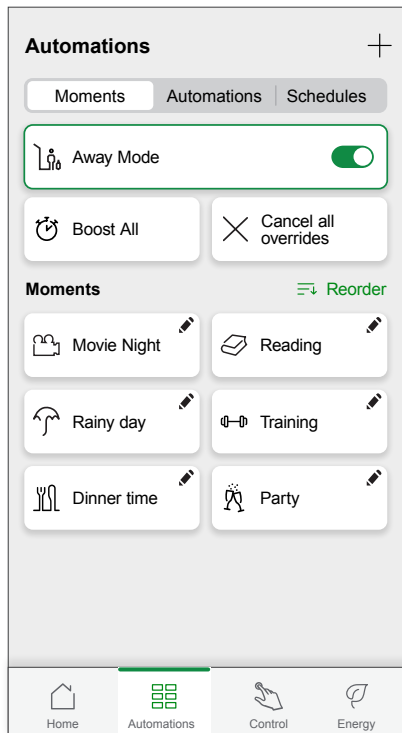

2. Tap **Delete** and confirm the deletion with **OK**.

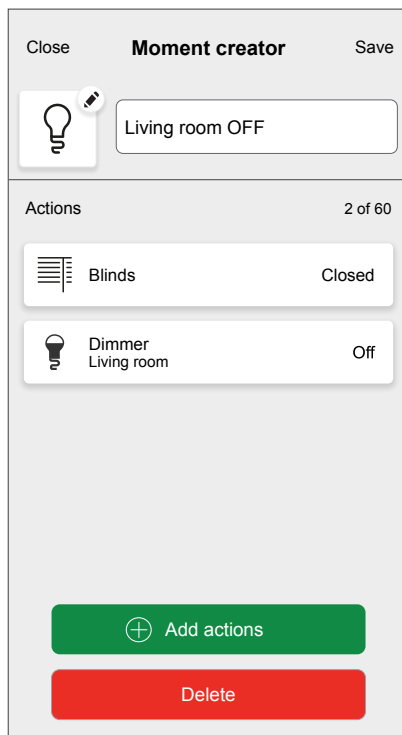

## Automations

An automation allows you to group multiple actions that are usually done together, triggered automatically or at scheduled times. By using the Wiser Home app, you can create automations based on your needs.

Conditions can be:

- Device status change.
- Activate away mode.

Times can be:

- Specific time of a day (e.g. 7:30 each day).
- Period of time (e.g. from sunrise to sunset).

Actions can be:

- Change the state of a Device (e.g. open shutter 50%).
- Send a notification.
- Activate a Moment.

Limitations:

- Maximum number of Automations: 10
- Maximum number of conditions: 10
- Maximum number of actions: 10


An Automation needs at least one Action and one Condition or specific time of a day.

**NOTE:** An Automation changes the state of a Device only once, based on the conditions. If you want to reverse the state change, you will have to create another Automation. For example, if you want to switch a lamp based on motion detection, you will have to create an Automation as Presence detected – Light ON and another one No Presence detected – Light OFF.

**IMPORTANT:** The new action always overrides the current action. Therefore, if a new event is added to the automation or manual operation occurs while a scheduled automation is in progress, the system will stop the ongoing automation. For a detailed understanding of which action/control mode takes precedence over others, refer to [Understanding Control Mode Priorities](#), page 222.

Automations are created and edited on the Automation screen (A).

You can turn an automation ON or OFF by tapping the slider (B).

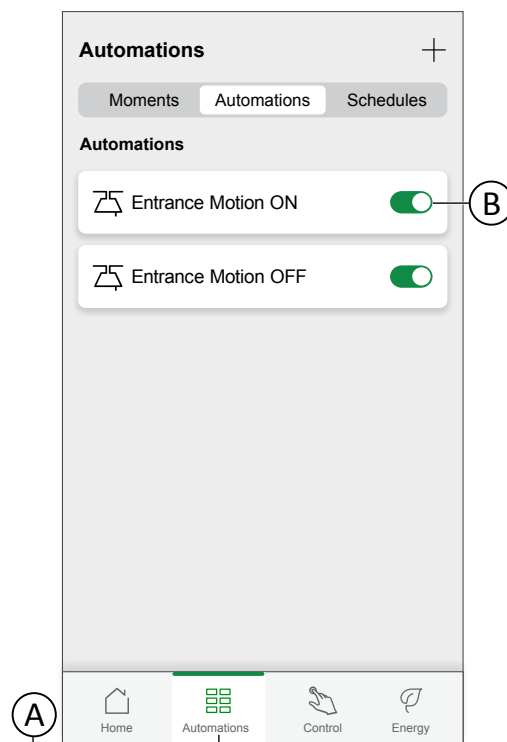


## Creating an Automation

In this chapter an example will be used to explain the necessary steps to create an automation:

This demonstration shows how to create an automation that turns ON the light in the Entrance room and notify when the action is triggered, as well as turns ON the living room light with one minute delay when the motion sensor detects motion and the socket named Night Light is OFF.


On the Automation Screen (A):

1. Tap + (B).

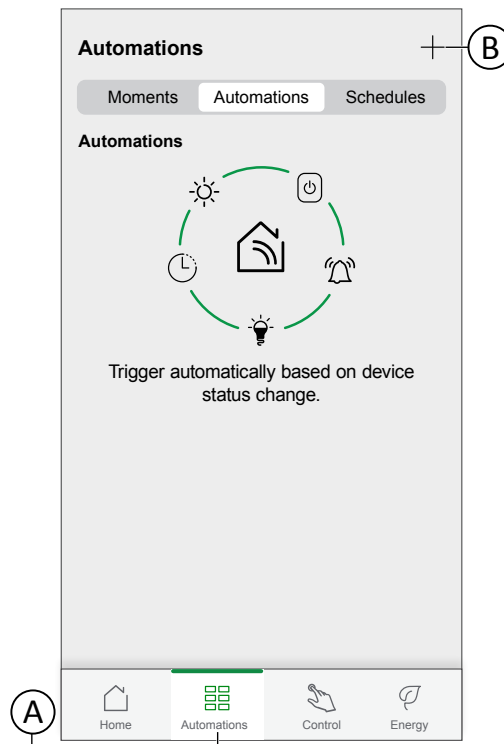


2. Select an Icon from the list (C).
3. Enter a name for the Automation into the **text field** (D).
4. Tap one of the following options:
  - **All conditions:** Select if you want all conditions to be met to trigger the automation.
  - **Any condition:** Select if you want any of the given conditions to be met to trigger the automation.

In this example, the automation should trigger only when all conditions are met.

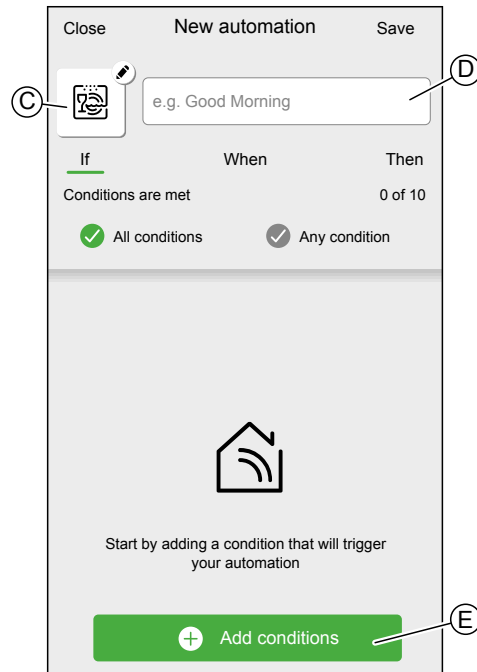5. Tap **Add conditions** (E).

## 6. Select the type of trigger to activate your automation.

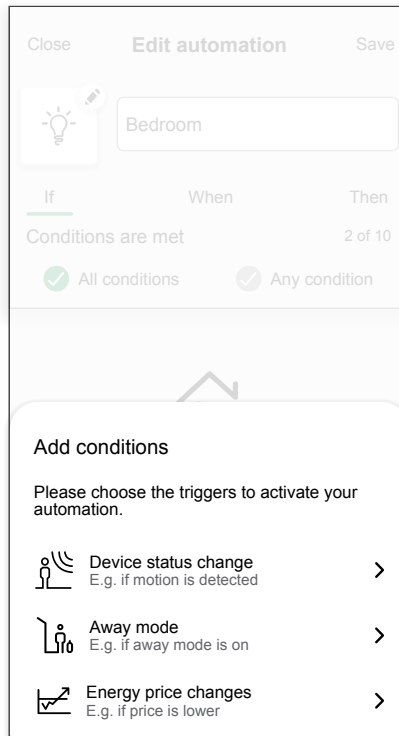

- **Device status change:** Choose a specific device whose status change (e.g., on/off, open/closed) will trigger the automation.
- **Away Mode:** Enable or disable to trigger automation when you leave or return home.
- **Energy price changes:** Trigger an automation based on changes in energy prices.

**IMPORTANT:**

- This trigger is available only if your tariff is set to Peak/Off-Peak. Refer to [Setting Tariff](#), page 144.


- The system manages electricity pricing at a precision of **0.01 €/kWh**.

Example: The daily average electricity price is 0.24 €/kW. You have set your automation to trigger when the daily average electricity price drops below 0,24 €/kWh.

– **Price Update 1:** 0.235 €/kWh → rounds to 0.24 €/kWh.

– **Price Update 2:** 0.244 €/kWh → also rounds to 0.24 €/kWh.

Since the rounded value does not fall below 0.24 €/kW, the system does not consider a price drop. As a result, the automation is not triggered.

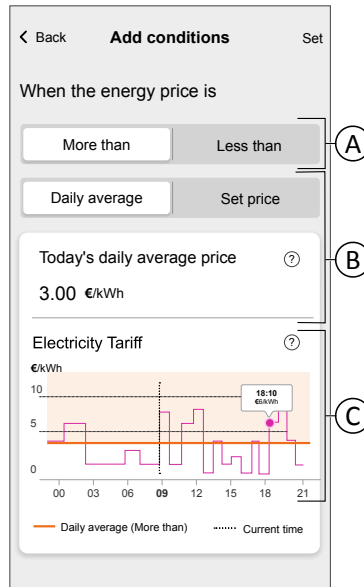


A	<p>Select the trigger condition for automation:</p> <ul style="list-style-type: none"> <li>◦ <b>More than:</b> Activates when the energy price is more than the set value.</li> <li>◦ <b>Less than:</b> Activates when the energy price is less than the set value.</li> </ul>
B	<p>Set the trigger value:</p> <ul style="list-style-type: none"> <li>◦ <b>Daily average:</b> The average electricity price for the entire day, calculated from all hourly prices. Your automation will trigger when the electricity price rises above or falls below this average.</li> <li>◦ <b>Set price:</b> Define a specific price manually. Your automation will trigger when the electricity price rises above or falls below this set value.</li> </ul> <p><b>TIP:</b> You can also set the price by tapping or sliding over the graph (C) at the desired value, instead of typing it manually.</p>
C	<p>View your electricity tariff in real time. You can interact with the graph to identify the most expensive times based on your electricity tariff.</p>

In this example, tap **Device status change** to activate your automation.

- Tap the device to open the **Device Control** screen and set the state of the device to activate the automation (e.g. Motion is detected), then tap **Set**.

**NOTE:** The available options and states are device specific. Certain devices offer additional options before you can set the state (e.g. for a Dimmer you will need to choose if you want ON/OFF as a condition or the brightness level).

Detailed information can be found in the Device User Guide of the respective device. Refer to [List of Wiser Devices](#), page 16 for the links to device user guide for each devices.

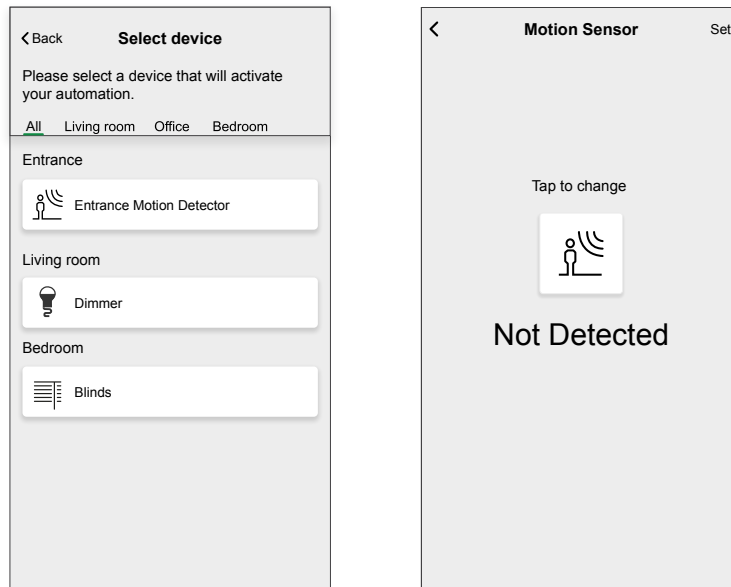


- Keep adding conditions as needed, but note that you can add a maximum of 10 conditions.


**TIP:** If a Device offers more than one condition (e.g. Motion Sensor report motion detection and light level) you can add those as individual conditions.

**TIP:** The system will not only check for status changes, but also for the status of all condition-devices once one of them is triggered. In this example: The status of the Socket. Note that this also means that the System will check for the Motion Sensor status when you switch the Socket OFF.

9. When all the conditions are added, tap **When** (F).

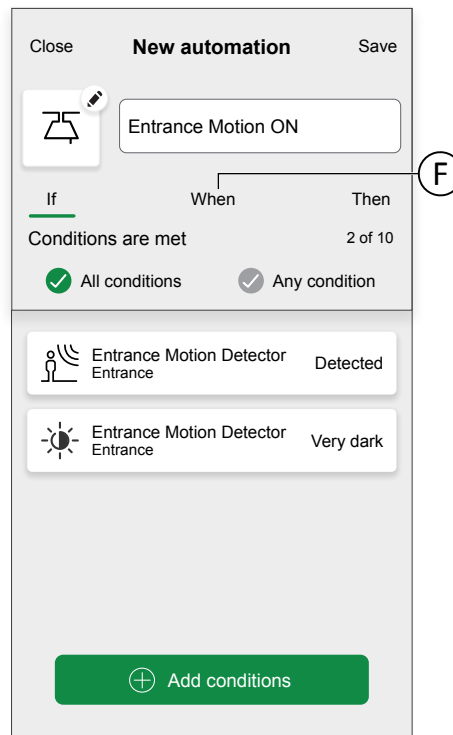


10. Tap **Add time** (G).

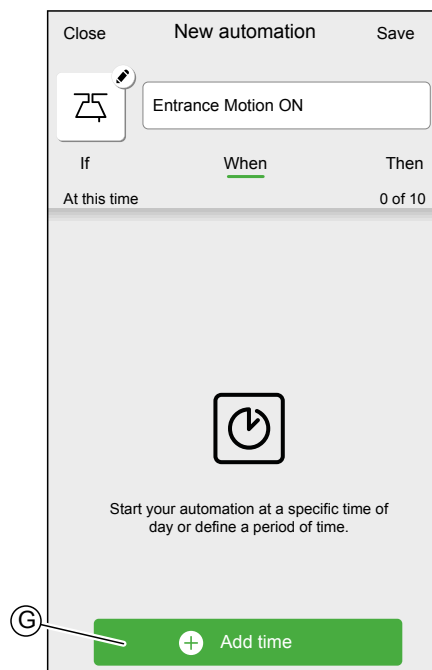


11. Set the time for the automation to trigger and tap **Set**.


**NOTE:** Specific time of day will act like a condition: The automation will trigger at that time when no conditions are set or if the conditions are met at that time of day. Periods of time will not trigger the automation by themselves, but the automation will only trigger during the set period.

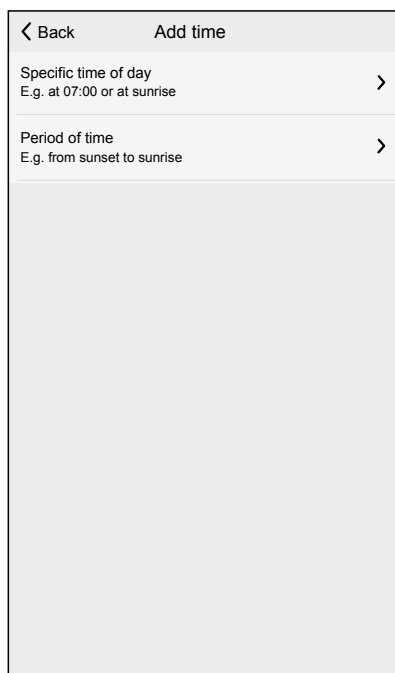

In this example: Period of time — Night time (From sunset to sunrise).


12. Once the time is set, tap **Then** (H).

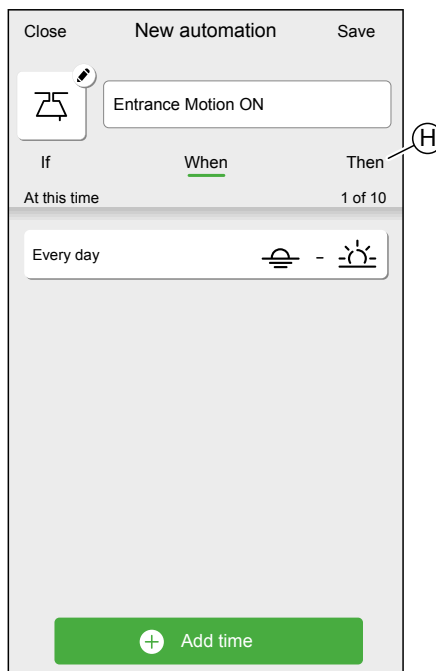

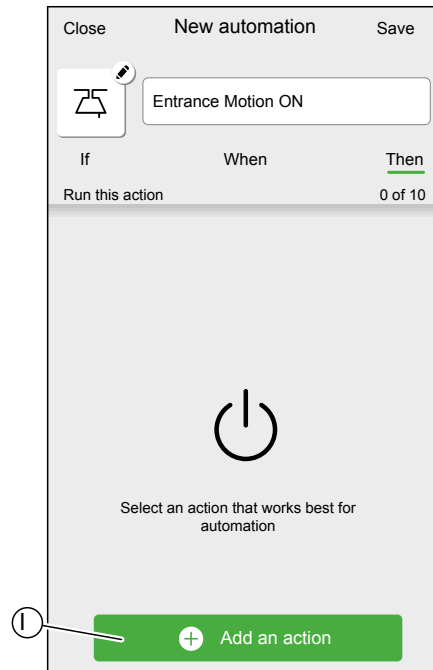13. Tap **Add an action** (1).

14. Select the type of action for your automation:


- **Control a device:** Select the Device and set the desired state of the Device.
- **Send notification:** You will be notified if the condition is met.
- **Activate a moment:** Select a Moment.
- **Wait:** This option allows you to add a delay in an automation sequence. You can set the wait time in increments of 1 hour and 1 minute, up to a maximum of 24 hours. This feature is useful for delaying actions within an automation.

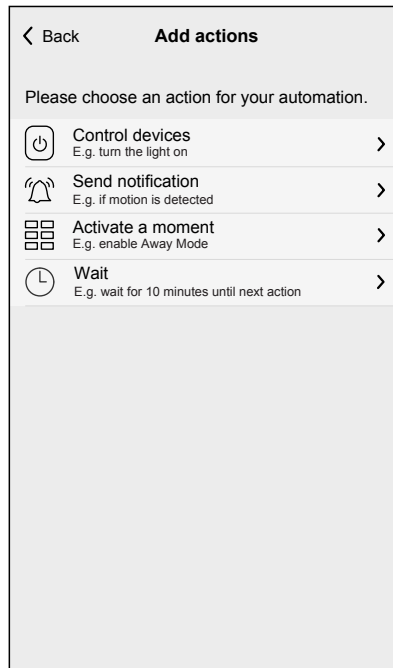

In this example: **Control a device**, **Send notification**, and **Wait** must be selected.

**Control a device:**


- Tap **Control a device** and select the device that will be triggered as an action.

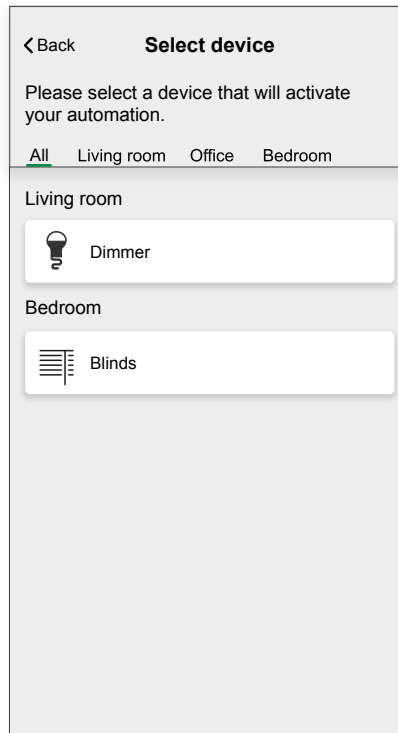

- b. Set the desired state and tap **Set**.


**Send Notification:**

- a. Tap **Send Notification** > **Notify me** to receive the push notification when the motion is triggered.

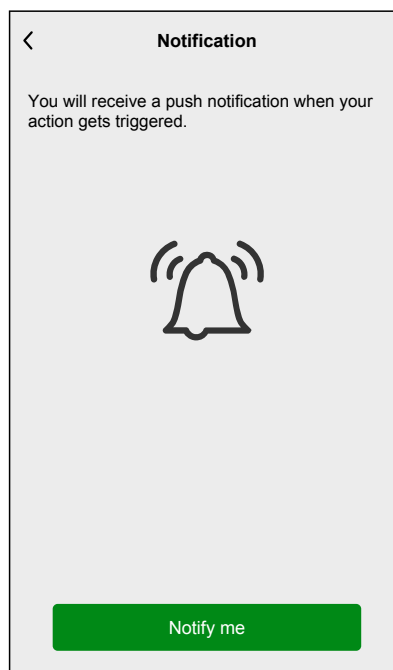

**Wait:**

- a. Tap **Wait** to open the **Add a wait** screen.
- b. Specify the duration of the delay to trigger the action and tap **Set**.

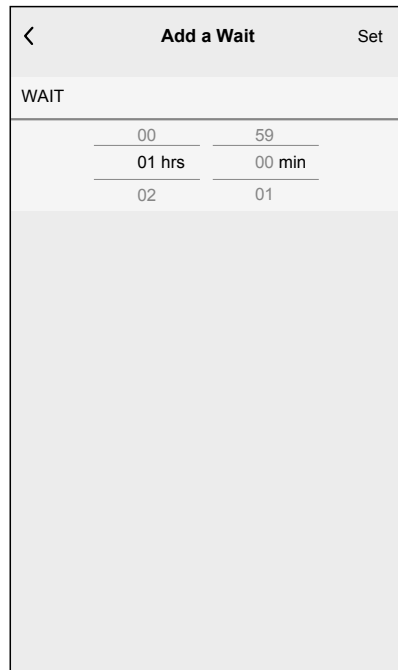


15. Include all necessary actions and make sure that the total number of action does not exceed 10.

**TIP:** If you need more devices to be triggered than the action limit can provide, you can combine device state changes to a Moment and select that Moment as an action.

**NOTE:** The system will not check if a combination of actions does not make sense, e.g. switching a light ON and OFF at the same time.

16. Tap **Save** (J) once all the actions are added.

**TIP:** You can long press an action, then drag and drop it to rearrange the actions to the desired location.

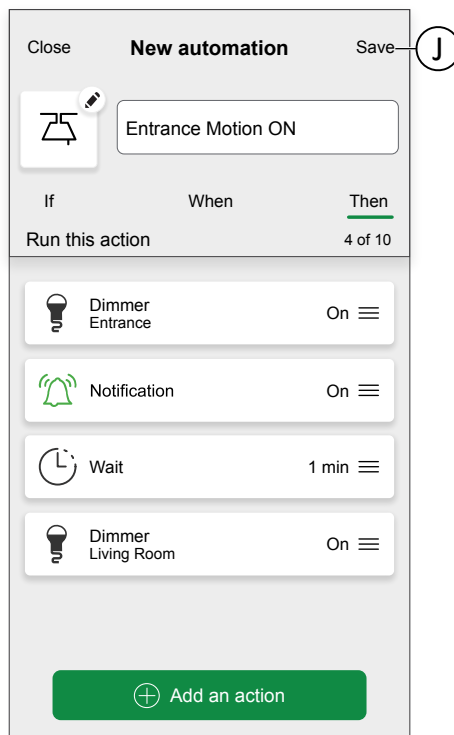

This automation switches the entrance light ON and sends notification and then turns ON the living room light with one minute delay.


To switch the light OFF when no motion is detected, create another automation. In this example, it will suffice to set the condition “Not Detected” for the motion sensor and as action to switch the light OFF. Note that this will always switch the light OFF regardless of time of day, light level or status of the Socket.

**NOTE:** In this example, the time that has to pass between the motion sensor reporting motion and reporting no motion is not set in the automation. It is set in the Device Details of the motion sensor.

## Editing an Automation

On the **Automation** screen (A):

1. Tap the Automation you want to edit (B).

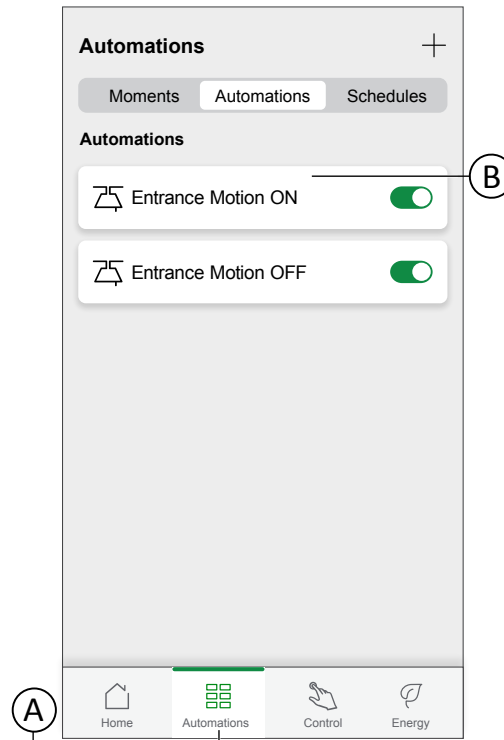


On the **Edit Automation** screen, you can:

- Change the icon.
- Rename the automation.
- Change the condition, time or action.


To change the condition, time or action of an Automation:


1. Navigate to the relevant tab (If/When/Then) and tap the condition, time or action you want to change.
2. Set the new values.


3. Tap **Save** (C).

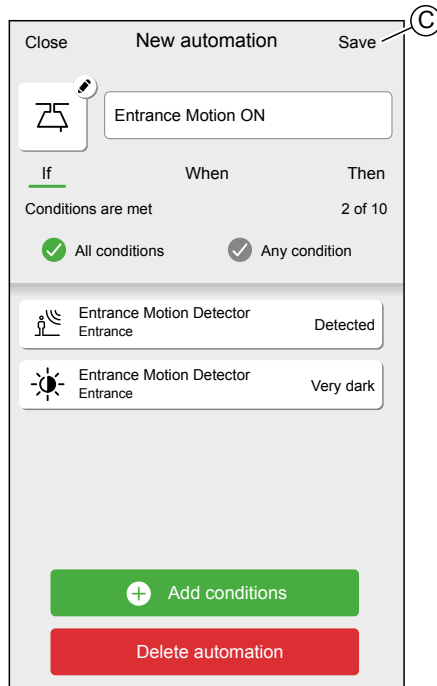

To remove a condition, time or action:

1. Navigate to the relevant tab.
2. Swipe the relevant condition, time or action left.
3. Tap the  (A)

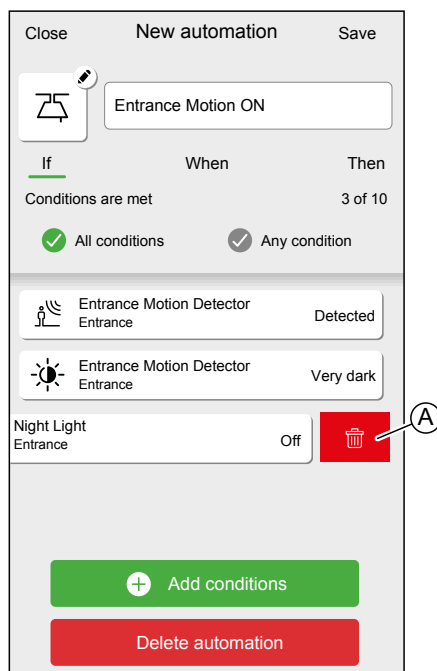


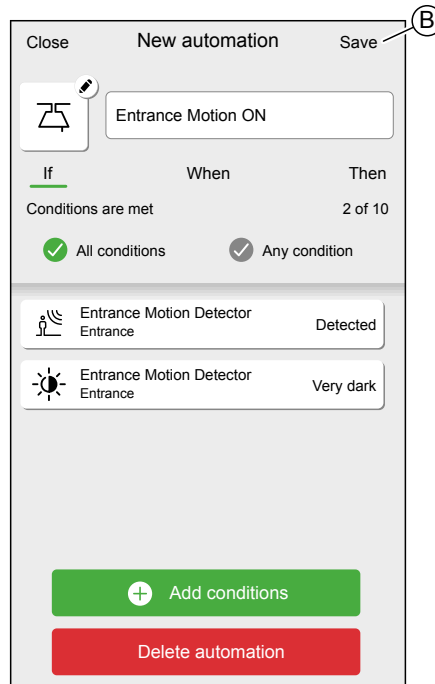
4. Tap **Save** (B).

## Deleting an Automation

On the **Automation** screen (A):

1. Tap the Automation you want to delete (B).

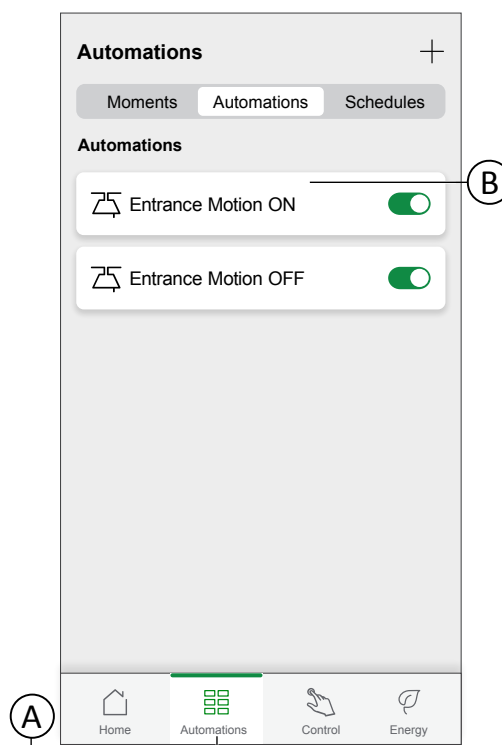

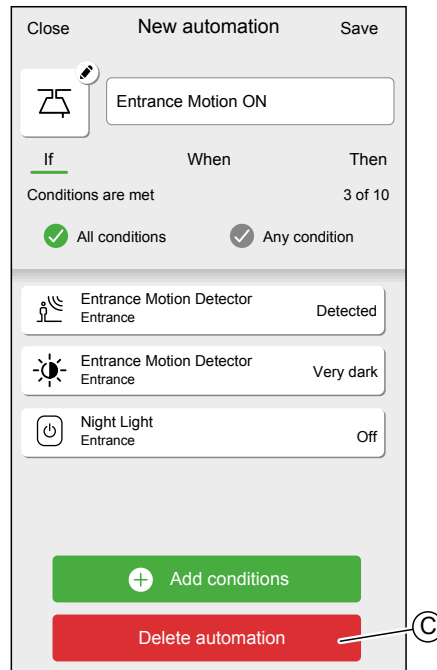2. Tap **Delete automation (C)**.

## Schedules

Set a Schedule to define the specific time for changing the state of the device.

**TIP:** The Schedule changes the device's state based on the events set at a chosen time. If you need to reverse/change the state at a different time, add another schedule event.

- Example 1:

Event 1: Set heating to 19 °C at 6:30.

Event 2: Set heating to 15 °C at 8:30.

Result: This action maintains the temperature at 19 °C from 6:30 to 8:30, and at 8.30, it changes to 15 °C.

- Example 2:

Event 1: Set kitchen light to 'ON' at 19:00.


Event 2: Set kitchen light to 'OFF' at 23:00.

Result: This action keeps the kitchen light ON from 19:00 to 23:00, and at 23:00, the kitchen light turns OFF.


**NOTE:** The new action always overrides the current action. Therefore, if a new event is added to the device or manual operation occurs while a scheduled action is in progress, the system will stop the ongoing schedule. For a detailed understanding of which action/control mode takes precedence over others, refer to [Understanding Control Mode Priorities](#), page 222 .

Schedules are created and edited on the **Automation** screen (A)

Tap a Schedule to navigate to the Schedule details.

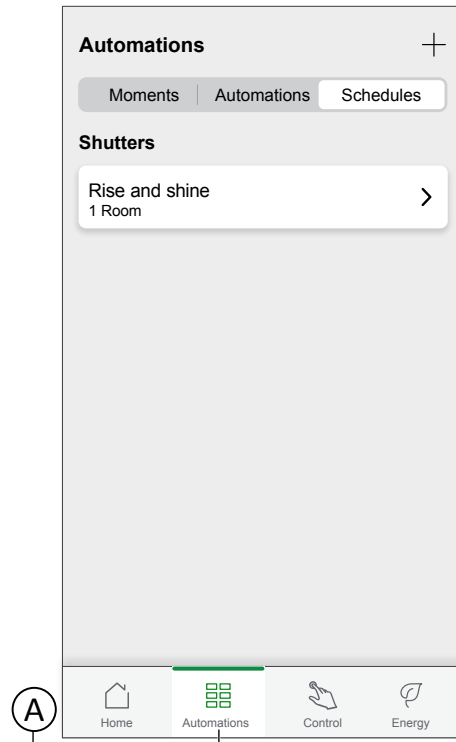


Schedule details:

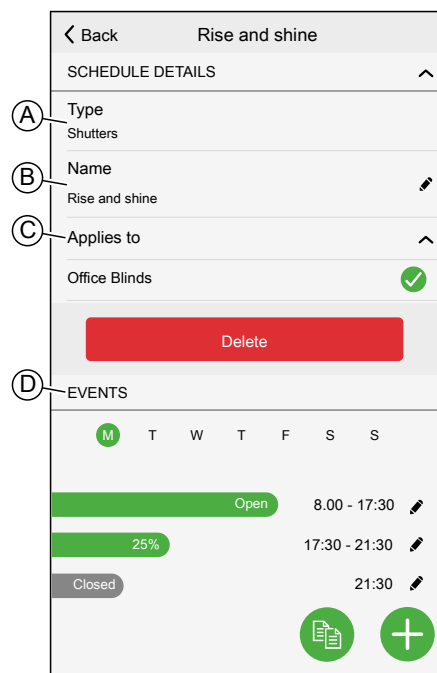

<b>A</b>	Device type A Schedule can only be set for one specific Device type.
<b>B</b>	Name of the Schedule
<b>C</b>	Devices the Schedule applies to
<b>D</b>	Event list The events of the Schedule are listed here, sorted by day of the week. The bars give an overview of the status of the device during an event (e.g. full green bar when shutter fully open). The time of the event is shown next to the bar.

## Adding a Schedule

1. On the **Automation** Screen , tap **+** (A) icon.

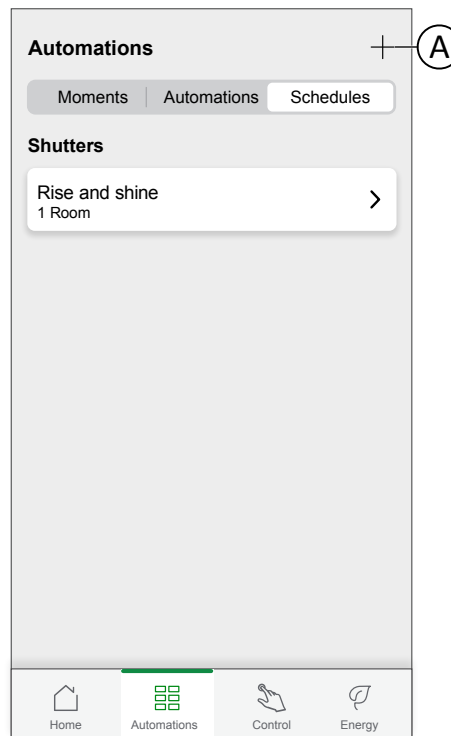

2. Enter a name in the **text field** (C).
3. Select the Device type of the Schedule.

### IMPORTANT:

- A Schedule can only be created for one Device type. If you want to switch a light at the same time as closing a blind, you will need to create two Schedules.
- **Room Level Scheduling:** When you assign a climate control device (such as a thermostat) to a room using the Wiser Home app, the system applies room-level scheduling. This means all devices within the same room follow a shared heating schedule. Based on the user role, a default schedule is created when climate devices are assigned.

### When signed in as a Professional Installer:

- In the Device Control Screen, the **Follow schedule** toggle is Off by default.
- All rooms are set to Manual mode.
- You can enable the **Follow schedule** toggle if you want the default heating schedule to apply.

### When signed in as a Homeowner:

- In the Device Control Screen, the **Follow schedule** toggle is On by default.
- The system automatically applies a default heating schedule.
- You can edit the schedule anytime to match your daily routine and preferences.

Refer to *Climate control*, page 172 for detailed information on the climate controls.

4. Select the Devices to which the Schedule applies to.

**NOTE:** All Devices of the selected Device type are available in the list.

5. Tap **Create** (D).

6. Tap **+** (E) icon and set the details of the event.

Find detailed information about adding events and editing Schedules in Chapter [Editing a Schedule](#), page 129.





## 7. Keep adding events until the Schedule is complete.


**NOTE:** Changes to the Schedule will be saved immediately.

8. When the Schedule is complete, tap **Back** (F) to save the schedule.

## Editing a Schedule


In the Schedule details screen:

- Tap  (A) icon to change the name of the Schedule.
- Select the **Devices** (B) the Schedule applies to.
- Select the **day** (C) you want to add or edit events.
- Tap  (D) icon to edit an event.
- Tap  (E) icon to add an event to the selected day.
- Tap  (F) icon to copy a day or a Schedule.
- Tap **Back** (G) to go back.

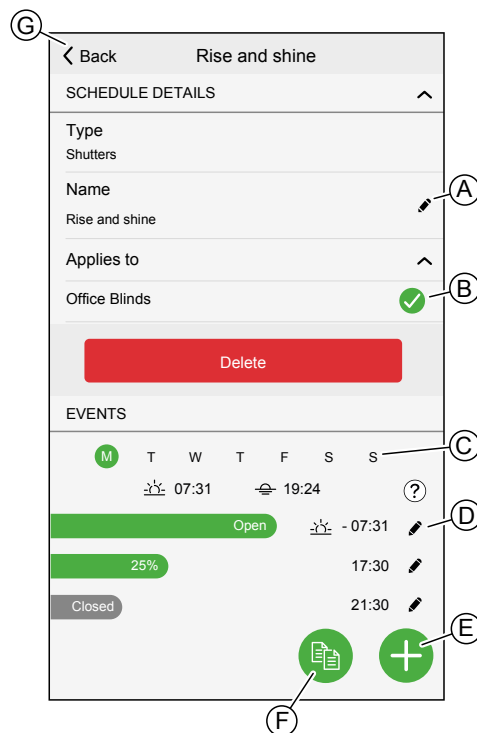

## Adding / Editing an event

- Set the desired **state** (A).  
**NOTE:** The Device state will be different for individual Device types.
- Set the **time** (B) of the event.  
**TIP:** You can also set the time of event to **sunrise** or **sunset** if the option is available for the selected device type. Wiser Home app will then set the time accordingly each day.
- To save the event settings, tap **Set**.
- To discard changes, tap **Cancel**.
- To remove an event, tap **Delete**. (Not available when adding an event.)  
**NOTE:** The available options and states are Device specific. Detailed information can be found in Device User Guide of the respective device. Refer to List of Wiser Devices, page 16 for the links to Device user guide of each devices.

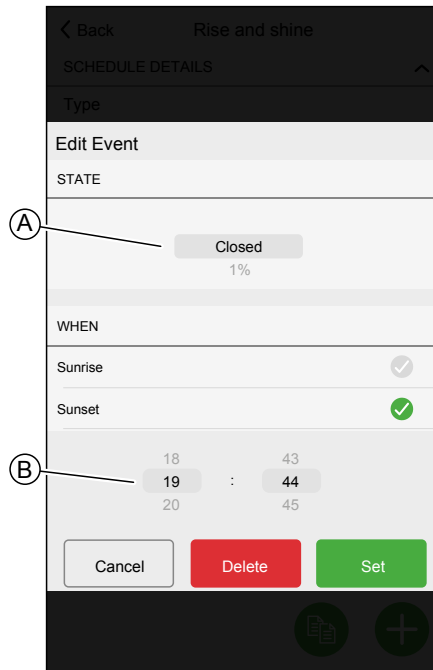

## Deleting a Schedule

On the Schedule details screen:


1. Tap **Delete** (A).

**NOTE:** The Wiser Home App automatically creates a default Schedule for Climate control devices.

If the Wiser Hub has to be reset, the Wiser Home app will again create a default Schedule for all Climate Control devices once assigned to the room.

To not follow the Schedule, remove the Device from the **Applies to** list in schedule details or disable the **Follow schedule** toggle switch in the Climate control, page 172/Device control, page 168 page.

It is recommended to not delete a default Climate Schedule.

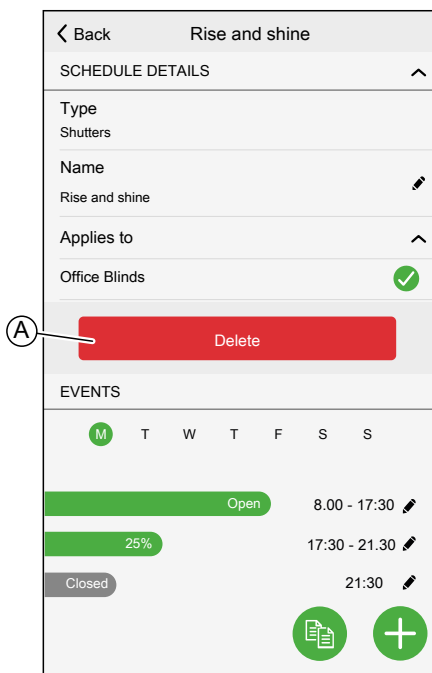

## Modes


### Away Mode


The Away Mode is designed to set your home in a sensible state when you are away for longer periods (e.g. being away for the weekend). It temporarily overrides the normal controls (e.g. moments, automation) implemented in the hub. When you disable away mode, the controls revert to the state they were prior to activating the Away mode.


By default, the **Heating setpoint** is 16 °C, and the **Cooling setpoint** is Off.


You can change the target temperature and adjust device behaviors (turn off lights, close shutters etc.) for Away Mode.

## Set the Device State / Temperature Setpoint in Away Mode:

1. On the Home screen, tap  > **Away Mode**.

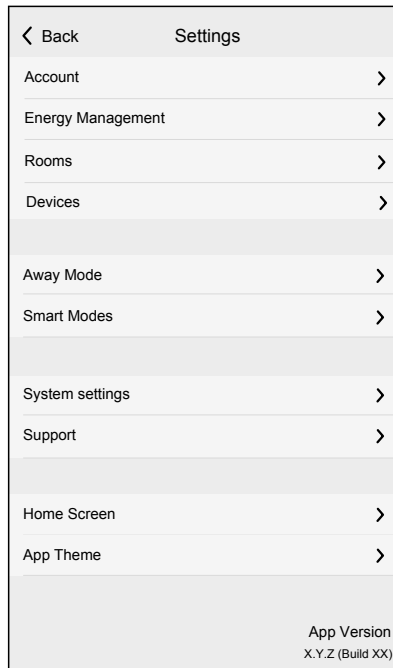

2. Tap the toggle switch to enable or disable the device when in away mode. Tap  to modify the heating and cooling setpoints.

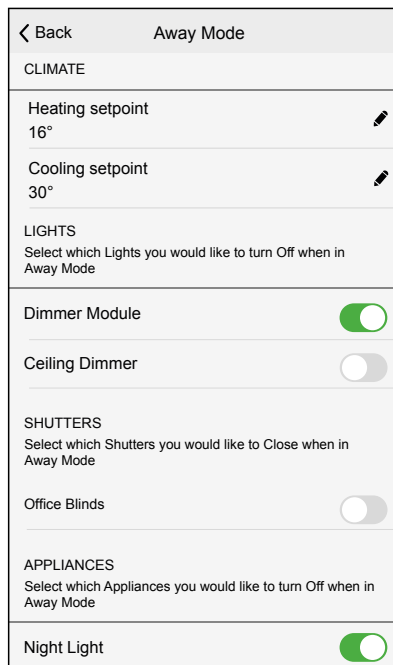


## Enable/Disable Away Mode

1. On the Home screen, tap **Automation** .

2. Enable/Disable the toggle switch to activate or deactivate the away mode.

**NOTE:** If Boost Mode, page 133 is active, Away Mode will lower the target temperature of all boosted heaters, if the Boost value is higher than the Away Mode value.

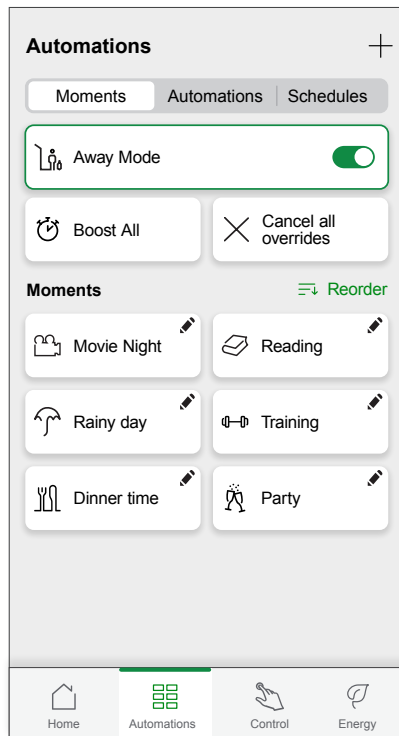


## Boost Mode

Boost Mode will apply a boost of +2 °C for one hour to every room in the system.

On the **Automation** Screen:

1. Tap **Boost All**.
2. To end boost mode earlier, tap **Cancel all overrides**.

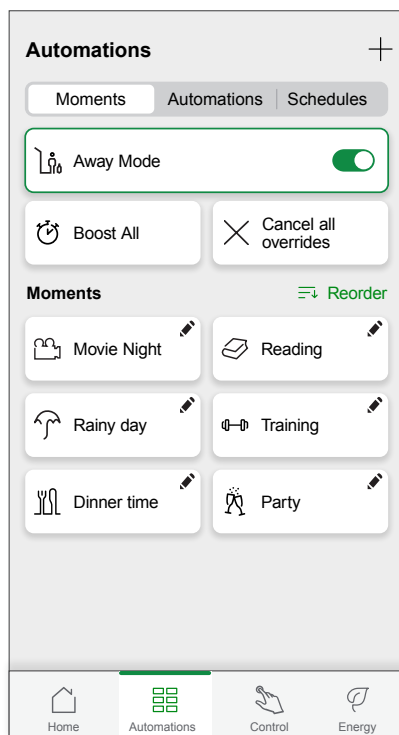

## Smart Modes


Smart Modes automatically adapt parameters of your Wiser System to increase comfort or energy savings.

Smart Modes are activated or deactivated in the **Settings, page 139** menu.

## Eco Mode

Eco Mode is a smart feature designed to maximize the efficiency of your heating system. It automatically optimizes the stop time of the heating phase, each time the set temperature changes from a higher to lower value.


### NOTE:

- Eco Mode is a system feature that is either activated or deactivated for all rooms.
- Eco Mode feature will not activate when in Cooling Mode.
- To cancel Eco Mode, tap **Home** >  > **Smart Modes** > **Eco Mode**, and disable the toggle button.

### Eco Mode deactivated

Wiser switches the set-point temperature at 10 pm according to the schedule. Depending on the weather and how well-insulated the home is, the room temperature drops proportionally starting at 10 pm.

The boiler keeps cycling until 10 pm.

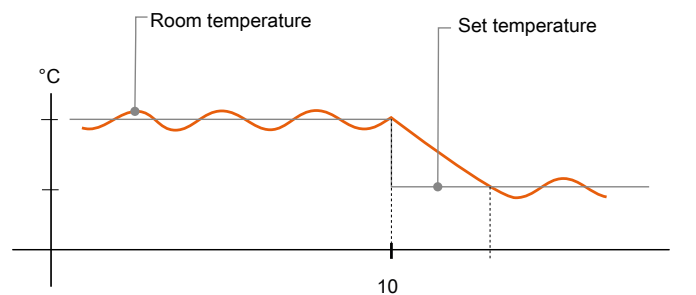


### Eco Mode activated

When Eco Mode is activated, Wiser establishes how well your home retains heat in relation to the current and predicted outdoor temperatures. Based on this, the system switches to the next scheduled set-point temperature before 10 pm without any noticeable loss of comfort.

The period between the time that Eco Mode switches the set-point and 10 pm represents the eco period, and savings occur as a result of the boiler not being switched ON.

The boiler stops firing before 10 pm.

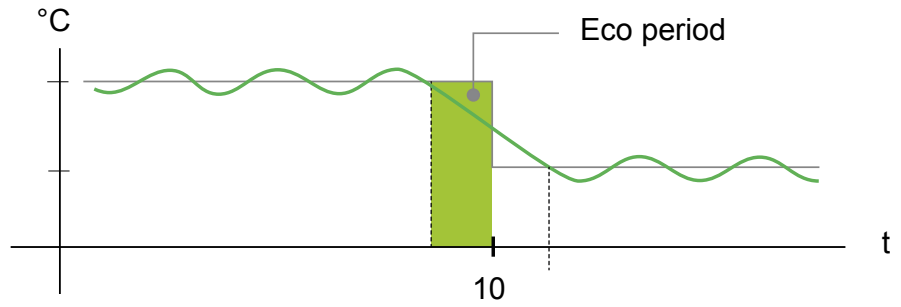

When a room is in an Eco period, an ECO icon will appear in the room on the home screen.

The ECO icon will also be visible on the temperature adjustment screen and the room thermostat.



## Comfort Mode

Comfort Mode is a smart feature that helps ensure the set-point temperature is reached by the time the heating is scheduled to turn ON.


It enhances thermal comfort by adjusting the setpoint ahead of schedule, [page 125](#), ensuring the room reaches the desired temperature at the exact time you set. Additionally, it saves energy by optimizing the times for the boiler to turn on, unlike traditional heating that only start heating at the scheduled time.

**NOTE:** Comfort Mode as a feature applies to all rooms, and cannot be activated for individual rooms. If you have scheduled certain heating intervals to start requesting heat early, they will need to be re-programmed when Comfort Mode is activated.

### Comfort Mode deactivated

When Comfort Mode is deactivated, the room starts heating at the scheduled time and it will reach the set-point temperature some time after the scheduled start time.


Boiler starts heating at 6 am, following the schedule request set for a temperature change.

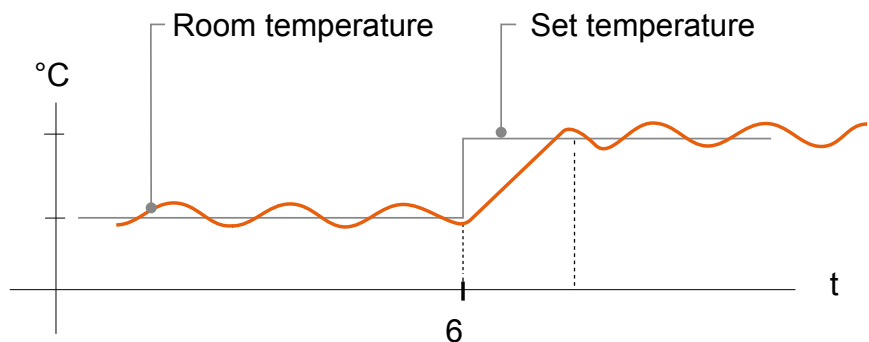

### Comfort Mode activated

With Comfort Mode activated a room will start to heat up to 3 hours ahead of a scheduled temperature change. The specific time needed to pre-heat the room is calculated by Wiser and may vary.

Boiler starts before 6 am in order to reach the requested temperature on time for the scheduled change.

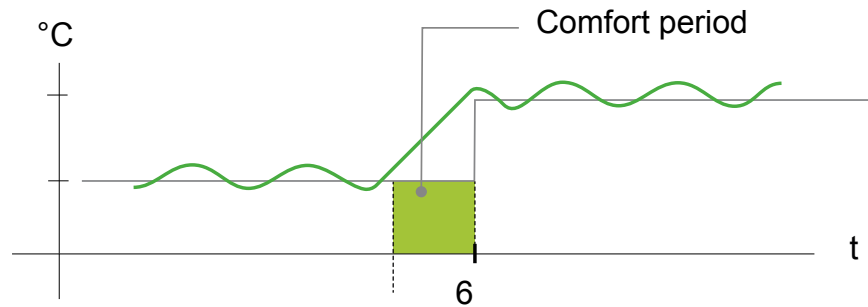

When a room is in a Comfort period, a 'C' icon with an encircling arrow will appear on the temperature adjustment screen of the app. This icon will also appear on the display of the room thermostat.

During a Comfort period, the Wiser Home App and Wiser Room Thermostat with display will display the upcoming set temperature that Wiser is controlling the heating to. For example, if the schedule calls for 16 °C overnight and then 21 °C from 6am, the Wiser Home App and room thermostat will display the encircled 'C' and 21 °C as the set temperature during the Comfort period.



## Seasonal Comfort Mode

If you have a shutter control devices installed at your home, Seasonal Comfort Mode feature will be available.

Seasonal Comfort Mode is a smart feature helps maintain the perfect temperature throughout the year by automatically adjusting your shutters or blinds.

### Features:

- Keep your home comfortable in a cost-effective way.
- In the **winter**, let natural sunlight warm your home during the day.
- In the **summer**, block excess sunlight to prevent overheating.
- Save up to 5% on energy bills when used year-round, based on a home with both heating and cooling systems.

### How It Works:

- **Summer:** The system will close your shutters based on temperature and light levels to reduce heat and keep your home cooler.
- **Winter:** Shutters will open at sunrise to let in natural warmth and close at sunset to help maintain indoor temperature.
- **Mid-Seasons:** The mode adapts to changing outdoor temperatures, ensuring your home stays comfortable.
  - If the highest temperature of a day reaches 22° C or above, the seasonal comfort mode operates the shutters the same as in summers.
  - If the highest temperature of a day is below 22° C, the seasonal comfort mode operates the shutters the same as in winters.

The Seasonal Comfort Mode adapts its operation based on the devices available in your system, offering three levels of algorithm efficiency. Each level improves the comfort and energy savings by integrating additional data sources:

- **Basic level - Control based on time & geographical location:**  
At this level, it uses your home’s geographical location and the time of day to manage shutters automatically based on the estimated sunrise and sunset times. This maintains the optimum light and temperature at home. This level is ideal for users who want a simple, automated solution without additional sensors.
- **Enhanced Level - Temperature - Driven Optimization:**  
At this level, it uses the local indoor and outdoor temperature in addition to the time and your home’s geographical location. It manages the shutters dynamically based on the real-time temperature conditions to improve comfort.
- **Advanced Level - Best-in-class optimization with light sensors/outdoor motion sensors:**  
At this level, it further improves the shutter management by using the real-time light intensity measured by the outdoor motion sensors and the indoor and outdoor temperature.

**NOTE:** Make sure that the outdoor motion sensor is facing towards the floor and not facing the sun.

It offers maximum efficiency by adapting shutter movements based on actual temperature and natural light, rather than relying only on the estimated sunrise/sunset times.

**TIP:** Choosing the right level for shutter operation:

The Seasonal Comfort Mode adapts to the devices installed in your system. Even if you don’t have all the required sensors, you can still benefit from the feature at a basic level. This flexible approach ensures that you can experience optimized comfort and energy efficiency, regardless of your system setup.

However, for the best results, we recommend using the full set of compatible devices.



**NOTE:** The seasonal comfort mode performs accurately when the indoor and outdoor temperature sensors (Temperature/Humidity Sensor) and outdoor motion sensors are installed at home.

**IMPORTANT:** The IP rating of the sensors used for the seasonal comfort mode are as follows:

Sensors	IP rating
Outdoor Motion Sensor	IP66 - Sensor is protected against dust and water ingress.
Temperature/Humidity Sensor	IP20 - Sensor is protected against solid objects of size more than 12 mm.

Therefore, they should be installed at a suitable location at home.

Find the details of setting-up the Seasonal Comfort Mode in the Device User Guide of the respective shutter control device. Refer to *List of Wiser Devices*, page 16 for the links to Device user guide for each devices.

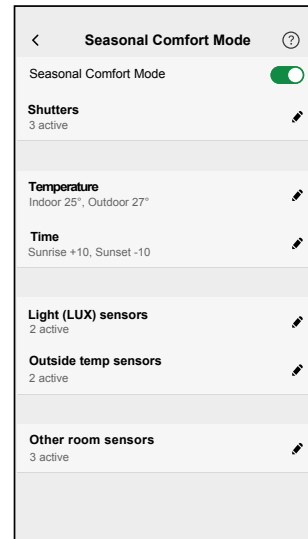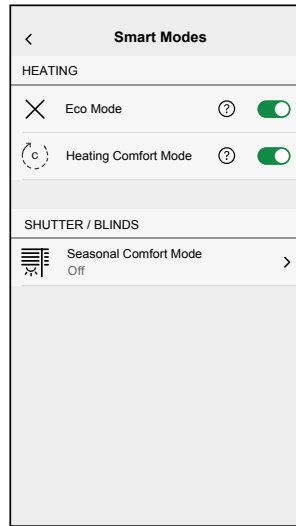

## App Settings


Overview of the options available in the settings menu.

The settings menu contains various settings for parts of the Wiser Home System.


Rooms, page 99 and Devices, page 89 are managed from the settings menu.


On the Home Screen, page 161:

1. Tap .

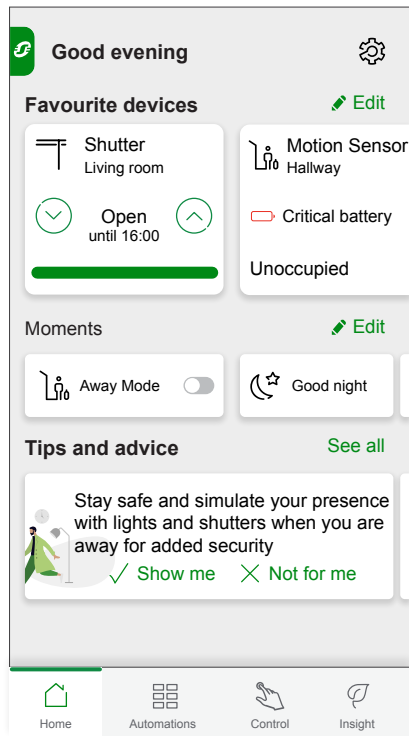

The settings menu:

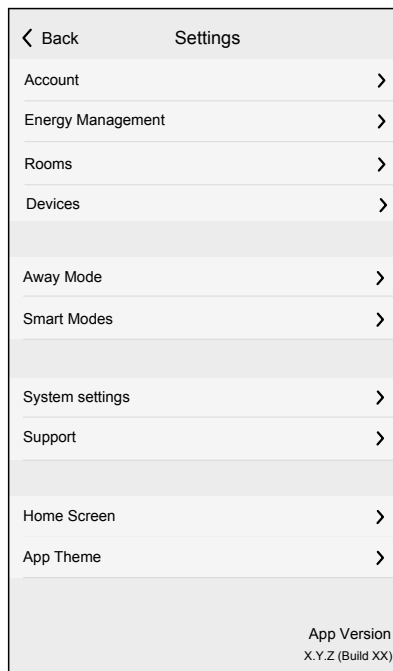

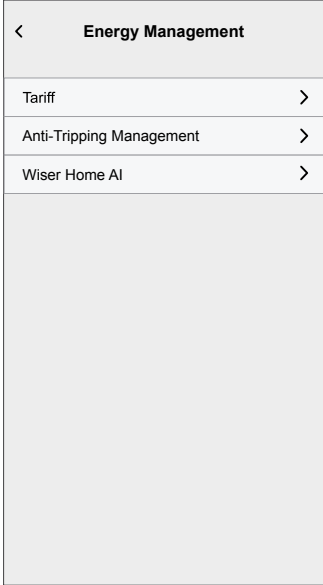
<b>Account</b>	Change the details of your account, like password, notification settings, home address, etc. <b>NOTE:</b> You can also find the notification settings (e.g. Battery low) here.
<b>Energy Management</b>	<p>This option is available only if you have Energy devices installed at your home.</p> <ul style="list-style-type: none"> <li>• <b>Tariff:</b> Set the tariff to access your energy cost and billing data. You can set the tariff based on your contract type. Refer to <a href="#">Setting Tariff, page 144</a> for detailed information on how to set the tariff.</li> <li>• <b>Anti-Tripping Management:</b> To enable/disable the Anti-Tripping Management for devices. The Anti-Tripping Management prevents the circuit breaker from tripping by switching off the load (e.g. Water Heater, EV Socket) or reducing the power of the load. Devices that are eligible will be added automatically to the Anti-Tripping Management. Refer to <a href="#">Anti-Tripping Management, page 211</a> for detailed information on how to enroll the Anti-Tripping management.</li> <li>• <b>Wiser Home AI:</b> You can enroll/disenrol the devices or edit the home profile whenever required. The Wiser Home AI feature allows users to reduce electricity costs by enrolling high energy devices like EV Charger (EVlink Home Smart, Schneider Charge, EVlink socket ) or resistive Water boilers (controlled with a Power Micromodule). Refer to <a href="#">Wiser Home AI, page 198</a> for detailed information on Reduce my Bill.</li> </ul> 
<b>Rooms</b>	List of all Rooms of your Home. Access to Room options.
<b>Devices</b>	List of all Devices of your Home. Access to Device options.
<b>Away Mode</b>	Specify what happens when you activate the Away Mode, like temperature setting and which devices should be switched off. Refer to <a href="#">Away Mode, page 131</a> for detailed information.
<b>Smart Modes</b>	Activate or deactivate the Smart Modes, like ECO Mode.
<b>System Settings</b>	More detailed Wiser Home App information. Set your time zone here.
<b>Support</b>	Provides you the general assistance such as the link to the FAQ section of se.com, access detailed guide, report errors, and provides contact information for customer support. Refer to <a href="#">Support, page 141</a> for the detailed information.
<b>Home Screen</b>	Customize the appearance of the Home Screen.
<b>App Theme</b>	Personalize the appearance of Wiser home app to light mode or dark mode. Refer to <a href="#">App Theme, page 142</a> .

## Support

The Support page provides you with the essential resources and assistance options. From finding solutions to reporting errors, it's your go-to place for resolving issues and getting help.

1. On the App Settings, page 139, click on **Support**.
2. Support menu:

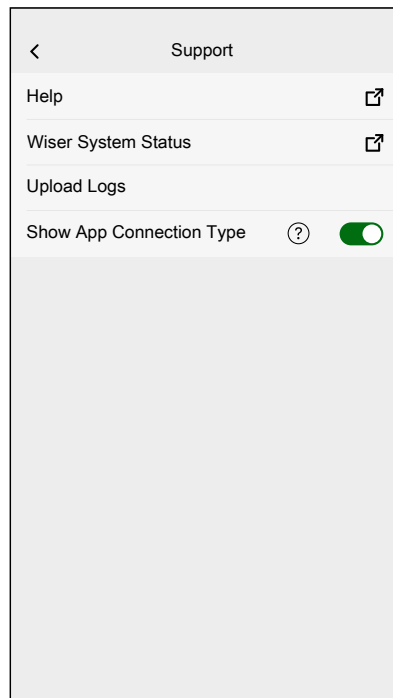


<b>Help</b>	Provides general assistance to users. Tap on the option to open the link to the FAQ section of se.com and contact information for customer support. Users can access this section to find solutions to common issues or seek guidance on how to use specific features within the app.
<b>Wisier System Status</b>	Tap to check the current status of the Wisier system.
<b>Upload Logs</b>	This option allows you to upload log files if you have identified any issues in the app. When you tap on the option, a popup will appear, allowing you to describe the issue. Click <b>OK</b> to generate an ID number for this problem, and then contact the Schneider support team for further assistance.  <b>NOTE:</b> Logs should be generated immediately when the issue happens, and the ID number is necessary to record for further investigation of the issue.
<b>Show App Connection Type</b>	This option displays information about the type of connection the app is using. It indicates whether the app is connected via local internet (when the phone and Hub are on the same Wi-Fi®) or via the cloud (when the phone uses mobile data or is connected to a different Wi-Fi® than the hub). If this function is enabled, you can view the connection status directly from the app's Homescreen.

## App Theme

Wisier Home app is available with different color schemes. By default, the app automatically matches your device's overall theme for a seamless look. You can also personalize the app experience by selecting your preferred appearance to light mode or dark mode.

color schemes. By default, the app automatically matches your device's overall theme for a seamless look. You can also personalize

1. On the App Settings, page 139, click on **App Theme**.
2. App Theme:

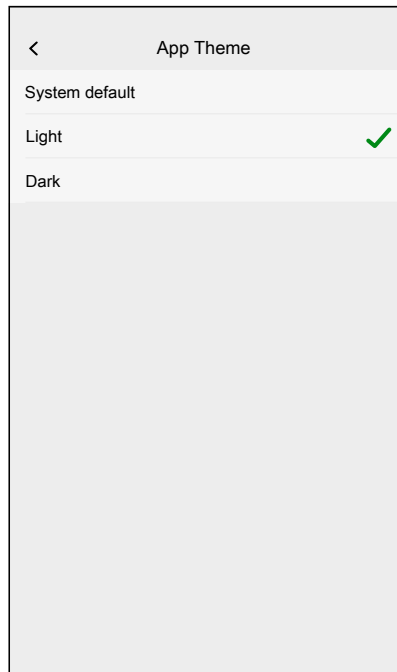

## Setting Tariff

You can set tariff in the Wiser Home app to access your energy cost and billing data.

The **Tariff** option available only if you have installed the following energy monitoring device installed at your home.

- EVlink Home Smart
- Mureva EVlink
- Schneider Charge
- Wiser 16 A Relay for Temperature Control
- Wiser Power Micromodule
- Wiser Micromodule for Fil Pilote radiators
- Connected Sockets
- PowerTag Energy
- Wiser Plug

You can set the tariff based on your contract type:

- **Flat rate:** The fixed rate for the entire time period of electricity service. [Configuring - flat rate, page 146.](#)

**Peak/Off-Peak Hours rate:** Peak rate is the rate set to a specific period of time at which electrical consumption is at its highest. Off peak rate is the time period when the demand for power is at its lowest. You pay for each unit of electricity consumed for the time period set. Refer to [Configuring - peak rate, page 148.](#)

- Electricity rate is not set, no information related to bill will be shown in the app.

**NOTE:**

- By default, **No Contract** option is set.
- Before changing your tariff type from peak rate or flat rate to no contract, please change charging mode from **Wiser Home AI** to **Charge Now** or **Manual** or **Customized Schedule**.

- **Feed in tariff:**

**IMPORTANT: Feed in tariff** will be shown only if you have set the PowerTag for Solar or Solar and Battery which feed electricity to the Grid.


The electricity generated from solar or solar and battery that is not used is exported to the electricity grid. You are eligible for a payment for the exported electricity. This payment is called a feed-in tariff. Refer to [Configuring - feed in tariff, page 151.](#)

**NOTE:** You can see the tariff data based on your local currency.

Once the device is commissioned, you will get notified that this feature is available. The **Tariff Entry** screen appears on the Home screen.

1. Tap **Continue**.
2. Read the feature update and swipe to navigate to next screen.

3. Tap **X** to close the overlay screen.

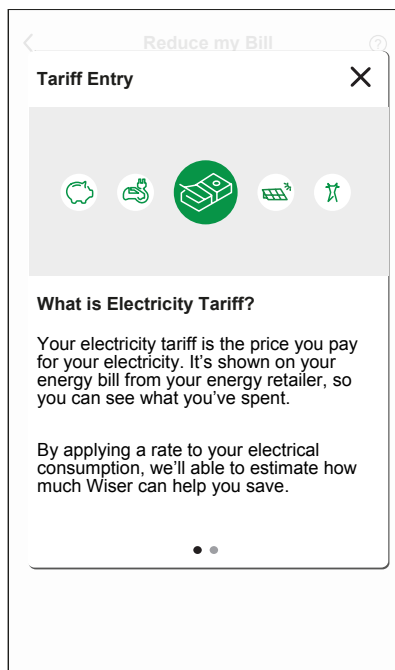

**NOTE:** If you have not configured your tariff, a push notification will be sent after 2 weeks and the last reminder after 6 weeks.



## Configuring - flat rate

To set flat rate:

1. After reading the Tariff onboarding information. On the **Tariff** screen, tap **Electricity**.


**NOTE:** If you have already configured your tariff settings, follow below menu navigation if you need to modify tariff rate.

On the **Home** screen, tap  > **Energy Management > Tariff > Electricity**.

2. Tap  (A) and select **Flat**.
3. Tap  (B) to set the contract limit.

**IMPORTANT:**



- contract limit is already set when pairing the main **PowerTag** as **Grid**. Refer to *Pairing the main device*.

- a. Select your contract limit (kVA/A/kW) size from the dropdown menu, then tap  and enter a value using the dial pad as per your country.


**TIP:** Default value is 36 kVA with range of 1–42 kVA..


A notification window will be prompted that the Contract Limit is used by Anti-Tripping Management algorithm. If set incorrectly it may not work as expected and could result in the power tripping. Tap **Continue**, if you like to proceed.

**IMPORTANT:** Anti-Tripping is applicable only if you have installed Water Heater/EV Socket/Schneider Charge/EVlink Home Smart in your home.


- b. Tap  after setting the contract limit.
4. Tap  (C) and select a subscription type (D) (refers to recurrent fee).
  5. Enter a value in the **Cost (€)** (E) field and tap **Set**.

**TIP:** The **Fixed Charges** is applied to recover the basic cost of electric service, independent of how much energy is used. These charges are electricity costs that don't change no matter how much electricity you use. This amount is fixed in your electricity bills.

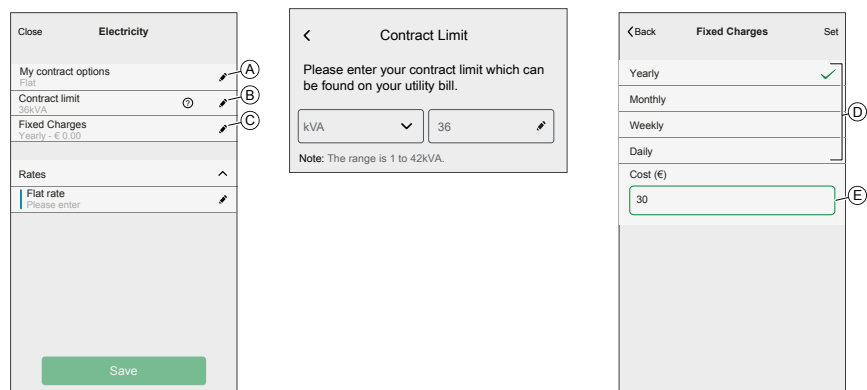

6. Tap  (F), enter a flat rate of consumption in the **Rate - €/kWh** field and tap **Update**.

7. Tap **Save** (G).

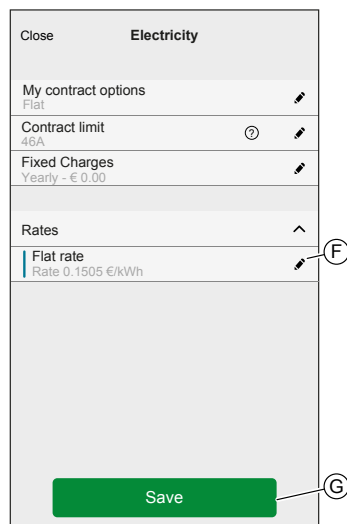



## Configuring - (peak/off-peak) rate


To set peak rate:

1. After reading the Tariff onboarding information. On the **Tariff** screen, tap **Electricity**.


**NOTE:**

- If you have already configured your tariff settings, follow this menu navigation to if you need to make changes:
- On the **Home** screen, tap  > **Energy Management** > **Tariff** > **Electricity**.

2. Tap  (A) and select **Time of use (peak /off-peak hours)**.

3. Tap  (B) to set the contract limit.

**IMPORTANT:** contract limit is already set when pairing the main **PowerTag** as **Grid**. Refer to [Pairing the main device](#) .


- a. Select your contract limit (kVA/A/kW) size from the dropdown menu, then tap  and enter a value using the dial pad as per your country.

**TIP:** Default value is 36 kVA with range of 1–42 kVA..

A notification window will be prompted that the Contract Limit is used by Anti-Tripping Management algorithm. If set incorrectly it may not work as expected and could result in the power tripping. Tap **Continue**, if you like to proceed.


**IMPORTANT:** Anti-Tripping is applicable only if you have installed Water Heater/EV Socket/Schneider Charge/EVlink Home Smart in your home.

- b. Tap  after setting the contract limit.

4. Tap  (C) and select a Fixed Charges type (refers to recurrent fee) -**Yearly**, **Monthly**, **Weekly**, **Daily**.

5. Enter a fixed charge value in the **Cost (€)** field and tap **Set**.


**NOTE:** The **Fixed Charges** is applied to recover the basic cost of electric service, independent of how much energy is used. These charges are electricity costs that don't change no matter how much electricity you use. This amount is fixed in your electricity bills.

6. Tap  (D), enter peak rate of consumption in the **Rate - €/kWh** field and tap **Update**.

7. Tap **Add a rate**.


8. Enter the name of the rate in the text field (E).

9. Enter a target value in the **Rate - €/kWh** field (F) and tap **Add** (G).

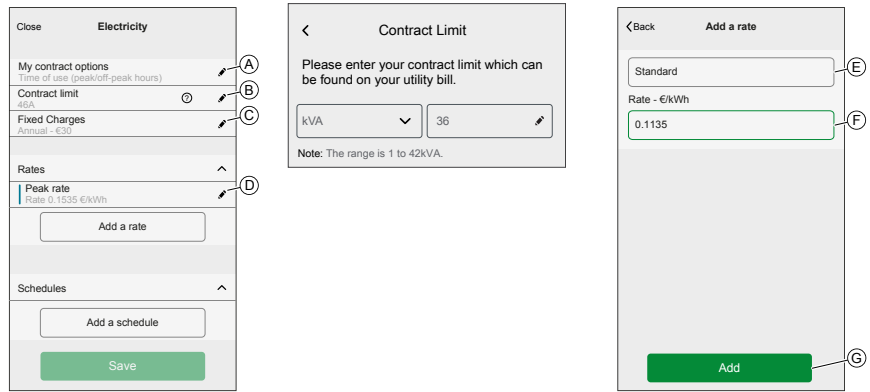

**NOTE:** Maximum 5 additional rates can be added.


10. Tap **Add a Schedule** (H) to set the time frame.

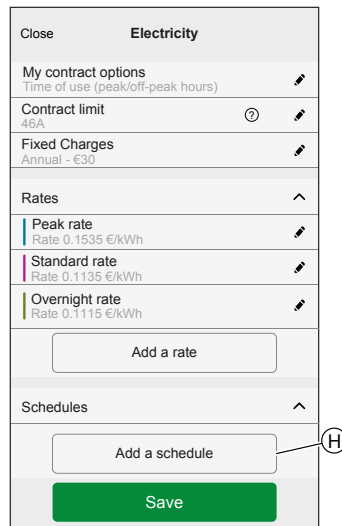

11. Enter a schedule name in the **NAME** field. Example, Weekend tariff.

12. Select the days of the week in **DAYS** field to apply the schedule.

13. Tap  to set **Start time** and **Finish time**.

14. Tap  and select a **RATE TYPE**.

**IMPORTANT:** It is necessary to set off-peak hours for each day per schedule (I) else you will not be able to save your tariff details.

15. Tap **Add** and then tap **Save**.

The image shows two screenshots from a mobile application. The left screenshot is titled 'Add Schedule' and shows a form with the following fields: 'NAME' (containing 'Weekday charge'), 'DAYS' (with days M, T, W, T, F, S, S selected), 'TIME' (Start time: 08:00, Finish time: 16:00), 'RATE TYPE' (Standard Rate), and a green 'Add' button at the bottom. The right screenshot is titled 'Electricity' and shows a list of contract options: 'My contract options', 'Contract limit' (46A), 'Fixed Charges' (Annual - €30), 'Rates' (Peak rate: 0.1535 €/kWh, Standard rate: 0.1135 €/kWh), and 'Schedules'. A blue notification banner at the top of the Schedules section reads 'You need have schedule included off peak hrs for each day'. Below this, a 'Weekday charge' schedule is listed for 'Weekdays' from '08:00-16:00'. A green 'Save' button is at the bottom. A circled '1' points to the notification banner.

**TIP:** You can create multiple schedules by tapping **Add a schedule**.

**NOTE:** Avoid assigning the same date and time to more than one schedule to avoid conflicts.


## Configuring - feed in tariff

### IMPORTANT:

- Feed in tariff will be shown only for users with On Grid solar system who feed electricity to the Grid.
- You will be notified to enter the Feed in Tariff in the **Insights** page.


To set feed-in tariff:


1. On the **Insights** page, tap **Find out more** and read the **Feed-in Tariff** onboarding information.
  - a. Tap **X** to close the overlay screen.

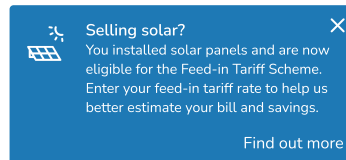


**NOTE:** If you have not configured your Feed-in tariff, a push notification will be sent after 2 weeks and the last reminder after 6 weeks.

### TIP:

- If you have closed the reminder splash screen, you can also set your Feed-in tariff in the **Settings** page.
- On the **Home** screen, tap  > **Energy Management** > **Tariff** > **Feed-in Rate**.

2. Tap  (A) and enter a target value in the **Rate - €/kWh** field (B).
3. Tap **Save**.

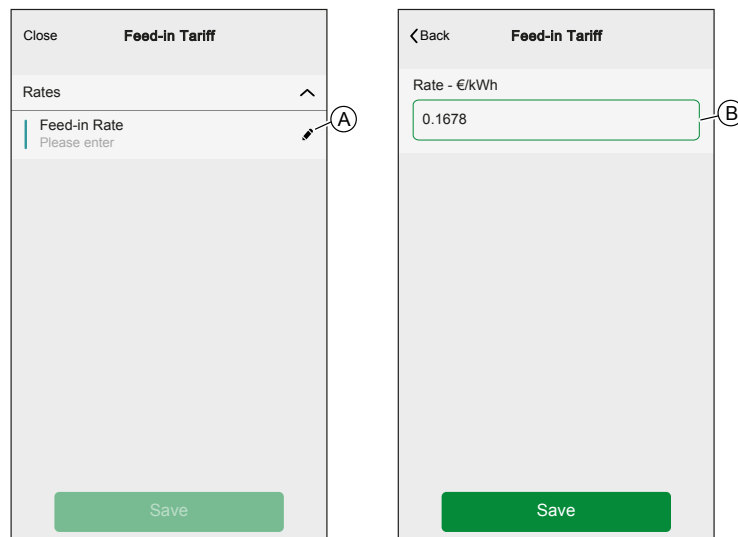


**NOTE:** If you have an Off Grid solar system and you wish to sell your excess energy, refer to **Advanced settings** before setting the Feed-in tariff.

## Account settings


In the account menu you can manage your address, customize notifications and alarms, manage privacy, connect third-party apps, update your password, and even delete your account when needed.

In the Settings menu, page 139:

1. Tap **Account** (A).

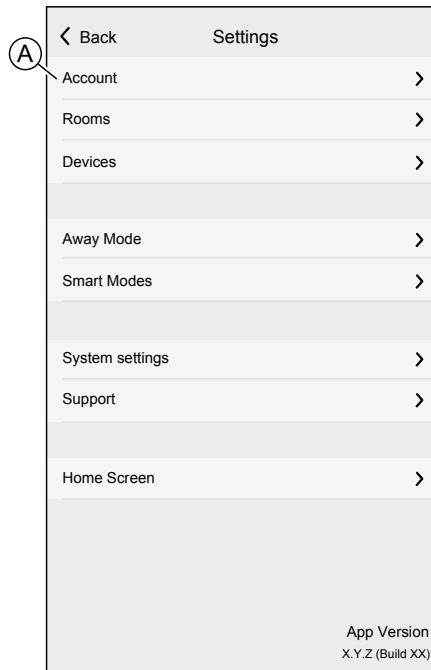

The Account menu:

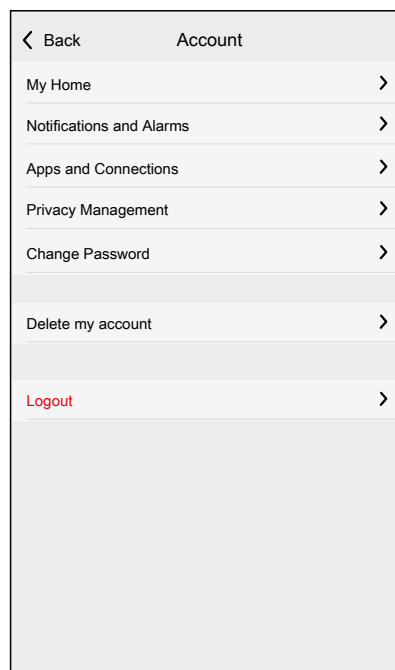

<b>My Home</b>	Set the details of your home.
<b>Notifications and Alarms</b>	Set which Notifications and Alarms, page 154 you want to receive.

<p><b>Apps and Connections</b></p>	<p>The Apps and Connections has following options:</p> <p><b>Wiser Connections</b></p> <ul style="list-style-type: none"> <li>• <b>Wiser Energy:</b> If you have a <b>Wiser Energy</b> account, you can link your Wiser Energy app or create an account.</li> <li>• <b>Personalised Energy Insights:</b> To stop/restart personalized energy insights service. Personalised Energy Insights provides a breakdown of your home's energy use, compares it with similar homes, and offers tips to help you save energy and reduce costs. Refer to <a href="#">Personalized Energy Insights</a> for detailed information on how to enable personalized energy insights, create home profile etc.</li> </ul> <p><b>Third Party Connections</b></p> <ul style="list-style-type: none"> <li>• <b>Alexa / Google Home:</b> Integrate with popular third-party apps like <b>Alexa</b> and <b>Google Home</b> for convenient voice control. Refer to <a href="#">Voice Control</a>, page 177 for detailed information.</li> <li>• <b>Matter:</b> Enable Matter-compatible devices to communicate with third party apps such as Google Home, Apple Home, and Amazon Alexa, ensuring seamless interaction between your smart devices. Refer to <a href="#">Matter</a>, page 82 for details information.</li> </ul>
<p><b>Privacy Management</b></p>	<p>Activate or deactivate the option to receive marketing emails and contribute to data analysis for service improvement. It also provides information about the terms of use and privacy notice.</p>
<p><b>Change Password</b></p>	<p>You can change you password here.</p> <p><b>NOTE:</b> You can find the requirements of the Wiser Home password in chapter <a href="#">Creating an Account</a>, page 76</p> <p><b>TIP:</b> Please consider the tips about passwords and other methods to harden your system in chapter <a href="#">Cybersecurity Principles</a>, page 46</p>
<p><b>Logout</b></p>	<p>Log out of your Account</p> <p><b>NOTE:</b> In order to use the Wiser Home app, you need to be logged in with an Account.</p>
<p><b>Delete my account</b></p>	<p>Delete your Account.</p> <p>Deleting your account is immediate and permanent.</p> <p>You need to be logged in to your Wiser Hub to be able to delete your account.</p> <p><b>NOTE:</b> Deleting your Account will flag your E-Mail Address as deleted.</p> <p><b>NOTE:</b> A deleted account cannot be restored.</p> <p><b>NOTE:</b> Deleting your Account will log you out of your Wiser System and you will not be able to log in again. Make sure to decommission your Wiser System first.</p> <p><b>NOTE:</b> If you have enabled Personalized Energy Insights feature for your energy device, deleting your account will cancel the subscription from the Personalized Energy Insights notifications.</p> <p><b>TIP:</b> Instead of deleting your account if you need to leave a Wiser System behind (e.g. moving out), reset the hub and keep your credentials ready for the next Wiser System.</p>


## Notifications and Alarms

Notifications and Alarms allows the Wisier Home app to send messages that show up in the notifications of your mobile device's operating system and also you can set an alarm for overconsumption and no consumption of the specific device.


You can select the Notifications and Alarms in the Account options of the Settings menu, page 139.

**NOTE:** Notifications and Alarms settings are saved for an account in the Wisier cloud. Changes to one mobile device affect all mobile devices using the same account.

1. Tap **Notifications and Alarms** (A).

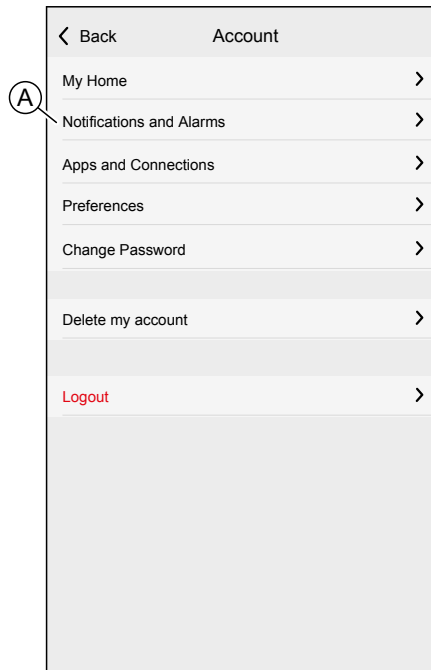

Notification and Alarm settings:

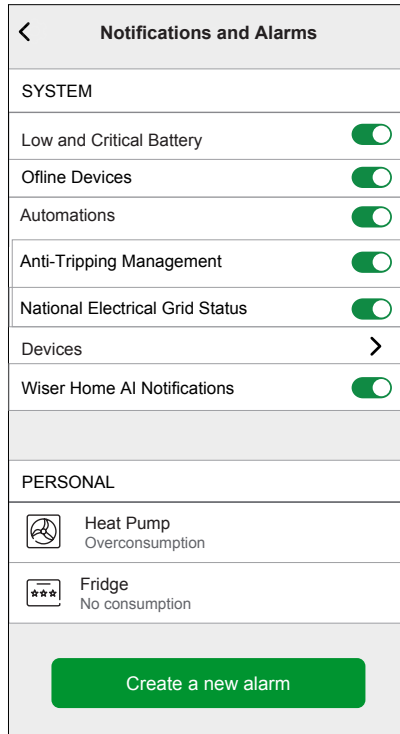


SYSTEM	
<b>Low and Critical Battery</b>	Will notify you when the battery of a Device is low.
<b>Offline Devices</b>	Will notify you when the hub lost connection to a Device.
<b>Automations</b>	Will notify you when an automation has been triggered.
<b>Anti- Tripping Management</b>	Will notify you when there is load shedding, if schedule or automation doesn't run due to it, when devices stop shedding, or when schedules and automations resume.
<b>National Electrical Grid Status</b>	Allows you to receive notifications regarding the status of the national electrical grid. To enable/disable toggle the switches next to each alert type: <ul style="list-style-type: none"> <li>• <b>Red Alerts:</b> Receive notifications two hours before the grid becomes very tense.</li> <li>• <b>Amber Alerts:</b> Receive notifications two hours before the grid becomes tense.</li> <li>• <b>Green Alerts:</b> Receive notifications when the grid returns to normal operation.</li> </ul>
<b>Devices</b>	Certain Devices can send notifications on their own. You can select the devices that are allowed to send notifications. <b>TIP:</b> You can also enable or disable notifications of a device in the device options.
<b>Wiser Home AI Notifications</b>	Enables real-time alerts and recommendations to notify you of any irregularities, feature malfunctions, or optimization opportunities.
PERSONAL	
<b>Overconsumption</b>	The app will trigger an alarm when the device's usage exceeds the set limit, helping you to manage and reduce overconsumption effectively. Refer to <a href="#">Setting-up Overconsumption Alarm</a> , page 155 for information on how to set the overconsumption alarm.
<b>No Consumption</b>	The app will trigger an alarm when the device consumes 0 watts for a set period of time. Refer to <a href="#">Setting-up No Consumption Alarm</a> , page 158 for information on how to set the no consumption alarm.


## Setting-up Overconsumption Alarm

This topic explains how to setup an overconsumption alarm for a device.


1. On the Notifications and Alarms, page 154 screen, tap **Create a new alarm** (A).

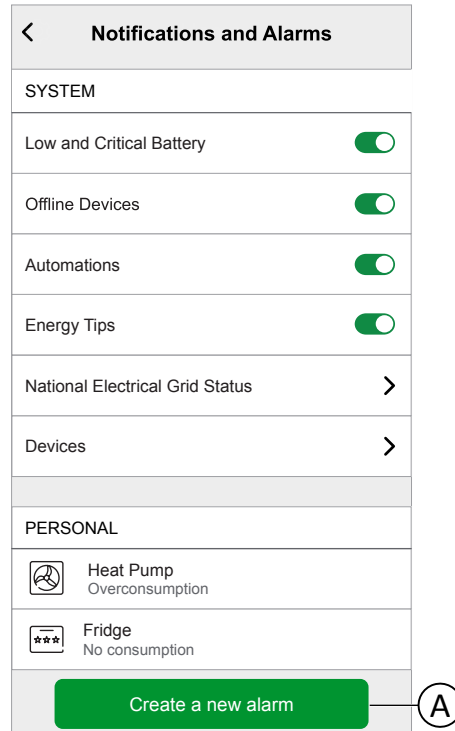

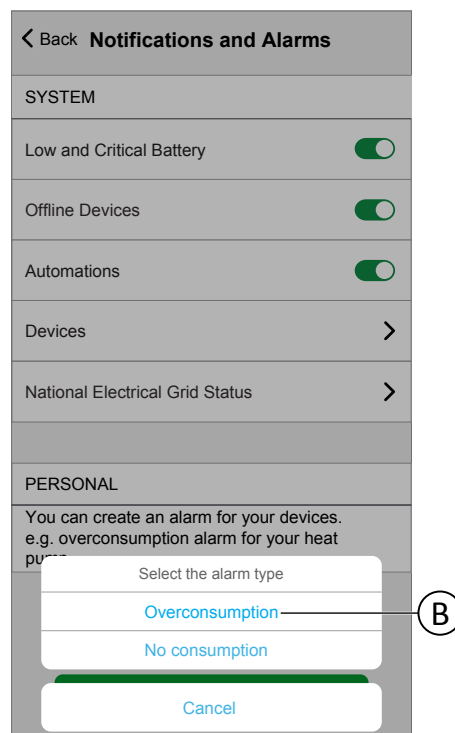


2. Choose alarm type as **Overconsumption** (B).

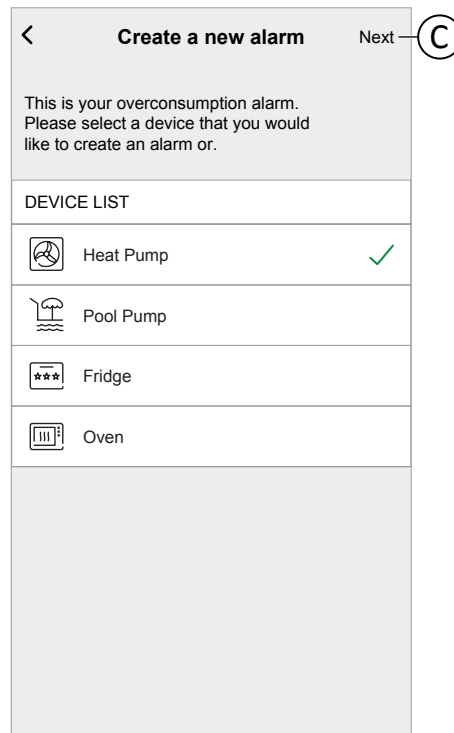


3. Select the device from the device list and tap **Next** (C).



4. Tap  icon (D) and set the power consumption limit that you consider normal for the selected device during its normal operation.
5. Tap  icon (E) and set the duration for which the device should be operating above the set power consumption limit before triggering an alarm.
6. Once you have entered the desired values for both the maximum power consumption and the duration, tap the **Save** (F).

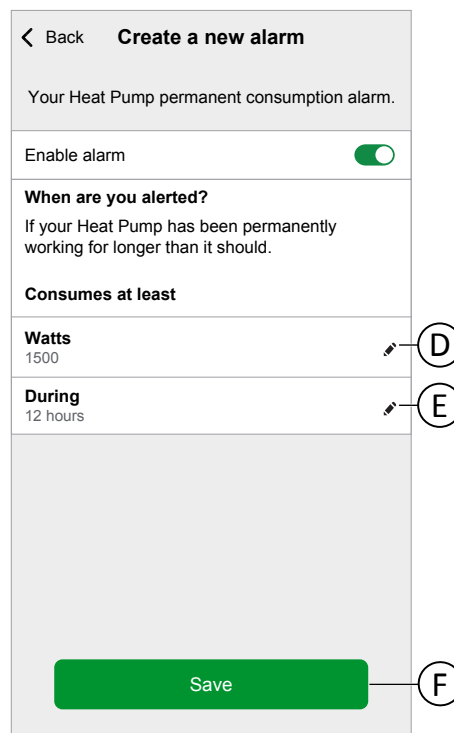


7. To delete an alarm, select the device and tap **Delete** (G).

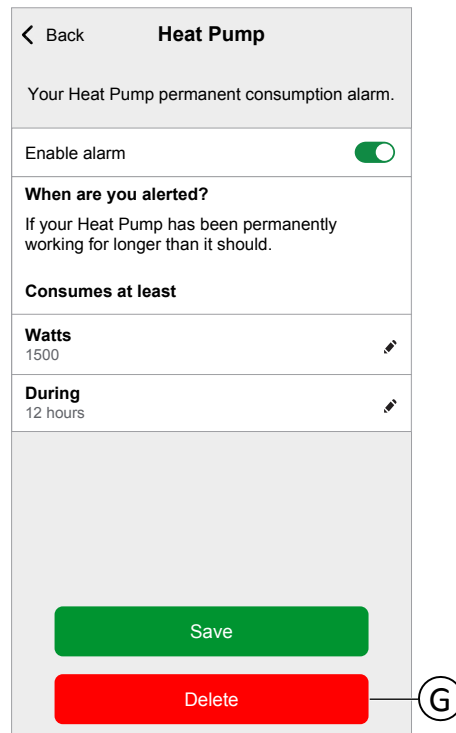


## Setting-up No Consumption Alarm

This topic explains how to setup a No Consumption alarm for a device.


1. On the Notifications and Alarms, page 154 screen, tap **Create a new alarm** (A).

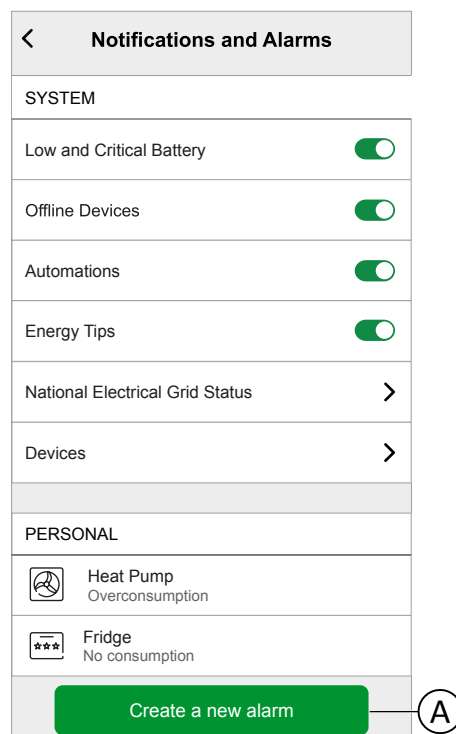


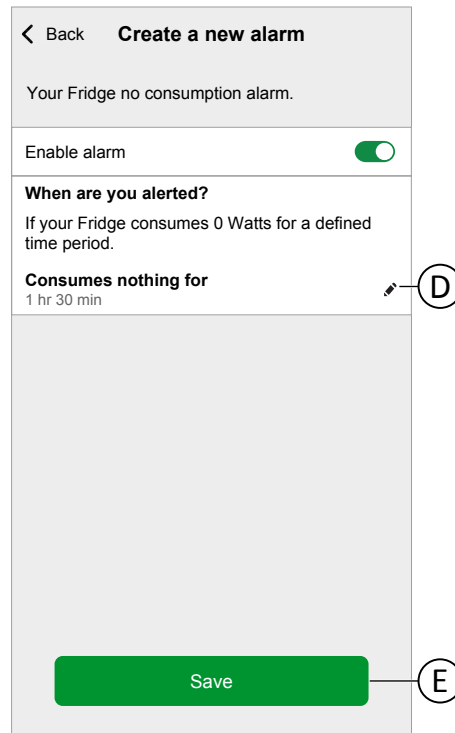
2. Choose alarm type as **No consumption** (B).

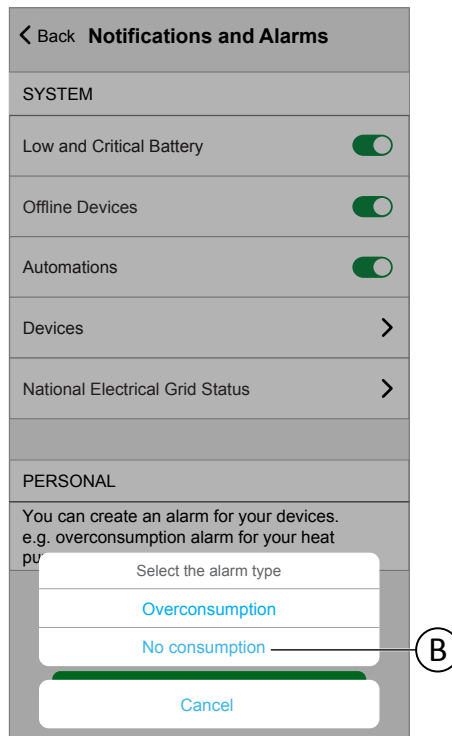


3. Select the device from the device list and tap **Next** (C).

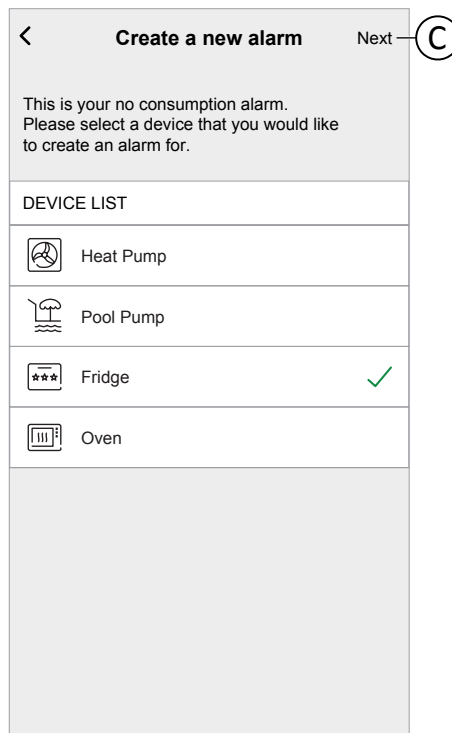

4. Tap  icon (D) and set the duration for which the device should remain at 0 Watts before triggering the alarm. Tap the **Save** (E).



5. To delete an alarm, select the device and tap **Delete** (F).

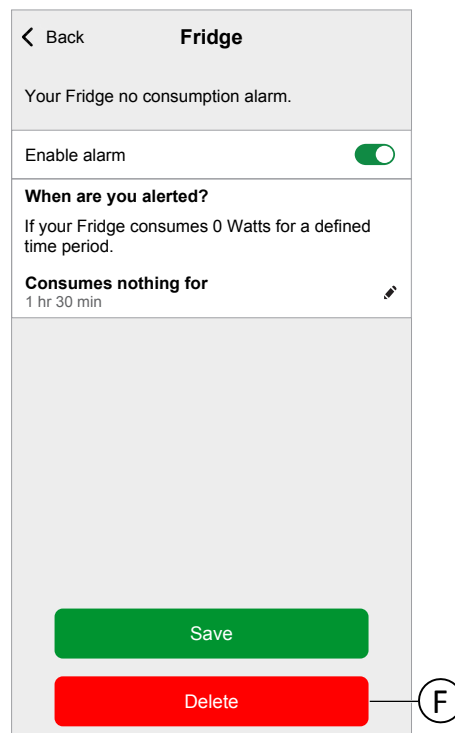

## App Language


To change the language of the app, go to your smartphone's settings and look for the option to set the language. If you're not sure how to find it, check the manual or guide of your smartphone's operating system for help.



# Controlling the Wiser System

## Home Screen

Home Screen provides quick access to your favourite devices, lets you activate moments effortlessly, and offers personalized tips to help you maximize energy savings.

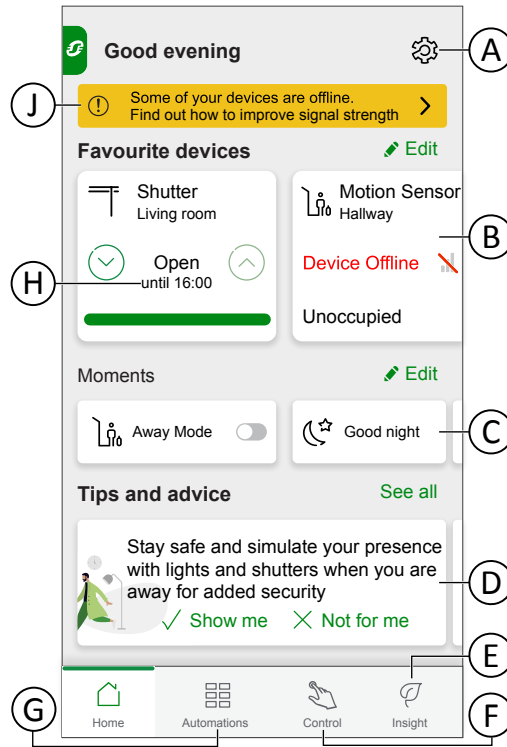Home Screen:



<b>A</b>	<b>Setting</b>	Tap to navigate to the settings screen.
<b>B</b>	<b>Favourite devices</b>	<p>You can add your most frequently used devices to the favourite section for quick access. Scroll horizontally to view all your favourite devices. Refer to <i>Managing Favourites</i>, page 162 for information on how to add the devices to favourites.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• If you have only one device installed in your home, this section will display it as <b>Your device</b> instead of <b>Favourite devices</b>.</li> <li>• If the device is currently following the schedule, it shows until when the current status will remain active based on the schedule. For example, here <b>until 16:00 (H)</b> means that device will stay On until 16.00.</li> </ul>
<b>C</b>	<b>Moments</b>	<p>You can view all the moments you have created for your home, allowing you to easily activate or deactivate them.</p> <p>To rearrange the order of the moments:</p> <ol style="list-style-type: none"> <li>1. Tap <b>Edit</b> option.</li> <li>2. Drag and drop the moments to arrange them in your preferred order.</li> </ol> <p><b>NOTE:</b> If you do not wish to see moments on your Home screen, go to  &gt; <b>Home Screen</b> and disable the <b>Show Moments</b> toggle switch.</p>
<b>D</b>	<b>Tips and advice</b>	<p>Provides useful tips and advice to help you make the best use of your devices and optimize energy usage. Scroll horizontally or tap <b>See all</b> to view all the tips. Refer to <i>Tips and Advice</i>, page 164 for more detailed information.</p> <p><b>NOTE:</b> If you do not wish to see <b>Tips and advice</b> on your Home screen, go to  &gt; <b>Home Screen</b> and disable the <b>Tips and advices</b> toggle.</p>
<b>E</b>	<b>Insights</b>	Tap to navigate to the Insights screen. Here you can find detailed information about your Wiser system such as energy saving, system activity, heating time and access to your heat report.


		<b>NOTE:</b> When you added an Energy device, like PowerTag E, tapping will open the <b>Energy</b> information. Please read the relevant Device User Guide of the device for more information. Refer to <i>List of Wiser Devices</i> , page 16 for the links to Device user guide for each devices.
<b>F</b>	<b>Control</b>	View/Control all the devices installed in your home, organized by the rooms to which they are assigned. Refer to <i>Device Control</i> , page 168 for detailed information on how to control the devices.  <b>NOTE:</b> If you have only one device installed at your home, the <b>Control</b> tab will not be available.
<b>G</b>	<b>Automation</b>	Tap to navigate to the Automation screen, where you can set up Moments, Schedules, and Automations for your home. Please read the relevant Device User Guide of the device for more information. Refer to <i>List of Wiser Devices</i> , page 16 for the links to Device user guide for each devices.
<b>J</b>	<b>Banner</b>	Provides important messages and notifications. These messages can include updates on device status, connectivity issues, and other relevant alerts to keep you informed about your home system.  <b>Example:</b> In the current screen, the banner displays a message about a device being offline, along with information on how to improve signal strength. This helps you quickly identify and address any connectivity issues.


## Managing Favourites

Quickly access and control your most frequently used devices from the Home screen. You can also rearrange the devices as per your preference.


### Add Favourites

1. On the Home screen, tap **Add favourites**.

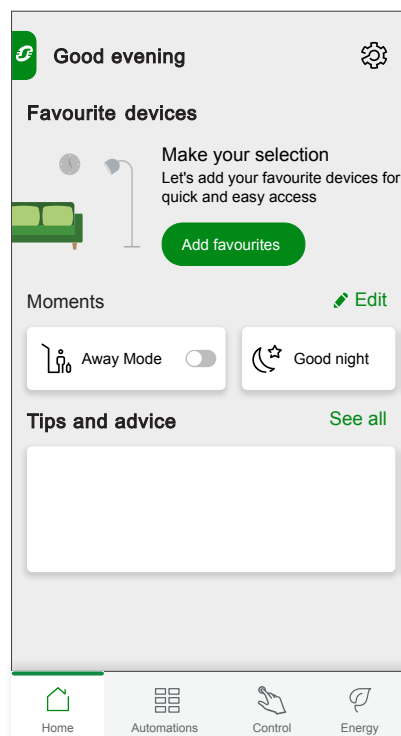

2. Tap the  icon to add all your favourite devices.


3. Once complete, tap **Done**.

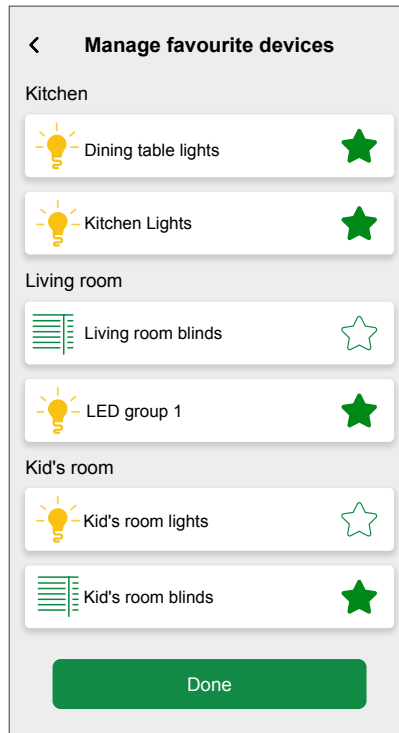

Now you can view all your favourite devices in the Home Screen.

## Edit Favourites


1. On the **Home screen > Favourite devices**, tap **Edit**.
2. You can perform following actions:
  - Drag and drop to reorder your favourite devices.
  - Tap **Manage favourites** to add or remove the device from the favourites list.

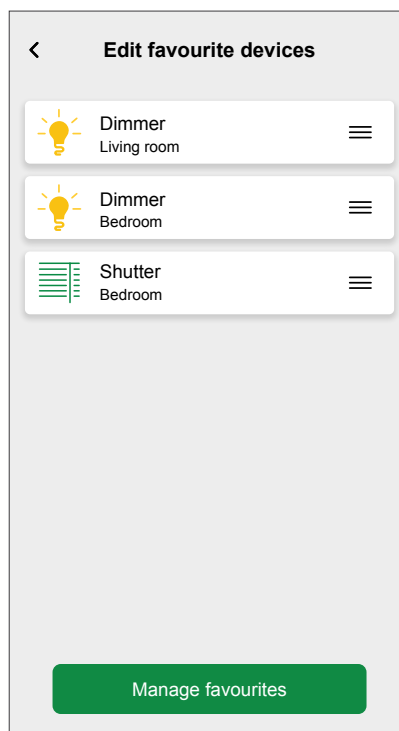

# Tips and Advice

Provides personalized tips based on the devices you own, helping you optimize their use and improve energy efficiency.


On the **Home screen > Tips and advice**, scroll horizontally to view three most important tips or tap **See all** to view complete list of available tips.

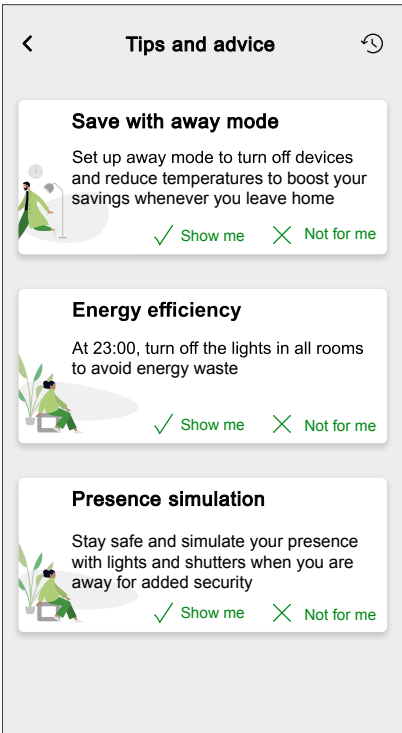

Each tip has two options:

**NOTE:** You can perform this action only if you are connected to internet.

- **Show Me:** Tap a tip or tap **Show Me** to view the complete tip along with any actions you may need to take. After reviewing the tip, you can choose further options:

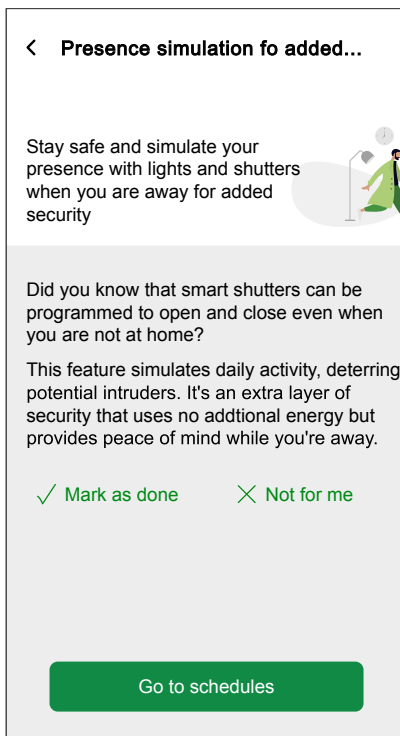

<b>Mark as Done</b>	If you find the tip relevant and have performed the necessary actions, tap this option to move it to the <b>Archived &gt; Done</b> folder, indicating that you have completed or implemented it.
<b>Not for Me</b>	After reading the complete tip, if you still think it is irrelevant to you, tap this option to move it to <b>Archived &gt; Discarded</b> folder.


- **Not for Me:** Tap on this option to move the tip directly to the **Archived** folder if it doesn't apply to you.




## Archived Tips

All tips marked as **Not For Me** or **Mark as Done** are stored in the **Archived** folder.

- The tips which are chosen as **Not For Me** will be moved to **Archived > Discarded** folder.
- The tips which are chosen as **Mark as Done** will be moved to **Archived > Done** folder.

**To view/retrieve a tip:**


1. On the Home screen, under **Tips and Advice**, tap **See All**.
2. Tap  (A) to go to the **Archived** folder.
3. Select the desired tip and tap **Show me**.
4. Tap **Bring it Back** to restore it.

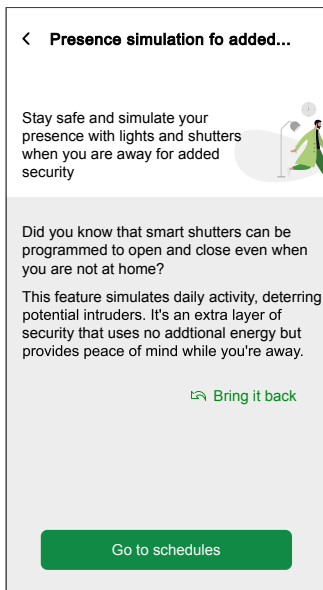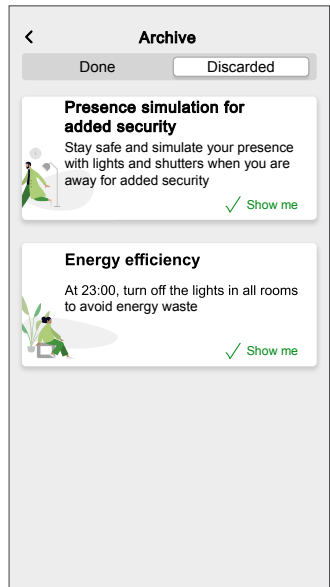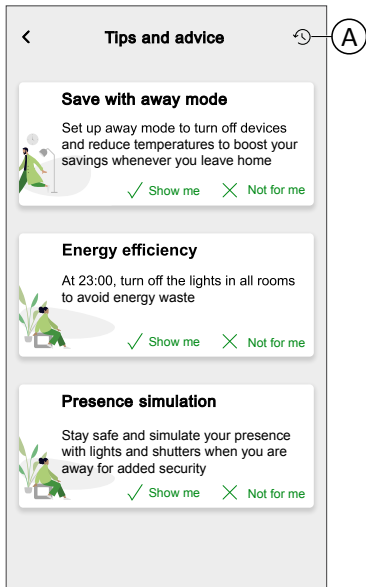

## Home Screen Settings

The Wisser Home App offers options to customize the Home Screen.

Find the Home Screen options in the Settings Menu, page 139.

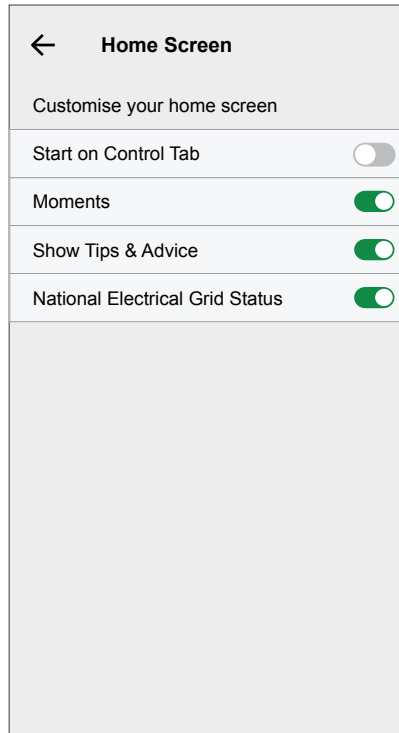

Setting	ON	OFF
<b>Start on Control Tab</b>	The App opens directly in the Control tab.	The App will open on the Home Screen.
<b>Show Moments</b>	The List of available Moments is shown in the upper part of the Home screen.	Moments will not be shown on the Home Screen.
<b>Show Tips and Advice</b>	Helpful tips and advice are displayed on the Home screen.	Tips and advice are hidden from the Home screen.
<b>National Electrical Grid Status</b>	Enable the Grid Status on the Home screen.	Disable the Grid Status on the Home Screen.

## Device control

You can control a Device in your Home directly on the **Control** tab for quick control or in the **Device Control Screen**.


### Control tab

On the **Control** tab, you can find all the devices installed in your home. The devices are arranged according to the **Rooms**, [page 99](#) they are assigned to, making it easy to manage and control them.


**NOTE:** If you have only one device installed at your home, the **Control** tab will not be available. You can control the device from the Home screen under **Your device** or from the Device Control Screen.


**IMPORTANT:** Climate devices, like Radiator Thermostats, will be controlled like any other Device, but need to be set up properly.


Detailed information about setting up Climate devices can be found in chapter **Climate control**, [page 172](#).

1. On the Home screen, tap **Control** tab .

**NOTE:** You can also set your **Control** tab as your default landing screen.

To do this, go to  > **Home Screen** and enable the **Start on the Control Tab** toggle switch.

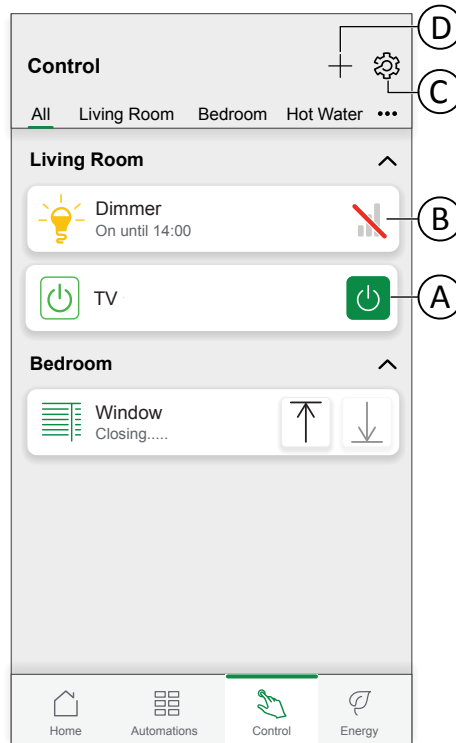

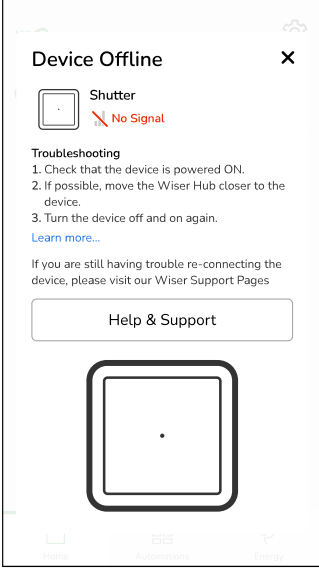
<b>A</b>	Quickly control a device (e.g., turn it on/off, adjust the temperature, or adjust the shutter)
<b>B</b>	<p>Indicates that the device is offline. Tap the device to open troubleshooting steps. Tap <b>Learn more</b> to know more about the zigbee signal strength, page 220 or tap <b>Help &amp; Support</b> if you require further assistance and visit the Wisier Support pages.</p> 
<b>C</b>	Navigate to the settings screen.
<b>D</b>	Add new devices.

## Device Control Screen

The advanced controls such as device settings or creating/assigning schedules will be performed in the Device Control Screen.


1. On the **Home Screen > Control**, tap the device (A) you want to control.

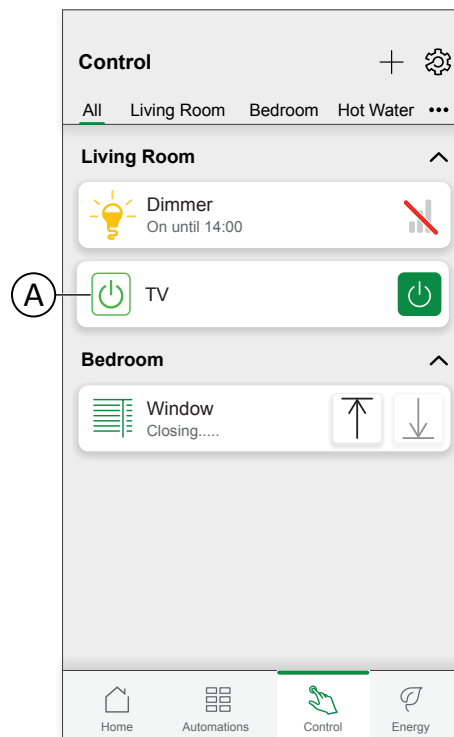

2. Set the desired state/value for the Device.

Device Control screen:

**NOTE:** The options and functions available on the device control screen vary depending on the type of device. For detailed information, refer to the Device User Guide of the respective device. Refer to [List of Wiser Devices](#), page 16 for the links to Device user guide for each devices.

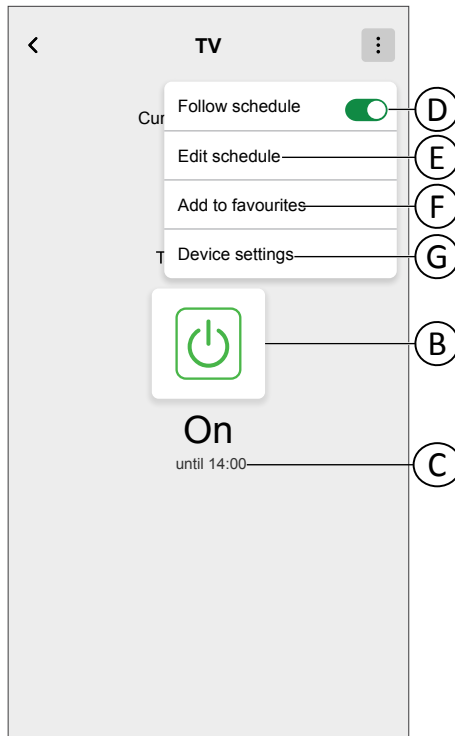

<b>B</b>	Tap to manually turn the device on or off. The green icon indicates the device is currently On.
<b>C</b>	If the device is currently following the schedule, it shows until when the current status will remain active based on the schedule.  For example, here <b>until 14:00</b> means that device will stay On until 4:00 PM.
<b>D</b>	Enable/disable to follow the pre-set schedule for the device. If the schedule is not yet created for the device, a <b>Create or assign a schedule</b> option will be available to create a new schedule or assign the device to an existing schedule. Refer to <i>Schedule</i> , page 125 for detailed information.
<b>E</b>	Redirects you to Schedule details screen to modify your existing schedule. Refer to <i>Editing a Schedule</i> , page 129.
<b>F</b>	Add or remove the device from <b>Favourite devices</b> . Refer to <i>Managing Favourites</i> , page 162.
<b>G</b>	Navigates to the Device Details, page 97.

## Climate control

Climate control involves managing the behavior of climate devices within the Wiser system. To create a climate control, climate devices must be assigned to a room.

### System-Level Climate Control

- If a Single Wiser Heat system, like UFH, supports a centralized water-based heat source (a boiler or heat pump), then that single source can either be heating or cooling, but not both.
- Rooms that are sourced from the single heat source and not capable of cooling (e.g., radiator-based rooms), will not operate during the cooling period. For example, when the system is in cooling mode in a non-cooling room:
  - The Radiator Thermostat shall not perform a Boost and shall display the same status as in Device Lock mode.
  - The Room thermostat shall wake up using any of the 3 keys (+, -, O), but subsequent button presses will not change the set point.
- Domestic Hot Water is generally out of scope of cooling. This means that during Cooling mode, any Hot Water control will operate as normal (this may be sourced by an alternate supply e.g. electrical)
- Rooms that are not sourced centrally from the heat source (e.g. electrical heating rooms) will continue to operate normally in the Heating mode when the cooling mode is ON.
- Where there are multiple UFH devices each containing a Heat/Cool switch input, only one of these needs to indicate cooling for the entire system to be put into cooling mode
- The Connected Thermostat 16 A should not be connected to the UFH for cooling mode. It should be connected only for UFH operating in heating mode.

**NOTE:** Refer to the dedicated device user guide for more detailed information on the climate control features of a specific device. [List of Wiser Devices](#), page 16 provides the links to Device user guide for each devices.

### Room-Level Climate Control

When a Climate Device is assigned to a Room, a single **Climate** is created which includes all the climate devices assigned to that room.

The Climate Control looks and acts like a Device Control. You can control the Climate Control directly from the Home Screen and assign it to Moments or Schedules.

- All Climate Devices assigned to a Room will be combined as one Climate Control.
- The Climate Control cannot be named unlike other devices, but will take the name of the Room.
- Individual Climate Devices can not be assigned to a Schedule or Moment. Instead, the Climate Control will show up in the relevant lists.

- When you assign a climate control device (such as a thermostat) to a room using the Wiser Home app, the system applies room-level scheduling. This means all devices within the same room follow a shared heating schedule. Based on the user role, a default schedule is created when climate devices are assigned.


**When signed in as a Professional Installer:**



- In the Device Control Screen, the **Follow schedule** toggle is Off by default.
- All rooms are set to Manual mode.
- You can enable the **Follow schedule** toggle if you want the default heating schedule to apply.

**When signed in as a Homeowner:**

- In the Device Control Screen, the **Follow schedule** toggle is On by default.
- The system automatically applies a default heating schedule.
- You can edit the schedule anytime to match your daily routine and preferences.
- Operating a single device of the Climate Control manually (e.g. one of three Radiator Thermostats) will send the command to the Climate Control, affecting all assigned Devices. (All three Radiator Thermostats will open/ close based on the command).
- Individual Devices can be locked against manual operation.
- To remove a Climate Device from a Climate Control, remove the Climate Device from the Room.

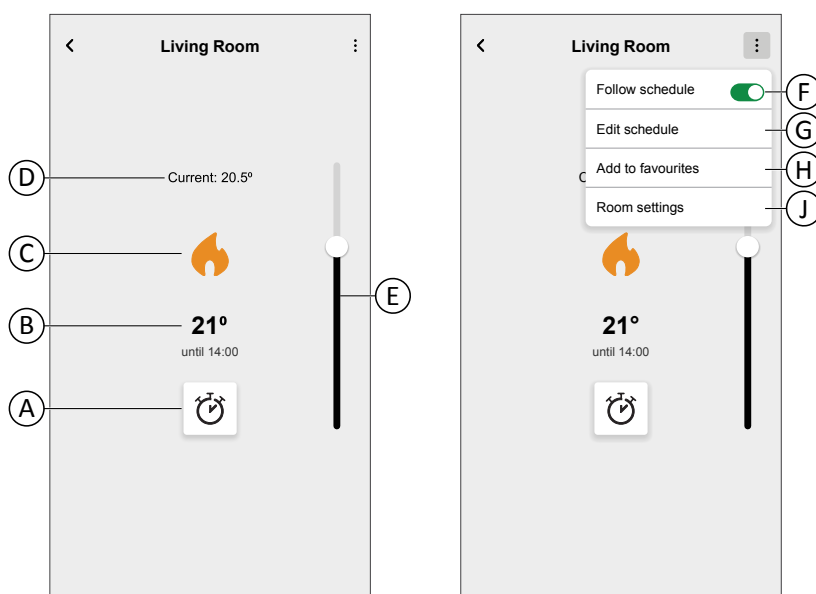Climate Control:



<b>A</b>	Boost Mode
<b>B</b>	Target Temperature
<b>C</b>	Status Icon  Heating Icon:   Cooling Icon: 
<b>D</b>	Measured temperature in the Room
<b>E</b>	Slider to set target temperature









<b>F</b>	If the Climate Control is assigned to a Schedule, page 125, you can choose whether the Climate Control should follow the Schedule.
<b>G</b>	Lets you edit an existing Schedule, page 125. <b>TIP:</b> If the Climate Control is not assigned to a Schedule, the option <b>Create or assign a schedule</b> will be available.
<b>H</b>	Add or remove the device from <b>Favourite devices</b> . Refer to <i>Managing Favourites</i> , page 162
<b>J</b>	Navigate to the Room Details, page 101 of the room to which the climate control is assigned.

## Setting up a Climate Control

    
While setting up your Climate Control, make sure to consider the following information.

### Heating Control:

- If your Home is using a Wiser 16A Relay for Temperature Control, you must add a Wiser Room Thermostat or Wiser Temperature/Humidity Sensor to that Room.
- If your Home is using a Wiser Underfloor Heating Connection Strip, you must add a Wiser Room Thermostat / Wiser Temperature/Humidity Sensor / Connected Thermostat to that Room.
- If you assigned more than two Radiator Thermostats to a Room, it is recommended to also assign a Room Thermostat / Wiser Temperature/Humidity Sensor/Connected Thermostat to that Room.
- Assign only one Room Thermostat to any Climate Control.

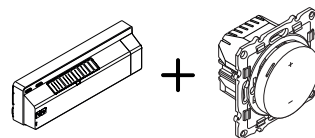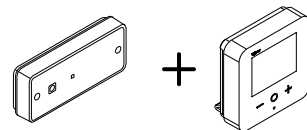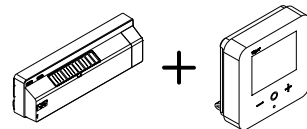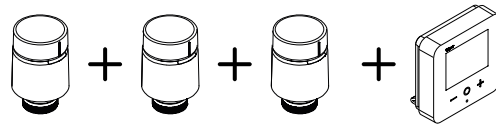



=

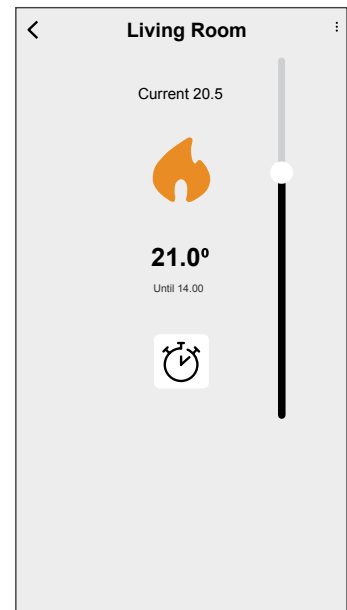

**Cooling Control:**

- If your Home is using a Wiser Underfloor Heating Connection Strip, you must add a Wiser Room Thermostat / Wiser Temperature/Humidity Sensor / Connected Thermostat 2 A to the concerned Room.
- When the cooling mode is activated on a Connected Thermostat 2 A or on the UFH, all the devices switch to cooling mode. So, if the Connected Thermostat 2 A is in cooling mode, the UFH goes into cooling mode even if its cooling input is not enabled. Refer to device user guide of the respective device for more detailed information. [List of Wiser Devices](#), page 16 provides the links to Device user guide for each devices.
- The UFH setpoint temperature ranges from 18°C to 30 °C.

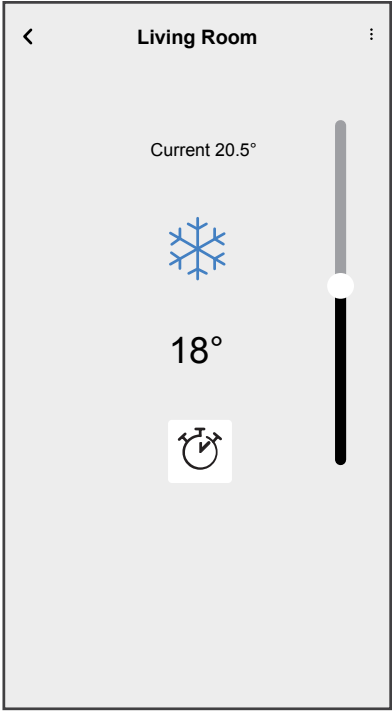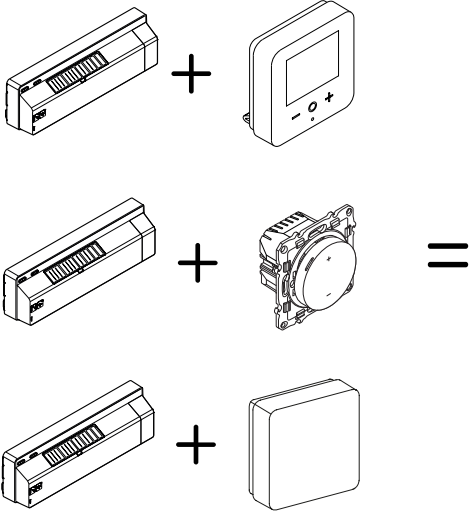

### Compatible third party devices

Third party climate devices, that are compatible with the Wiser System, show up in the Wiser Home app like a regular Wiser device.

They will also merge into a Climate Control like, e.g. a Wiser Radiator Thermostat.

## Voice Control

Integrate third-party voice control such as Alexa, Google Assistant into the app for increased functionality.

### Amazon Alexa


Amazon Alexa® (Alexa) is an intelligent personal assistant developed by Amazon®, and is capable of voice interaction.


Wiser works with Alexa to allow you to regulate the temperature of each room in your system by using a wake-word and an instruction.

The wake-work is “**Alexa**” followed by an instruction such as “**Increase temperature.**”

Currently, Amazon has made interaction and communication with Alexa only available in English and German.

### Configuring Wiser Home with Alexa

1. On the Home screen of Wiser Home app, tap .
2. Tap **Account > App and Connections** to find different cloud services.
3. Tap on **Alexa** option. This will redirect you to the Amazon website to link to Wiser system.

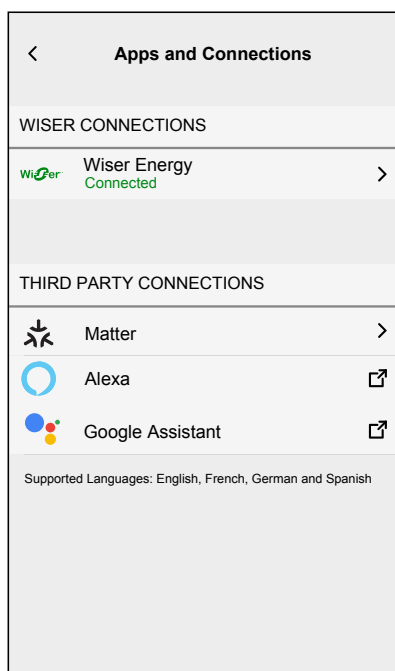

4. Click on **Enable** to link Alexa with your Wiser System.
5. Enter the user name and password you have setup for your Wiser system and tap **Done**.
6. Grant the required permissions. You will receive a confirmation that your account is now linked.

Alexa will now discover all the Wiser Home devices you have setup, allowing you to control your Wiser system using Alexa app and by using voice command.

## Changes made with Alexa

If Alexa is asked to increase the temperature by 2°C, then Alexa will add 2°C to your setpoint. If the ambient temperature is already >2°C above the current setpoint then the actual temperature will not change and Wiser will not turn the heating ON.

**Example:** If the current setpoint is 16°C, the current room temperature is 19°C and you ask Alexa to increase the temperature by 2°C - the current setpoint will change to 18°C but the heating will not start because the room temperature is already higher than 18°C.

Everything you tell Alexa to do related to Wiser Room Thermostats and Radiator Thermostats will last only for one hour, or until the next scheduled setpoint change if that change is to occur in under an hour. After that it goes back to its original setting, and you must tell Alexa to do it again.

If a Device is following a Schedule, any setting changed by Alexa will last until the next event in the Schedule. If the Device is running in manual mode, any command to Alexa will remain in place until the next command or manual setting.

## Common Wiser Commands for Alexa

Alexa requires explicit instructions. You must inform Alexa of the room to which you wish to address followed by an instruction, such as “increase temperature.” If no specific room is mentioned, Alexa will ask you which room you want to address, and then will increase the setpoint temperature by 1°C only based on the room reply from you.

If you want the setpoint temperature to increase by 4°C in the living room, you must explicitly state to Alexa to **“Increase the temperature in the living room by 4°C.”**

Listed below are common Wiser commands used with Alexa:

- Discover Devices: “Alexa, discover devices”
- Reduce Temperature: “Alexa, decrease the upstairs by 4 degrees”
- Increase Temperature: “Alexa, increase the upstairs by 3 degrees”
- Set Temperature: “Alexa, set the upstairs to 20 degrees”
- Get Temperature: “Alexa, what is the upstairs temperature?”
- Get Set Point: “Alexa, what is the upstairs set to?”

**NOTE:** Alexa considers the Room names and lights as the Devices.

Listed below are common Wiser Smart Plugs commands used with Alexa:

- Turn Off the Lights in the plug named bedside lamps: “Alexa, turn OFF the bedside lamps.”
- Turn ON the Lights in the plug named bedside lamps: “Alexa, turn ON the bedside lamps.”

Suggestions when using Alexa:


- Simple room names are recommended, such as “living room.”
- You cannot turn Heating ON or Off using Alexa.
- You cannot increase/decrease the temperature from Off. When a room is set to Off, you can adjust the room to a specific temperature.


## Google Home

Google Home is a brand of smart speakers that work similarly to Amazon Echo. Google’s intelligent PA, Google Assistant, is equivalent to Amazon’s Alexa. Google Home is also available on all Android devices and does not require the use of the ‘Smart Speakers’.

The user can speak a profusion of commands to request information, or ask the Google Assistant to perform an action such as play music, video playback, report news, access home automation. All of this can all be controlled from a Google Home device.

## Configuring Wiser Home with Google Home

1. On the Home screen of the Wiser Home app, tap .
2. Tap **Account > App and Connections** view the available cloud services.
3. Tap on **Google Assistant** . This will open the Google Assistant app on your smartphone to link it with the Wiser system.

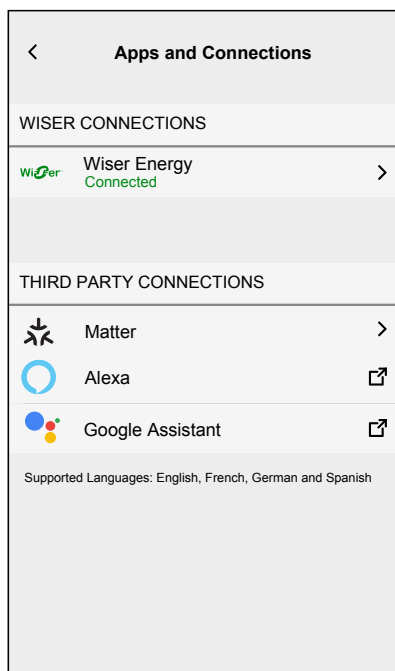

4. Select **Wiser Heat** from the list to configure your Wiser Home setup.
5. Enter the username and password you created for your Wiser system, and tap **Done**.
6. Grant the required permissions to allow you to discover all the Wiser devices you have setup, and to control your wiser system using google assistant app and by using voice command.

## Changes made with Google Home

All changes made through a voice command related to room thermostats and radiator thermostats are valid for one hour, or until the next scheduled event. The user cannot change this action. This also applies for boosts initiated from the radiator thermostat.

The reason for not implementing permanent changes to Wiser temperature is that a voice command can easily be forgotten, resulting in the heating accidentally being left ON for long periods of time, such as when users exit their home.

**NOTE:** When a command is given to increase/ decrease the temperature but no temperature setpoint is given, Google Home defaults the new setpoint temperature to the prior setpoint  $\pm 3$  degrees. This value is controlled by Google Home and differs from a normal Wiser boost, which defaults the new setpoint to  $\pm 2$  degrees above/below the current ambient temperature.

**NOTE:** Commands for turning the heating “ON/ OFF” are currently unavailable on Google Home. This is done intentionally as “OFF” cannot be reconciled with the notion of a temporary operation, and conversely, the notion of an “ON” setpoint does not exist on the Wiser system.

**NOTE:** If the Wiser Plug is following a schedule everything you tell Google Home to do related to Wiser Plugs will last until the next event in the Wiser Plug schedule. If the Wiser Plug is running in Manual Mode, everything you tell Google Home to do will remain in place until the next command either from Google Home or from the Wiser Home App.

## Common Wiser commands for Google Home

Listed below are common Wiser commands used with Google Home:

- Inquiry: “OK Google, is the light in bedroom ON?”
- Room Temperature: “OK Google, how warm is (room name)?”
- Set Temperature: “OK Google, set (room name) to XX degrees”
- Increase Temperature: “OK Google, increase setpoint by XX degrees”

Listed below are common Wiser Smart Plug commands used with Google Home:


- Table lamp command: “OK Google, turn ON/ OFF the Table lamp”

# Insights

The Insights feature gives you multiple features in a single place. This includes energy saving, system activity, heating time and access to your heat report.

To navigate to Insights from the Home screen:

1. Tap **Insights (A)**

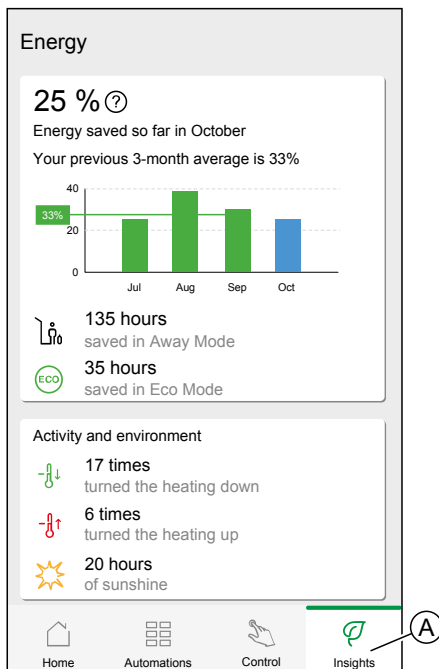

**NOTE:** If you have an energy device or energy monitoring device installed at your home, Energy Centre, page 188 will be displayed.

## Energy overview

We estimate how much energy you would have otherwise used, compare it against what you have used and show this as a percentage saving.

As the month progresses you can keep track of your savings by simply opening the app. Your energy savings are updated hourly so fluctuations are normal.

The system uses a smart algorithm to only count the time when Wiser's smart features were actively saving you energy.

Tap the **Question Mark (A)** for more details.


### Heating hours (B):

This section shows how much heating time you have used, relative to outdoor temperatures.

The temperatures are updated every hour. Each green bar displays the daily heating duration for the past 30 days. The length of the bars represents how many times your rooms called for heat during each day.

**NOTE:** The blue bar indicates the current month and will change to green once the month is finished.


New users will not see any green bars until you begin using your heating.

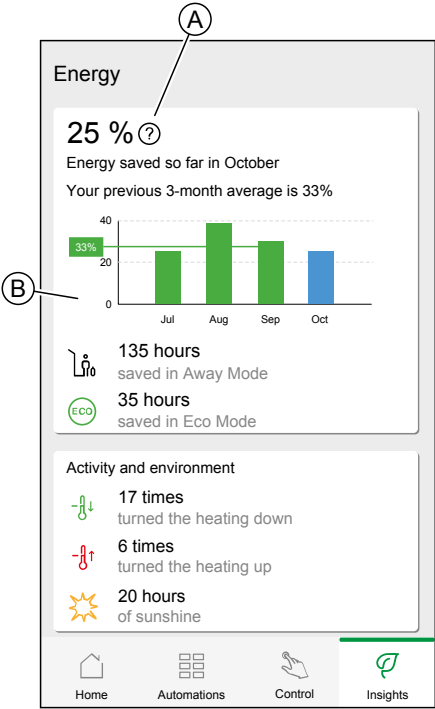

## Activity and environment


(A) Shows interesting facts about how you use your heating system as well as other interesting things that have been happening in your environment within the current month.

These numbers are updated hourly. Number of times you turned your heating down is counted by a manual boost or boost down. Number of times you turned your heating up is counted by a boost up or manual adjustment to the temperature. Number of hours of sunshine is calculated as number of hours when the cloud coverage was less than 50%.

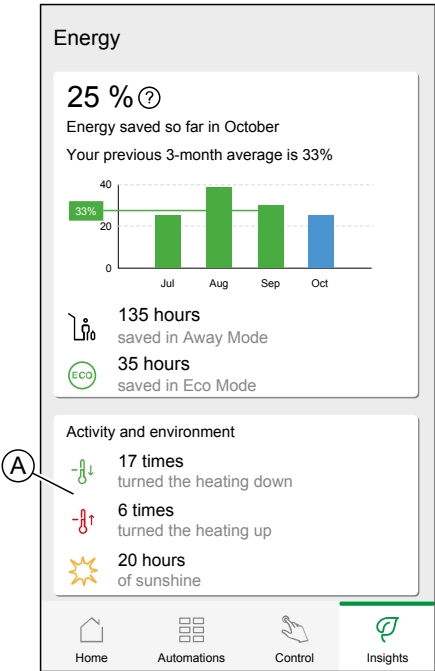

## Weather and Heating

(A) The weather can have a big impact on how your heating system performs. We take into account the thermal efficiency of your home and the outdoor temperature, so we can save you as much as possible.

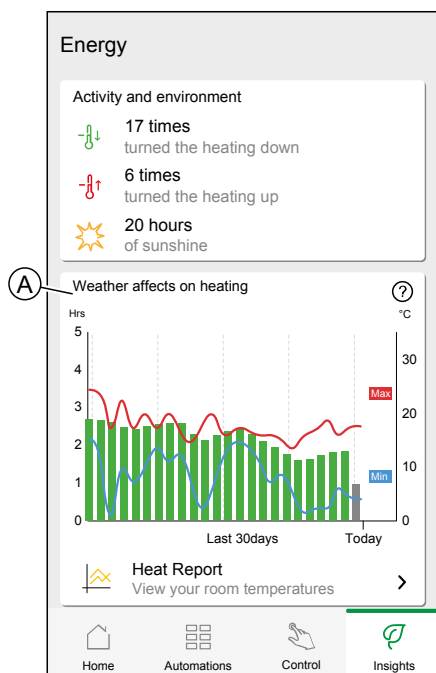

### Heating time

The green bars show an estimate of how many hours your heating was on each day. Incomplete and missing heating hours are both represented by grey bars.

### Weather

The maximum and minimum temperatures for each day are shown by red and blue lines. Missing weather temperatures are represented by dotted lines.

### Heat report


The performance of your heating system can be monitored with the Heat Report.

It enables the viewing of historical room, set (target), outdoor temperatures and allows for room-by-room comparison over time, to ensure that the system performs according to scheduled and manual operations.


Wiser records room, set and outdoor temperatures on a continual basis and makes the data available in the Heat Report. The report is updated daily and a given day's temperature data is available the next day. It is possible to view the report on the basis of day, week and month.

To navigate to the Heat report:

1. Tap **Heat Report (A)**.

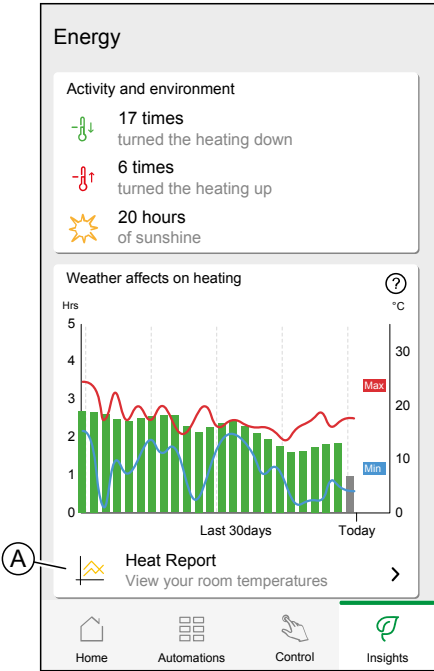

2. Heat Report:

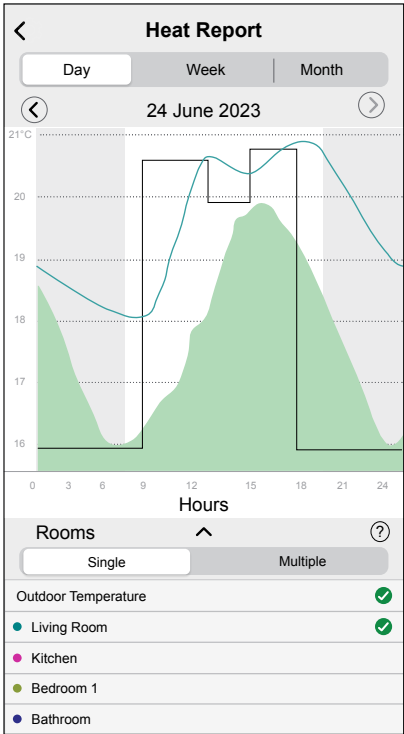

**Single-room view**

When accessed for the first time, the report opens from the single-room view.

This view defaults to display today's room temperature for the first room, as it appears on the Home screen of the app. It also displays the set temperature for the room (always illustrated by a black line).

The outdoor temperature is not displayed by default, but you can choose to view it by selecting it from room selector.


When viewing a single room, it is possible to see how long it takes for the room to heat up or cool down to the set temperature; the black line shows the set (target) temperature, i.e. Wiser’s heating schedule for the room (if in Auto mode) or the manually selected set temperature (if in Manual mode). This line indicates the room temperature that Wiser is regulating at all times.

**NOTE:** The Single room view always displays the set (target) temperature line for a given room. Temporary changes to the set temperature like manual boosts and temperature overrides are also visible on this line.

## Multi-room view

The multi-room view allows for simultaneous viewing and comparing of up to 16 rooms. The outdoor temperature can also be selected/ deselected in this view.

**NOTE:** If only one room is selected in the multi-room view, the black line denoting the set temperature will appear.

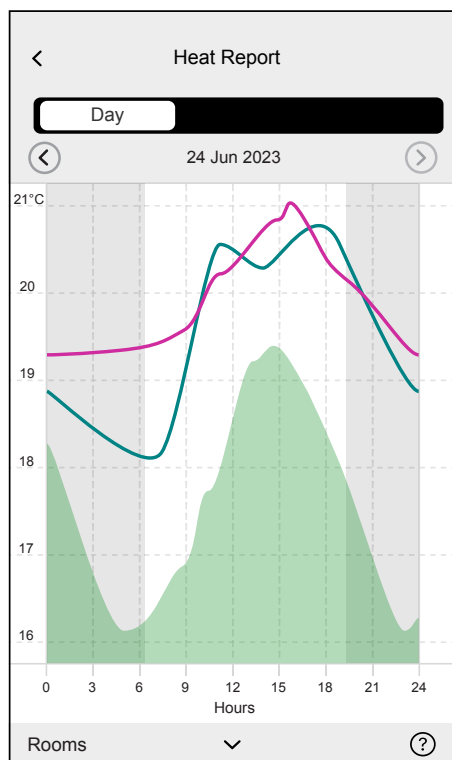


## Monthly view

The monthly view provides a summary of room temperature fluctuations during a given calendar month. All daily temperatures in this view are averaged out due to the screen size.

The outdoor temperature in this view is displayed as a green band indicating the daily min/max temperatures and the range in which the daily temperatures have fluctuated throughout the month.

## Temperature Display


The room name and temperature will appear when a temperature line is tapped. Any area outside the line can be tapped to make them disappear again. It is possible to tap on any point of a temperature line, including the outline of the green outdoor temperature area. Temperature lines can be tapped in all three views (Day/Week/Month).

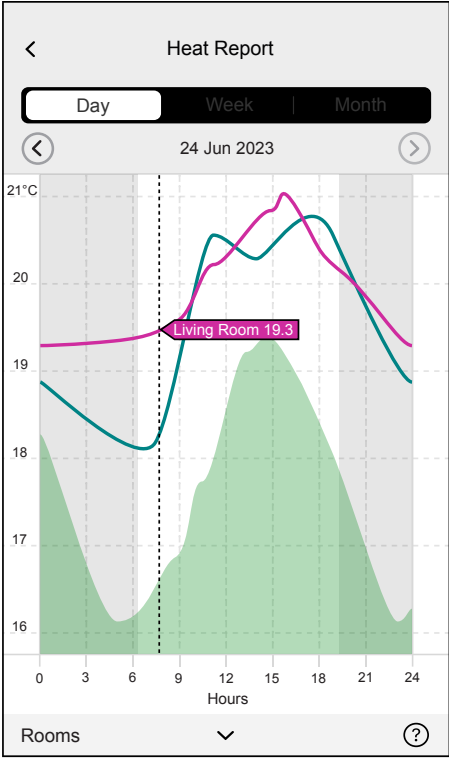


### Missing Temperature Data

Temperature data may be missing from the system at times. This could be due to power failures, no internet connectivity, flat device batteries or poor RF signal. Missing data is denoted by a dotted line connecting the two points between which data is unavailable.

If data is missing for a given date or date range, the question mark on the ROOMS bar is replaced by ⚠️. If data for the date/ range becomes available at a later time, or if the view is changed to another date/range, with no missing data, the question mark will reappear.

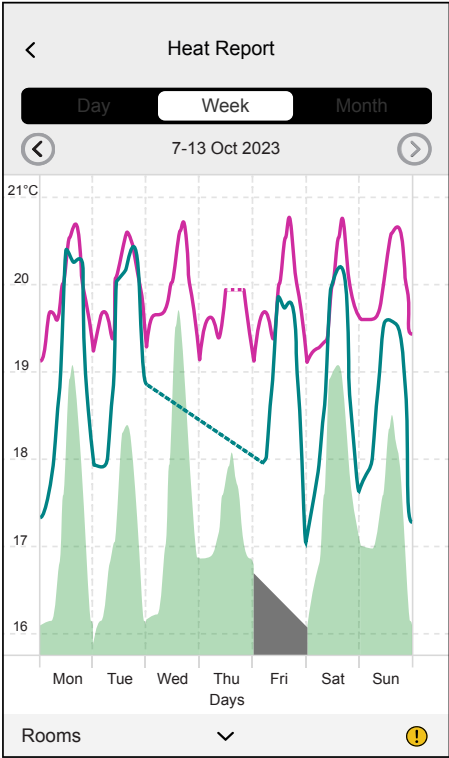

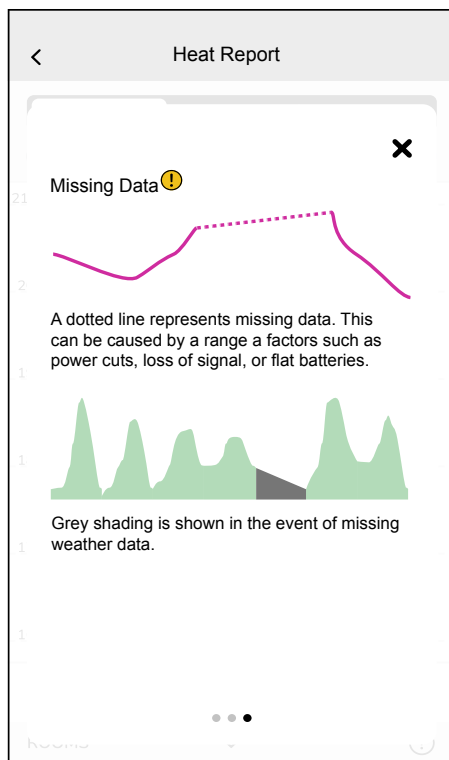

## Energy Centre

If you have grid monitoring device (Powertag E) installed in your grid, refer to Energy Domain with Grid, page 188

If you do not have grid monitoring device (Powertag E) installed in your grid, refer to Energy Domain without Grid, page 194

## Energy Domain with Grid

If you have an energy device installed, like a PowerTag E, the Energy Centre will be available.


In the Energy Centre, you can monitor your energy consumption and production, view detailed history, and get information on energy savings.

**IMPORTANT:** The Wiser system supports the configuration with the following power source combinations where PowerTag Energy sensors are installed.

- Grid
- Grid and Solar
- Grid and Solar, and Battery and Solar (combo).

To navigate to the Energy Centre:

1. Tap  Energy.

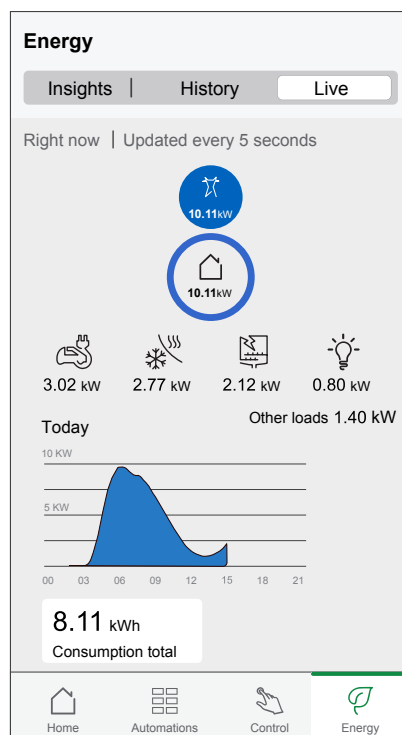

**NOTE:** If you do not have any energy devices installed, like a PowerTag E, Insights, page 181 will be displayed.

**NOTE:** You can find the detailed information in the Device User Guide of the respective device, page 16.


## Live

Provides live data of the grid consumption and live status of where the power is coming from:

- Grid to Home: Import (Home consuming power from Grid)

- Home to Grid: Export (Excess power of Solar production fed to Grid)


On the  page, tap **Live**.

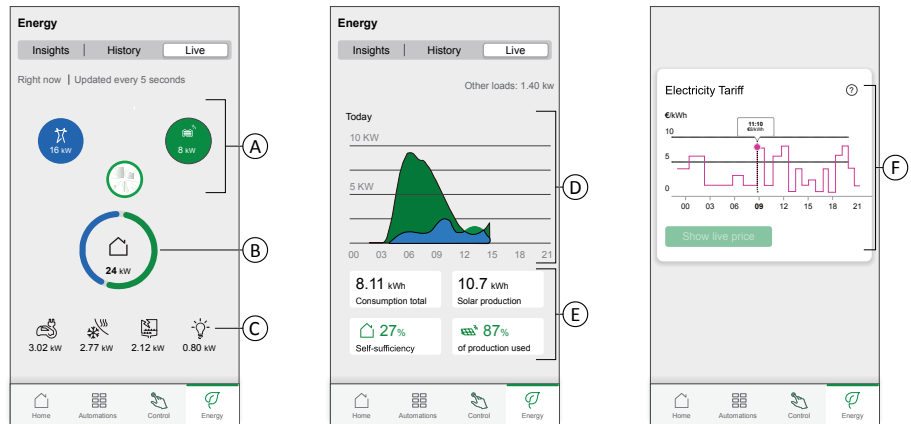

<p><b>A</b></p>	<p>Displays live data on the power generated by various sources, such as grid, solar panels etc.</p> <p><b>IMPORTANT:</b> The live power flow view is intended for quick, real-time checks and not designed to remain open for extended periods. If it stays open for more than a few consecutive minutes, the system will stop updating live data automatically.</p>
<p><b>B</b></p>	<p>Indicates the total energy consumption of the household.</p>
<p><b>C</b></p>	<p>Lists major categories of devices and their real-time power usage in kilowatts (kW), helping you track energy consumption of each device.</p> <p><b>NOTE:</b> If more than four devices are tracked, the energy consumption of the remaining devices will be shown as <b>other loads</b>, representing the total energy consumption of all these devices.</p>
<p><b>D</b></p>	<p>Represents energy production throughout the day. Peaks in the graph indicate higher output during specific hours.</p>
<p><b>E</b></p>	<p>Provides an overview of your household's energy performance for the current day, including both energy usage and solar efficiency.</p> <ul style="list-style-type: none"> <li>• Consumption Total: Represents the total amount of energy consumed by the household.</li> <li>• Solar Production*: Indicates the total energy generated by the solar panels.</li> <li>• Self-Sufficiency*: Shows the percentage of total energy consumption that was covered by self-generated solar power, reflecting how independent the household is from external energy sources.</li> <li>• Production Used*: Indicates the percentage of solar energy produced that was actually used by the household.</li> </ul> <p><b>NOTE:</b> * Indicates that these data are available only for On-Grid solar systems.</p>
<p><b>F</b></p>	<p>Displays the real-time electricity pricing throughout the day. You can interact with the graph to see when the most expensive times are based on your tariff.</p> <p><b>NOTE:</b> This graph is displayed only if you set your tariff to Peak/Off-Peak. Refer to <a href="#">Setting Tariff</a>, page 144.</p>

## Import

Displays how much power you are importing, a breakdown into consumption categories and a consumption timeline.


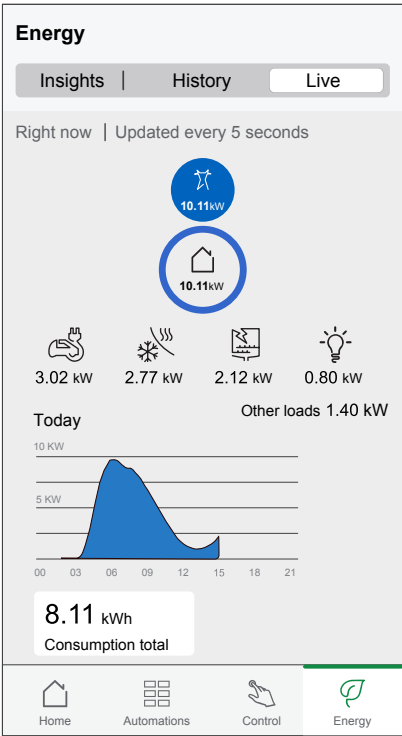


### Import and Export (Applicable for Grid with On Grid solar system)

Displays how much power you are importing or exporting, a breakdown into consumption categories and a consumption time line.

The grid consumption with loads is represented in blue and the excess power of battery and solar is represented in green.

**NOTE:** Scroll down in the app to view the complete graph.

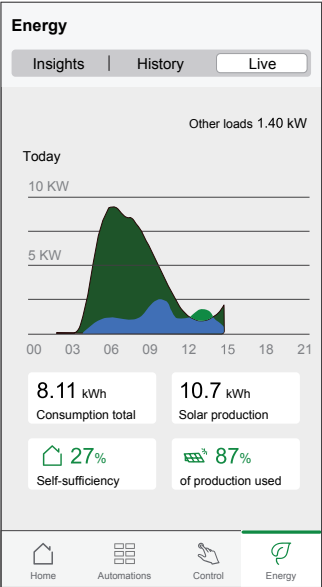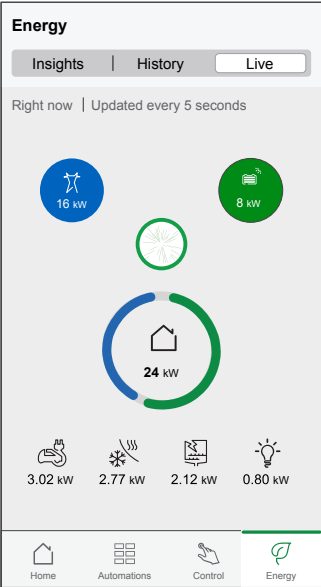


### History


Provides history of power consumed by loads. If there is an existing On Grid solar system, the app provides history of imported and exported energy.


1. On the  page, tap **History**.

- You can change the displayed timeframe (hours, days, months and years), by tapping (A).

**NOTE:** The Grid import is shown in blue and the excess energy of solar and battery is shown in green.

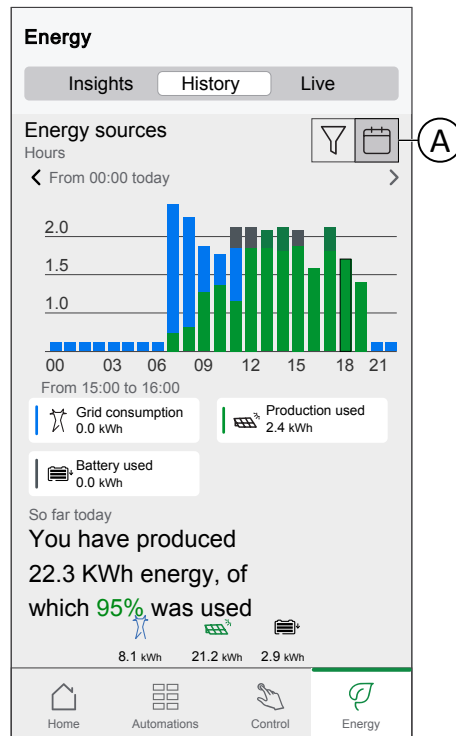

- You can tap  and select **Load consumption** to view the energy consumed by individual loads.
- Tap (A) and select a required time frame.

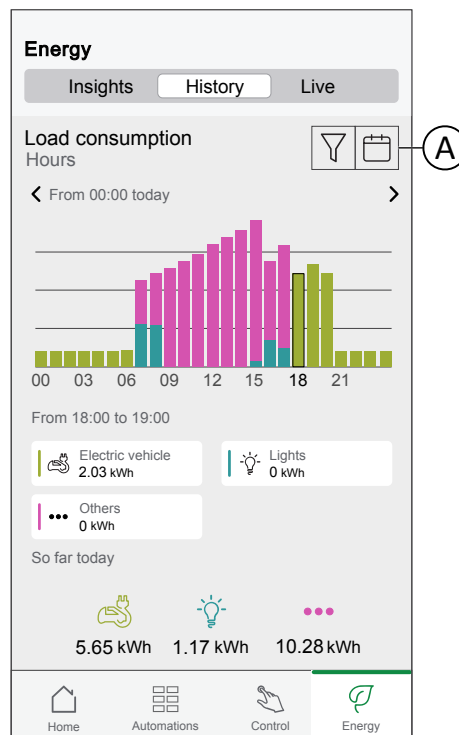


## Insights

The Insights provides information on the annual bill for the tariff set. It helps to keep track of your energy.


**NOTE:** The option to set a tariff is only available if you have an Energy device installed in your home. For more information, please refer to the Device User Guide of the respective device, page 16.

1. For a more detailed overview, tap **Energy costs** (A).

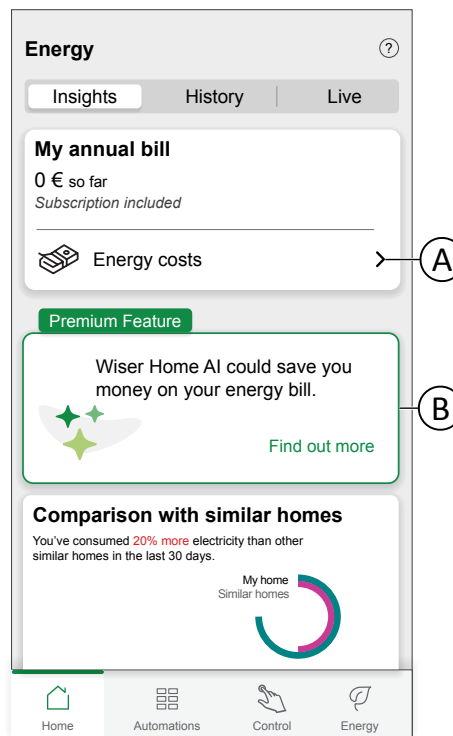


Tap banner (B) to enable Wiser Home AI feature. Wiser Home AI is a feature that allows users to reduce electricity costs by enrolling high energy devices like EV Charger (EVlink Home Smart, Schneider Charge, EV Socket) or resistive Water boilers (controlled with a Wiser Power Micromodule). It relies on users to answer routine questions. Refer to Wiser Home AI, page 198 for detailed information.

2. You can change the displayed timeframe (days, months and years).

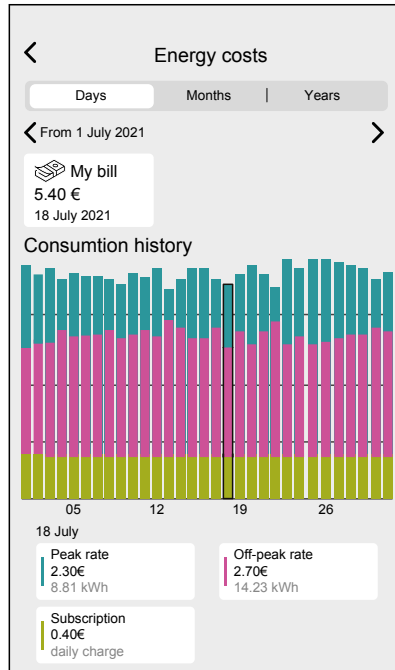

**IMPORTANT:** If you have installed PowerTag on solar or solar with battery **My savings** is available to view savings and earning history.

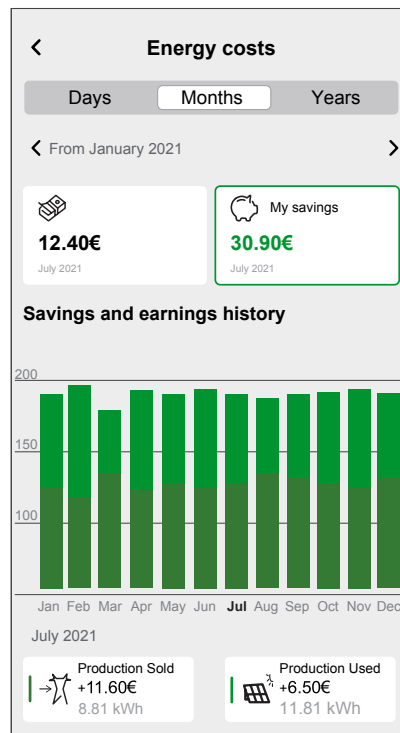

## Energy Domain without Grid

You can monitor your energy consumption and production even without a grid monitoring device (PowerTag E). If standalone energy devices are installed in your home, the Energy Centre will be available to help you manage and monitor your energy usage.

### Standalone Energy Devices:


- EVlink Home Smart
- Mureva EVlink
- Schneider Charge
- Wiser 16 A Relay for Temperature Control
- Wiser Power Micromodule
- Wiser Micromodule for Fil Pilote radiators
- Connected Sockets
- PowerTag Energy
- Wiser Plug


In the Energy Centre, you can monitor your energy production, view detailed consumption history, and track energy costs by entering your tariff.

**IMPORTANT:** The Wiser system supports the configuration with the following energy source and combinations:

- No Sources
- Solar
- Solar + Battery

To navigate to the Energy Centre:


1. On the Home Screen, tap  Energy.

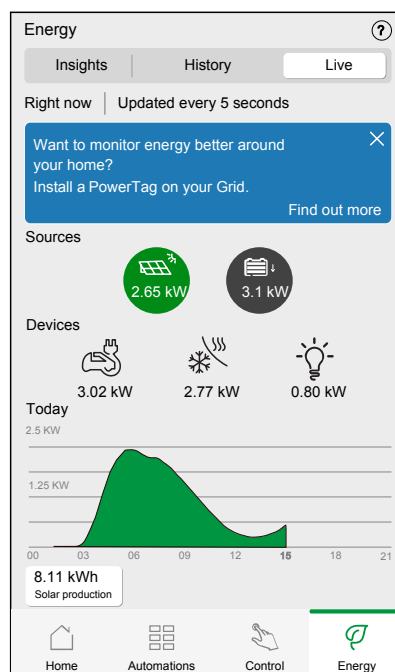

## Live

Provides the live data of the energy production and consumption within your home. It helps you monitor energy sources and understand how much power is being used by various devices.


From the  **Energy** tab, tap **Live**.

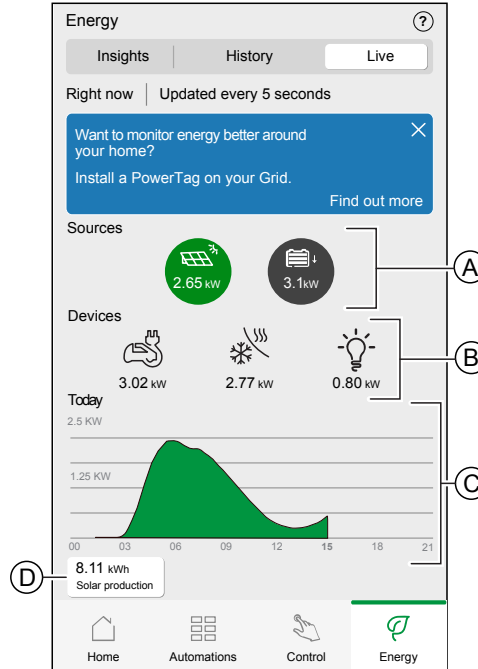

<b>A</b>	Displays live data on the power generated by various sources, such as solar panels. <b>IMPORTANT:</b> The live power flow view is intended for quick, real-time checks and not designed to remain open for extended periods. If it stays open for more than a few consecutive minutes, the system will stop updating live data automatically.
<b>B</b>	Lists major categories of devices and their real-time power usage in kilowatts (kW), helping you track energy consumption of each device. <b>NOTE:</b> If more than four devices are tracked, the energy consumption of the remaining devices will be shown as <b>other loads</b> , representing the total energy consumption of all these devices.
<b>C</b>	A graph represents energy production throughout the day. Peaks in the graph indicate higher output during specific hours.
<b>D</b>	Displays the total energy generated by each energy source for the current day, measured in kilowatt-hours (kWh).
<b>NOTE:</b> If there are no source available such as solar, battery etc., A, C, and D will not be available.	

## History


Provides a history of energy sources and energy consumption on an hourly, daily, monthly, and yearly basis, allowing you to track energy usage patterns over time. It also provides a detailed breakdown of energy consumption, enabling you to monitor the usage of individual devices within your system.

1. On the  **Energy**, tap **History** to display the **Energy sources**. This will show you the total energy generated and consumed.

**NOTE:** If no energy sources are being tracked, the energy sources data will not be available.


2. To change the displayed timeframe (hours, days, months, or years), tap **(A)**.

**NOTE:** Green bars indicate solar production and gray bars show battery usage.

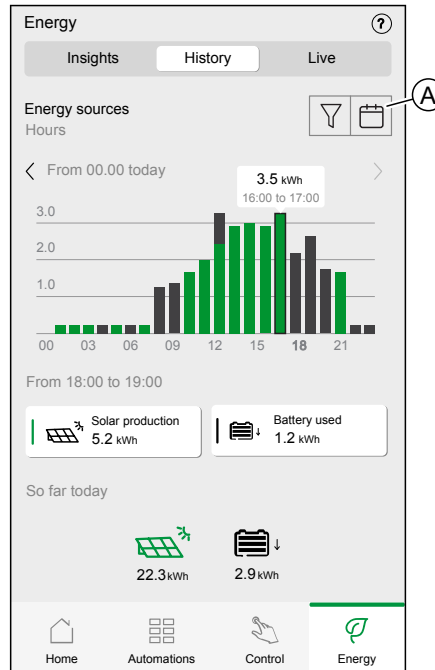

3. Tap  and select **Load consumption** to view the energy consumed by individual loads.

4. Tap (A) again to select a required timeframe.

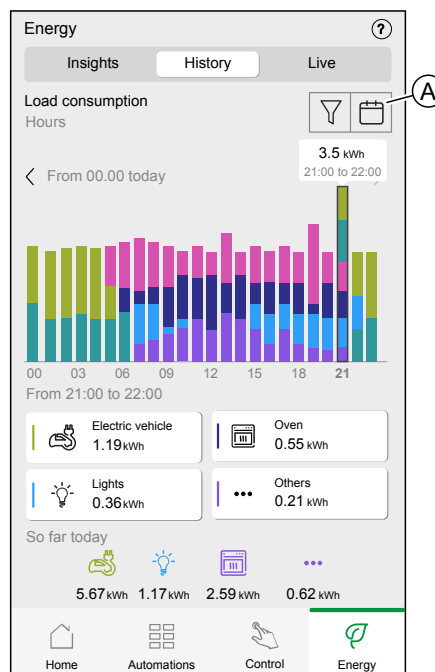



## Insights

The Insights provides an overview of your energy usage, savings, and patterns that impact your energy efficiency.



1. From the Home screen, tap Energy.

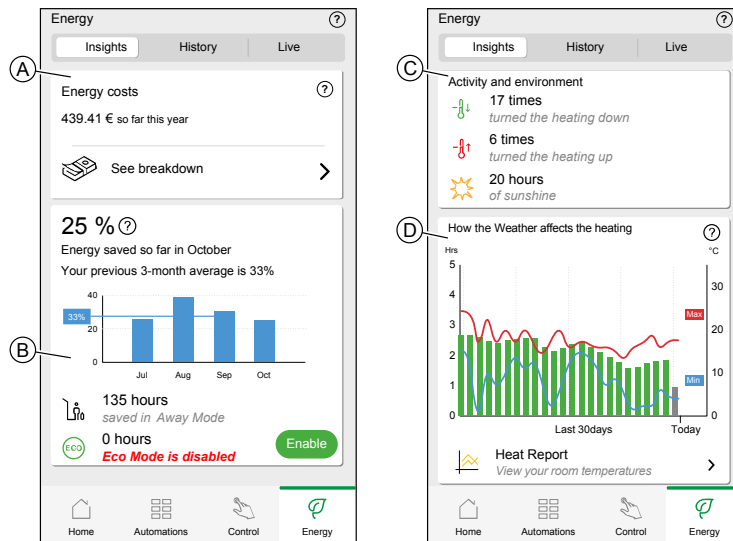
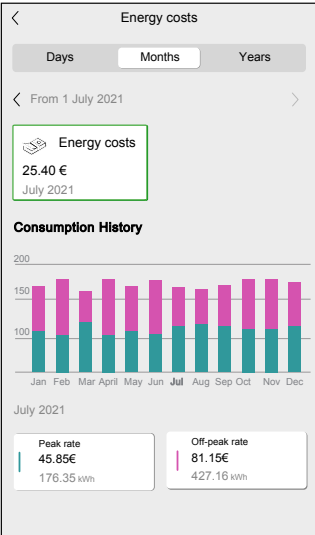
<p><b>A</b></p>	<p>Displays the total energy cost for the current year. Tap <b>See Breakdown</b> for detailed cost analysis.</p>  <p><b>NOTE:</b> You can change the displayed timeframe (days, months and years).</p>
<p><b>B</b></p>	<p>Shows the percentage of energy saved for the current month, along with a 3-month average comparison. It also provides data on hours saved in <b>Away Mode</b> and allows you to enable <b>Eco Mode</b> for additional savings.</p>
<p><b>C</b></p>	<p>Tracks adjustments made to heating, including the number of times the heating was turned up or down, as well as environmental factors like hours of sunshine, which may impact energy needs. Refer to <i>Weather and Heating</i>, page 183 for detailed information.</p>
<p><b>D</b></p>	<p>A graph shows how external temperatures have affected heating usage over the past 30 days. Tap <b>Heat Report</b> to view temperature data for each room in your home. Refer to <i>Heat report</i>, page 183 for detailed information.</p>
<p><b>NOTE:</b> B, C, and D will not appear if you do not have heating devices installed at your home.</p>	

## Wiser Home AI

Wiser Home AI is a feature that allows users to save electricity costs by enrolling high energy devices like EV Charger (EVlink Home Smart, Schneider Charge, EV Socket) or resistive Water boilers (controlled with a micromodule). It is used with the tariffs supported by our system (flat, peak/off-peak) and is intended for users with solar panels only.

### How it works:

1. Answer a few quick questions to set up.
2. Wiser Home AI creates smart schedules for your enrolled devices
3. It limits usage when electricity prices are high, while respecting your habits.
4. The system adapts based on your last 30 days of electricity usage.



### Benefits:

- By activating this feature, you can save up to 25% on your electricity bill.
- Your savings will be monitored on a daily, monthly and yearly basis, ensuring you can monitor your progress effortlessly.

### IMPORTANT:

- The AI system learns from historical data on electricity consumption. It can perform some level of optimization even without pre-existing data, and its effectiveness will improve significantly over time.
- While this feature is active, Wiser Home AI schedules replace any customized schedules.
- You can enroll upto two different devices - 1 EV device and 1 Water Heater.

## Key Features
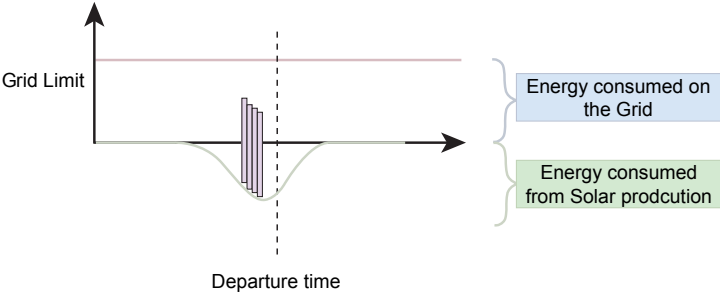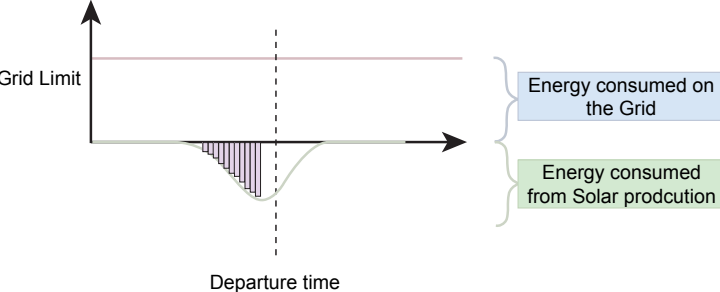
<p><b>AI-Based Real-Time Automations:</b></p>	<p>AI-based real-time automation prioritizes self-consumption first, followed by grid consumption during lower-cost hours. It adapts to your EV and hot water usage habits, maximizing the use of renewable energy and reducing electricity costs.</p>
<p><b>EV Dimming Ability:</b></p>	<p>The system can adjust the charging power of your EV based on excess solar energy production, thereby minimizing charging costs and maximizing the use of renewable energy.</p> <p>The graph below compares system behavior with and without EV Dimming. It illustrates how EV Dimming optimizes performance by prioritizing the most cost-effective energy source.</p> <p><b>Without Dimming:</b></p> <ul style="list-style-type: none"> <li>• The EV charger always operates at maximum power.</li> <li>• If solar production is less than required, the charger pulls the remaining energy from the grid.</li> </ul> <p><b>Result:</b> Mixed energy usage which is partly from solar and partly from the grid.</p>  <p><b>With Dimming:</b></p> <ul style="list-style-type: none"> <li>• The charger adjusts its power to match available solar energy.</li> <li>• It slows down charging to use only solar energy, avoiding grid usage and ensuring the EV reaches the required energy level before its next use.</li> </ul> <p><b>Result:</b> Charging takes longer, but it's 100% powered by solar, reducing electricity costs and increasing sustainability.</p> 
<p><b>Savings Calculation in the Energy Dashboard:</b></p>	<p>The Energy dashboard calculates your savings and tracks your Return on Investment (ROI).</p>
<p><b>Easy Load Activation/Deactivation:</b></p>	<p>Simple on/off button to activate or deactivate loads.</p>

<b>Temporary Override Function (Away Mode):</b>	Overrides the Wiser Home AI function to adapt your home settings when you are away, ensuring energy efficiency even when you're not home.
<b>Notifications for Feature Malfunction:</b>	Notifies you in case of a feature malfunctions.

## Supported devices:

- Power Micromodule (Water Heater)
- EVLink Home Smart
- EV Socket
- Schneider Charge


## Pre-requisite

- Commission one of your PowerTag as Grid. Refer to [Pairing the main device](#) .
- If you have solar panels and want to monitor them, commission your PowerTag for the solar panel. Refer to [Pairing the device with Energy storage system](#) .
  - IMPORTANT:** Solar panel monitoring is mandatory if your tariff is set to Flat , page 146 or Peak/Off-Peak, page 148. Without it, the Wiser Home AI feature will not be available.
- Commission the supported devices. Refer to [Pairing the device](#)
  - Power Micromodule
  - EVlink Home Smart
  - EV Socket
  - Schneider Charge
- Set your tariff according to your electricity contract. Refer to [Setting Tariff](#), page 144.


## Enabling Wisier Home AI

The following is an example of enabling Wisier Home AI with EV Charger and Water heater installed.

To enable Wisier Home AI:

1. On the **Home** screen, tap  Energy.
2. Tap on the banner (A), then tap **Try Wisier Home AI**.

**NOTE:** This feature is currently available as a free preview. It may become a paid feature in the future.

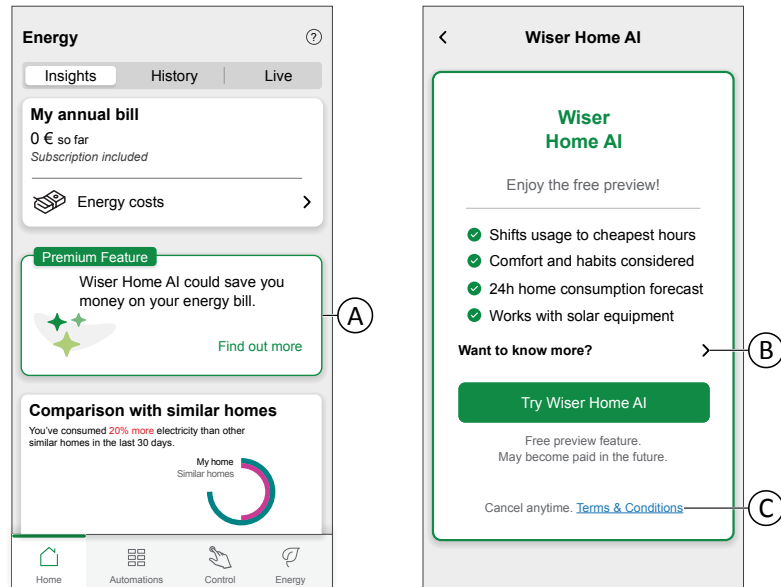

### TIP:

- Tap (B) to understand more about the feature.
  - Tap (C) to read the terms and conditions.
3. Tap **Optimise your Home Profile > Continue** to provide your daily schedule details and set up your profile.

4. Set the time when you want your car to be charged:
  - a. Tap (E), select a time period (F) and tap **Set**.
  - b. Tap (G), select a time period (F) and tap **Set**.

< Home Profile

Step 1 of 3

When do you need your car to fully charged?

On Weekdays  (E)

At Weekends  (G)

Choose Time

07 59  
08 : 00  
09 01 (F)

Cancel Set

5. Tap **Next**.
6. Enter the number of kilometers required to drive this car using the dial pad:
  - a. Tap **On week day**
  - b. Tap **Over the entire weekend**

7. Tap **Next**.


The screenshot shows a mobile application interface for 'Home Profile'. At the top, there is a back arrow and the title 'Home Profile'. Below the title, it indicates 'Step 2 of 3' with a progress bar. A car icon is centered on the screen. The main text asks, 'On average, how many kilometers do you typically drive this car?'. There are two input fields: 'On a Week day' with the value '90 km' and 'Over the entire Weekend' with the value '-- km'. At the bottom, there is a green button labeled 'Next'.


**NOTE:**

- If you have any one of the supported devices commissioned, you will see only the related questions.
- If you have all the supported devices commissioned, you will see all questions related to the devices. Example, if you have both EV Charger and Water Heater, you will see further questions for Water Heater.

8. Enter how many members take showers using the dial pad:
  - a. Tap **In the mornings**
  - b. Tap **In the evenings**

9. Tap **Manage Wisier Home AI**.

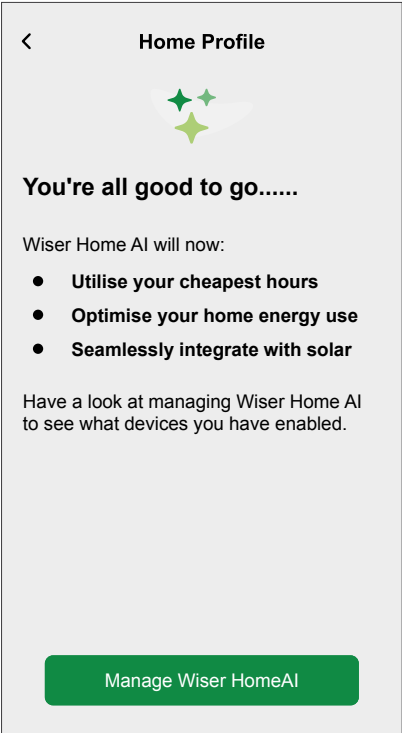


You will be directed to **Manage Wisier Home AI** screen from the  **> Energy Management > Wisier Home AI** to view the devices that are enabled.

## Manage Wiser Home AI

You can enroll/disenroll the devices or edit the home profile whenever required.

1. On the Home screen, tap  > **Energy Management > Wiser Home AI**.

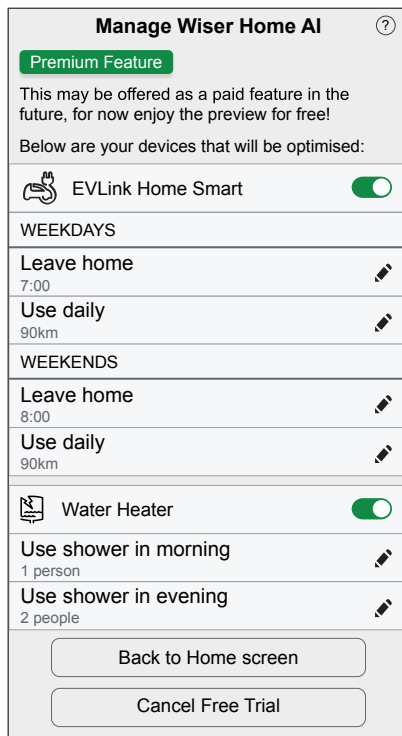


## Enrolling/Disenrolling devices from Wiser Home AI

### Enroll the existing disabled devices to Wiser Home AI:


1. Enable the toggle switch for the devices you want to have this feature.

**NOTE:** You cannot enroll Wiser Home AI to two device of same type. For instance, if you have enrolled 1 EV Charger and 1 Water Heater and you wish to add another EV Charger or Water heater, you must disable the previously enrolled device to enable the new device.

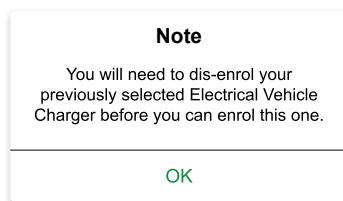

### Dis-enroll the devices from Wiser Home AI:


1. Disable the toggle switch for the devices you don't want to have this feature. A notification window is prompted. Read the information carefully.

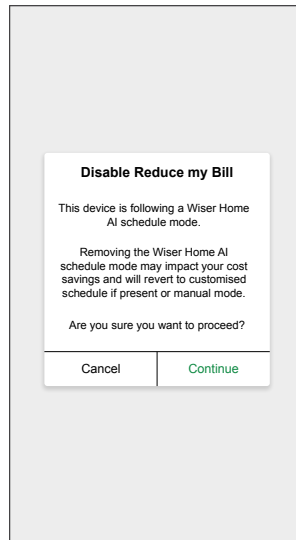

2. If you wish to proceed, tap **Continue**, else tap **Cancel**.

## Changing your Home Profile


If you wish to change your home profile details for your devices:


1. Tap  on the required detail to be updated.
  - **Car Usage**
    - Leave home (time)
    - Use daily (Km)
  - **Hot Water Usage**
    - Use shower in morning (person count)
    - Use shower in evening (person count)

## Disabling Wiser Home AI

To disable Wiser Home AI services:

1. Tap **Cancel Free Trial**.  
A screen will appear to reconfirm your cancellation.
2. If you still wish to cancel, tap **Cancel free trial > Yes > OK**.  
You will be redirected to Home screen.

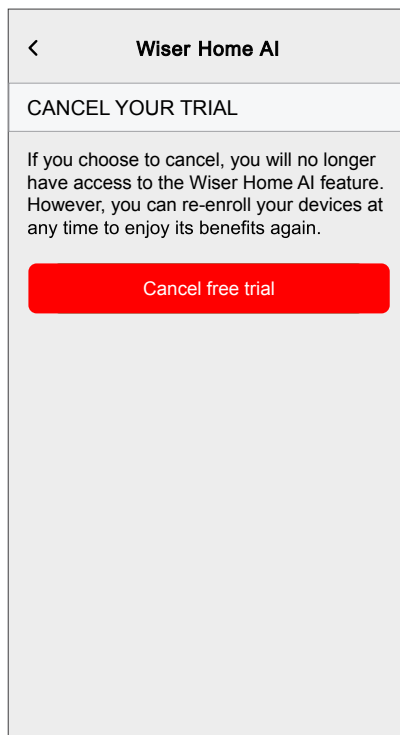


To reactivate the service again, on the Home screen tap  > **Energy Management > Wiser Home AI**. Follow the steps in Item 3. Enable Wiser Home AI, page 201.

# Using Wisier Home AI

Using the Wisier Home app, you can view how the devices are controlled and scheduled for usage.

## Device Control screen


On the device control screen:

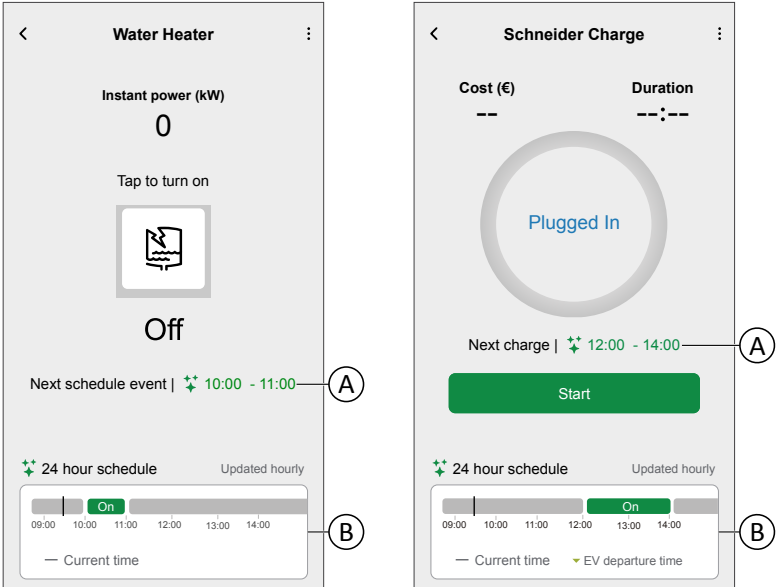


<b>A</b>	Indicates the next scheduled time for the device to switch On.
<b>B</b>	Displays the load activation schedule for the next 24 hours. <b>NOTE:</b> Scroll through the options to view the complete schedule.

## Schedule


You can change the schedule mode to Wiser Home AI any time.

1. Tap  (C) to open the sub-menu.
2. Tap (D) to switch the schedule mode to Wiser Home AI.

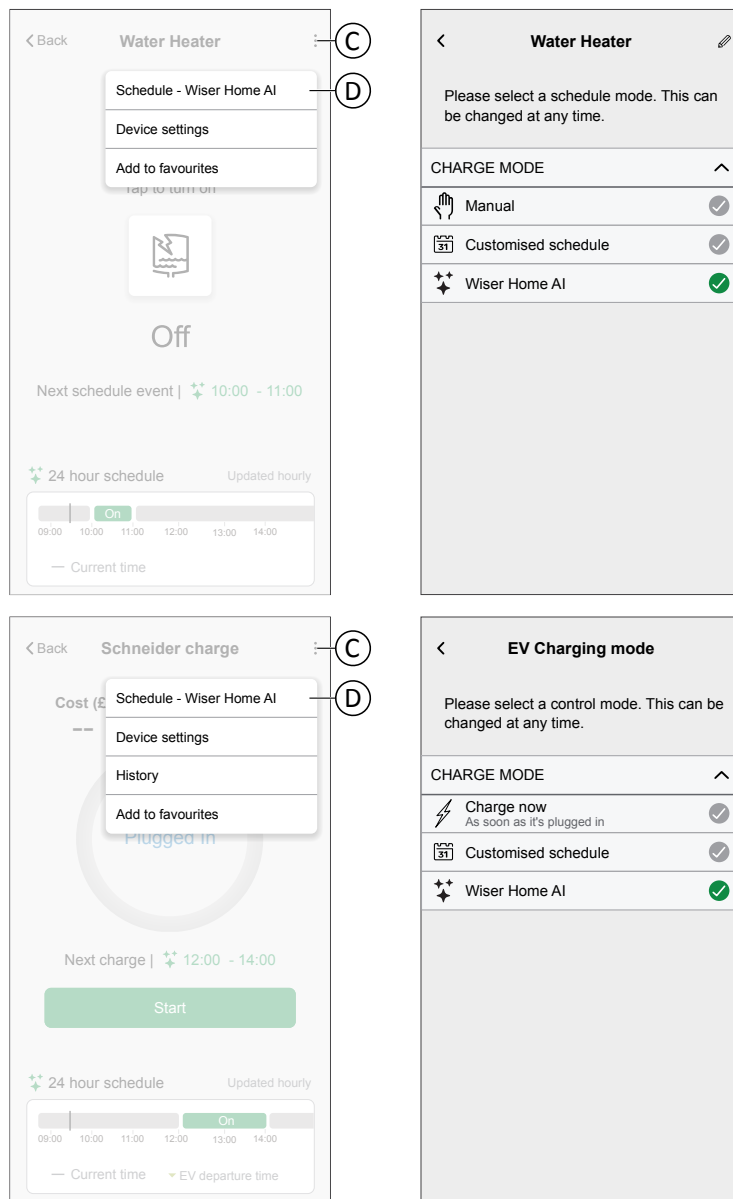

## Away Mode

If you wish to activate Away Mode with Wiser Home AI. Away Mode will override Wiser Home AI commands for smooth home adaptation when you are away. For more information on Away Mode, refer to [.Away Mode, page 131](#)

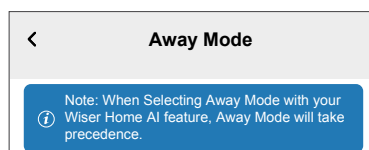


# Insights



In **Energy > Insights** you can find details about the upcoming schedule for your Wiser home AI enabled devices.

**NOTE:** (E) Provides real-time alerts and recommendations to notify you of any irregularities, feature malfunctions, or optimization opportunities. These notifications help you take timely action, ensure maximize overall performance and energy efficiency.

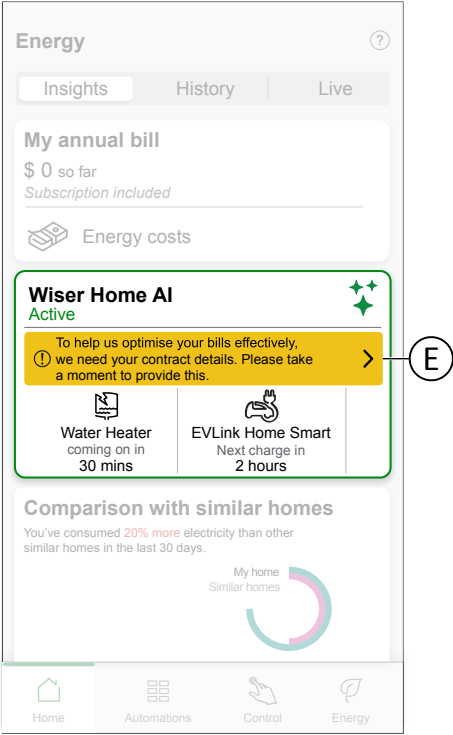

To view how much money is saved through Wiser Home AI, refer to Insights, page 192.

**NOTE:** Savings will be shown as per what offer you have opted.

## Anti-Tripping Management

The Anti-Tripping Management prevents the circuit breaker from tripping by switching off the load (e.g. Water Heater, Schneider Charge) or reducing the power of the load. This keeps the total consumption of the system under a defined limit. The limit value is set by your Contract limit, refer to [Setting Tariff](#). Devices that are eligible will be added automatically to the Anti-Tripping Management.

**IMPORTANT:** When a device is managed by the Anti-Tripping management, the Schedules, Moments and Automations for that device are not executed.

**NOTE:** Maximum of 8 devices can be added.

### Supported devices:

- Power Micromodule (Water Heater)
- EV Socket
- Smart Plug
- Connected Sockets
- Schneider Charge

### Pre-requisite:


- Configure one of your PowerTag as Grid. Refer to [Pairing main PowerTag](#).
- Set the Contract limit.  
A default contract limit is automatically set when pairing the main **PowerTag** as **Grid**. You can change the contract limit later if the Grid value set during the PowerTag installation does not match the tariff, refer to [Setting Tariff](#).
- Pair the supported devices. Refer to [Pairing the device](#) (based on what devices you have installed) - Power Micromodule, EV Socket, Smart Plug, Connected Socket, Schneider Charge.


**IMPORTANT:** For pairing Wi-Fi® devices such as the Schneider Charge , make sure the device and the hub are connected to the same Wi-Fi® network.

**NOTE:** For the Anti-tripping management of Schneider Charge using the Anti-tripping module, refer to the respective device user guide.

## Enabling Anti-Tripping Management


Once the prerequisites are completed, user gets notified that this feature is available. The **Anti-Tripping** screen appears on the **Home** screen.

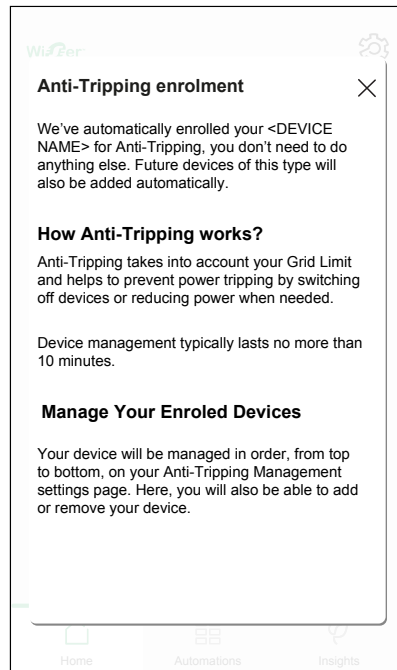


1. Read the feature update and swipe to navigate to next screen.
2. Tap  to close the overlay screen.
  - The supported devices will be enrolled automatically.

## Disabling Anti-Tripping Management


The Anti-Tripping Management feature for the supported devices can be deactivated at any time.

1. On the **Home** screen, tap  > **Energy Management** > **Anti-Tripping Management**.


2. Tap the toggle switch (A) for the devices you want to disable.

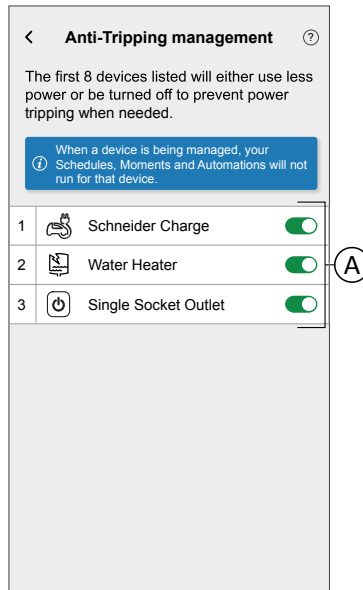



If the device is currently in use, a notification will prompt you that deactivating this feature may cause your power to trip. Tap **Continue** to disable.

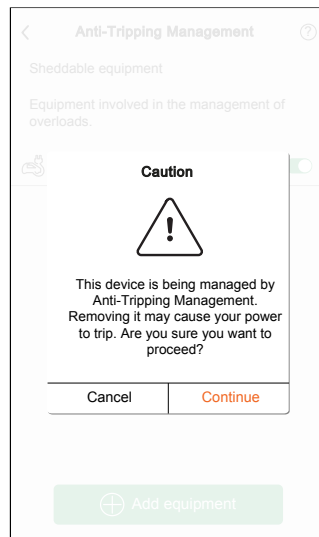


## Activation status

On the control tab and device control screen,  (A) denotes the Anti-Tripping management status.


- The devices will typically be off for upto 10 minutes. It will restart automatically when power is available.
- If you wish to turn on the device on the control tab or Device control screen, a **Caution** window is prompted that the device is being actively managed. Read the information and tap **Go to settings** and disable the toggle switch to remove the device from the Anti-Tripping Management.

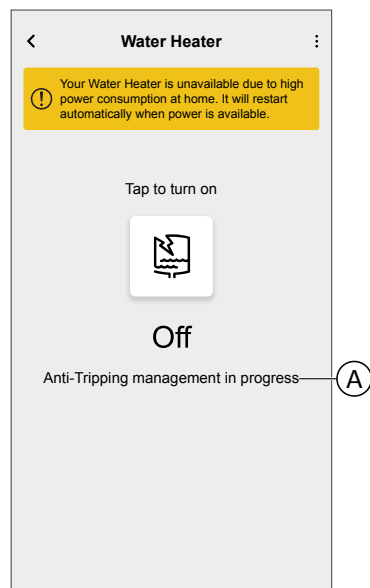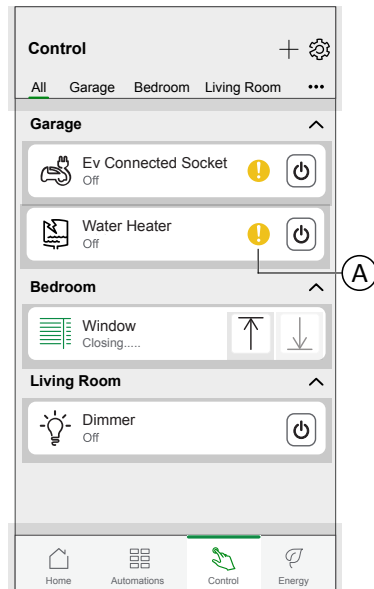

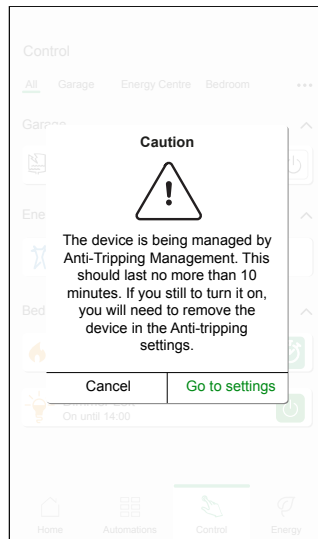


## Live status

When the Anti-tripping feature is active for any device, the load shedding (A) is shown in the **Live** tab.

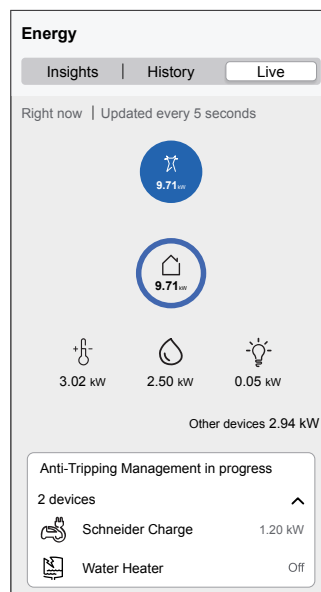

## Troubleshooting

Error	Possible cause	Solution
 <b>Algorithm is currently unavailable</b> displayed in the <b>Live</b> tab.	<ul style="list-style-type: none"> <li>The device is offline.</li> <li>System/Hub is unable to receive data from the device.</li> <li>Technical issue.</li> </ul>	Restart your Hub. If the problem still persists contact your installer or visit <a href="#">Help and Support</a> and select your country.

## EcoWatt

The EcoWatt signal is the “weather forecast” of the Grid for France.

**NOTE:** Here Grid refers to the main electrical grid that provides the generated electricity to the distribution unit connected to our homes.

It gives out 3 different levels of status, at the national level, updated every hour, with 48 hours forecast data. EcoWatt allows you to know the moments when eco-gestures have the greatest impact on the electrical system.


**IMPORTANT:** EcoWatt feature is applicable only for customers in France.

### Features of EcoWatt:

- Send notifications about the grid status.
- Send alerts if there is a risk of power cut.
- Provides eco-gestures to consume better electricity.
- Helps to save electricity during periods of high consumption.
- Allows to view daily electricity consumption impacted by weather.
- Helps to reduce energy consumption and avoid critical tension on Grid.

Once the Wiser Home app is updated, user gets notified that this feature is available. The **Ecowatt** screen appears on the **Home** screen.


1. Read the feature update and swipe to navigate to next screen.
2. Tap **X** to close the overlay screen.

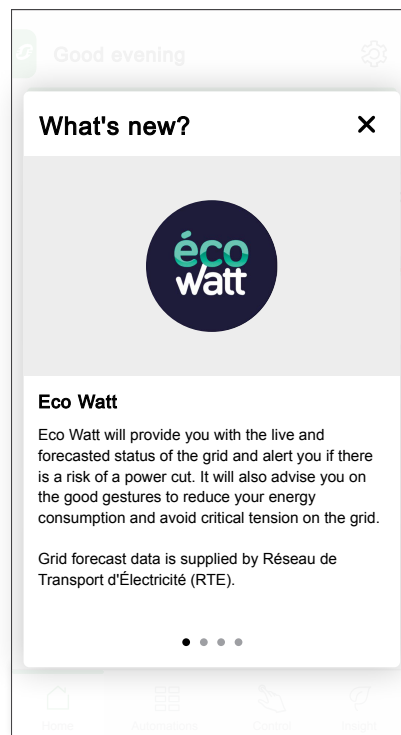


Any one of the following **National Electrical Grid** status appears on the **Home** screen:

- **Green (A):** The electrical grid is operating normally.
- **Amber (B):** The electrical grid is tensed and eco-gestures are highly recommended.
- **Red (C):** The electrical grid is tensed and there is not enough electricity to fulfill France's needs. Everyone should reduce their consumption.

Tap the **National Electrical Grid** status. In this example (B) is selected.

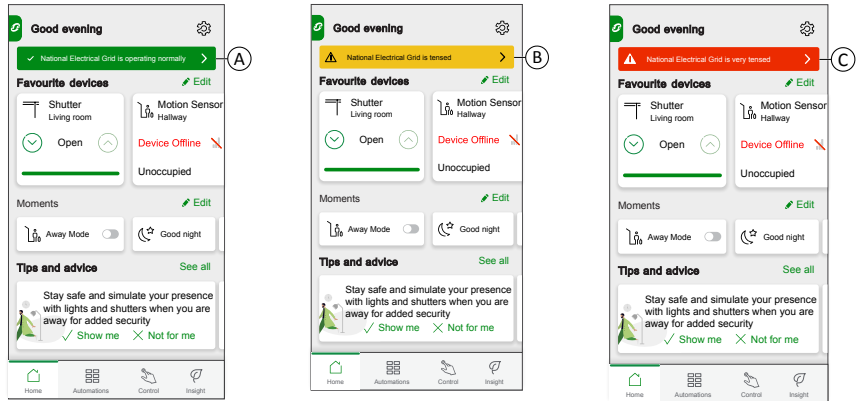


3. The forecast and eco-gesture details are shown. Tap (D) or swipe to navigate between days.
4. Scroll down to view the devices that can be consumed at the best time and energy saving tips (E).

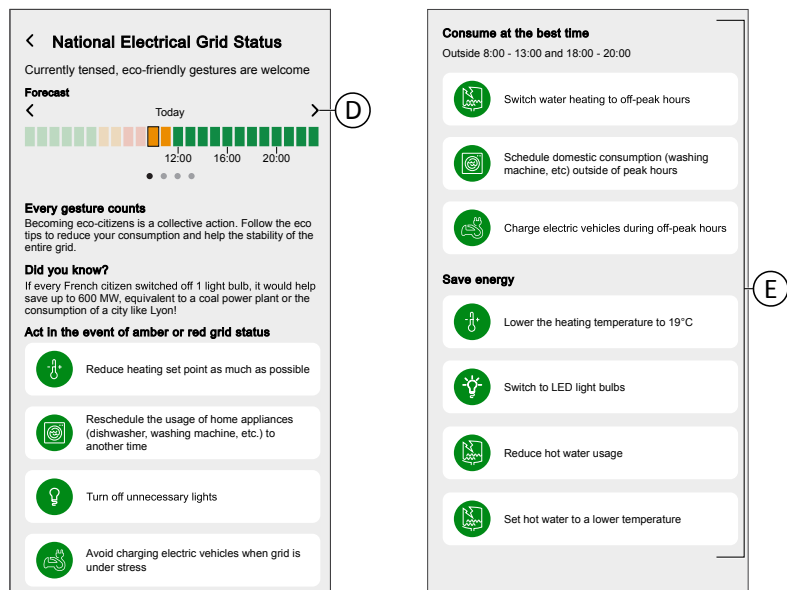


5. Follow the eco-gestures based on the grid status (amber or red) that apply to your home to consume better electricity. Example, turning off unnecessary lights, lowering, the heating temperature to 19°C.

## Setting EcoWatt alerts

You can set the alert type of your choice.


1. On the **Home** screen, tap  > **Account** > **Notifications and Alarms** > **National Electrical Grid Status**.
2. Enable/Disable the toggle switch (A) to set the notification of your choice.

**NOTE:** All notifications are enabled by default.

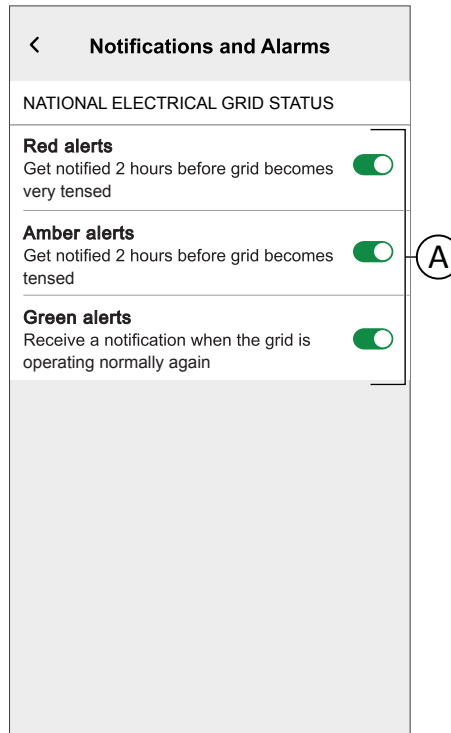

## Disabling EcoWatt status


You can disable the EcoWatt status on the **Home** screen if not required.

1. On the **Home** screen, tap  > **Settings** > **Home Screen**.
2. Tap the toggle switch (A).

A notification window is prompted.

3. Tap **OK** on the notification window.

**NOTE:** You can enable the toggle switch whenever required. After you disable this feature, you can still get tips from push notifications, but you don't have the status displaying in the **Home** screen. This is a reminder that you've disabled the feature.

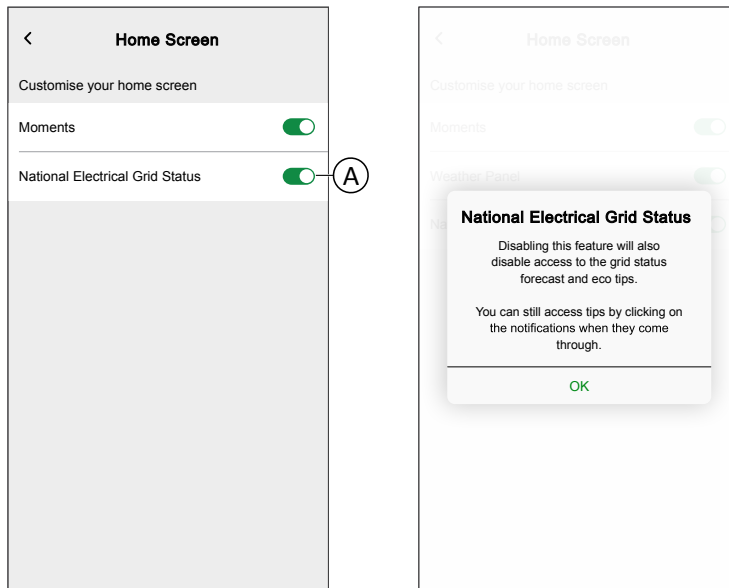





# Additional Information

## About Signal Strength

Zigbee® signal strength or RSSI (Received Signal Strength Indicator) indicates the signal quality between your devices and the Wiser hub. The Closer the RSSI value is to 0, the better the signal. For example, an RSSI of -50dBm is a good signal, while an RSSI of -80dBm indicates poor signal.

## Signal Strength Indicator

There is four different levels of signal strength:

-  Good Signal (between 0 & -54dBm)
-  Normal Signal (between -54 & -79dBm)
-  Poor Signal (<-79dBm)
-  No Signal (device is offline)

## Cause of Poor Signal

Connectivity issues can be caused by various factors, such as:

- **Distance between the hub and devices** - the signal becomes weaker as the devices move farther apart.
- **Physical Obstructions** - doors, walls, furniture, household appliances, especially with metal surfaces, and other electronic devices can weaken the Zigbee® signal.

## Troubleshooting

1. Place the hub into open space.
2. Make sure you check if all powered devices are switched on and working normally.
3. If possible, move the Wiser Hub closer to the device with signal issues.
4. Try to remove any physical obstructions between the Wiser Hub and the device with poor or no signal.
5. For battery-powered devices, check the battery level and replace the batteries if necessary.

## Signal Extender

If you are still experiencing connectivity issues, we recommend adding Wiser smart plug to your system. It has a built-in signal range extender that boosts the signal between your devices and the hub.

### Discover Extenders:

For France: <https://www.se.com/fr/fr/product/CCTFR6500/wiser-prise-connect%C3%A9e-r%C3%A9p%C3%A9teur-zigbee-13a/>

## Help & Support

If you require further assistance, visit our Support Pages.

**Help & Support:**

For France, Visit: <https://www.se.com/fr/fr/work/support/>

## Understanding Control Mode Priorities

In device management, it is necessary to prioritize different control modes to regulate the operation of devices. This section determines which control actions take precedence over others help provide safer, more efficient and user friendly installations.

### Anti-Tripping Management (Highest Priority)

The Anti-Tripping Management prevents the circuit breaker from tripping by switching off the load or reducing the power of the load. When the total power consumption in a household approaches or exceeds the maximum allowable limit, Anti-Tripping Management takes control to reduce or turn Off certain devices temporarily. The Anti-Tripping is given highest priorities and overrides any other actions such as manual override and predefined schedule.

**NOTE:** Anti Tripping Management is applicable only for EV charger, Power Micromodule (water heater), Smart Sockets and Smart Plug.

**Scenario 1:** Your home operates multiple high-power devices running simultaneously, such as air conditioning and an electric oven. Consider that the maximum allowable power is 40 amps and other devices are using 30 amps. You have scheduled the EV charger to turn On at the same time.

**Response:** The charger temporarily adjusts its consumption to 10 amps to prevent overloading the electrical circuit. It resumes normal charging once the load decreases.

**Scenario 2:** Your home operates multiple high-power devices simultaneously, such as air conditioning and an electric oven. Consider that the maximum allowable power is 40 amps and is already consumed. You have scheduled the EV charger to turn On at the same time.

**Response:** The charger will not activate. Instead, it will notify you that charging is unavailable due to excessive power consumption in your home and resumes normal charging once the load decreases. Refer to *Anti-Tripping Management*, page 211 for detailed information on Anti-Tripping management.

### Manual Override

Manual override refers to a user-initiated action that temporarily changes the current settings or behavior of a device, overriding any pre-existing schedules or automated controls in place at the same time. It is considered an override if the device has a predefined schedule that is active. This is typically the most recent action triggered on the device, such as setting the device to away mode, changing the settings manually, or activating specific moments. However, if the Anti-Tripping Management is activated due to high power usage, it will override the manual override to prevent overloading of electrical system.

**Scenario 1:** The charger is scheduled to start at 10 PM. At 6 PM, you manually start charging the EV charger due to a low car battery and the need for the car to be charged as soon as possible.

**Response:** The manual override takes precedence over the scheduled charging time and EV charger starts charging right away, overriding the predefined off-peak schedule until the next trigger.

**Scenario 2:** The living room lights are On as per the schedule from 7 PM to 11 PM. At 8 PM you want to watch a movie and activate a Moment such as Movie Night (in which the living room lights are set to Off).

**Response:** The living room lights will be turned Off until the next trigger.

**Scenario 3:** The heating system is scheduled to turn On at 6 AM and set the temperature to 22 °C, turn off at 8 AM, Turn On again at 6 PM to 22 °C and turn Off at 10 PM. Consider that you feel cold and you manually set the heating system to 24 °C at 5 AM.

**Response:** The manual override takes precedence over the predefined schedule, changing the temperature to 24 °C until the next trigger.

## Pre-defined Schedule (Lowest Priority)

Pre-defined schedules are user-defined times such as automations, regular recurring schedules or system-optimized schedules (for example Wiser Home AI) for energy efficiency and convenience. The Pre-defined schedules are considered as lowest priority and will be overridden by manual override and Anti-Tripping management.

**Scenario 1:** Your EV charger is scheduled to Wiser Home AI. That is EV charger will automatically charge at the Wiser Home AI charge period for example from 8 PM to 10 PM. During this period the total power demand exceeds the household limit.

**Response:** To prevent tripping the circuit breaker, Anti-Tripping Management is activated, and the EV charger is temporarily turned Off or reduced to prevent overload, thereby overriding the Wiser Home AI schedule.

**Scenario 2:** You have a predefined schedule for your living room light to turn on every day at 6 PM and turn off at 10 PM. You have also set the living room light to turn Off when in away mode. At 7 PM, you leave home unexpectedly and activate Away Mode for an emergency.

**Response:** The Away Mode overrides the predefined schedule and turns Off the living room light until the next trigger.


## Changing home Wi-Fi login information

If you have made changes to your home Wi-Fi®, you need to apply those changes to the hub.

The Wiser app will detect that the connection to the hub is lost and suggest solutions.

To change the Wi-Fi® information in the hub:

1. Tap **I've changed my Wi-Fi router** (A).

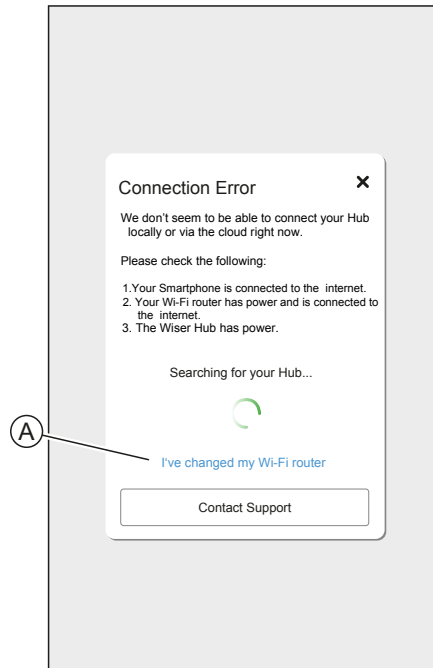



The app will guide you through the process of selecting a Wi-Fi® network and entering the password.

# Troubleshooting

This topic explains the solutions to problems with the system, devices and configuration settings.

## HUB

Symptom	Possible cause	Solution																																				
Not able to perform offline firmware update.	The older app versions do not support offline updates.	Update the app to version 7.4.0.																																				
	Offline updates will not work on hubs running a version below 4.42.28.	Complete the commissioning process and allow the firmware to update automatically.																																				
	Offline updates will fail if the screen gets locked during the firmware updating process.	Make sure the screen remains unlocked during the updating process. You can set your phone's Auto-Lock to Never in your device settings.																																				
When adding a device, the device is rejected or will not join.	The device may not be supported by the system.	Only use devices listed in <i>List of Wiser Devices</i> , page 16.																																				
The device is not able to connect with the Hub/Hub <sup>R</sup> . After pressing 3 times, the device LED blinks amber for 30 s. 	Pairing mode has changed.	Press the Reset button on the device 3 times then hold for 20 s, until the LED blinks red. The device should reboot into the correct mode. 																																				
The hub is not communicating or receiving updates.	IPv4 is not enabled in the network settings.	Make sure that IPv4 is enabled in your local area network and Internet settings on your Internet provider's router. Systems configured as IPv6-only will impact the hub's ability to communicate and receive software updates.																																				
The system cannot connect to the internet via the Wi-Fi <sup>®</sup> network router.	The router port settings may not be properly set for the system to access the internet.	Check that the following router ports are open: <table border="1" data-bbox="853 1057 1458 1706"> <thead> <tr> <th>Host</th> <th>Protocol</th> <th>Port</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>hub.foundries.io</td> <td>TCP</td> <td>443</td> <td>Docker container registry</td> </tr> <tr> <td>hub-auth.foundries.io</td> <td>TCP</td> <td>443</td> <td>Docker registry authentication service</td> </tr> <tr> <td>storage.googleapis.com</td> <td>TCP</td> <td>443</td> <td>OSTree and Docker redirects</td> </tr> <tr> <td>api.foundries.io</td> <td>TCP</td> <td>443</td> <td>If using Imp-device-register</td> </tr> <tr> <td>app.foundries.io</td> <td>TCP</td> <td>443</td> <td>If using Imp-device-register</td> </tr> <tr> <td>cnm-ih-na.azure-devices.net</td> <td>AMQP</td> <td>5671</td> <td>Hub to cloud connection</td> </tr> <tr> <td>ota-lite.foundries.io</td> <td>TCP</td> <td>8443</td> <td>Device gateway</td> </tr> <tr> <td>ostree.foundries.io</td> <td>TCP</td> <td>8443</td> <td>OSTree server for updates</td> </tr> </tbody> </table>	Host	Protocol	Port	Description	hub.foundries.io	TCP	443	Docker container registry	hub-auth.foundries.io	TCP	443	Docker registry authentication service	storage.googleapis.com	TCP	443	OSTree and Docker redirects	api.foundries.io	TCP	443	If using Imp-device-register	app.foundries.io	TCP	443	If using Imp-device-register	cnm-ih-na.azure-devices.net	AMQP	5671	Hub to cloud connection	ota-lite.foundries.io	TCP	8443	Device gateway	ostree.foundries.io	TCP	8443	OSTree server for updates
Host	Protocol	Port	Description																																			
hub.foundries.io	TCP	443	Docker container registry																																			
hub-auth.foundries.io	TCP	443	Docker registry authentication service																																			
storage.googleapis.com	TCP	443	OSTree and Docker redirects																																			
api.foundries.io	TCP	443	If using Imp-device-register																																			
app.foundries.io	TCP	443	If using Imp-device-register																																			
cnm-ih-na.azure-devices.net	AMQP	5671	Hub to cloud connection																																			
ota-lite.foundries.io	TCP	8443	Device gateway																																			
ostree.foundries.io	TCP	8443	OSTree server for updates																																			

If you face any issues in commissioning the device, refer to the troubleshooting section of the specific device user guide.

Refer to *List of Wiser Devices*, page 16 for the links to Device user guide for each devices.

# Decommissioning a Wiser System

To remove a device from your Home or prepare the Home for a new user, follow these steps.

- Remove all Devices from the System.
- Reset all Devices to the factory settings.
- Reset the Hub to the factory settings.

**NOTE:** Before an IoT device is permanently removed from your network, a full factory reset must be done to erase all data.

## Removing a device

Possible reasons:

- The Device needs to be replaced.
- The Device is no longer needed in the Wiser System.

Steps:

- Remove the Device from the Wiser System.

Details about this process can be found in [Chapter Device Details](#), page 97

- Reset the Device to the factory settings.

Find the details of resetting the Device in the Device User Guide of the respective Device: [List of Wiser Devices](#), page 16

## Resetting the Wiser System

Possible reasons:

- You are moving out of the house and want to prepare it for the next owner.
- Ownership of the Wiser System is to be transferred to another user.

Steps:

- Reset the Hub.
  - Refer to [Resetting to factory defaults](#), page 52 for Wiser Hub 2nd Generation.
  - Refer to [Resetting to factory defaults](#), page 50 for Wiser HubR 2nd Generation.
- Delete your Account.

## eSetup App

eSetup for Electricians App is the dedicated app for Electricians to configure Smart Home and Smart panel devices.

No need for PC or complex tools to configure smart systems – everything can be done via smartphone, thanks to eSetup for Electricians App

With eSetup for Electricians App you can,

- Commissioning of Wiser products with step by step guidance
- See the complete installation in DEMO Mode (no need of actual devices)
- Define the system and settings of the devices
- Verify and test the installation

Get connected to Bluetooth or Wifi to the product directly. This dedicated application for Electricians is a commissioning tool for Wiser devices in residential and SmartLink, Powertag devices in Small Buildings.

**NOTE:** Not all the wiser devices can be configured using the eSetup app. The app offer the configuration for devices such as Light and Shutter Devices, Evlink Home Smart / Schneider Charge.

## Using the eSetup app

With the eSetup app, you can configure Devices without the need of an internet connection.

Your smartphone will connect to the Device directly.

You can set the Name of the Device and assign it to a Room. Other settings are depending on the individual Devices.

You can test the Devices.

To configure a Device:

1. Choose the Device type (Light and Shutter Devices).
2. Choose the specific Device type, e.g. rotary dimmer.
3. Connect the Device to the app by setting it into pairing mode.  
The app will show you how to set the Device into pairing mode.
4. Set the Name for the Device.
5. Assign the Device to a Room.
6. Test the Device.

Schneider Electric  
35 rue Joseph Monier  
92500 Rueil Malmaison  
France

+ 33 (0) 1 41 29 70 00

[www.se.com](http://www.se.com)

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© – 2026 Schneider Electric. All rights reserved.

System User Guide Wiser Home (France) - 15