

16 A Single Channel Connected Relay Puck

Device user guide

Information about features and functionality of the device.

02/2026

Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.

Table of Contents

| | |
|--|----|
| Safety Information..... | 4 |
| Cybersecurity Principles | 5 |
| 16 A Single Channel Connected Relay Puck | 6 |
| For your safety | 6 |
| About this product..... | 6 |
| Installing the device | 6 |
| Pairing the device | 6 |
| Configuring the device | 11 |
| Renaming the device | 11 |
| Changing the device location | 11 |
| Adding devices to favourites | 12 |
| Removing devices from favourites..... | 13 |
| Creating a schedule | 14 |
| Voltage detection & load cut-off..... | 16 |
| Thermal cut-off value..... | 16 |
| Notifications | 17 |
| Removing the device | 18 |
| Resetting the device | 19 |
| Changing the Wi-Fi access point..... | 19 |
| Changing the Wi-Fi access point while offline..... | 20 |
| Using the device..... | 21 |
| Switching On/Off the device manually..... | 21 |
| Switching On/Off the device using the app | 21 |
| Rooms | 22 |
| Notifications | 26 |
| History | 26 |
| Energy | 27 |
| Creating an action..... | 28 |
| Automation (Trigger) | 32 |
| LED indication..... | 36 |
| Troubleshooting | 37 |
| Technical data | 37 |
| Trademarks..... | 38 |

Safety Information

Important Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that accompany this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

Failure to follow these instructions will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Cybersecurity Principles


Following these cybersecurity principles may help to reduce the risk of cyber threats to the network where your system is installed.

- **Strong and Unique Passwords:** Use strong, unique passwords for your mobile app account and each connected device. Avoid using common or easily guessable passwords. Consider using a password manager to securely store your passwords.
- **Regularly Update Software:** Keep your mobile app, smartphone operating system, and smart home device firmware up to date. Updates often include security patches that address vulnerabilities and protect against potential threats.
- **Secure Network:** Ensure that your home Wi-Fi® network is secured with a strong password and encryption (WPA2 or higher). Avoid using public Wi-Fi® networks when interacting with your smart home app as they may be insecure and expose your data.
- **Two-Factor Authentication (2FA):** Enable 2FA if your smart home app supports it. This adds an extra layer of security by requiring a second verification step, such as a unique code sent to your mobile device, when logging in.
- **Only Download Official Apps:** Use official app stores (such as Google Play Store or Apple App Store) to download the mobile app for your smart home solution. Avoid downloading apps from unofficial sources, as they may contain malicious software.
- **Be Cautious with Permissions:** Review the permissions requested by the app during installation. Grant only the necessary permissions required for the app to function properly. Be cautious about granting unnecessary access to your device's location, camera, or microphone.
- **Regularly Review Connected Devices:** Periodically review the list of connected devices in your smart home app. Remove any devices that are no longer in use or unfamiliar to you, as they may pose a security risk.
- **Regularly Monitor Activity:** Keep an eye on the activity logs or notifications provided by the smart home app. Look for any suspicious or unauthorized access attempts, and report them to the app provider immediately.
- **Secure Physical Access:** Ensure that your smartphone and other devices used to control your smart home are protected with a lock screen or biometric authentication. This helps prevent unauthorized access in case of loss or theft.
- **Educate Yourself:** Stay informed about the latest cybersecurity best practices and potential threats related to smart home devices. Regularly update your knowledge to make informed decisions and protect your smart home ecosystem.

Decommissioning a device

If you remove a device from your system to gift, resell, or otherwise dispose of, first remove any personally identifiable information from the device by performing a factory reset. This is especially important when decommissioning a system gateway. Refer to the particular device instructions for information on how to perform a factory reset.

16 A Single Channel Connected Relay Puck

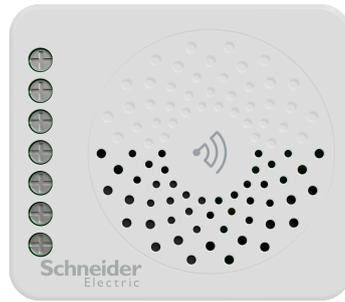

CDWRLY1CH16A

For your safety

⚡⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Safe electrical installation must be carried out only by skilled professionals. Skilled professionals must prove profound knowledge in the following areas:

- Connecting to installation networks.
- Connecting several electrical devices.
- Laying electric cables.
- Safety standards, local wiring rules and regulations.

Failure to follow these instructions will result in death or serious injury.

About this product

The Single Channel Connected Relay Puck (hereinafter referred to as the puck) is a miniature micro-module designed for remote control and operation on AC mains. It enables remote switching of electrical appliances with a capacity of up to 16 A. The puck can be operated via the Wiser app, an existing conventional or bell switch, or by voice command (Alexa and Google Home).

Installing the device


Refer to the installation instruction supplied with this product.
See 16 A 1/2 Channel Connected Relay Puck.

Pairing the device


Connect your mobile device with your home Wi-Fi network and use the Wiser app to access and control it.
To pair the device:

IMPORTANT: Before pairing the device, connect your mobile to the home Wi-Fi network.

1. Open the Wiser app.
2. On the **Home** page, tap **Devices (A)**.

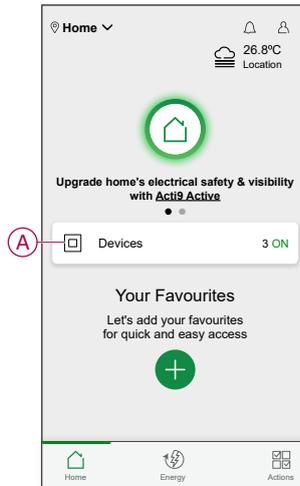

3. Tap **+** (B) to add a device.

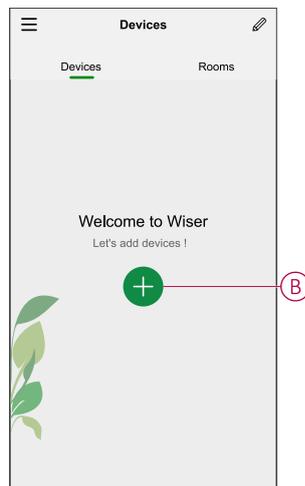


The **Add Device** page appears.

4. The **Add Device** page includes the following tabs:

- **Preferred (C):** This tab allows you to select a device directly from the preferred list.
- **All (D):** This tab includes all available devices for you to select from.


TIP: You can select a device from either tab based on your preference.

- Select **Preferred** >  **Single In-Wall Relay**.
- Select **All** > **Switches and Controls** > **Wi-Fi Switches and Controls** >  **Single In-Wall Relay**.

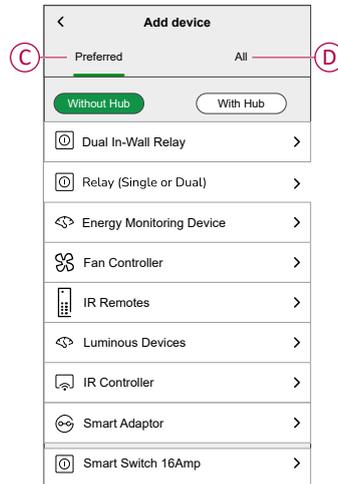

5. Select any one of the following switch types based on your preference and tap **Save (G)**:


- **ON/OFF Button (E)**
- **Push Button (F)**

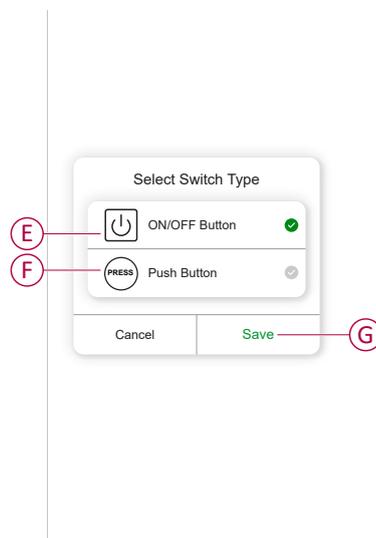

- Press the reset button 2 times in 10 s.

The LED indicator rapidly blinks red.

NOTE: If the LED does not blink, reset the device and attempt pairing again. For instructions on resetting the device, refer to *Resetting the device*, page 19.

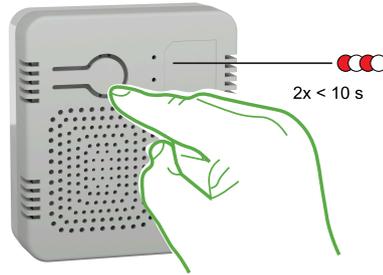

- Tap **Next**.
- Add the following Device Information:
 - Enter Device Name (H):** Enter the name of the device.
 - Select Load Type (I):** Select the load type based on the device requirement.
 - Assign Existing Room (J):** Select an existing room from the list.

NOTE: If your room is not in the existing room, create a new one.

 - Add New Room (K):** Create a new room.



The screenshot shows the "Single In-Wall Relay" configuration screen. It features a back arrow at the top left and a device icon at the top center. Below the icon are four input fields: "Enter Device Name" (labeled H), "Select Load Type" (labeled I), "Assign Existing Room" (labeled J), and "Add New Room" (labeled K). The "Assign Existing Room" field has a dropdown arrow. Below these fields is an "OR" separator, followed by the "Add New Room" field. At the bottom is a green "Next" button.

- Tap **Next**.

NOTE: To begin scanning for devices, make sure to enable Bluetooth permissions.


10. Tap MAC ID (L).

NOTE: If you are unable to find the device, tap **Search again** (M).

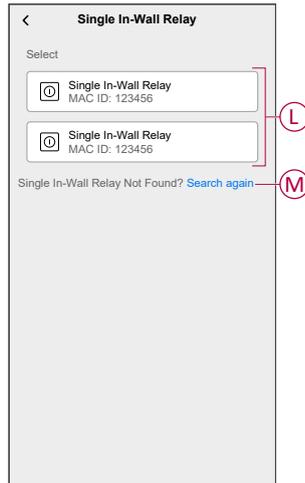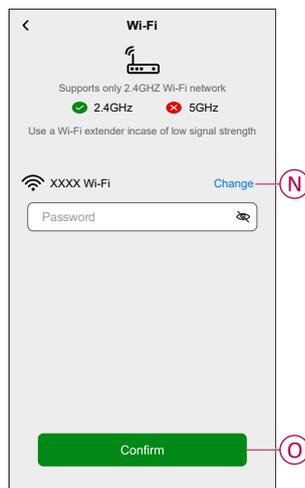11. Tap **XXXX Wi-Fi** and choose Wi-Fi network. Tap **Change** (N) to change the Wi-Fi network.

12. Enter the Wi-Fi password in the password field.

NOTE: After entering the password, the **Confirm** (O) button will be enabled.

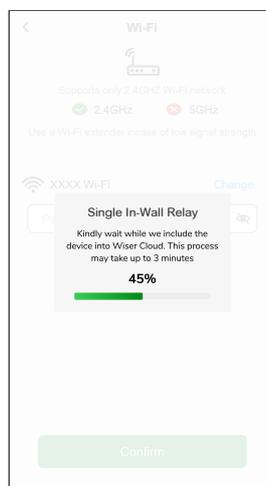13. Tap **Confirm** (O). The progress of the device addition will be displayed.

Now, you can see the newly added devices on the **Devices** page.

Configuring the device

Renaming the device

You can rename the device name using the Wiser app.

NOTE: You can also rename the other connected devices using the below steps.


To rename the device:

1. On the **Home** screen, tap  **Devices > Devices**.
2. Select the device for which you want to change the name.
3. On the top-right screen, tap .

The **Device Settings** screen appears.



4. Tap  and enter a new name in the name field.

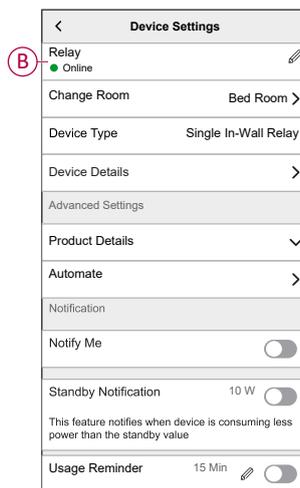


The changes will be saved automatically.

Changing the device location


You can change the device location using the Wiser app.

To change the device location:

1. On the **Home** screen, tap  **Devices > Devices**.
2. Select the device for which you wish to change the location.
3. On the top-right screen, tap .
The **Device Settings** screen appears.
4. Tap **Change Room (A)**.

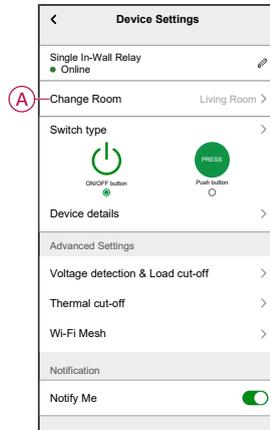

5. Select the desired room from the list (B).

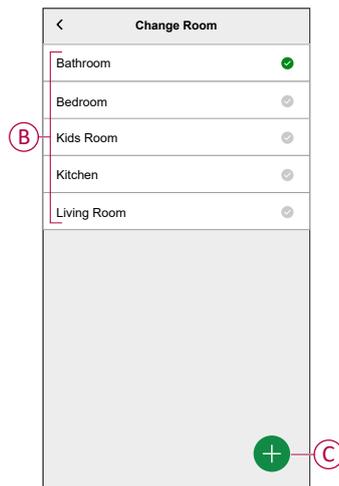


TIP: If your room name is not present in the list, you can create a new room by tapping the + (C) button.

Adding devices to favourites

You can add your devices and automations to favourites for quick and easy control from the Home screen.


To add favourites:

1. On the **Home** screen, tap  (A).

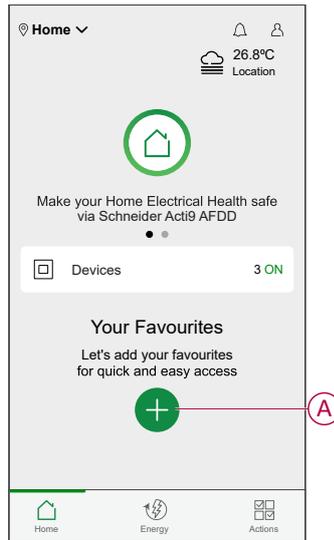

The **Edit Favourites** screen appears.

2. Tap the  icon to add all your favourite devices and automations.
3. Once selected, tap **Save**.

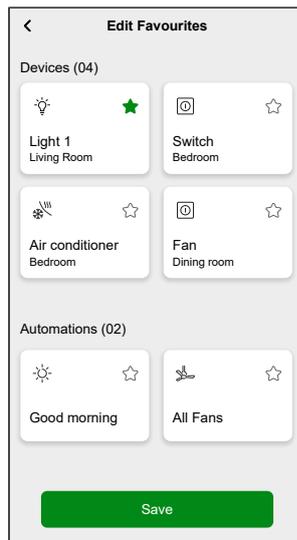

Now you can view all your favourite devices/automations on the Home screen.

Removing devices from favourites


You can add or remove devices and automations from the favourites list.

To remove favourites:

1. On the **Home** screen, tap  .

The **Edit Favourites** screen appears.

2. Tap the  icon to add or remove devices and automations from the favourites list.

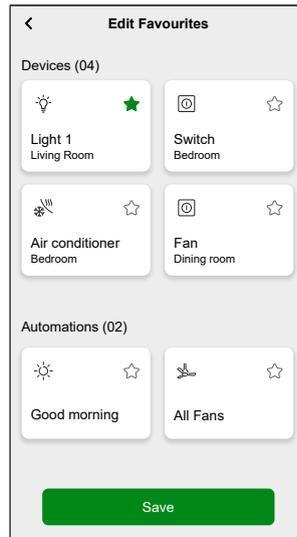

3. Once complete, tap **Save**.

Creating a schedule


The device can be controlled and triggered by a schedule. Once the schedule is set, your system will follow the active schedule. You can create or modify the schedules at any time.

You can create separate schedules for each connected device by following the steps below.

To create a schedule:


1. On the **Devices** page, tap **Devices**.
2. Select the device for which you want to create a schedule.
3. Tap **Schedule**.
4. On the **Schedule** page, tap **Schedule** tab, and tap **+** to create a schedule. The **Add Schedule** page appears.

5. Add the following details when creating a schedule:
 - **Name (A)**: Enter a name for the schedule.
 - **ON Time (B)**: Select the desired start time.
 - **OFF Time (C)**: Select the desired end time.
 - **Weekdays (D)**: Select the schedule for weekdays.
 - **Weekend (E)**: Select the schedule for weekends.
 - **Only once (F)**: Select the schedule for a specific date.

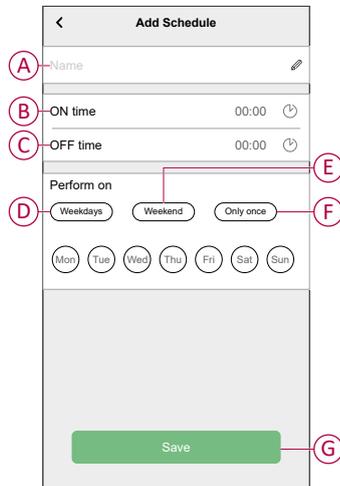

NOTE: If you want to create a schedule on a specific day, select the day you want to schedule.

6. Tap **Save (G)**.
The new schedule is added to the **Schedule** page.
7. To delete a schedule:
 - On the **Devices** page, tap **Devices**.
 - Select the device for which you want to delete a schedule.
 - Tap **Delete (H)** and then select **Ok** to delete a schedule.

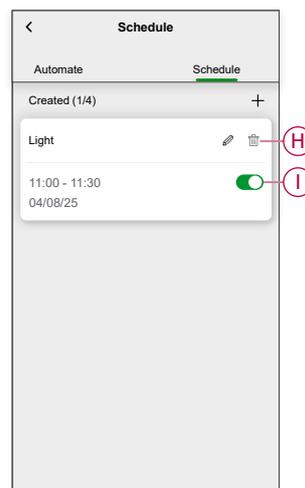

8. Tap the toggle button (I) to enable or disable the schedule.


NOTE:

- You can edit the **On Time**, **Off Time**, and **Days** whenever you want to make changes.
- After editing the schedule, tap **Update**.

Voltage detection & load cut-off

This smart feature enables you to set a voltage threshold. When the voltage drops below the set value, it automatically cuts the power supply, thereby protecting the device and extending its lifespan.

1. On the **Devices** page, tap **Devices**.
2. Select the device.
3. Tap **Settings > Voltage Detection & Load Cut-off**.
4. Drag the green button to set the **Low Voltage Cut-off Value (A)**.

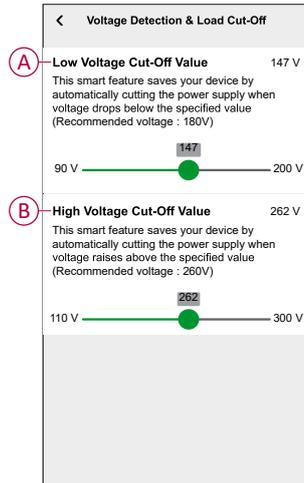

NOTE: The recommended voltage is 180 V, with a minimum voltage of 90 V and a maximum value of 200 V.

5. Drag the green button to set the **High Voltage Cut-off Value (B)**.


NOTE: The recommended voltage is 260 V, with a minimum voltage of 110 V and a maximum value of 300 V.

Thermal cut-off value

This smart feature enables you to set a temperature value. When the temperature crosses the set value, it automatically cuts the power supply, thereby protecting the device and extending its lifespan.


1. On the **Devices** page, tap **Devices**.
2. Select the device.
3. Tap **Settings > Thermal Cut-Off Value**.

4. Drag the green button to set the **Thermal Cut-Off value (A)**.

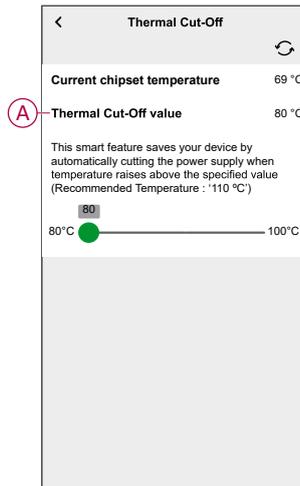

NOTE: The default thermal cut-off value is set to 110 degrees.

5. Drag the green button to set the **Thermal Cut-Off value (A)**.

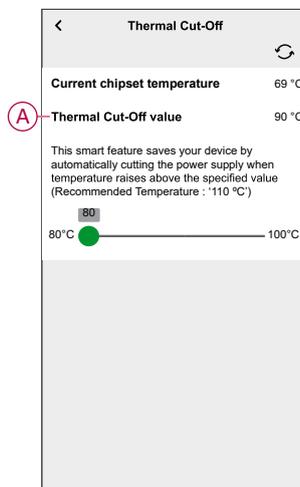

NOTE: The default thermal cut-off value is set to 90 degrees.

Notifications


The app will send notifications related to your device when you enable the notification button.

1. On the **Devices** page, tap **Devices**.
2. Select the device.
3. Tap **Settings > Notification**.
4. Tap the **Device Online/Offline notifications (A)** toggle button to receive notification whether the device has power supply or not. **Notify Me (B)** toggle button to receive notifications.
5. Tap the **Standby Notification (C)** toggle button to receive notifications when a device is consuming less than the standby value.

NOTE: The maximum value you can set is 200 watt.

- Tap the **Usage Reminder (D)** toggle button to receive notifications when a device is on for more than the set time.

NOTE: You can set the time by tapping the time.

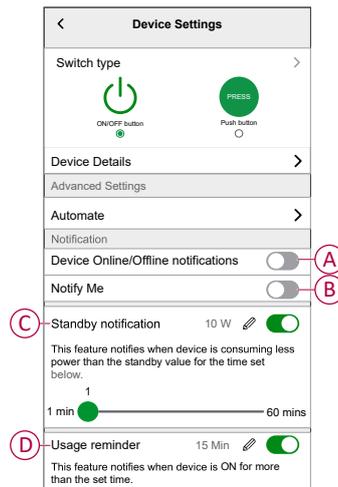


Removing the device

Using the Wiser app, you can remove a device from the device list.

To remove a device:

- On the **Home** screen, tap  **Devices** > **Devices**.
- On the top-right pane, tap . The **Edit Devices** screen appears.

- Tap  on the device that you want to remove from the Wiser system.

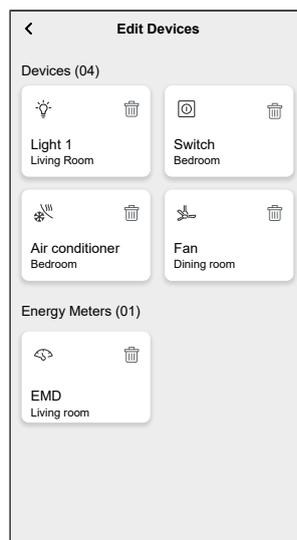

The **Delete** message pop-up appears.

- Tap **Confirm**.


Wait for a few seconds, and the successful message appears on the screen.

NOTE: By removing the device, you will reset the device. If you still have a problem with the reset, then refer to [Resetting the device](#) [Resetting the device](#), page 19 [Resetting the device](#).

Resetting the device

You can reset the device to factory default manually.
Short-press the reset button 7 times (<10 s).
The LED rapidly blinks red after 10 s.

If the puck is inside the wall, you can toggle the external connected switch 14 times in 10 s to reset the device.

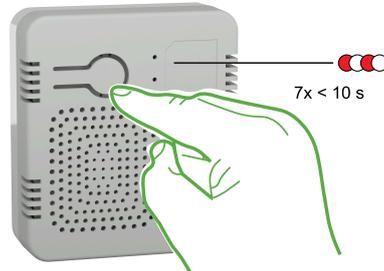


NOTE: After reset, the device is ready for pairing.


Changing the Wi-Fi access point

You can change the Wi-Fi network using the Wiser app.

1. On the **Devices** page, tap **Devices**.
2. Select the device.
3. Tap **Settings > Device Details**.
4. Tap **Change Access Point (A)** to change the Wi-Fi network.

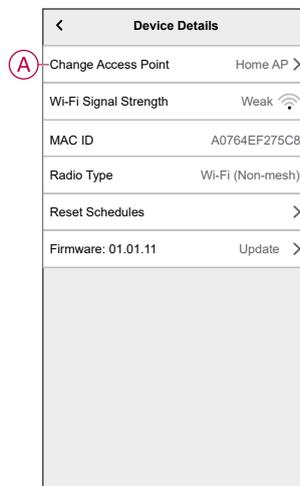


5. Select the Wi-Fi network.

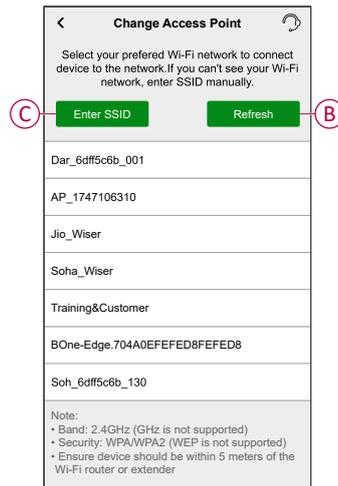

TIP: If you can't find your Wi-Fi network, try tapping **Refresh** (B). If you still cannot find it, you can manually enter the SSID by tapping **Enter SSID** (C).

6. Enter the new Wi-Fi password in the password field (D).

NOTE: The **Connect** button will be enabled after entering the password.

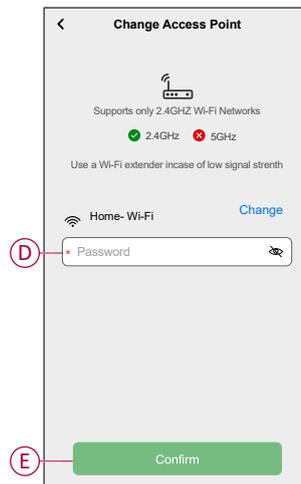7. Tap **Confirm** (E).

8. Alternatively, you can also change the Wi-Fi access point manually by pressing the push reset power button 8 times in 10 seconds 4 times in 10 seconds.

If the puck is inside the wall, you can toggle the external connected switch 8 times in 10 s to change access point mode.

Changing the Wi-Fi access point while offline

When you change the SSID or password, the device goes offline. You can connect to a new Wi-Fi network without losing any previous data.

You can change the Wi-Fi network using the Wiser app when the device is offline.

1. On the **Devices** page, tap **Devices**.
2. Select the **Single In-Wall Relay**.
3. On the top right corner of the screen, tap  **Settings**.
4. Tap **Change Access Point**.
Enter Wiser app password pop-up appears.


5. Enter the Wiser app password.
The Change Access Point page appears.
6. Press the reset button 7 times in 10 seconds.
7. Tap MAC ID.
NOTE: If you are unable to find the device, tap **Rescan**.
It will redirect to the Wi-Fi network which is connected to the mobile.
8. Enter the new Wi-Fi password in the password field and tap **Connect**.
NOTE: The **Connect** button will be enabled after entering the password.

Using the device

The Control Panel allows you to switch on/ off and control various settings. On the **Devices** page, tap **Devices** and select the device to access the control panel.

The control panel displays the following options:

- Schedule: You can schedule the ON time and OFF time of the device (A).
- Energy: Displays the energy usage of the device (B).
- History: Displays the history of usage of the device (C).
- The current state of the device (D).

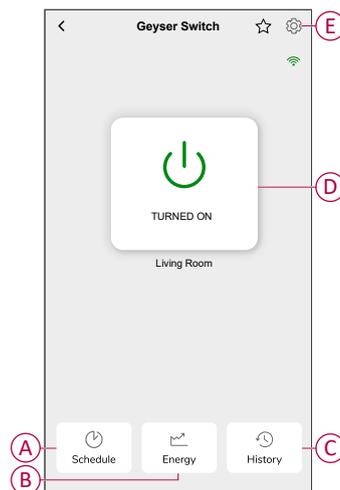

Switching On/Off the device manually

When the puck is connected to a mechanical push button, the connected devices can be controlled manually by short pressing the push button.


NOTE: When the puck is installed inside the wall box, the status LED is not visible while using the puck.

Switching On/Off the device using the app


By using the Wiser app, you can switch on/off the device. To switch the device on/off:

1. On the **Devices** page, tap **Devices**.

2. Tap the power button (A) to switch on/off.

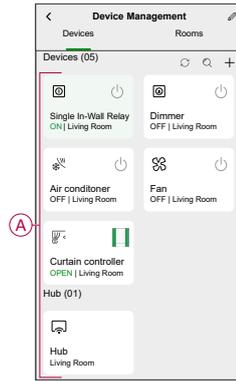

3. You can also switch on/off from the control panel by tapping the power button (B).

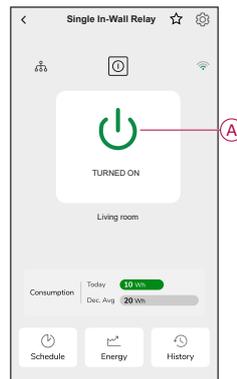

4. Alternately, you can also switch on/off from the **Dashboard** page when you add a device to the favourites list.

Rooms


Adding new Rooms / Changing Room Information / Room settings / Removing a Room.

Room Status

You can see the room status using the Wiser app.

1. On the **Home** screen, tap  **Devices** > **Rooms**.

The following screen displays the status of various rooms.

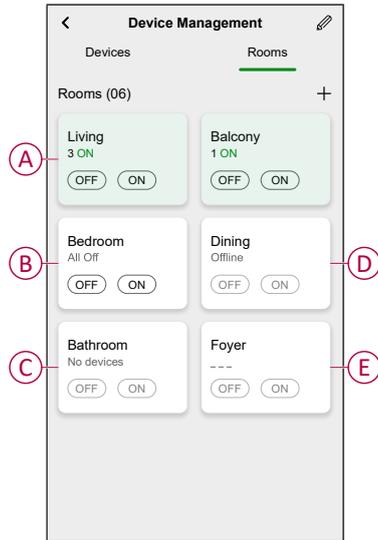


| | | |
|----------|-------------------|---|
| A | 3 ON | Displays the number of devices that are ON in the room. |
| B | All off | Displays that all devices are turned OFF in the room. |
| C | No devices | Displays that no devices are added to the room. |
| D | Offline | Displays that all devices in the room are offline. |
| E | --- | Displays that no operational devices are added to the room. |

Creating a new room

You can create a new room using the Wiser app.

To create a new room:

1. On the **Home** screen, tap  **Devices > Rooms**.
2. Tap **+** to create a new room.
The **Add Room** screen appears.
3. Enter the room name in the name field (A).

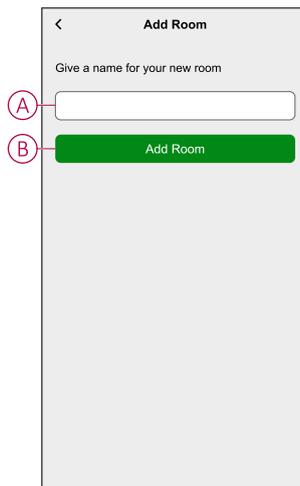

4. Tap **Add Room** (B).

The new room is added to the **Rooms** tab.


TIP: If no devices are assigned to the room, tap room >  > + to add a device from the **Add Device** screen. If a device is already added, you can tap + to add another device.

Adding a Device to the Room

You can add a device to a room using the Wiser app.

To add:

1. On the **Home** screen, tap  **Devices** > **Rooms**.
2. Select the room from the list.
3. Tap + (A) to add a device.

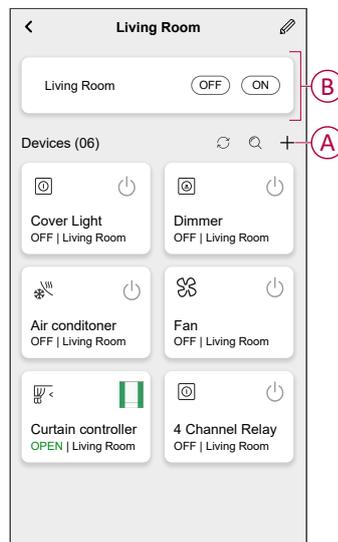

TIP: If no devices are assigned to the room, tap  > + to add a device from the **Add Device** screen.

4. Select a device from the **Add Device** screen. Refer to pairing the device with the Wiser Hub topic of the respective device user guide for the next steps.

TIP: When you turn the room ON/OFF (B), the devices that have been added to that room are activated.

Renaming a room

You can rename a room using the Wiser app.

To rename:

1. On the **Home** screen, tap  **Devices** > **Rooms**.
2. Select a room from the list.
3. On the top-right screen, tap .

4. Enter a new name in the room name (A) field.



TIP: Tap  on the device that you want to remove from the room.


5. Tap **Done** (B).

Deleting a room

You can delete a room using the Wisier app.

To delete:

1. On the **Home** screen, tap  **Devices > Rooms**.
2. On the top-right screen, tap  .
The **Edit Rooms** screen appears.
3. Tap  on the room that you want to remove from the Wisier system.

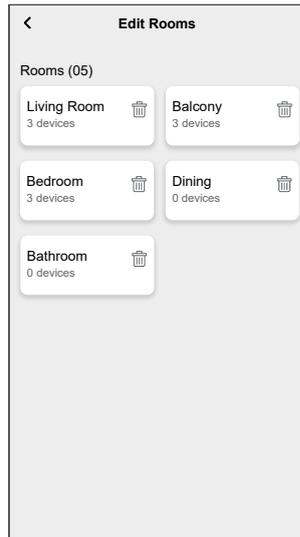

NOTE: You cannot delete a room directly if it contains devices. First, remove the devices from the room, then delete the room.

4. Tap **Confirm**.

TIP: You can also delete a room by selecting a room >  > **Delete Room**.

Notifications


The app will send notifications related to your device when you enable the notification button.

1. On the **Devices** page, tap **Devices**.
2. Select the device.
3. Tap **Settings > Notification**.
4. Tap the **Device Online/Offline notifications** (A) toggle button to receive notification whether the device has power supply or not **Notify Me** (B) toggle button to receive notifications.
5. Tap the **Standby Notification** (C) toggle button to receive notifications when a device is consuming less than the standby value.

NOTE: The maximum value you can set is 200 watt.

6. Tap the **Usage Reminder** (D) toggle button to receive notifications when a device is on for more than the set time.

NOTE: You can set the time by tapping the time.

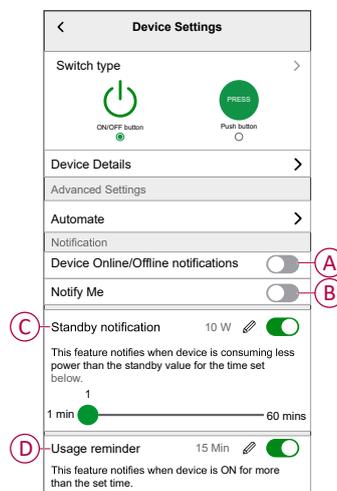


History

The history tab provides a record of past activities and actions of the device in the Wiser app. It displays the date, time, and action.

1. On the **Devices** page, tap **Devices**.
2. Select the device.
3. Tap **Settings > History**.
You can see the history of the device.


4. Tap the refresh button (A) to get the latest results.

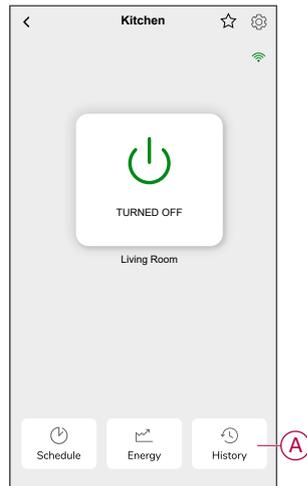

Energy


The energy page displays the device's total energy consumption in kilowatt-hours (kWh) over several time intervals such as the hour, day, last 7 days, month, and year. This allows you to track and analyze your energy usage patterns over a specific time.

1. On the **Home** page, tap **Devices**.
2. Select the device.
3. On the bottom of the screen, tap **Energy** (A).

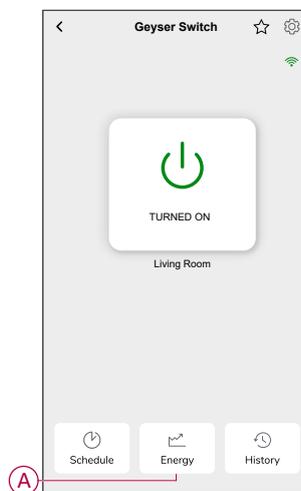

The **Energy** page appears.

4. The energy consumption displays the following options:
- **Live (B):** Display the Voltage, Current, Total Energy, Power, Apparent Power, and Power Factor.
 - **Day (C):** Displays the total consumption for the selected day. You can select the day by tapping the day.
 - **Month (D):** Displays the total consumption for the selected month. You can select the desired month by tapping the month.
 - **Year (E):** Displays the total consumption for the selected year. You can select the year by tapping the year.

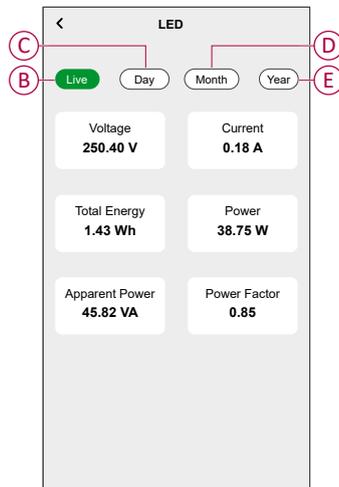


Creating an action

An action allows you to group multiple actions that are usually done together. Using the Wiser app, you can create actions based on your needs (such as movie night).

To create an action:

1. On the **Automations** screen, tap **Quick**.
2. On the bottom-right screen, tap **+** to create an action.


The **Add Action** screen appears.

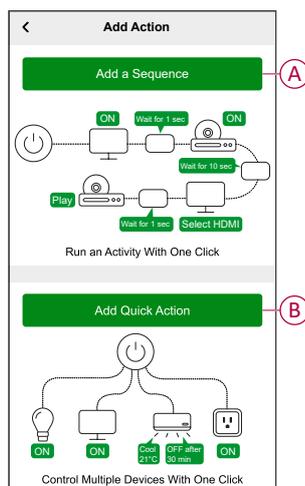


3. Select one of the following options as per your preference:

- **Add a Sequence (A):** Switch ON multiple devices in a sequence.
- **Add Quick Action (B):** Switch ON multiple devices at a time.


TIP: Follow the below steps to create an action for both **Add a Sequence (A)** and **Add Quick Action (B)**. The only difference is that you need to enter the time gap for **Add a Sequence**.

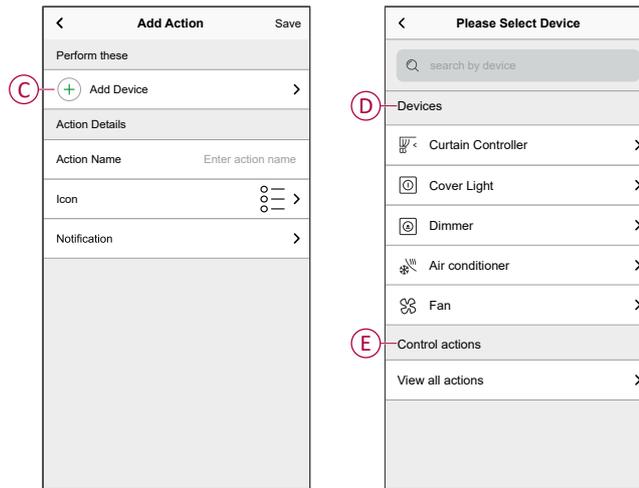4. Tap **Add Device** (C) and select either a device or an action:

- **Devices (D):** Select a device from the list and set the device status (e.g., ON/OFF, delay). Then, tap **Done**.

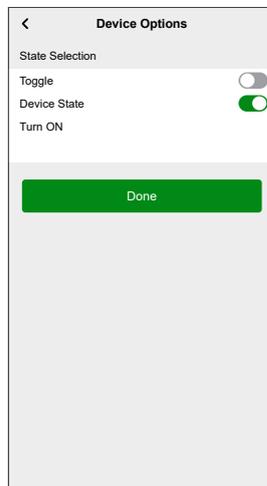

- **Control actions (E):** Tap **View all actions**, select an action from the list, and set the action status. Then, tap **Save**.

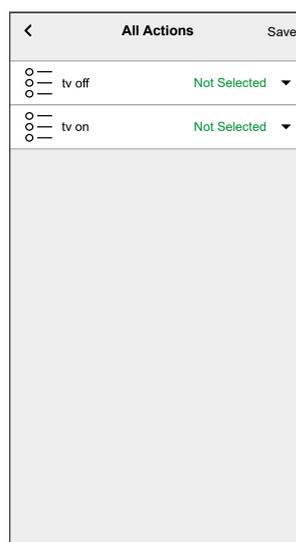

TIP: Tap  and enter your device name to find it.


NOTE: When selecting an IR controlled device, make sure to select the power button to turn it ON/OFF.

5. Repeat steps 4 to add more than one device or an action.

TIP: You can change the waiting time by tapping the time (F) (Only for **Add a Sequence**).

NOTE: By default, the time gap is 2 seconds, and the maximum time gap you can select is 120 seconds.


6. Enter the **Action Name** (G).

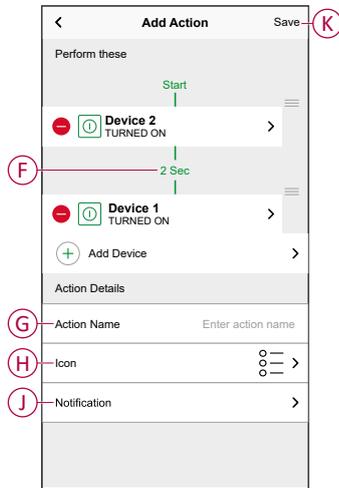

7. Tap **Icon** (H) and select the icon from the list.

8. Tap **Notification** (J) and enable the toggle button for the following options and then tap **Save** (L):

- **Show timeline:** Displays the total power consumption.
- **Push notifications:** Receives the notifications.

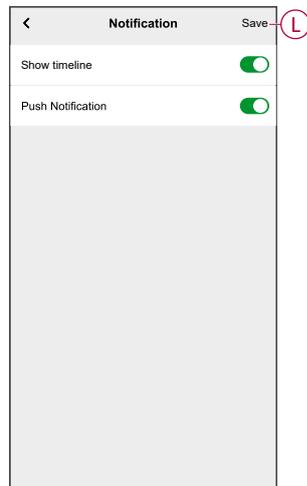

NOTE: To switch the toggle buttons, make sure to first activate the **Notify me** toggle button on the Settings page.

9. Once all conditions are set, on the top-right screen, tap **Save** (K).

You can see the newly created action on the **Quick** tab. Tap  on the action to enable it.

Editing an action

To edit an action:

1. On the **Automation** screen, tap **Quick**.
2. On the top-right screen, tap .

The **Edit Actions List** screen appears.

3. On the **Edit Actions List** screen, tap the action you want to edit.

TIP: If you want the same action, tap the hand symbol, it will copy the same action and add it to the **Edit Actions List**.
4. You can perform the following changes:
 - Change the icon.
 - Rename the action.
 - Add a device or an action.
 - Remove a device or an action.
 - Change the time delay (Only for **Add a Sequence**).
5. Once all the edits are done, tap **Update**.

Deleting an action

To delete an action:

1. On the **Automation** page, tap **Quick**.
2. On the top-right screen, tap .


The **Edit Actions List** screen appears.
3. On the **Edit Actions List** screen, tap the remove button that is next to the action, and then tap **Delete** to remove it.

Automation (Trigger)


Creating an Automation for Trigger

Automation allows you to group multiple actions that are usually done together, triggered automatically or at scheduled times. By using the Wiser app, you can create automation based on your needs.


1. On the **Automation** screen, tap **Trigger**.
2. Tap **+** (A) to create an automation.

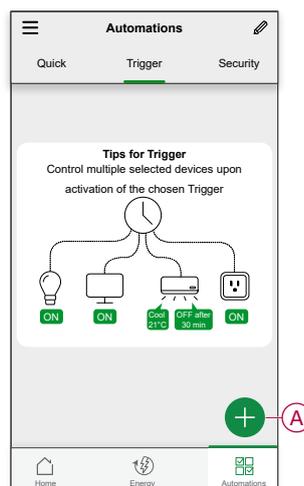

3. Tap **Add Trigger (B)**.

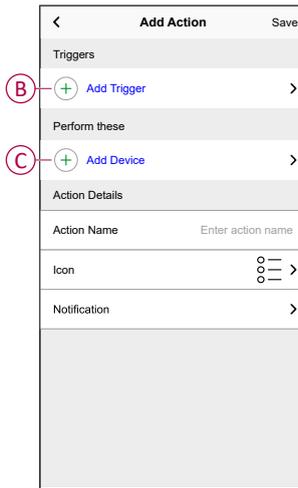

The **Select Trigger** screen appears.

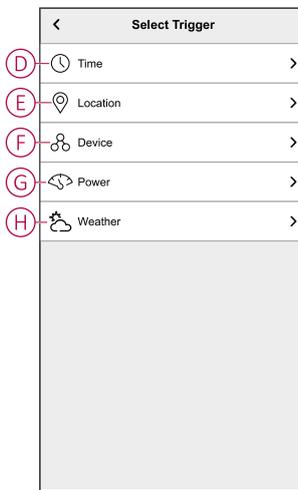


4. Select a trigger option from the following list on the **Select Trigger** screen:
 - **Time (D)**
 - **Location (E)**
 - **Device (F)**
 - **Power (G)**
 - **Weather (H)**
- a. Tap **Time (D)**, select any one of the following options and then tap **Save.:**
 - **Any time:** Set for any time.
 - **At Specific time:** Set for a specific time.
 - **At in between time:** Set for in between time.
 - **Perform only once:** Set for only once.
- b. Tap **Location (E)**, select any one of the following options:
 - **Arriving location:** Select arriving location.
 - **Departing location:** Select a departing location.


NOTE: Mobile location should turn on.
- c. Tap **Device (F)** and select a device from the list.
- d. Tap **Power (G)** and select an option from the following list:
 - **EMD B**
 - **EMD R**
 - **EMD Y**
 - **Schneider**

NOTE: This option is only available when the EMD or Meter device is installed in your Home or location.
- e. Tap **Weather (H)** and select an option from the following list:
 - **Outside Temperatures:** Select the temperature to trigger an action.
 - **Outside Humidity:** Select the humidity level.
 - **When Sunrises:** Select when sunrises.
 - **When Sunsets:** Select when sunsets.


5. Tap **Add Device** (C) and select either a device or an action:

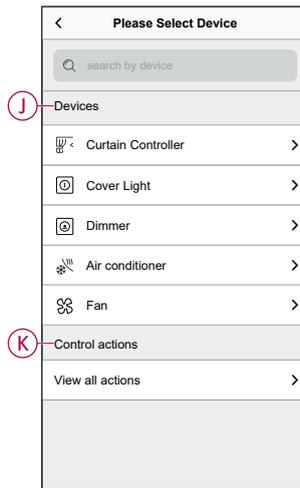

- **Devices (J):** Select a device from the list and set the device status (e.g., ON/OFF, delay). Then, tap **Done**.

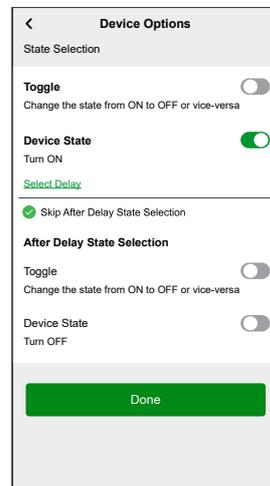

- **Control actions (K):** Tap View all actions, select an action from the list, and set the action status. Then, tap **Save**.

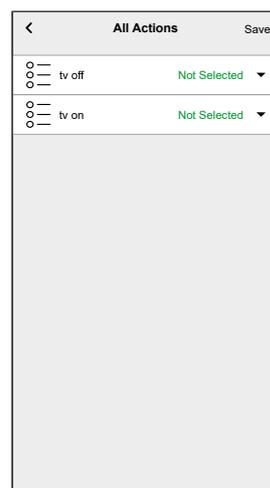

TIP: Tap  and enter your device name to find it.

6. Repeat steps 5 to add more than one device or an action.
7. Enter the **Action Name**.
8. Tap **Icon** and select the icon from the list.

9. Tap **Notification** and enable the toggle button for the following options:
 - **Show timeline:** Displays the total power consumption.
 - **Push notifications:** Receives the notifications.
10. Once all the actions are set, tap **Save**.
You can see the newly created automation on the **Trigger** tab. Tap the toggle button to enable or disable the automation.

Editing a trigger

To edit a trigger:

1. On the **Automation** screen, tap **Trigger**.
2. On the top-right screen, tap .
The **Edit Actions List** screen appears.
3. On the **Edit Actions List** screen, tap the trigger you want to edit.
TIP: If you want the same trigger, tap the hand symbol, it will copy the same trigger and add it to the **Edit Actions List**.
4. You can perform the following changes:
 - Change the icon.
 - Rename the trigger.
 - Add a device or an action.
 - Add a trigger.
 - Remove a device or an action.
 - Remove a trigger
5. Once all edits are done, tap **Update**.

Deleting a trigger

To delete a trigger:

1. On the **Automation** screen, tap **Trigger**.
2. On the top-right screen, tap  to remove a trigger.
The **Edit Actions List** screen appears.
3. On the **Edit Actions List** page, tap the remove button that is next to the trigger, and then tap **Delete** to remove it.

LED indication

Pairing

| User Action | LED Indication | Status |
|--|--|--|
| Press the reset button 2 times in 10 s. Or Toggle the external connected switch 4 times in 10 s. | Blinking red rapidly.  | Pairing mode is active for 3 minutes. When pairing is completed, the LED will display a solid red. |
| Press the reset button 4 times in 10 s to change the Wi-Fi access point mode. Or Toggle the external connected switch 8 times in 10 s. | Blinking red rapidly.  | The device is ready to connect with the new Wi-Fi network. |

Resetting

| User Action | LED Indication | Status |
|---|--|---|
| Press the reset button 7 times in 10 s. Or Toggle the external connected switch 14 times in 10 s. | LED blinks red.  | The device is in reset mode. It is reset to the factory settings. |

LED Indicator Mode

| LED Indicator Mode | LED 1 Indication | LED 2 Indication |
|---|---|--|
| Always Off | Solid red  | No LED |
| Load 1 On | Solid amber  | No LED |
| Load 2 On | Solid red  | Solid green  |
| Device paired | Solid red  | No LED |
| Device disconnected from the router after pairing | LED blinks red, once per 4 seconds  | No LED |
| Reset state / Not paired / Not added | LED blinks red  | No LED |

Troubleshooting

| Symptom | Solution |
|---|--|
| The device is not ready to pair after the device is removed from the app. | Reset to factory default settings, refer to resetting the device, page 19resetting the device. |
| If the device is offline in the app. | The Wi-Fi credentials may have changed. Refer to Changing the Wi-Fi access point, page 19Changing the Wi-Fi access point to update the Wi-Fi credentials. |
| If the device is not responding by physical operation. | Reboot the device by switching off the MCB for 3 seconds, then switching it back on. Remove the power adaptor for 3 seconds and plug it in. |
| If the device is not responding in the App. | Reboot the device. If the issue is still not resolved, connect with customer care. |

Technical data

| | |
|-------------------|---|
| Operating Voltage | 100 - 240 VAC |
| Frequency | 50/60 Hz |
| Max current | 16 A |
| Max load | 3000 W (Resistive) Note: Widely supports most of the home appliances like Geyser, AC, Refrigerator, LED and fluorescent lamps etc. |

| | |
|-----------------------------|---|
| | Subject to Power factor. |
| Standby power | < 2.5 W (When the device is in Station Mode and when connected to a Wi-Fi® network) |
| Under voltage protection | < 90 Vac (Soft cut-off) |
| Over load protection | > 300 VAC (Soft cut-off) |
| Thermal Protection | Yes |
| Over temperature protection | Yes |
| Sustained surge protection | Yes |
| Energy monitoring | Yes |
| Wireless Frequency | Wi-fi (2.4 GHz) |
| Network range | Upto 30 m |
| Colour | White |
| Temperature | Operating: 0° C to 50° C Storage: -20° C to 70° C |
| Relative humidity | 10% to 95% |
| Compliance | |
| Radio/RF | ETSI EN 300 328 |
| Communication interface | Wi-Fi®: 2.4 GHz only, IEEE 802.11 b/g/n |
| Mechanical | |
| Dimensions (L x W x H) | 55.3 x 48.5 x 17.6 mm |
| Colour | White |
| Wire cross section | 2.5 mm ² |

Trademarks

This guide makes reference to system and brand names that are trademarks of their relevant owners.

- Wiser™ is a trademark and the property of Schneider Electric SE, its subsidiaries and affiliated companies.
- Wi-Fi® is a registered trademark of Wi-Fi Alliance®.
- Apple® and App Store® are brand names or registered trademarks of Apple Inc.
- Google Play™ Store and Android™ are brand names or registered trademarks of Google Inc.

Other brands and registered trademarks are properties of their relevant owners.

Schneider Electric India Pvt Ltd
C 56, Mayapuri Industrial area Phase-11
110064 New Delhi
India

1800 103 0011

www.se.com

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2026 – 2026 Schneider Electric. All rights reserved.

DUG_1 Channel Relay Puck-00