

Iconic Connected Twin 10 A Socket BLE

Device user guide

Information about features and functionality of the device.

06/2024



Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.

Table of Contents

Safety Information.....	4
Iconic Connected Twin 10 A Socket.....	5
For your safety	5
About the device.....	5
Installing the device	5
Pairing the device manually.....	5
Manual operation.....	6
Configuring the device	7
Changing the device icon	7
Renaming the device	8
Changing the device location	8
Socket settings.....	9
Channel name	10
Channel mode.....	10
Synchronization Time.....	11
Manage Paired Phone.....	11
Reset device settings	11
Using the device	12
Switching on/off the device using app	12
Setting timer mode.....	13
Creating a schedule	14
Removing the device	16
Resetting the device manually	16
LED Indication.....	17
Troubleshooting	17
Technical Data	17
Compliance.....	19
Compliance information for Green Premium products	19
Trademarks	19

Safety Information

Important Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that accompany this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

Failure to follow these instructions will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Iconic Connected Twin 10 A Socket



3025CSG

For your safety

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- It is illegal for persons other than an appropriately licensed electrical contractors or other persons authorised by legislation to work on the fixed wiring of any electrical installation.
- To comply with all safety standards, the device must be used only for the purpose described in this instruction and must be installed in accordance with the wiring rules and regulation in the location where it is installed.
- Lock out and tag the input circuit before accessing the wiring connections.
- There are no user serviceable parts inside the device.

Failure to follow these instructions will result in death or serious injury.

About the device

The Iconic Connected Socket Twin 10 A (hereinafter referred as **Iconic Socket**) is a connected electrical outlet designed to manage and control electrical devices in a convenient and efficient manner. It provides app controlled switching of plug-in appliances using the Wiser by SE app.

The socket has a 12-24 hr time delay and 24/7 schedule functionality. When the manual switch on the socket is in the smart position, the socket can be controlled remotely.

Installing the device

Refer to the installation instruction supplied with this product.

See Iconic Connected Twin 10 A Socket.

 
Pairing the device manually

Using the Wiser app, you can pair the device with smartphone to access and control the device.

NOTE: When pairing the Bluetooth device with the Wiser app, be within a range of 8 to 10 m of the module. Range can be affected by wall thickness and construction materials.


1. On **Home** page, tap **+** then tap

2. Short press the LED panel 3 times ($< 0,5$ s).

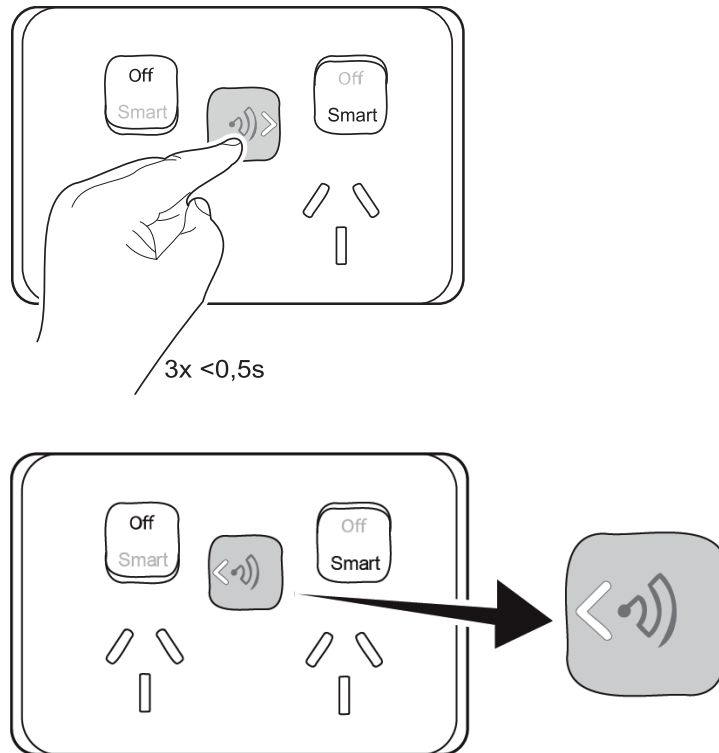

The LED blinks white alternatively.

 3. In the app, select **Confirm LED indicator is flashing** and tap **Start Configuration (A)**.

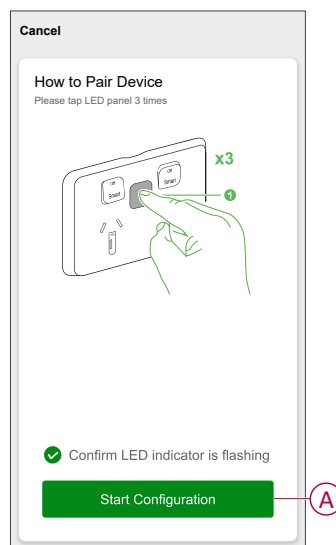

NOTE: Enable permissions to nearby devices and Bluetooth for scanning the device.

4. Tap **+** to select and add the device from the list and then tap **Next > Done**.

NOTE: The device can be paired with max. 8 smartphones. To pair an additional phone, you must unpair one of the existing phones. Refer managed paired phones, page 11.

Manual operation

Socket can be operated manually using rocker switch and touch switch.

Rocker switch

Off state

 
- No power is available at the socket.
- The socket cannot be remotely switched using Wiser app.
- Timer and scheduler has no effect on the socket.

Smart state

- Power is available at the socket.
- The socket can be remotely switched using Wiser app.

NOTE: A socket that is remotely switched off using the Wiser app has no power at all, even if the rocker switch is set to smart mode. To find out if a socket is On, tap the touch switch (see Power indication below).


- Timer and scheduler operates the socket if configured.

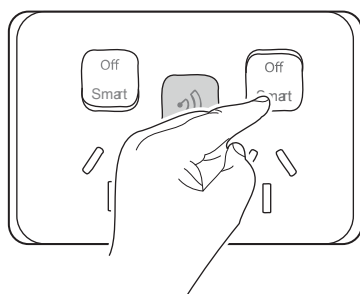

Touch switch

 Power indication

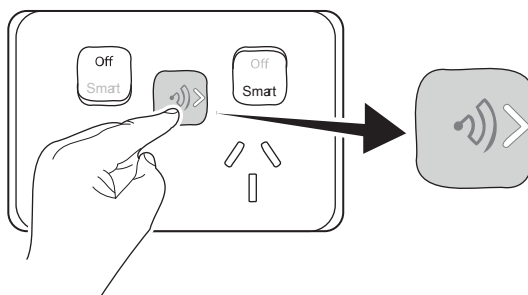

- Tap the touch switch to find out if a socket is on.
- Arrows displayed in the touch switch indicate that power available at a socket:
 - **Left arrow LED on:** power available at left socket.
 - **Right arrow LED on:** power available at right socket.



 
Configuring the device

Changing the device icon

You can change the device icon using the Wiser app.



1. On the **Home** page, select the device for which you wish to change the icon.
2. At the top-right corner of the screen, tap .
3. Tap edit  next to the device name.
4. Tap **Icon** to view the menu.

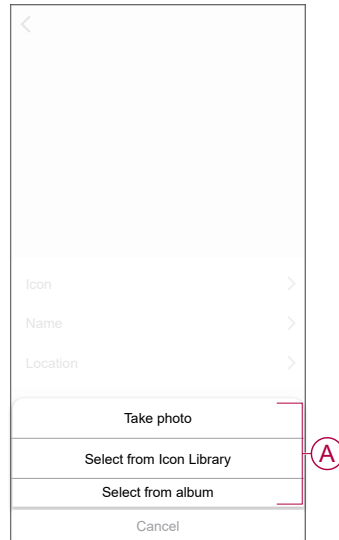
5. In the slide-up menu, select any one of the following (A) to change the device icon:
- **Take photo** - allows you to take a photo with your device camera.
 - **Select from Icon Library** - allows you to select an icon from the app library.
 - **Select from Album** - allows you to select a photo from the mobile gallery.



Renaming the device



 You can rename the device using the Wiser app.

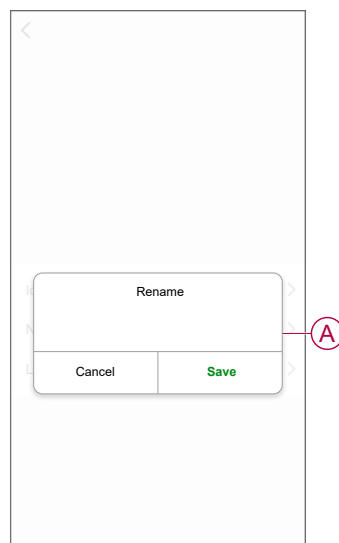
1. On the **Home** page, select the device for which you wish to rename.
2. At the top-right corner of the screen, tap .
3. Tap edit  next to the device name.
4. Tap **Name**, enter the new name (A) and then tap **Save**.



Changing the device location

You can change the device location using the Wiser app.

 
1. On the **Home** page, select the device for which you wish to change the location.
2. At the top-right corner of the screen, tap .
3. Tap edit  next to the device name.
4. Tap **Location**.
5. Select the desired location from the list (A) and then tap **Save**.

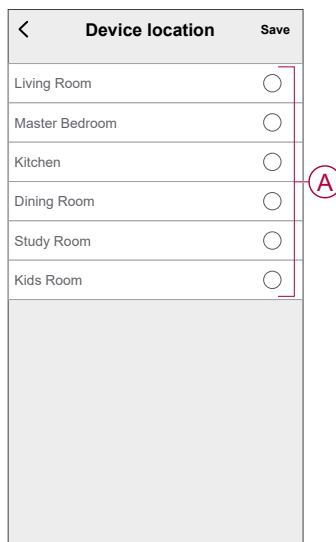

Socket settings

Using the Wiser app, you can manage the socket modes and settings.

 
1. On the **Home** page, tap **All devices > Iconic Socket**.
2. Tap **Settings** and select any of the following:
 - Channel Name, page 10 (A)
 - Channel Mode, page 10 (B)
 - Synchronization Time, page 11 (C)
 - Manage Paired Phone, page 11 (D)
 - Reset Device Settings, page 11 (E)

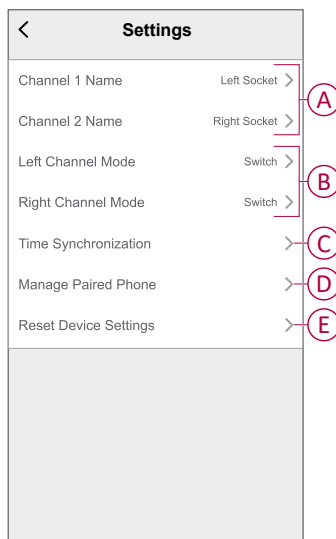

Channel name

You can rename the socket using the Wiser app.


 
- On the **Settings** page, select the channel:
 - Channel 1 Name:** to rename the left socket.
 - Channel 2 Name:** to rename the right socket.
- Enter the name (A) and tap **Save**.

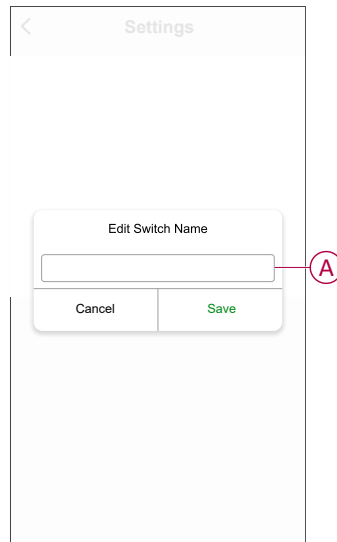

Channel mode

Using mode setting, timer can be set to turn off the device after a set period of time or you can set it as a switch to turn on/off manually.

  - On the **Settings** page, tap on respective channel.
- Select the mode.
 - Switch:** turn on/off the device.
 - Timer:** set the timer to turn off the device. Refer using mode timer, page 13.

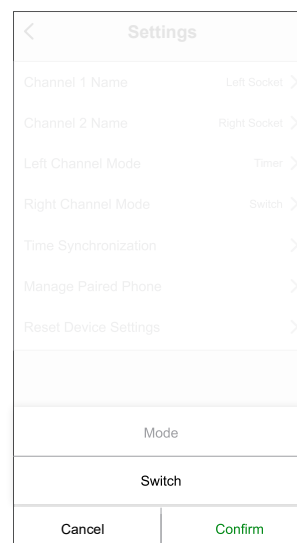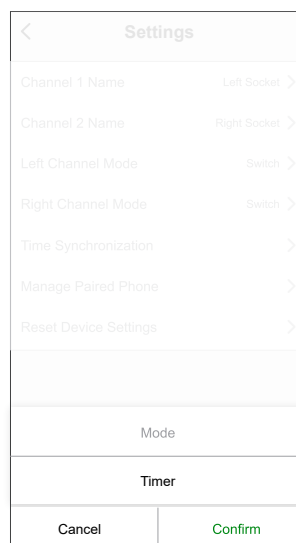


- Tap **Confirm**.

Synchronization Time

Using Wiser app, you can synchronize the time of the device with your smartphone.

 On the **Settings** page, tap **Synchronization Time > Update Time & Date (A)**. This allows the device time to sync with smartphones in real-time.

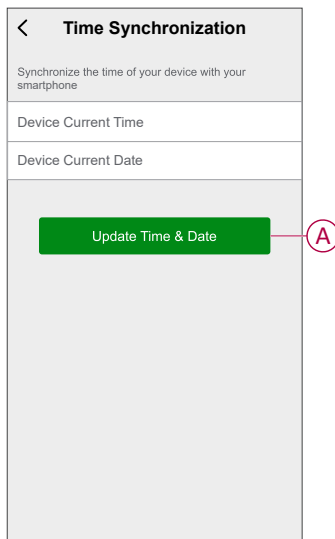


Manage Paired Phone

Using Wiser app, you can view or delete paired phones.

On **Settings** page, tap **Manage Paired Phone** and select any of the following (A):

 - **Delete all Devices:** the device is removed from all paired phones.
- **Delete my Device:** the device is removed from current phone.

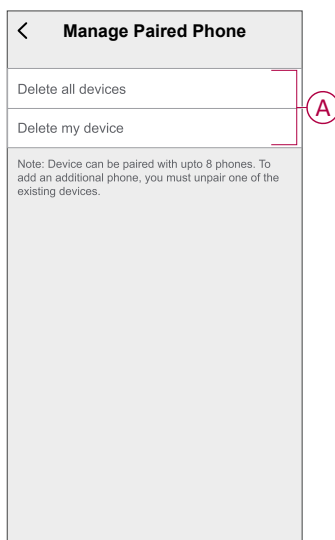


Reset device settings

Using Wiser app, you can reset the device settings to default.

On **Settings** page, tap **Reset device settings**.

 Read the information and tap **Confirm** (A).

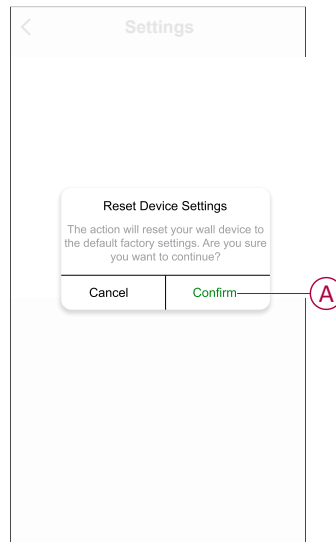

NOTE: This action will reset the device to default factory settings.

 
Using the device

The Control Panel allows you to switch on/off and control various settings.

On the **Home** page, tap **All devices** > **Iconic Socket** to access the control panel.

On the control panel page, you can see the following:


- The current state of the socket (A)
- Mode indicator (B)
- Settings, page 9 (C)
- Schedule, page 14 (D)
- Timer count down, page 13 (E)

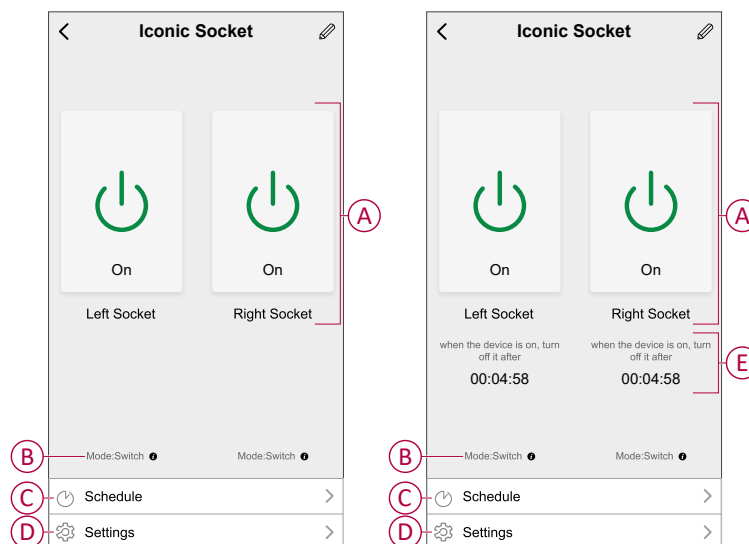


Switching on/off the device using app


By using the Wiser app, you can switch on/off the device.

 NOTE: The socket can be remotely operated using Wiser app only when the rocker switch is in smart state.

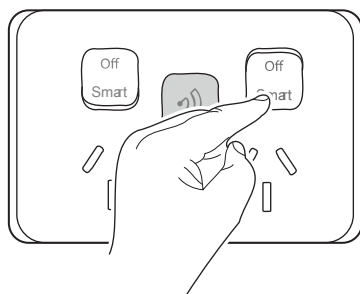

 1. In home page, next to device name, tap the **v** for common function.
2. Select the left/right socket (A).
3. Tap the power button (B) to switch on/off.

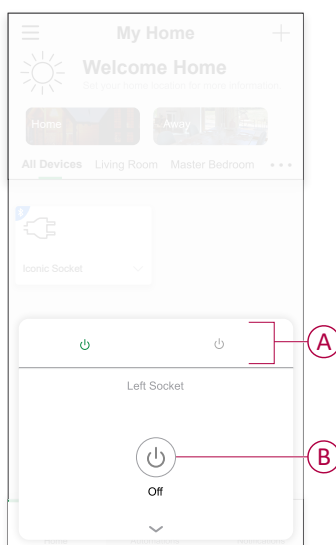

TIP: You can also navigate to the control panel, page 12 of the device and tap  to switch on/off the socket .

 
NOTE: During timer mode, the socket automatically turns off after a specified period of time. Refer timer mode, page 13.

Setting timer mode


You can set the timer to turn off the device after a certain period of time.

In Wiser app, change the mode from switch to timer, refer to mode settings, page 10.

1. On the device control panel page, tap timer (A) for the slide-up menu.

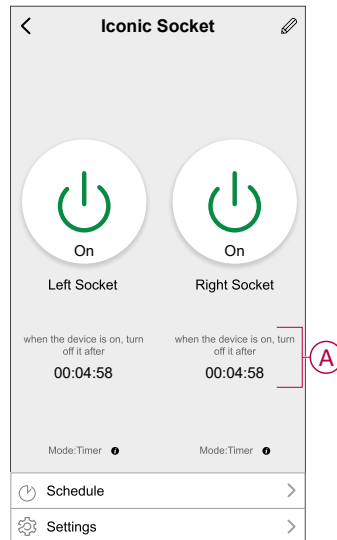

 2. In the slide-up menu select the required **Set Period** (B) and tap **Save**.

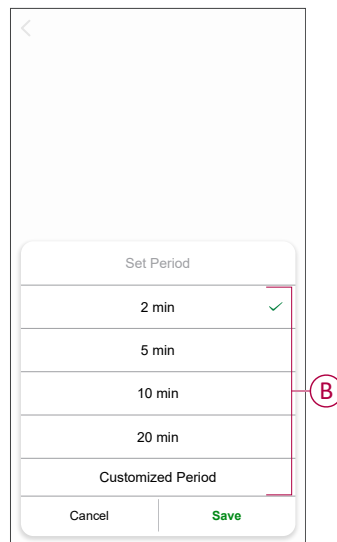

Once the countdown timer reaches zero, the device turns off.

Creating a schedule

Using a schedule, you can control and trigger the device. The system will follow the active schedule once it has been set. You can create or modify schedules at any time.

1. On the **Home** page, tap **All devices > Iconic Socket**.
2. Tap **Schedule**, tap on the socket for which you need to set the schedule then tap **Add schedule**.

3. Tap (A) to set the start time and tap (B) to set end time.

4. Tap (C) and select any one of the following:

 
- **Sunrise:** schedule will be triggered at sunrise.
- **Sunset:** schedule will triggered at sunset.
- **Custom:** to set the required start/end time (D).

5. Tap (E) and select any one of the following:

- **On:** to turn on the device.
- **Off:** to turn off the device.

6. Select the days you want to repeat the schedule (F).


7. Tap **Month Repeat** (G) to set the months you want to repeat the schedule.

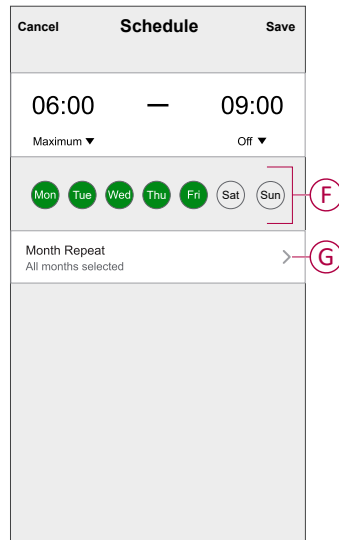


8. Tap **Save**.

Removing the device

Using the Wiser app, you can remove a device from the device list.

 1. On the **Home** page, tap **All devices > Iconic Socket**.
2. Tap  to display more details.
3. Tap **Remove device** (A) and select any of the following:
 - **Disconnect**: to remove the device.
 - **Disconnect & Erase Data**: to remove the device and erase data.

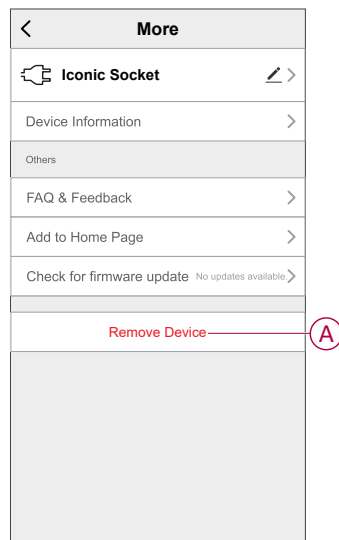


TIP: On the **Home** page, tap and hold the **Iconic Socket** to remove the device.

Resetting the device manually

You can reset the device to factory default manually.

Short press the touch button three times (<0,5 s) and then long press the touch button once (>10 s).

 After 10 s, release the touch button when the LED starts blinking white.

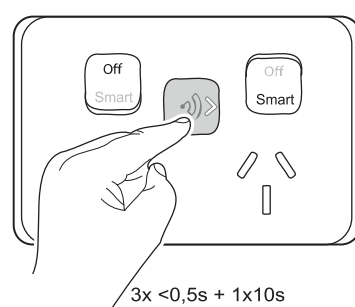

The device is in reset mode. It is reset to the factory settings after 10 seconds.

LED Indication

Pairing

User Action	LED Indication	Status
Press the touch button 3 times	White LED blinks left and right alternately.	The pairing mode is active for 30 seconds.

Resetting

User Action	LED Indication	Status
Press the push-button 3 times and long press once for > 10 s.	White LED blinks faster.	The device is in reset mode. It is reset to the factory settings after 10 seconds.

Troubleshooting

Error	Possible cause	Solution
The device is not ready to pair after the device is removed from the app.	The device is not reset correctly.	Reset to factory default settings, refer to Resetting the device manually , page 16.

Technical Data

Nominal voltage	AC 240 V ~, 50 Hz
Max load rating	10 A
LED indicator	Yes
Supported protocols	BLE
Operating frequency	2.405 GHz to 2.48 GHz
Max. radio-frequency power transmitted	10 mW at < 50 m
Compatible wall box and bracket ranges	155 155NA 157 157PRM 157/1PRMD 157/1F PDL144M PDL144P PDL140F
Power failure data retention	Internal date/time retained for at least 6 hrs. Settings preserved indefinitely.

Environmental rating	IP20 (designed for indoor use only)
Operating humidity	5%–90% RH, non-condensing
Specifications typical at 25 °C	

Compliance

Safety	AS/NZS 3112
	AS/NZS 60669.2.1
EMC	AS/NZS 60669.2.1
RF	AS/NZS 4268

Compliance

Compliance information for Green Premium products

Find and download comprehensive information about Green Premium products, including RoHS compliance and REACH declarations as well as Product Environmental Profile (PEP) and End-of-Life instructions (EOL).

<https://checkaproduct.se.com/>



General information about Green Premium products

Click the link below to read about Schneider Electric's Green Premium product strategy.

<https://www.schneider-electric.com/en/work/support/green-premium/>



Trademarks

This guide makes reference to system and brand names that are trademarks of their relevant owners.

- Bluetooth® is a registered trademark of the Bluetooth Special Interest Group (SIG).
- Apple® and App Store® are brand names or registered trademarks of Apple Inc.
- Google Play™ Store and Android™ are brand names or registered trademarks of Google Inc.
- Wi-Fi® is a registered trademark of Wi-Fi Alliance®.
- Wiser™ is a trademark and the property of Schneider Electric, its subsidiaries and affiliated companies.

Other brands and registered trademarks are the property of their respective owners.

Schneider Electric (Australia) Pty Ltd
33-37 Port Wakefield Road
Gepps Cross SA 5094
Australia

Customer Care: 13 73 28

www.clipsal.com

As standards, specifications, and design change from time to time,
please ask for confirmation of the information given in this publication.

© 2024 – 2024 Schneider Electric. All rights reserved.

DUG_Iconic Connected Twin 10 A Socket_Pacific_WSE-00