

Easy UPS 3S

10-40 kVA 400 V & 10-20 kVA 208 V 3:3,
10-30 kVA 400 V 3:1

Operation

Latest updates are available on the Schneider Electric website
4/2025



Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.



Find the manuals here:
Trouvez les manuels ici:
在这里找到手册
Hier finden Sie die Handbücher:
Encuentre los manuales aquí:
Encontre os manuais aqui:



<https://www.productinfo.schneider-electric.com/easyups3s/>

Table of Contents

Important Safety Instructions — SAVE THESE INSTRUCTIONS	7
Electromagnetic Compatibility	8
Safety Precautions	8
Overview	9
User Interface	9
Display Interface	11
Menu Tree	11
Overview of Single UPS	13
Overview of 1+1 Redundant Parallel System with Common Battery Bank	14
Overview of Parallel System	15
Location of Breakers - 400 V Systems	18
Location of Breakers - 208 V Systems	22
Operation Modes	24
Operation Procedures	28
Initial Start-Up of the UPS Using the Wizard – Only Applicable to Single UPSs with Internal Batteries	28
Start-Up Checklist – Only Applicable to Single UPSs with Internal Batteries	29
Start Up a Single UPS in Normal Mode	29
Transfer a Single UPS from Normal Mode to Static Bypass Mode	31
Transfer a Single UPS from Static Bypass Mode to Normal Mode	32
Transfer a Single UPS from Normal Mode to Maintenance Bypass Mode	32
Transfer a Single UPS from Maintenance Bypass Mode to Normal Mode	33
Transfer a Parallel System from Normal Mode to Maintenance Bypass Mode	34
Transfer a Parallel System from Maintenance Bypass Mode to Normal Mode	35
Isolate a Single UPS from the Parallel System	36
Start Up and Add a UPS to a Running Parallel System	37
Configuration	39
Register Your Easy UPS 3S	39
Set the Display Language	39
Set the Date and Time	40
Set the UPS Settings	40
Set the Battery Settings	41
Recommended Settings for 400 V UPSs with Internal Batteries and Modular Battery Cabinets	42
Recommended Settings for 208 V UPSs with Internal Batteries and Modular Battery Cabinets	45
Set the Life Cycle Monitoring	47
Settings	47
Tests	49
Perform a Battery Maintenance Test	49

- Perform a Battery Test49
- Maintenance50
 - Parts Replacement50
 - Determine if you need a Replacement Part50
 - Replace the Dust Filter50
- Troubleshooting53
 - View the Active Alarms.....53
 - Buzzer53
 - Status and Alarm Messages53
- Appendix: Switch/Breaker Details58

Important Safety Instructions — SAVE THESE INSTRUCTIONS

Read these instructions carefully and look at the equipment to become familiar with it before trying to install, operate, service or maintain it. The following safety messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety message indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages with this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

Failure to follow these instructions will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

Failure to follow these instructions can result in injury or equipment damage.

NOTICE

NOTICE is used to address practices not related to physical injury. The safety alert symbol shall not be used with this type of safety message.

Failure to follow these instructions can result in equipment damage.

Please Note

Electrical equipment should only be installed, operated, serviced, and maintained by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Per IEC 62040-1: "Uninterruptible power systems (UPS) -- Part 1: Safety Requirements," this equipment, including battery access, must be inspected, installed and maintained by a skilled person.

The skilled person is a person with relevant education and experience to enable him or her to perceive risks and to avoid hazards which the equipment can create (reference IEC 62040-1, section 3.102).

Electromagnetic Compatibility

NOTICE

RISK OF ELECTROMAGNETIC DISTURBANCE

This is a product Category C3 according to IEC 62040-2. This is a product for commercial and industrial applications in the second environment - installation restrictions or additional measures may be needed to prevent disturbances. The second environment includes all commercial, light industry, and industrial locations other than residential, commercial, and light industrial premises directly connected without intermediate transformer to a public low-voltage mains supply. The installation and cabling must follow the electromagnetic compatibility rules, e.g.:

- the segregation of cables,
- the use of shielded or special cables when relevant,
- the use of grounded metallic cable tray and supports.

Failure to follow these instructions can result in equipment damage.

Safety Precautions

⚡⚠ DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

All safety instructions in this document must be read, understood and followed.

Failure to follow these instructions will result in death or serious injury.

⚡⚠ DANGER


HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

After the UPS system has been electrically wired, do not start up the system. The start-up requirements depend on the installation country. For countries with bundled start-up service, start-up must be performed by Schneider Electric.

Failure to follow these instructions will result in death or serious injury.

Overview

User Interface

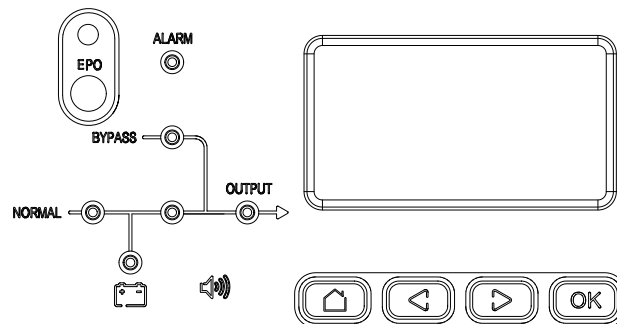

Keys

Home	Previous	Next	Confirm

EPO

Only use the EPO button in case of emergency.

It can be configured whether, when the EPO is activated, the UPS should:

- turn off the rectifier, inverter, charger, and static bypass and stop supplying the load immediately (default), or
- transfer to static bypass mode and continue supplying the load.


⚡⚠ DANGER









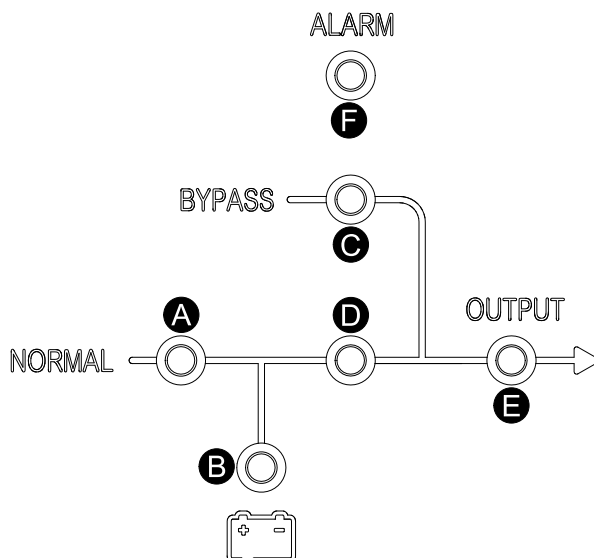








HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH









The UPS control circuit will remain active after the EPO has been pushed if utility/mains is available.

Failure to follow these instructions will result in death or serious injury.

Status LEDs




	LED	Status
A	Rectifier	<p>Green : Rectifier is working correctly.</p> <p>Flashing green : Rectifier is starting up.</p> <p>Red : Rectifier is inoperable.</p> <p>Flashing red : Utility/mains is unavailable.</p> <p>OFF : Rectifier is off.</p>
B	Battery	<p>Green : Battery is charging.</p> <p>Flashing green : Battery is discharging.</p> <p>Red : Battery is inoperable.</p> <p>Flashing red : Battery low voltage.</p> <p>OFF : Battery and battery charger are OK, battery is not charging or discharging.</p>
C	Bypass	<p>Green : Load supplied by bypass source.</p> <p>Red : Bypass source is unavailable or static bypass switch is inoperable.</p> <p>Flashing red : Bypass voltage is out of tolerance.</p> <p>OFF : Bypass source is OK.</p>
D	Inverter	<p>Green : Load supplied by inverter.</p> <p>Flashing green : Inverter on, start, synchronization or standby (ECO mode).</p> <p>Red : Load not supplied by inverter, inverter is inoperable.</p>





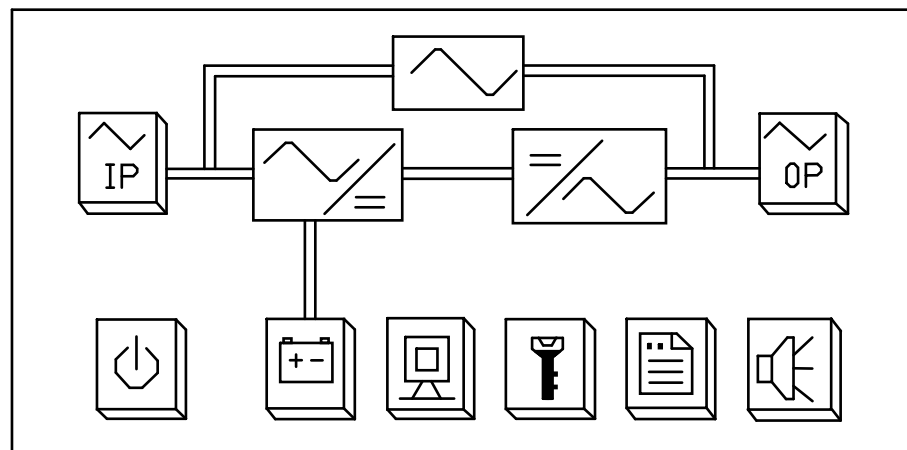



	LED	Status
		<p>Flashing red : Load supplied by inverter, but an inverter alarm is present.</p> <p>OFF : Inverter is off.</p>
E	Load	<p>Green : UPS output is on.</p> <p>Red : Overload on UPS output for too long, or output has shorted, or no output power present.</p> <p>Flashing red : Overload on UPS output.</p> <p>OFF : UPS output is off.</p>
F	Status	<p>Green : UPS is OK.</p> <p>Red : Inoperable status.</p>

Display Interface

Home Screen




Buttons

							
Power On/ Off	Input and bypass status information	Output status information	Battery status information	UPS status	Function settings	Log	Mute

Menu Tree

Tap the main menu button on the home screen to access the menus.

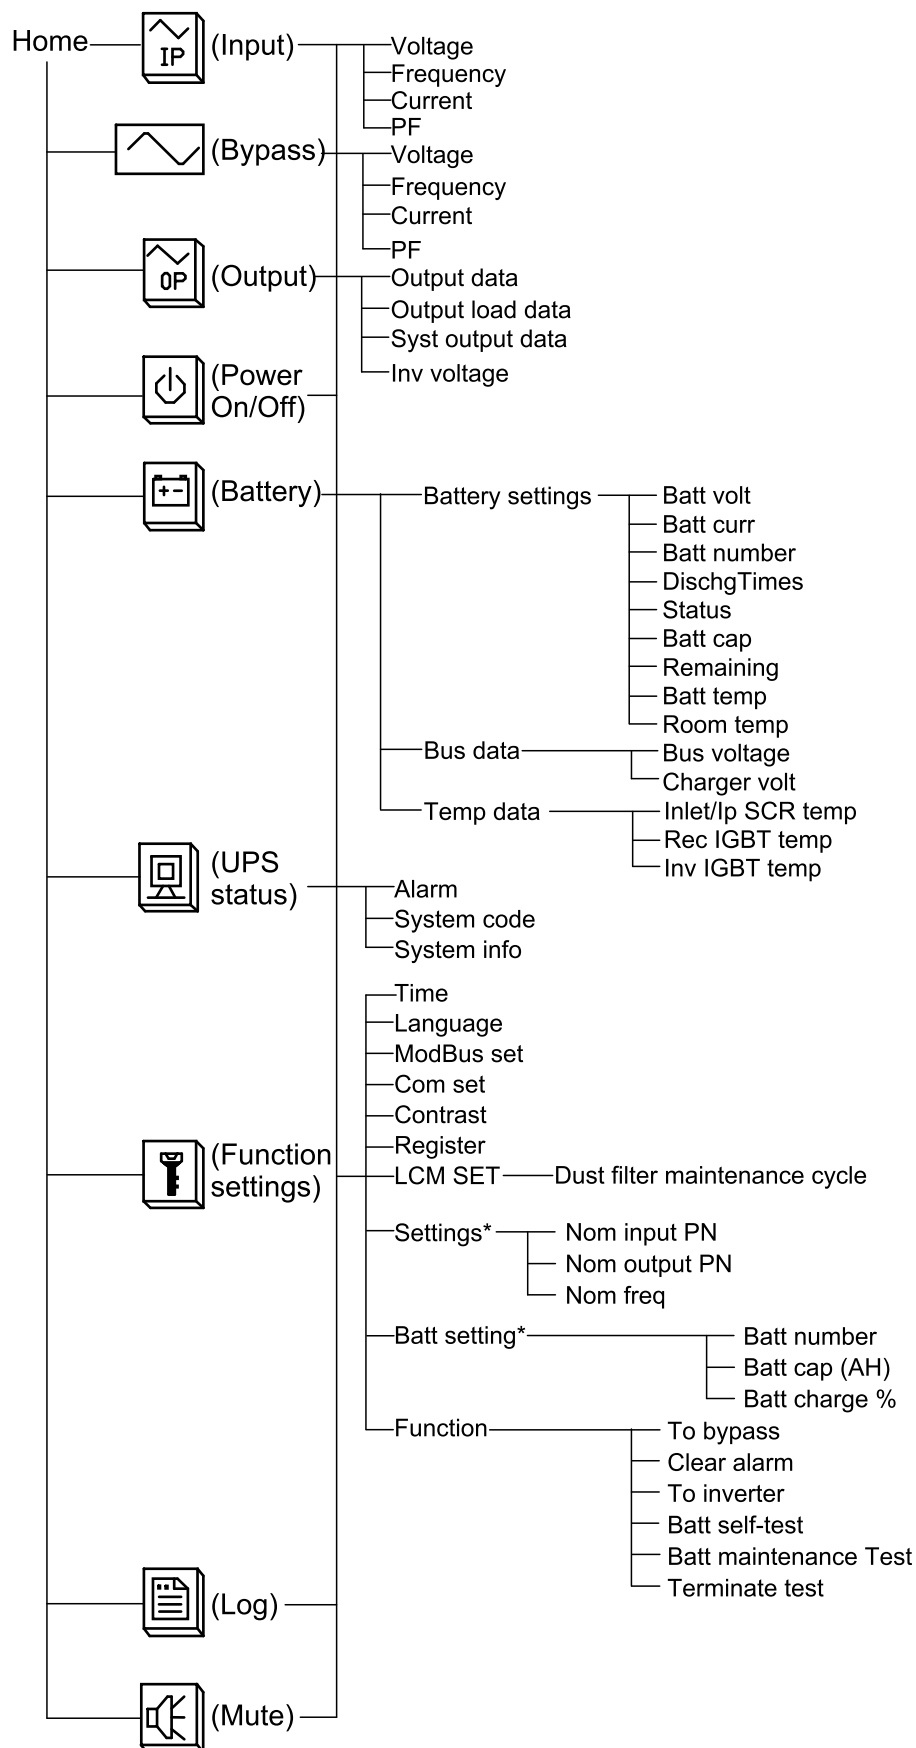


* This menu requires administrator login to access.

Some menus contain more submenus than described in this manual. These submenus are grayed out and are only for use by Schneider Electric to avoid unwanted load impacts. Other menu items can also be grayed out/not shown on the display if they are not relevant or not released yet for this particular UPS system.

Overview of Single UPS

UIB	Unit input breaker/switch
SSIB	Static switch input breaker/switch
UOB	Unit output breaker/switch
MBB	Maintenance bypass breaker/switch
BB	Battery breaker/switch

NOTE: Refer to Appendix: Switch/Breaker Details, page 58 for the disconnecting device type.

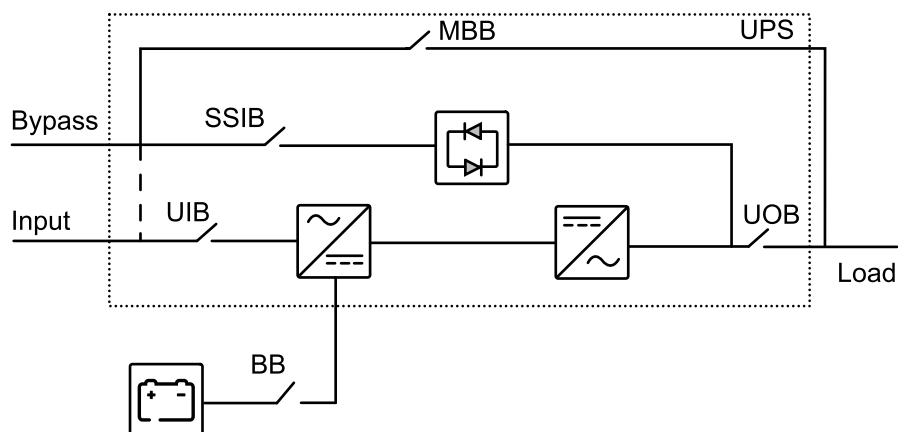


Overview of 1+1 Redundant Parallel System with Common Battery Bank

MIB	Mains input breaker/switch
BIB	Bypass input breaker/switch
UIB	Unit input breaker/switch
SSIB	Static switch input breaker/switch
UOB	Unit output breaker/switch
Ext. UOB	External unit output breaker/switch
MBB	Maintenance bypass breaker/switch
Ext. MBB	External maintenance bypass breaker/switch
BB1	Battery breaker/switch 1
BB2	Battery breaker/switch 2

NOTE: Refer to Appendix: Switch/Breaker Details, page 58 for the disconnecting device type.

NOTE: For UPS with internal batteries, the batteries must be removed and the internal battery breaker (BB) must be padlocked in the open (OFF) position.

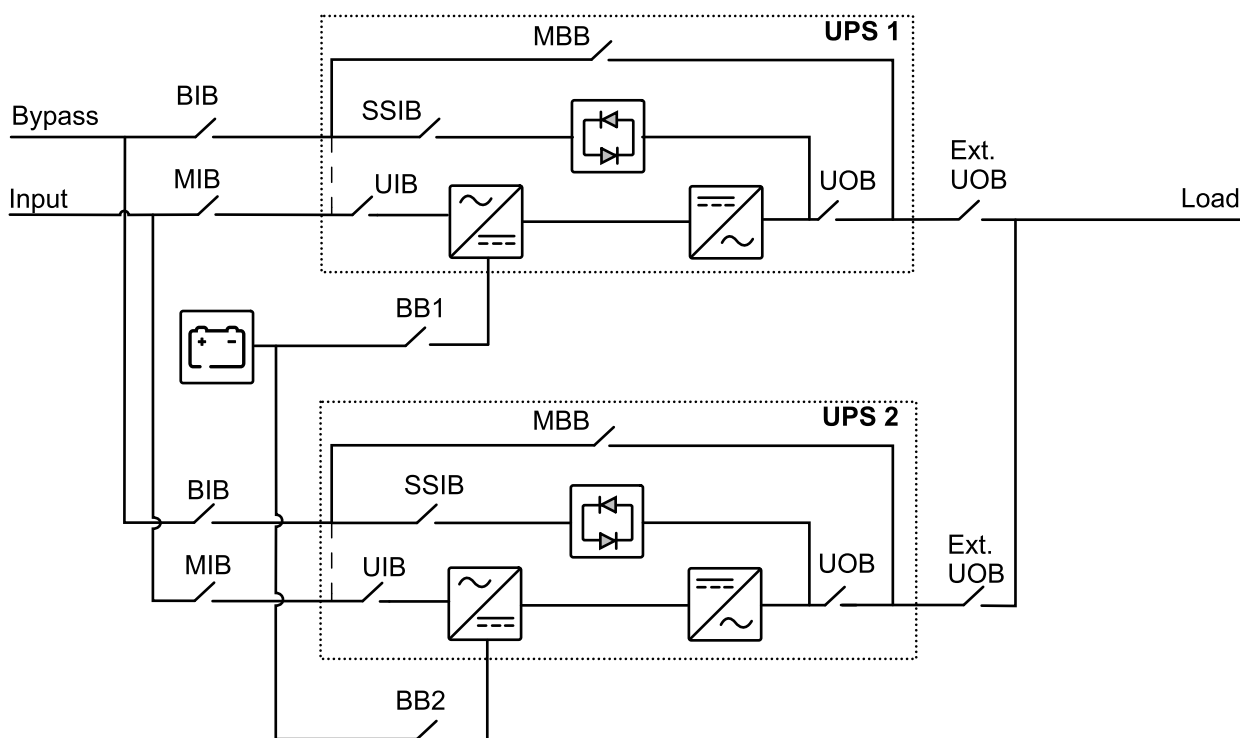


Overview of Parallel System

MIB	Mains input breaker/switch
BIB	Bypass input breaker/switch
UIB	Unit input breaker/switch
SSIB	Static switch input breaker/switch
UOB	Unit output breaker/switch
Ext. UOB	External unit output breaker/switch
MBB	Maintenance bypass breaker/switch
Ext. MBB	External maintenance bypass breaker/switch
SIB	System isolation breaker/switch
BB	Battery breaker/switch


NOTE: Refer to [Appendix: Switch/Breaker Details](#), page 58 for the disconnecting device type.

NOTE: In parallel systems with an external maintenance bypass breaker Ext. MBB, the maintenance bypass breakers/switches MBB must be padlocked in the open (OFF) position.

UPSs for External Batteries

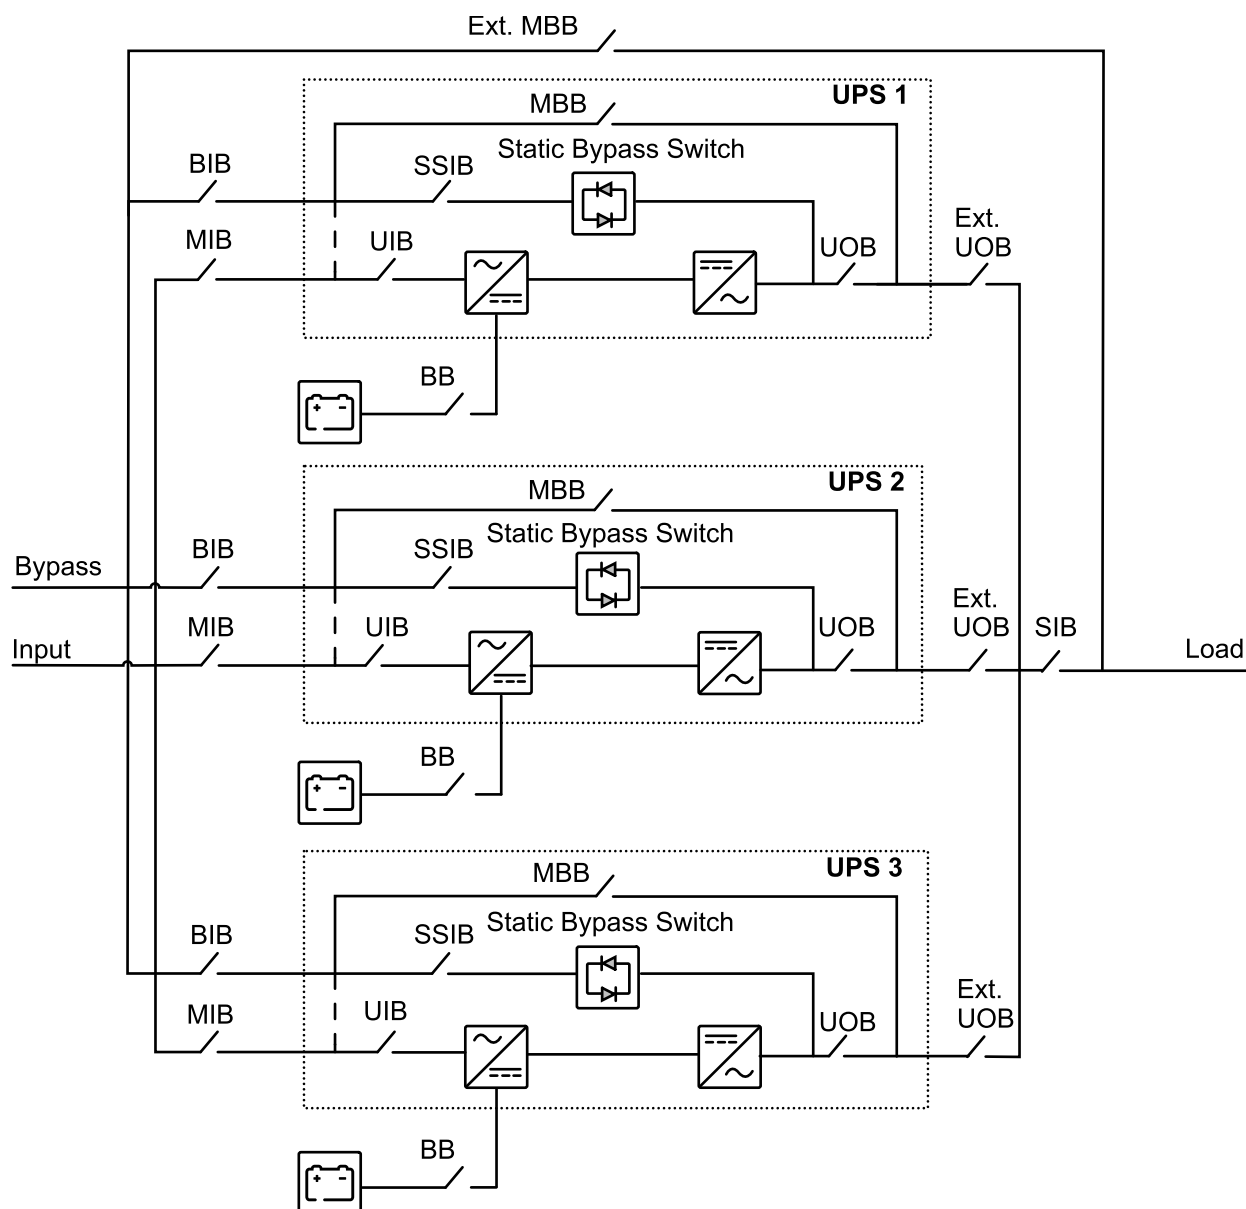

UPSs for Internal Batteries

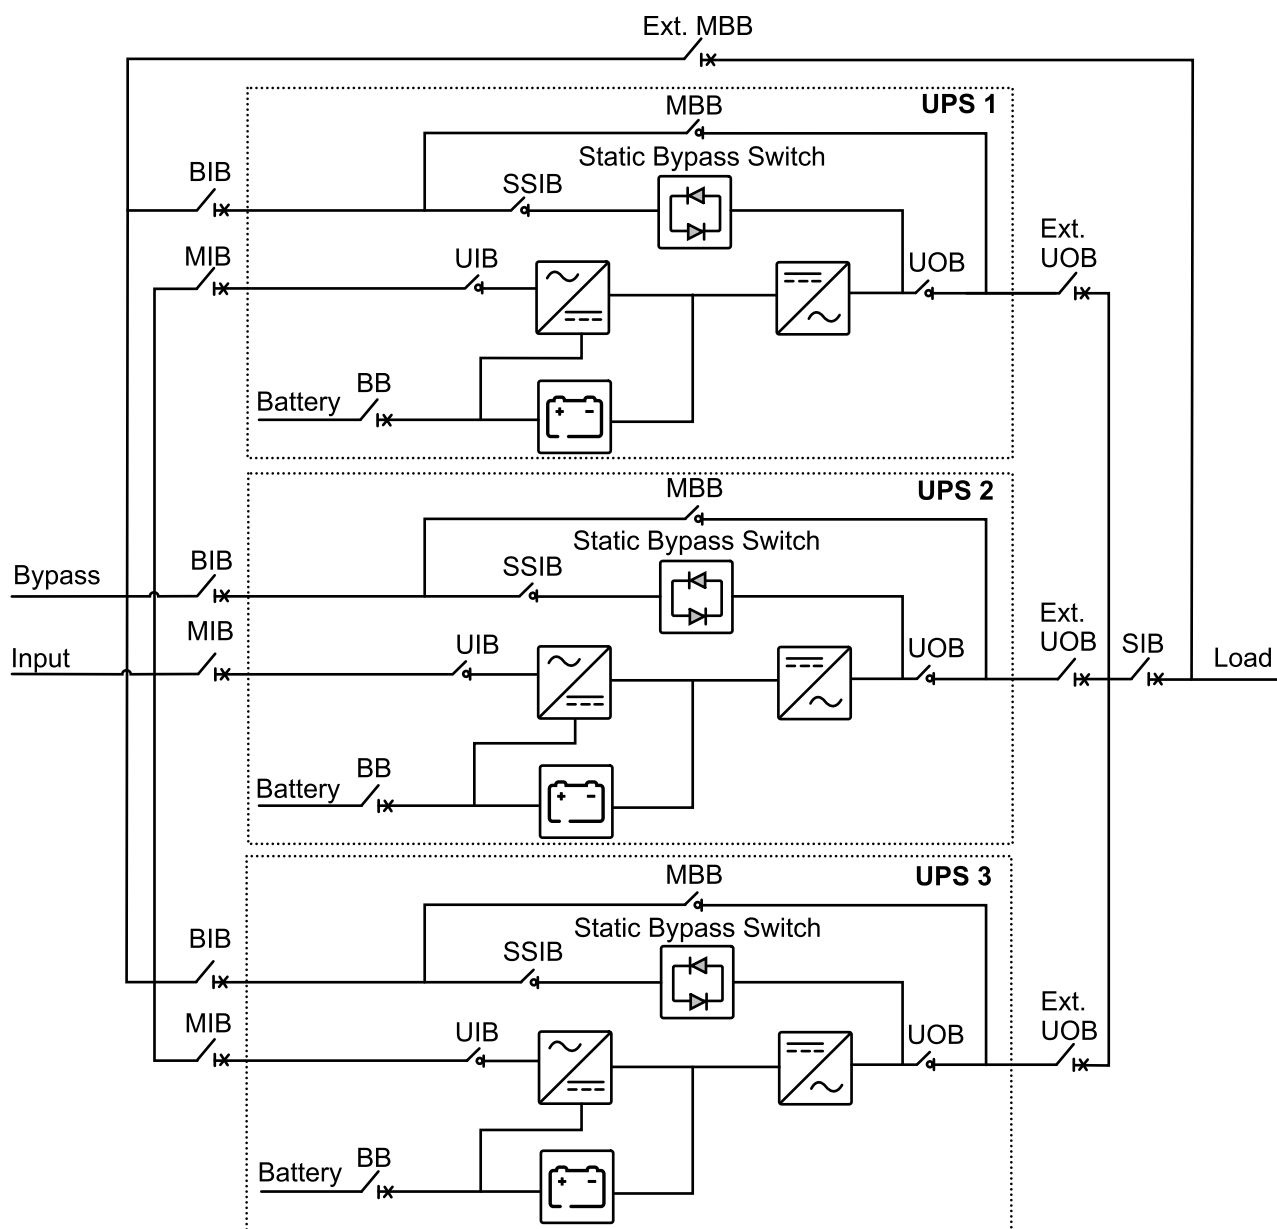

The impedance of the bypass paths need to be controlled in a parallel UPS system. When operating in bypass mode, the parallel load sharing is determined by the total impedance of the bypass path comprising cables, switchgear, static bypass switch, and cable formation.

NOTICE

RISK OF EQUIPMENT DAMAGE

To ensure correct load sharing in bypass operation in a parallel system, the following recommendations apply:

- The bypass cables must be the same length for all UPSs.
- The output cables must be the same length for all UPSs.
- The input cables must be the same length for all UPSs in a single mains system.
- Cable formation recommendations must be followed.
- The reactance of busbar layout in the bypass/input and output switchgear must be the same for all UPSs.


If the above recommendations are not followed the result can be uneven load sharing in bypass and overload of individual UPSs.

Failure to follow these instructions can result in equipment damage.


Location of Breakers - 400 V Systems





Location of Breakers in 3:3 UPSs



Rear View of the 10–15 kVA UPS for External Batteries

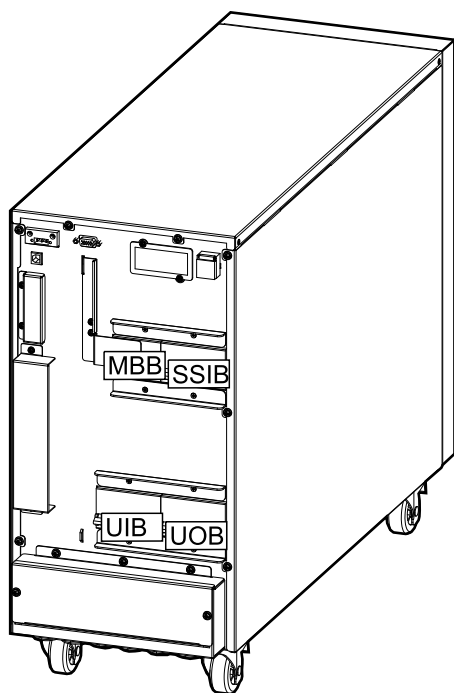



Rear View of the 10–15 kVA UPS with Internal Batteries




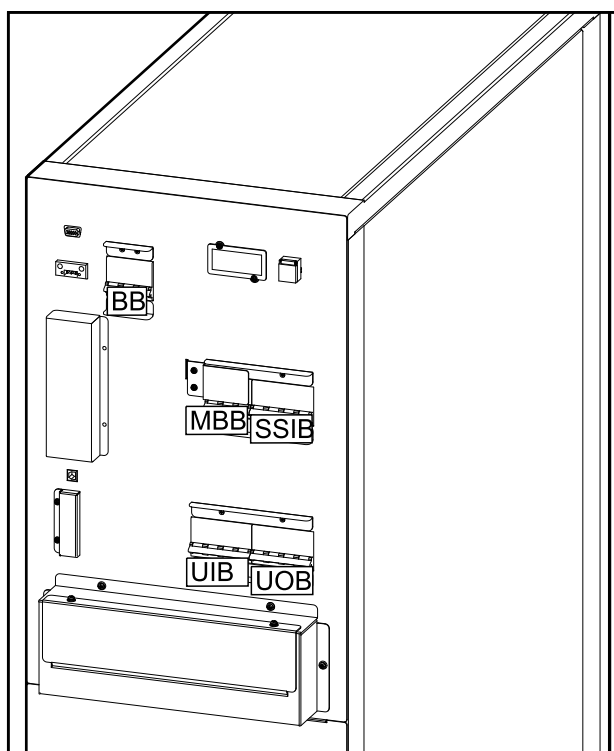


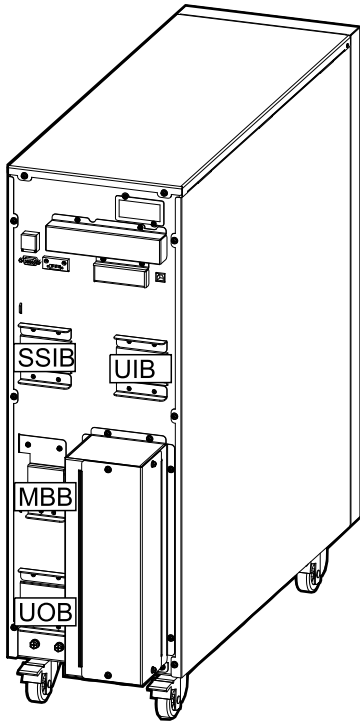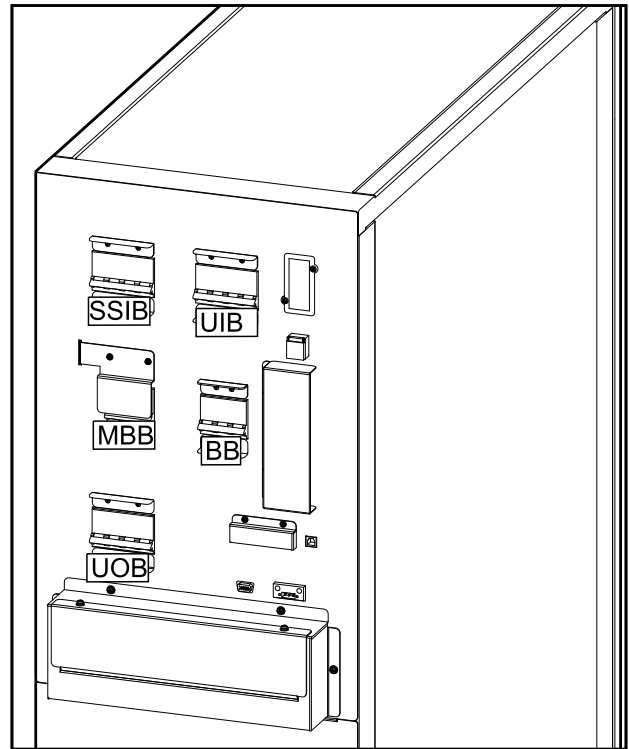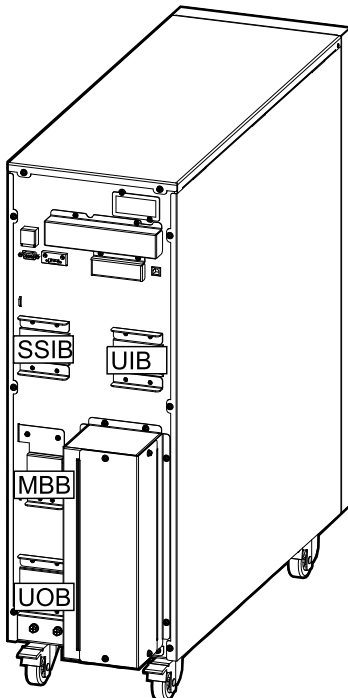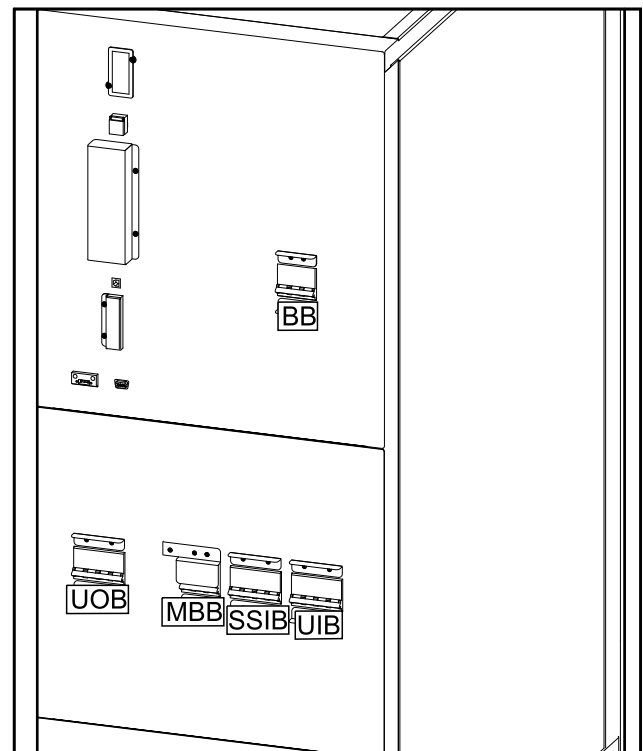Rear View of the 20 kVA UPS for External Batteries**Rear View of the 20 kVA UPS with Internal Batteries****Rear View of the 30 kVA UPS for External Batteries****Rear View of the 30 kVA UPS with Internal Batteries**

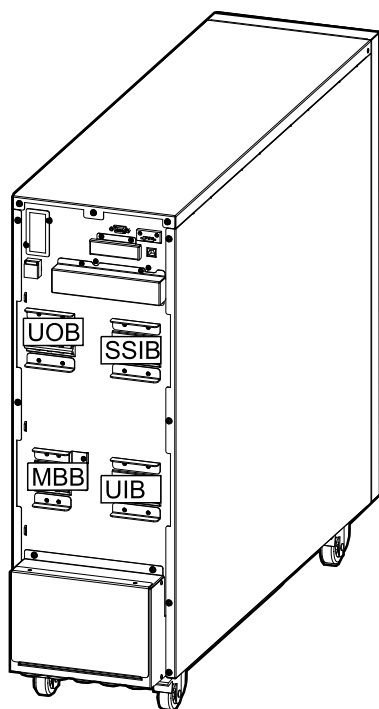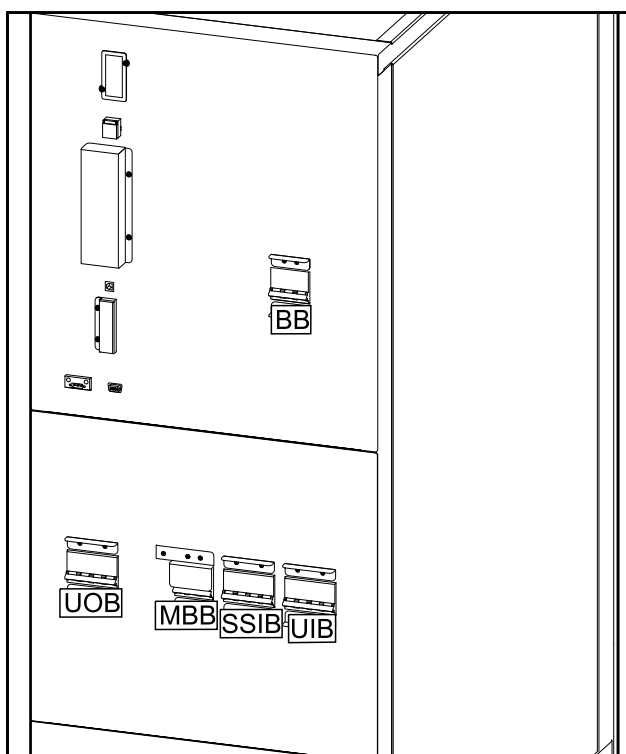Rear View of the 40 kVA UPS for External Batteries**Rear View of the 40 kVA UPS with Internal Batteries**

Location of Breakers in 3:1 UPSs

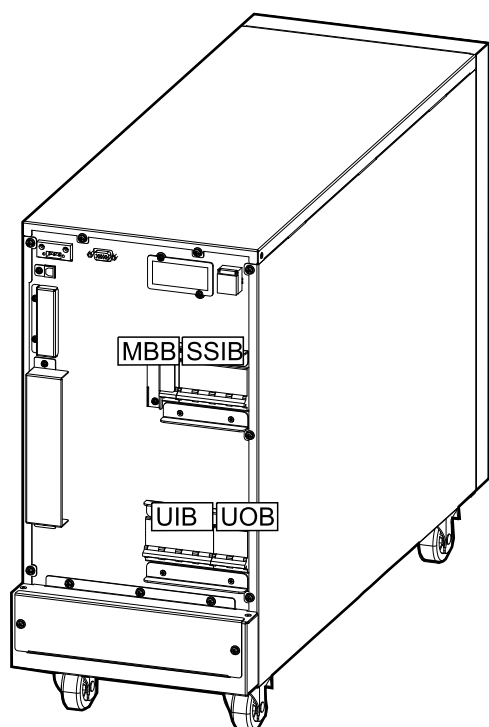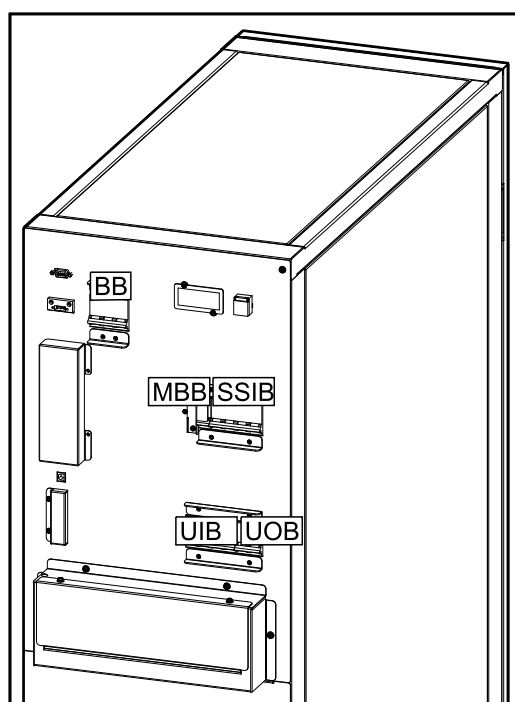
Rear View of the 10–15 kVA UPS for External Batteries**Rear View of the 10–15 kVA UPS with Internal Batteries**

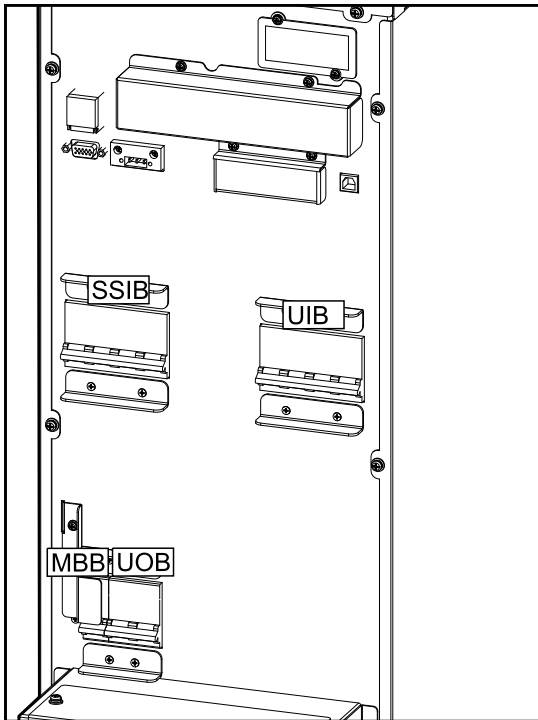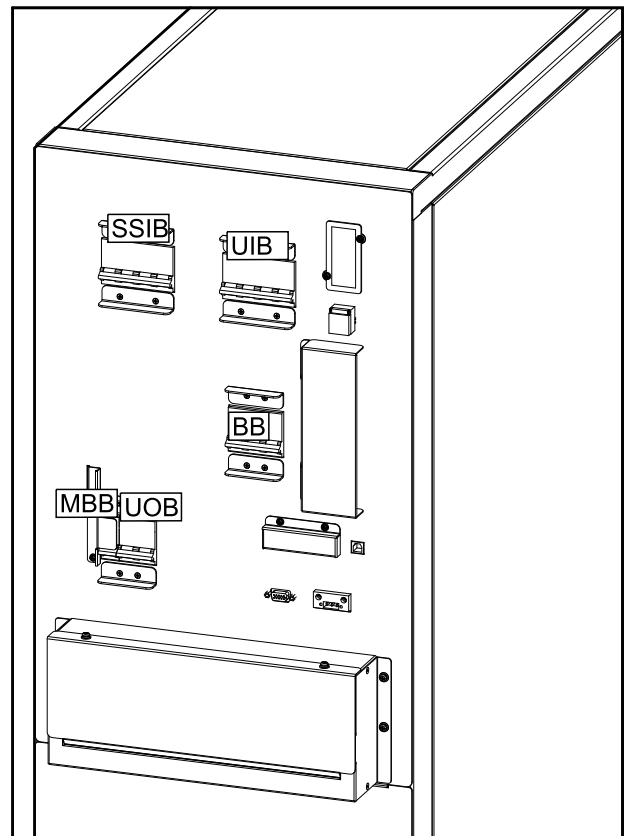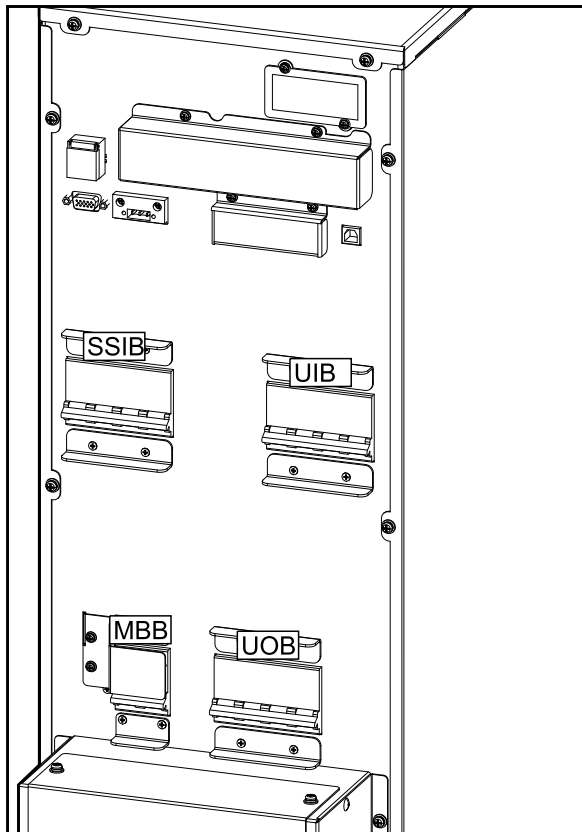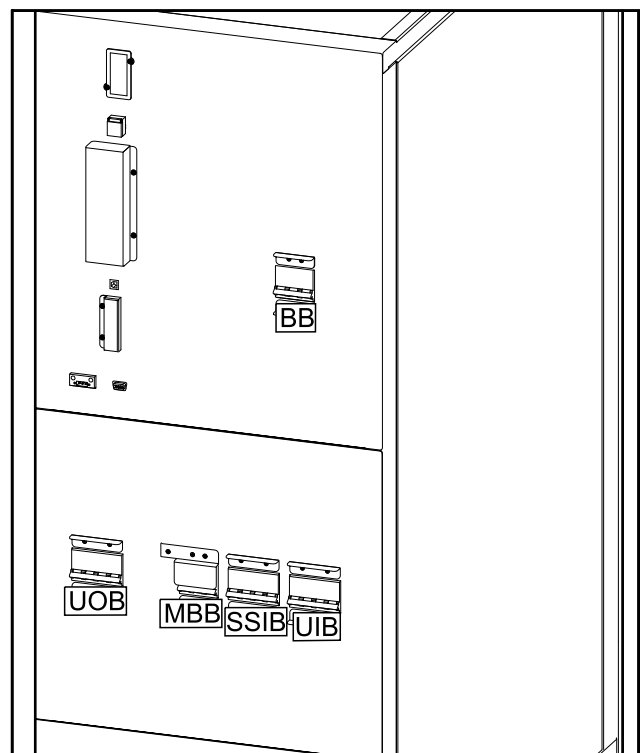Rear View of the 20 kVA UPS for External Batteries**Rear View of the 20 kVA UPS with Internal Batteries****Rear View of the 30 kVA UPS for External Batteries****Rear View of the 30 kVA UPS with Internal Batteries**


Location of Breakers - 208 V Systems

Location of Breakers in 3:3 UPSs


Rear View of the 10 kVA UPS for External Batteries

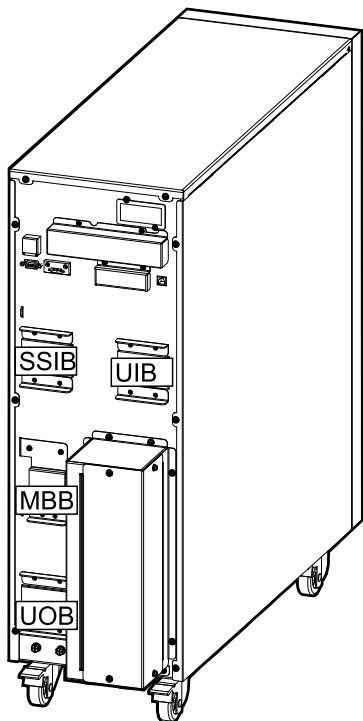


Rear View of the 10 kVA UPS with Internal Batteries


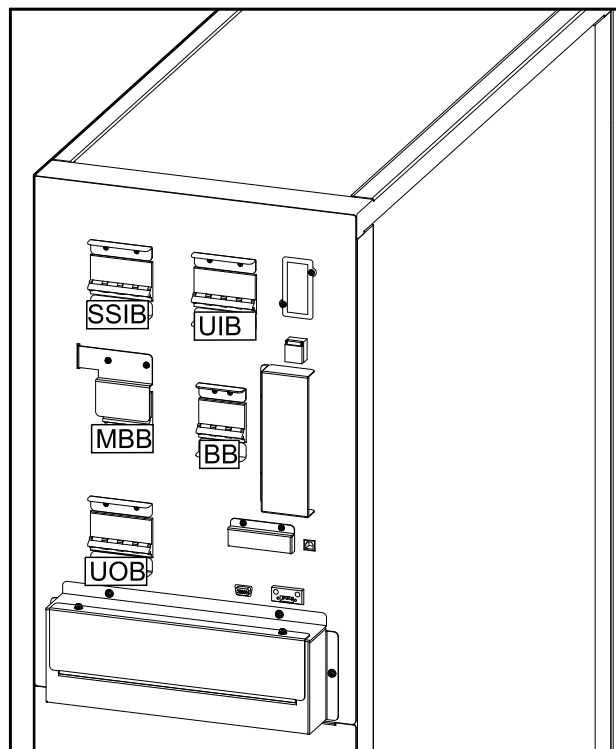


Rear View of the 15 kVA UPS for External Batteries

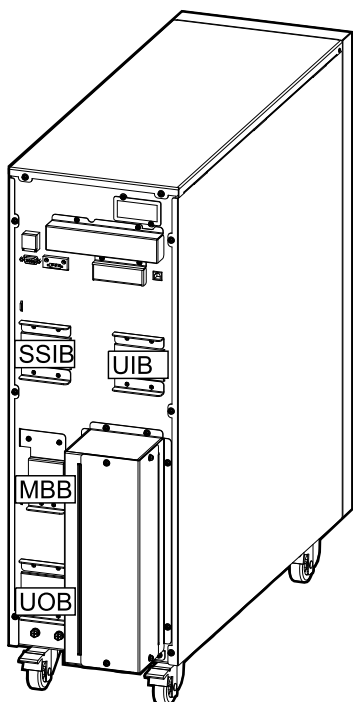

Rear View of the 15 kVA UPS with Internal Batteries

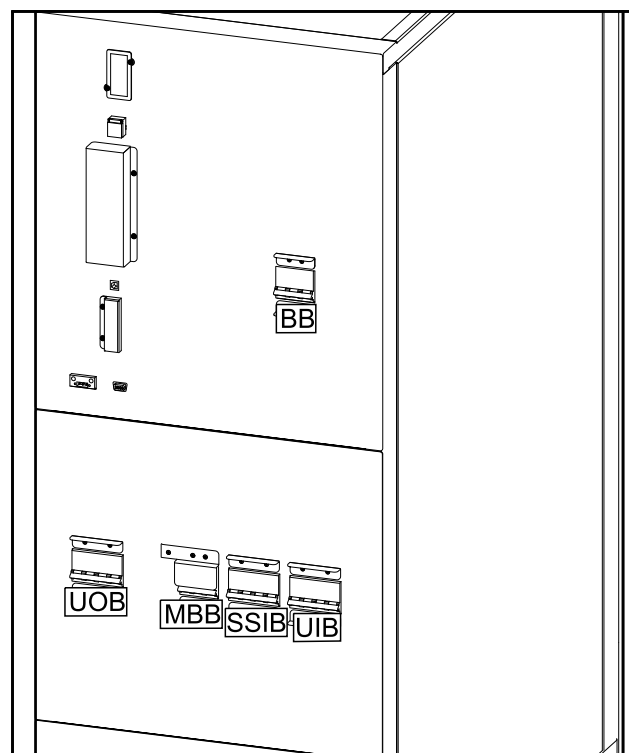

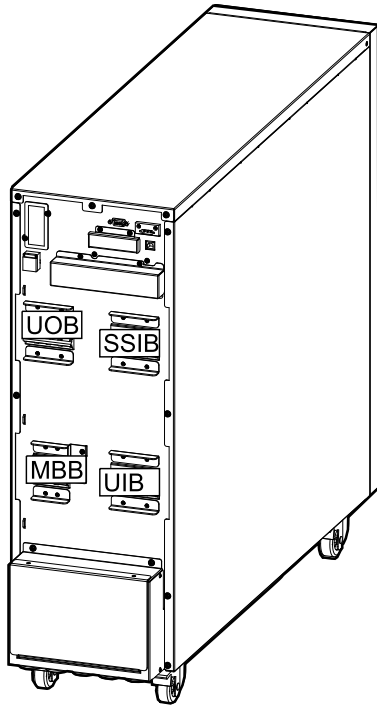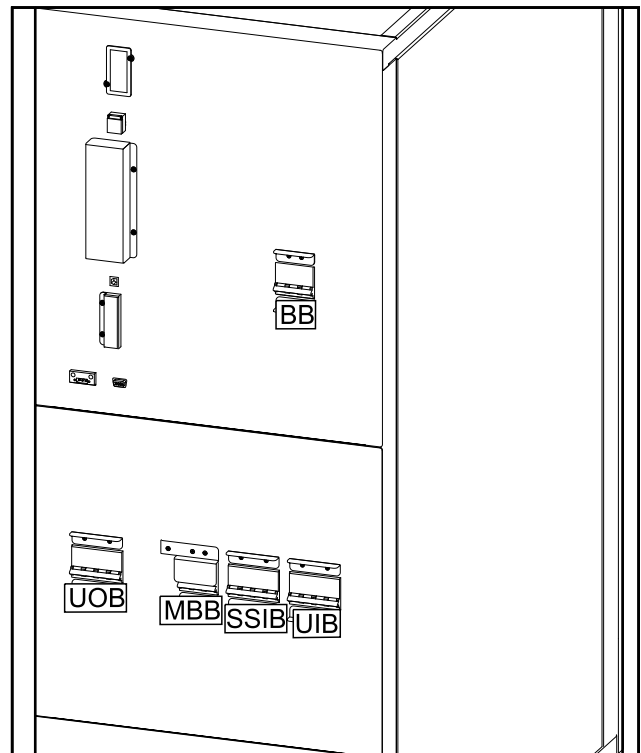
Rear View of the 20 kVA UPS for External Batteries**Rear View of the 20 kVA UPS with Internal Batteries**

Operation Modes


Normal Mode

The UPS provides power to the connected load from mains. The UPS converts mains to conditioned power for the connected load while recharging the batteries (float or boost charge).

LED Status

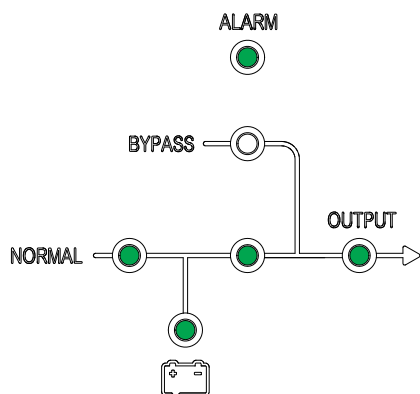



Power Flow

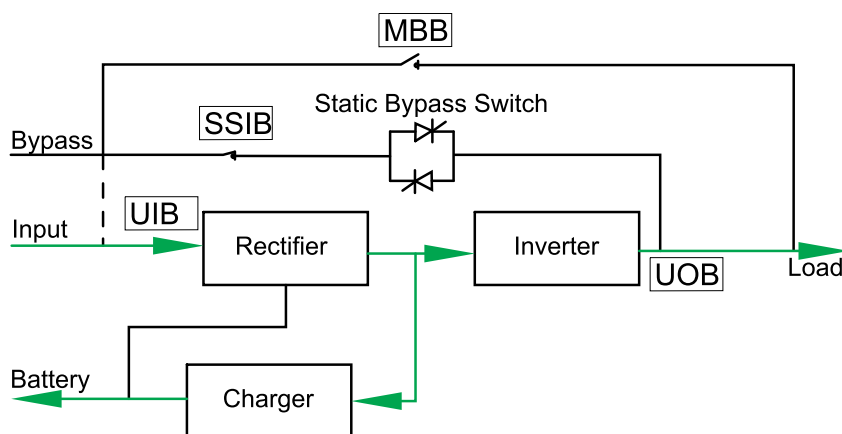

Battery Mode



The UPS transfers to battery mode if the mains supply fails. The UPS provides power to the connected load from the connected batteries for a finite period. When the mains supply returns, the UPS transfers back to normal mode.

LED Status

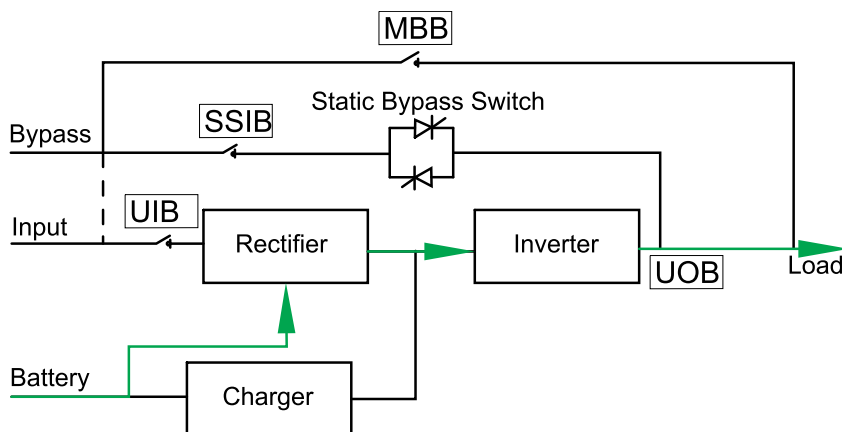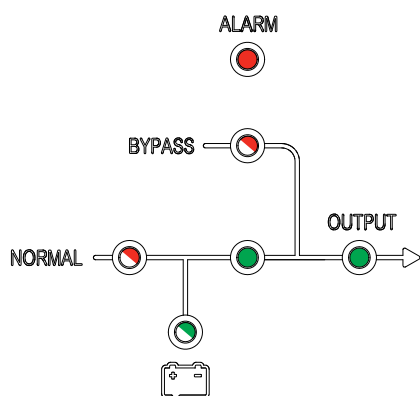



Static Bypass Mode

The UPS supplies the load with power from the bypass source. If the conditions for normal or battery mode are not met, the load will be transferred from the inverter to the bypass source with no interruption in power to the load.

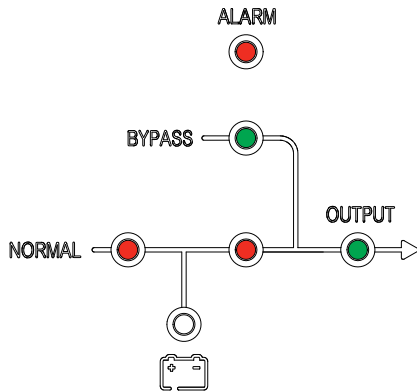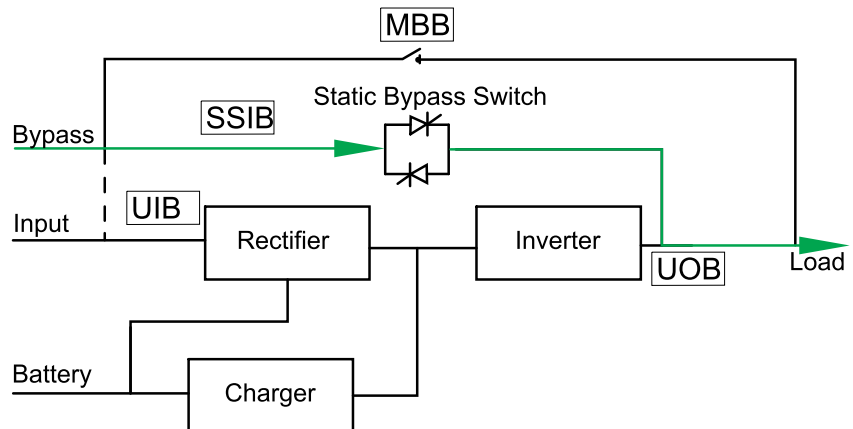LED Status**Power Flow**

Maintenance Bypass Mode



In maintenance bypass mode, the mains is sent via the external MBB to the load. Battery backup is not available in maintenance bypass mode.

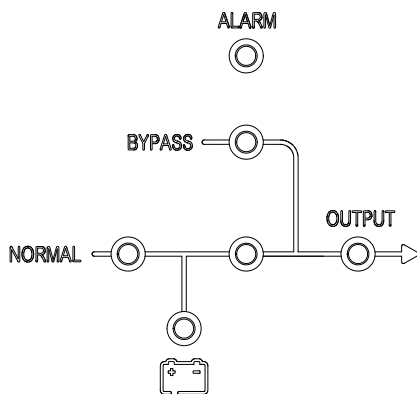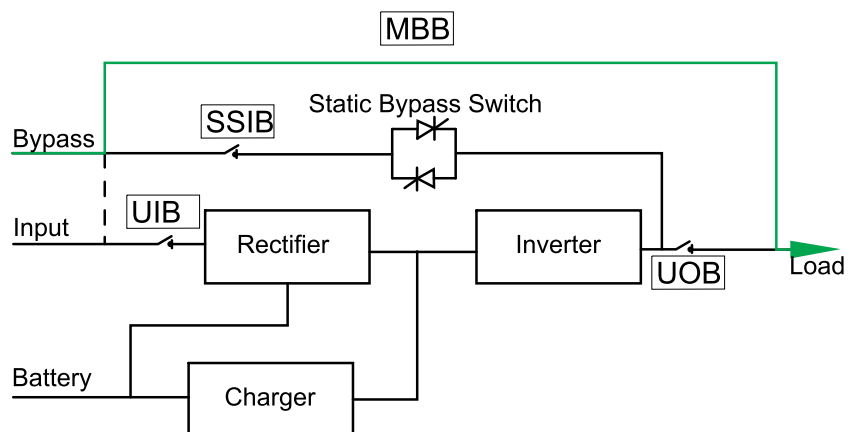LED Status**Power Flow**

ECO Mode

In ECO mode the UPS is configured to use static bypass mode as the preferred operation mode under predefined circumstances. The inverter is in standby in ECO mode and in case of interruption to the mains, the UPS transfers to battery mode and the load is supplied from the inverter.

NOTE: This mode is disabled by default, please contact Schneider Electric to enable this mode. If ECO mode is enabled, you cannot exit this operation mode by using the display, please also contact Schneider Electric for assistance.

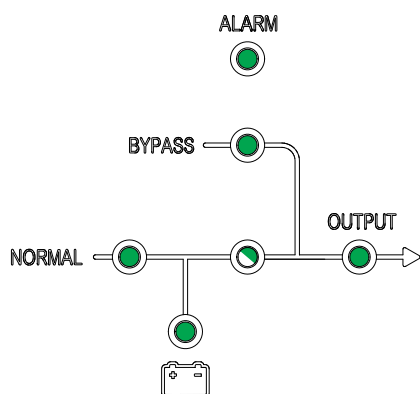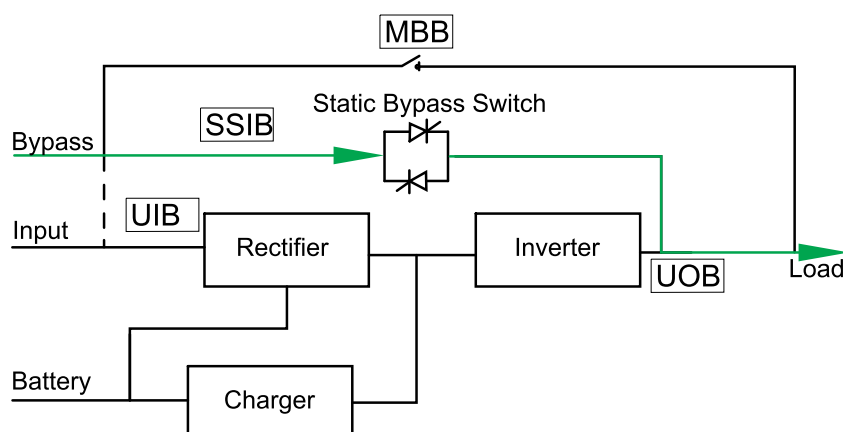LED Status**Power Flow**

Autostart Mode

The batteries will reach end of discharge if the interruption to the mains is longer than the battery runtime. If the UPS is programmed to auto-restart after end of discharge, the system will automatically restart after a delay when the mains returns.

NOTE: If autostart is disabled, the inverter and bypass will not restart automatically when the mains return.

Frequency Converter Mode

In frequency converter mode, the UPS presents a stable output frequency (at 50 or 60 Hz) and the static bypass switch is not available.



NOTICE

RISK OF EQUIPMENT DAMAGE OR LOAD DROP

In frequency converter mode the UPS cannot run in static bypass or maintenance bypass mode. Before turning the UPS into frequency converter mode, you must contact a Schneider Electric-certified partner to make sure

- the SSIB and the MBB are in the OFF (opened) position (Schneider Electric strongly recommends to lock these with a padlock available from Schneider Electric)
- no cables are connected to the bypass terminals

Failure to follow these instructions can result in equipment damage.

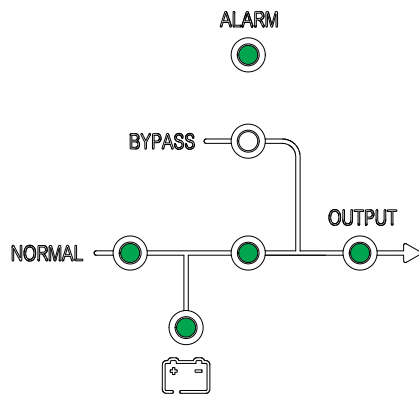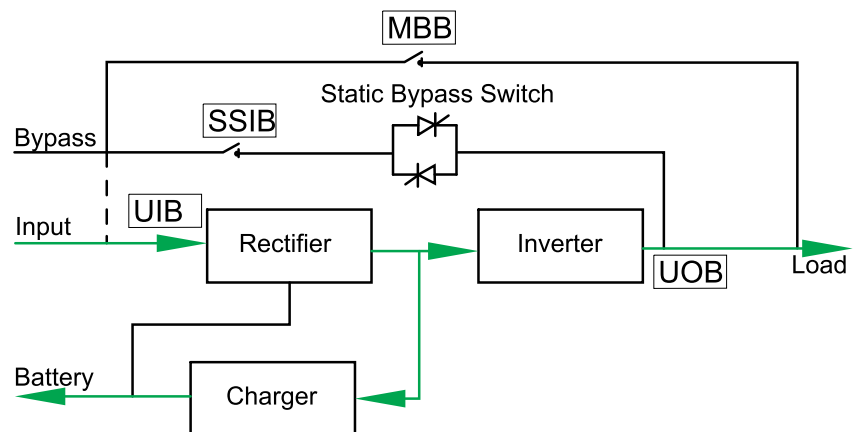LED Status**Power Flow**

Operation Procedures

Initial Start-Up of the UPS Using the Wizard – Only Applicable to Single UPSs with Internal Batteries

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Parallel systems and UPSs for external batteries must only be started up by Schneider Electric.

Failure to follow these instructions will result in death or serious injury.

Before starting up the UPS, confirm that:

- The room temperature is between 0 °C to 40 °C
 - The UPS has been installed according to the specified clearance dimensions.
1. Turn the unit input breaker UIB to the ON (closed) position.
The display turns on.
 2. Select to register the UPS or select **Skip** to continue. See [Register Your Easy UPS 3S](#), page 39 for more information.
 3. When the **Change language** prompt appears, do one of the following:
 - Select **Yes** and select the preferred language using the navigation keys. Select **Yes** again to confirm.
 - Select **No** to keep the current selection.
 4. When the **Change voltage** prompt appears, do one of the following:
 - Select **Yes** and select the preferred voltage using the navigation keys. Select **Yes** again to confirm.
 - Select **No** to keep the current selection.
 5. When the **Change freq.** prompt appears, do one of the following:
 - Select **Yes** and select the preferred output frequency using the navigation keys. Select **Yes** again to confirm.
 - Select **No** to keep the current selection.
 6. When the **Change mode** prompt appears, do one of the following:
 - Select **Yes** and select **Normal mode**, **Parallel mode**, or **Frequency converter mode** using the navigation keys. Select **Yes** again to confirm.
 - Select **No** to keep the current selection.
 7. When the **Change Batt setting** prompt appears, perform the following steps:
 - a. **Enter password:** Enter the password 2334.
 - b. **Batt number:** For IEC regions that utilize a voltage of **208 V**: Verify the number of battery blocks is 20; For IEC regions that utilize a voltage of **400 V**: Verify the number of battery blocks is 40.
 - c. **Batt cap (AH):** Set the battery capacity to according to your battery configuration.
 - d. **Batt charge %:** Set the battery charge percentage (between 1% and 15%).
 - e. Select **Yes** to save the battery settings.
 8. When the **Save new settings** prompt appears, select **Yes**.

9. When the **Disable wizard** prompt appears, do one of the following:

- Select **Yes** to disable the wizard and go to the default screen.

NOTE: Schneider Electric recommends to disable the wizard to allow for automatic start.

- Select **No** to go to the default screen without disabling the wizard.

Post-requisite: For systems with internal batteries, go to [Set the Battery Settings](#), page 41.

Start-Up Checklist – Only Applicable to Single UPSs with Internal Batteries

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Parallel systems and UPSs for external batteries must only be started up by Schneider Electric.

Failure to follow these instructions will result in death or serious injury.

- I have positioned the UPS according to the installation manual and the recommended clearances are respected.
- I have verified that the environmental conditions including temperature, humidity, and airflow stated in the installation manual are respected.
- I have verified that the input voltage and frequency are within the tolerances specified in the installation manual.
- I have verified that the upstream protection is in accordance with the recommendations in the installation manual and that the power cables have been connected correctly.
- I have installed the batteries as specified in the installation manual.
- I have followed the [Initial Start-Up of the UPS Using the Wizard – Only Applicable to Single UPSs with Internal Batteries](#), page 28.
- I have made all settings (including battery settings and life cycle monitoring) described in this manual.
- I have completed all functional tests successfully (normal mode, battery mode, and static bypass mode).
- I have successfully entered the UPS passcode provided by Schneider Electric.
- I confirm the installation has been completed and the UPS is running in normal mode and is powering the load.

Start Up a Single UPS in Normal Mode


NOTE: When the UPS starts, the stored settings will be used.

NOTE: The log can be accessed during start-up.

1. Check that all breakers are in the OFF (open) position.
2. Turn the static switch input breaker SSIB to the ON (closed) position.
The display turns on and the Home screen is shown.


3. Turn the unit output breaker UOB to the ON (closed) position.

Wait approximately 2030 seconds until the bypass and output LEDs turn green. The UPS starts up in static bypass mode.

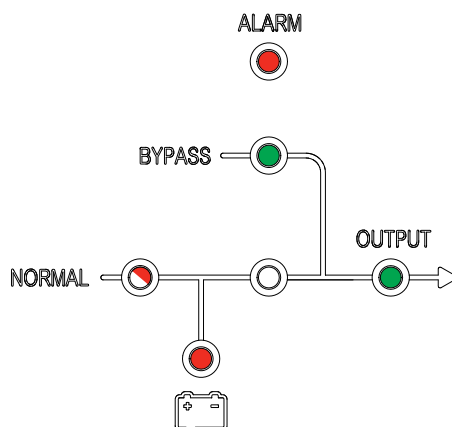


4. Turn the unit input breaker UIB to the ON (closed) position.

The rectifier ramps up and the LEDs on the user interface show as follows:

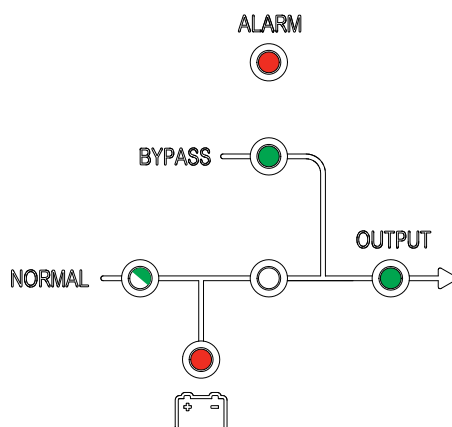


5. When the rectifier LED turns steady green, the inverter synchronizes with bypass.

The LEDs on the user interface show as follows:

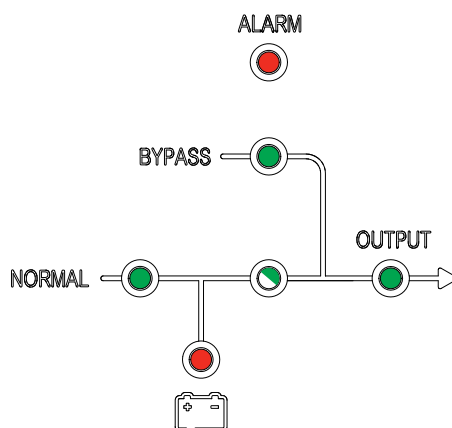


6. Wait approximately one minute until the inverter LED turns steady green, the UPS transfers automatically from static bypass mode to normal mode.

The LEDs on the user interface show as follows:

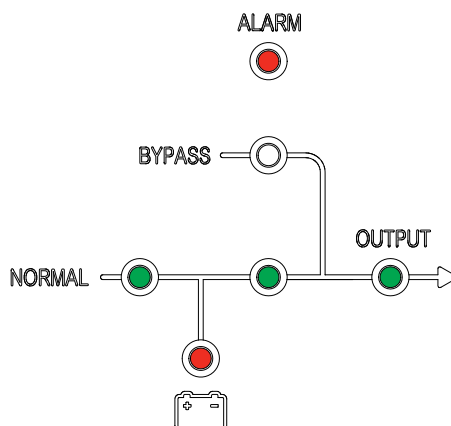


7. Turn the battery breaker(s) BB to the ON (closed) position.

The LEDs on the user interface show as follows:

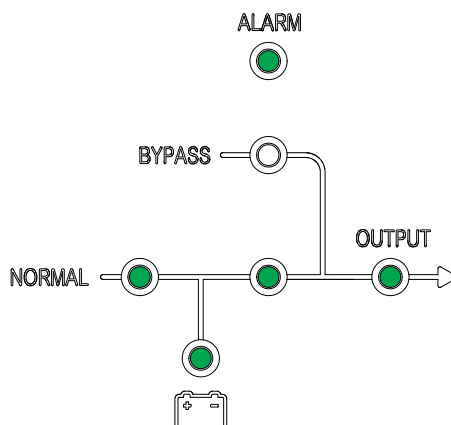


The UPS is now in normal mode.

Transfer a Single UPS from Normal Mode to Static Bypass Mode

1. On the display, select  and then select **Function > To bypass**.

The LEDs on the user interface show as follows:

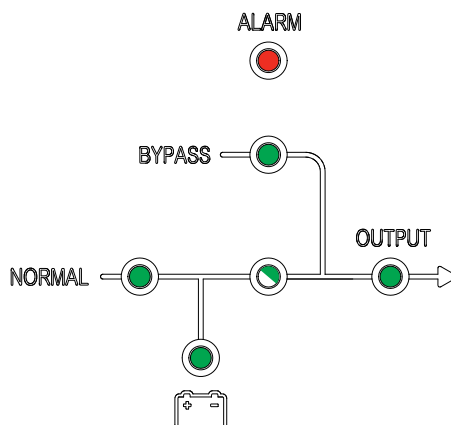


Transfer a Single UPS from Static Bypass Mode to Normal Mode


NOTE: The UPS will normally transfer automatically from static bypass to normal mode. This procedure can be used to manually transfer to normal mode if the bypass frequency is above the specified limits.

1. On the display, select  and then select **ESC bypass**.

The LEDs on the user interface show as follows:

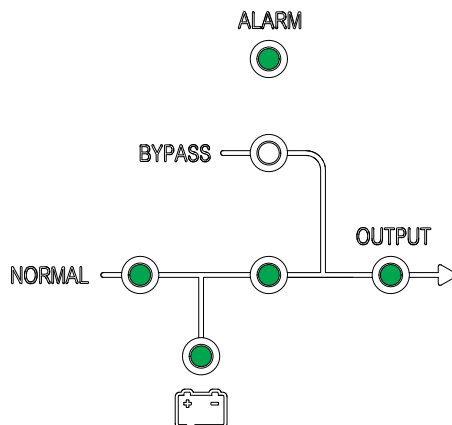


Transfer a Single UPS from Normal Mode to Maintenance Bypass Mode

1. On the display, select  and then select **Function > To bypass**.
2. Remove the cover from the maintenance bypass breaker MBB. Refer to [Location of Breakers - 400 V Systems, page 18](#).

NOTE: When the cover of the MBB is removed, the system automatically transfers to maintenance bypass mode.

3. Turn the maintenance bypass breaker MBB to the ON (closed) position.
The load is now supplied via the maintenance bypass breaker.
4. Turn the battery breaker(s) BB to the OFF (open) position.
5. Turn the unit input breaker UIB to the OFF (open) position.
6. Turn the static switch input breaker SSIB to the OFF (open) position.
7. Turn the unit output breaker UOB to the OFF (open) position.

8. For the UPS with internal batteries, disconnect all batteries on the front of the UPS.

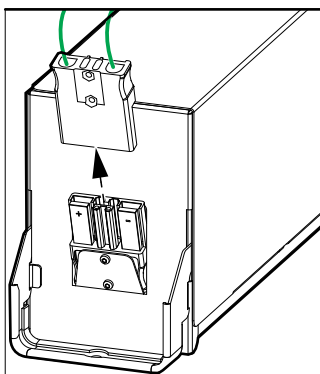

⚠ DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Wait at least 5 minutes before removing the cover of the UPS after the display has turned off to allow for the capacitors to fully discharged.
- Always measure for hazardous voltages on all terminals before working on the UPS.

Failure to follow these instructions will result in death or serious injury.


9. Do not reinstall the maintenance bypass breaker MBB cover. Leave the cover removed when the UPS is in Maintenance Bypass Mode.

Transfer a Single UPS from Maintenance Bypass Mode to Normal Mode

1. Check that:
 - all UPS breakers (unit input breaker UIB, static switch input breaker SSIB, and unit output breaker UOB and the external unit output breaker Ext. UOB are in the OFF (open) position.
 - the battery breakers BB are in the OFF (open) position.
 - the maintenance bypass breaker MBB is in the ON (closed) position.
 - the maintenance bypass breaker MBB cover is removed.
2. Turn the static switch input breaker SSIB to the ON (closed) position.
The display turns on and the Home screen is shown.
3. Turn the unit output breaker UOB to the ON (closed) position.
The UPS starts up in static bypass mode.
4. Turn the unit input breaker UIB to the ON (closed) position.
The rectifier ramps up.
5. When the rectifier LED turns steady green, the inverter synchronizes with bypass.
6. Turn the battery breaker(s) BB to the ON (closed) position.
7. When the Bypass LED is steady green, turn the maintenance bypass breaker MBB to the OFF (open) position.

8. Reinstall the cover on the maintenance bypass breaker MBB. Refer to *Location of Breakers - 400 V Systems*, page 18.


NOTE: The system will not transfer to normal mode before the maintenance bypass cover has been reinstalled.

9. On the display select  and then select **Function > Clear alarm**.


NOTE: The system will not transfer to normal mode before the maintenance bypass cover has been reinstalled and the alarm has been cleared.

10. After approximately 60 seconds, the UPS will automatically transfer to normal mode.


The LEDs on the user interface show as follows:

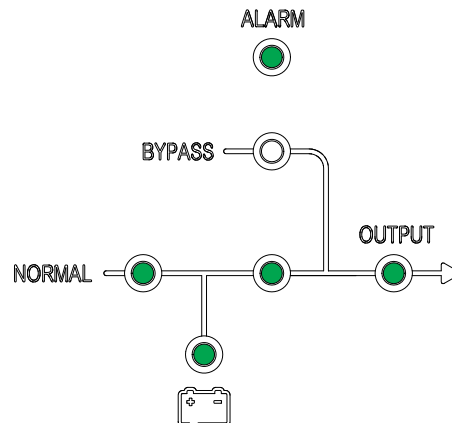

Transfer a Parallel System from Normal Mode to Maintenance Bypass Mode

1. On all UPS displays, select  and then select **Function > To bypass**.
The parallel system will transfer to static bypass mode.
2. Turn the external maintenance bypass breaker Ext. MBB to the ON (closed) position.
The load is now supplied via the external maintenance bypass breaker.
3. Turn the battery breakers BB of all UPSs to the OFF (open) position.
4. Disconnect the battery relay from the display by selecting the battery symbol and selecting **Batt relay control ON/OFF** and confirm to turn off the battery relay. Verify that the **Relay status** is now off.
5. Open external battery breaker if external batteries are connected.
6. Turn the mains input breakers MIB and the bypass input breakers BIB of all UPSs to the OFF (open) position.
7. Turn the system isolation breaker SIB to OFF (open) position.

8. For the UPS with internal batteries, disconnect all batteries on the front of the UPS.

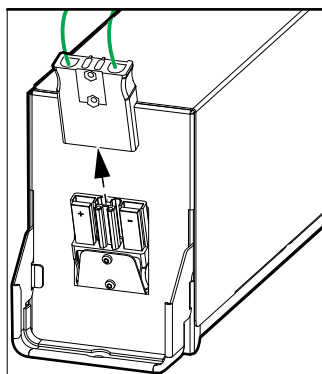

⚡ ⚠ DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Wait at least 5 minutes before removing the cover of the UPS after the display has turned off to allow for the capacitors to fully discharged.
- Always measure for hazardous voltages on all terminals before working on the UPS.

Failure to follow these instructions will result in death or serious injury.

Transfer a Parallel System from Maintenance Bypass Mode to Normal Mode

1. Check that:
 - all UPS breakers (unit input breaker UIB, static switch input breaker SSIB, and unit output breaker UOB) and the external unit output breaker Ext. UOB are in the ON (closed) position
 - the battery breakers BB are in the OFF (open) position
2. Reconnect the internal batteries of all UPSs and set all the battery breakers BB in the modular battery cabinets (if present) to the ON (closed) position.
3. Turn the system isolation breaker SIB to ON (closed) position.
4. Turn the bypass input breakers BIB of all UPSs to the ON (closed) position.
Wait approximately 2030 seconds until the bypass and the output LEDs turn green.
5. Turn the external maintenance bypass breaker Ext. MBB to the OFF (open) position.

NOTE: If the parallel system has dry contacts with Maint CB signal, select




and then select **Function > Clear alarm** on all UPS displays.

6. Turn the mains input breakers MIB of all UPSs to the ON (closed) position.
The rectifier ramps up. After UPS self-test, the battery relay closes automatically.
7. Close the external battery breaker if external batteries are part of the system.
8. When the rectifier LED turns steady green, the inverter synchronizes with bypass.
9. When the inverter LED turns steady green, the parallel system automatically transfers from static bypass to normal mode.

10. Turn the battery breakers BB of all UPSs to the ON (closed) position.

The LEDs on the user interfaces show as follows:

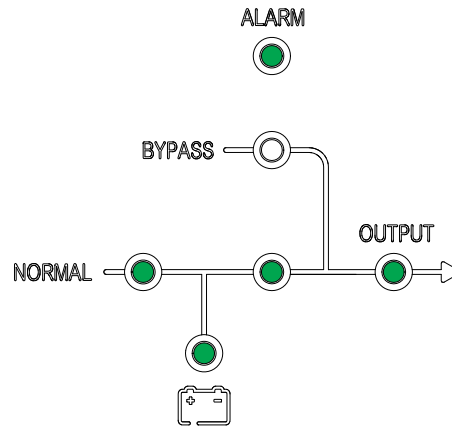


The parallel system is now in normal mode.

Isolate a Single UPS from the Parallel System


Use this procedure to shut down one UPS in a running parallel system.

NOTE: Before initiating this procedure, ensure that the remaining UPS units can supply the load.



1. On the display select  and then select confirm to power off the UPS.
2. Turn the battery breaker(s) BB of the UPS to the OFF (open) position.
3. Disconnect the battery relay from the display by selecting the battery symbol and selecting **Batt relay control ON/OFF** and confirm to turn off the battery relay. Verify that the **Relay status** is now off.
4. Open external battery breaker if external batteries are connected.
5. Turn the mains input breaker MIB of the UPS to the OFF (open) position.
6. Turn the bypass input breaker BIB of the UPS to the OFF (open) position.
7. Turn the external unit output breaker Ext. UOB of the UPS to the OFF (open) position.

8. For the UPS with internal batteries, disconnect all batteries on the front of the UPS.

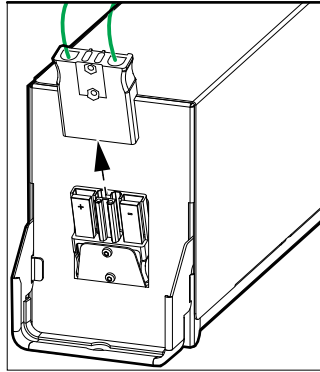

⚠️ DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Wait at least 5 minutes before removing the cover of the UPS after the display has turned off to allow for the capacitors to fully discharged.
- Always measure for hazardous voltages on all terminals before working on the UPS.

Failure to follow these instructions will result in death or serious injury.

Start Up and Add a UPS to a Running Parallel System


Use this procedure to start up a UPS and add it to a running parallel system.

IMPORTANT: Before a UPS can be added to a parallel system, the parallel system must be configured by Schneider Electric.

1. On the new UPS check that:
 - all UPS breakers (unit input breaker UIB, static switch input breaker SSIB, and unit output breaker UOB) and the external unit output breaker Ext. UOB are in the ON (closed) position
 - the battery breaker(s) BB are in the OFF (open) position
2. Turn the external unit output breaker Ext. UOB of the UPS to the ON (closed) position.
3. Turn the mains input breaker MIB and the bypass input breaker BIB of the UPS to the ON (closed) position.


The display turns on and the Home screen is shown.

The LEDs on the user interface show as follows:

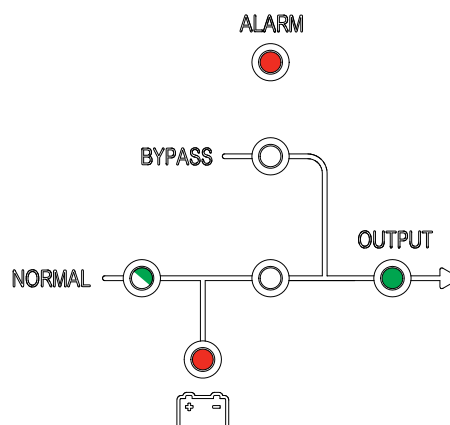


4. When the rectifier LED turns steady green, the UPS transfers to static bypass mode.

The LEDs on the user interface show as follows:

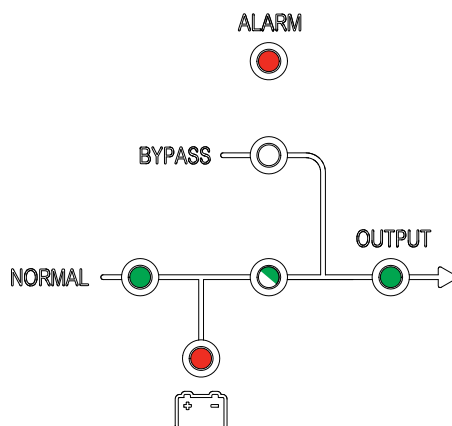


5. When the inverter LED turns steady green, the UPS automatically transfers from static bypass to normal mode and joins the running parallel system.

The LEDs on the user interface show as follows:

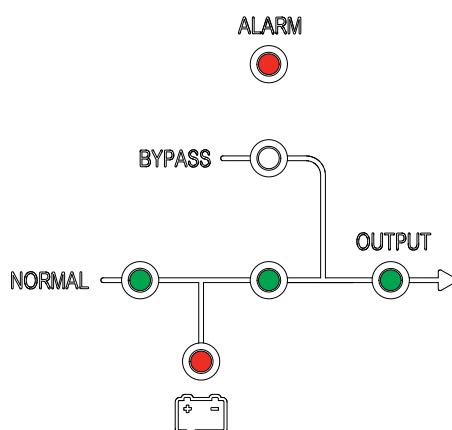

6. Turn the battery breaker(s) BB of the UPS to the ON (closed) position.

The LEDs on the user interface show as follows:

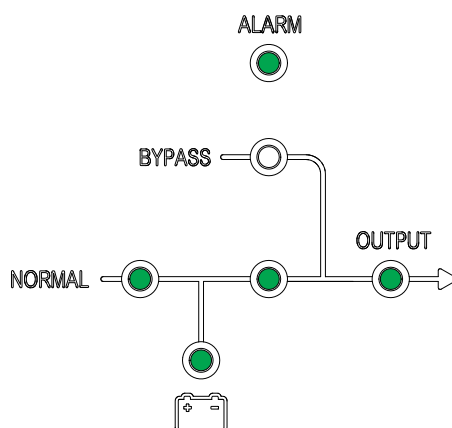

7. Verify correct load sharing between the parallel UPS units.


Configuration

Register Your Easy UPS 3S

NOTE: The single Easy UPS 3S can also be registered using the mySchneider app which can be downloaded from App Store and Google Play.

1. When prompted for registration, go to www.schneider-electric.com/contactsupport to find your local service contact number.




2. On the display, select  and then select **Register**.
3. Call Schneider Electric and provide your four-digit activation code.
4. Type in the registration code provided by Schneider Electric.

Register	
Activation	XXXX
Registration code	<input type="text"/>

Set the Display Language




1. On the display, select  and then select **Language**.
2. Select your language from the list:

en: English	pt: Portuguese Brazilian
fr: French	ru: Russian
cn: Simplified Chinese	de: German
it: Italian	es: European Spanish

Set the Date and Time



1. On the display, select  and then select **Time**.
2. Set the date and time.

Set the UPS Settings


NOTICE

RISK OF EQUIPMENT DAMAGE

Only trained personnel following the required training course may undertake modifications to UPS system parameters.

Failure to follow these instructions can result in equipment damage.



1. On the display, select  and then select **Setting**.
2. Enter the password **3526**.

Back	←	Settings	→	Next
Enter password				
3526				

3. Set the nominal input voltage (phase-neutral), the nominal output voltage (phase-neutral), and the nominal frequency.

NOTE: Nom input PN and Nom output PN must have the same voltage rating.

Back	←	Settings	→	Next
Nom input PN				
XXX				
Nom output PN				
XXX				
Nom freq				
XX				

4. Restart the UPS to activate the settings.

Set the Battery Settings


NOTICE

RISK OF EQUIPMENT DAMAGE

- Only trained personnel following the required training course may undertake modifications to UPS system parameters.
- The battery parameters must set according to the actual installation before starting up the UPS.

Failure to follow these instructions can result in equipment damage.



1. On the display, select  and then select **Batt Settings**.
2. Enter the password **2334**.

Back	←	Batt Settings	→	Next
<p>Enter password</p> <div>2334</div>				

3. Set the battery settings:

NOTE: When the **Nom input PN** is equal to 115 V, 120 V, or 127 V, the **Batt number** must be 20. When the **Nom input PN** is equal to 220 V, 230 V, or 240 V, the **Batt number** must be 32–40 depending on the battery configuration.

- a. **Batt number:** Set the number of battery blocks in one battery string.
- b. **Batt cap (AH):** Set the battery capacity (battery block capacity (AH) x number of battery strings).¹
- c. **Batt charge %:** Set the battery charge percentage (between 1% and 20%).

Back	←	Batt Settings	→	Next						
<table> <tr> <td>Batt number</td> <td>XX</td> </tr> <tr> <td>Batt cap (AH)</td> <td>XXX</td> </tr> <tr> <td>Batt charge %</td> <td>XX</td> </tr> </table>					Batt number	XX	Batt cap (AH)	XXX	Batt charge %	XX
Batt number	XX									
Batt cap (AH)	XXX									
Batt charge %	XX									

1. In a 1+1 redundant parallel system with a common battery bank, insert half of the battery capacity in each UPS.

Recommended Settings for 400 V UPSs with Internal Batteries and Modular Battery Cabinets

10 kVA UPS

Number of battery strings ²	Settings with 7 Ah Batteries (E3SBT4) @ 0.1C			Settings with 9 Ah Batteries (E3SBTH4) @ 0.1C		
	Batt number per string	Batt cap (AH)	Batt charge %	Batt number per string	Batt cap (AH)	Batt charge %
1	40	7	4	40	9	5
2	40	14	8	40	18	10
3	40	21	12	40	27	15
4	40	28	16	40	36	20
5	40	35	20	40	45	20
6	40	42	20	40	54	20
7	40	49	20	40	63	20
8	40	56	20	40	72	20
9	40	63	20	40	81	20

15 kVA UPS

Number of battery strings ²	Settings with 7 Ah Batteries (E3SBT4) @ 0.1C			Settings with 9 Ah Batteries (E3SBTH4) @ 0.1C		
	Batt number per string	Batt cap (AH)	Batt charge %	Batt number per string	Batt cap (AH)	Batt charge %
1	40	7	3	40	9	4
2	40	14	5	40	18	7
3	40	21	8	40	27	10
4	40	28	11	40	36	14
5	40	35	13	40	45	17
6	40	42	16	40	54	20
7	40	49	19	40	63	20
8	40	56	20	40	72	20
9	40	63	20	40	81	20
10	40	70	20	40	90	20
11	40	77	20	40	99	20
12	40	84	20	40	108	20
13	40	91	20	40	117	20
14	40	98	20	40	126	20
15	40	105	20	40	135	20

20 kVA UPS

Number of battery strings ²	Settings with 7 Ah Batteries (E3SBT4) @ 0.1C			Settings with 9 Ah Batteries (E3SBTH4) @ 0.1C		
	Batt number per string	Batt cap (AH)	Batt charge %	Batt number per string	Batt cap (AH)	Batt charge %
1	40	7	2	40	9	3
2	40	14	4	40	18	5
3	40	21	6	40	27	8
4	40	28	8	40	36	10
5	40	35	10	40	45	13

2. Total number of battery strings in UPS and modular battery cabinet.

20 kVA UPS (Continued)

Number of battery strings ³	Settings with 7 Ah Batteries (E3SBT4) @ 0.1C			Settings with 9 Ah Batteries (E3SBTH4) @ 0.1C		
	Batt number per string	Batt cap (AH)	Batt charge %	Batt number per string	Batt cap (AH)	Batt charge %
6	40	42	12	40	54	15
7	40	49	14	40	63	18
8	40	56	16	40	72	20
9	40	63	18	40	81	20
10	40	70	20	40	90	20
11	40	77	20	40	99	20
12	40	84	20	40	108	20
13	40	91	20	40	117	20
14	40	98	20	40	126	20
15	40	105	20	40	135	20

30 kVA UPS

Number of battery strings ³	Settings with 7 Ah Batteries (E3SBT4) @ 0.1C			Settings with 9 Ah Batteries (E3SBTH4) @ 0.1C		
	Batt number per string	Batt cap (AH)	Batt charge %	Batt number per string	Batt cap (AH)	Batt charge %
1	40	7	2	40	9	2
2	40	14	3	40	18	4
3	40	21	4	40	27	5
4	40	28	6	40	36	7
5	40	35	7	40	45	9
6	40	42	8	40	54	10
7	40	49	10	40	63	12
8	40	56	11	40	72	14
9	40	63	12	40	81	16
10	40	70	13	40	90	17
11	40	77	15	40	99	19
12	40	84	16	40	108	20
13	40	91	17	40	117	20
14	40	98	19	40	126	20
15	40	105	20	40	135	20
16	40	112	20	40	144	20
17	40	119	20	40	153	20
18	40	126	20	40	162	20
19	40	133	20	40	171	20
20	40	140	20	40	180	20
21	40	147	20	40	189	20
22	40	154	20	40	198	20
23	40	161	20	40	207	20
24	40	168	20	40	216	20
25	40	175	20	40	225	20
26	40	182	20	40	234	20

3. Total number of battery strings in UPS and modular battery cabinet.

30 kVA UPS (Continued)

Number of battery strings ⁴	Settings with 7 Ah Batteries (E3SBT4) @ 0.1C			Settings with 9 Ah Batteries (E3SBTH4) @ 0.1C		
	Batt number per string	Batt cap (AH)	Batt charge %	Batt number per string	Batt cap (AH)	Batt charge %
27	40	189	20	40	243	20
28	40	196	20	40	252	20

40 kVA UPS

Number of battery strings ⁴	Settings with 7 Ah Batteries (E3SBT4) @ 0.1C			Settings with 9 Ah Batteries (E3SBTH4) @ 0.1C		
	Batt number per string	Batt cap (AH)	Batt charge %	Batt number per string	Batt cap (AH)	Batt charge %
1	40	7	1	40	9	2
2	40	14	2	40	18	3
3	40	21	3	40	27	4
4	40	28	4	40	36	5
5	40	35	5	40	45	7
6	40	42	6	40	54	8
7	40	49	7	40	63	9
8	40	56	8	40	72	11
9	40	63	9	40	81	12
10	40	70	10	40	90	13
11	40	77	11	40	99	14
12	40	84	12	40	108	16
13	40	91	13	40	117	17
14	40	98	14	40	126	18
15	40	105	15	40	135	19
16	40	112	16	40	144	20
17	40	119	17	40	153	20
18	40	126	18	40	162	20
19	40	133	19	40	171	20
20	40	140	20	40	180	20
21	40	147	20	40	189	20
22	40	154	20	40	198	20
23	40	161	20	40	207	20
24	40	168	20	40	216	20
25	40	175	20	40	225	20
26	40	182	20	40	234	20
27	40	189	20	40	243	20
28	40	196	20	40	252	20

4. Total number of battery strings in UPS and modular battery cabinet.

Recommended Settings for 208 V UPSs with Internal Batteries and Modular Battery Cabinets

10 kVA UPS

Number of battery strings ⁵	Settings with 7 Ah Batteries (E3SBT4) @ 0.1C			Settings with 9 Ah Batteries (E3SBTH4) @ 0.1C		
	Batt number per string	Batt cap (AH)	Batt charge %	Batt number per string	Batt cap (AH)	Batt charge %
1	20	7	2	20	9	3
2	20	14	4	20	18	5
3	20	21	6	20	27	8
4	20	28	8	20	36	10
5	20	35	10	20	45	13
6	20	42	12	20	54	15
7	20	49	14	20	63	18
8	20	56	16	20	72	20
9	20	63	18	20	81	20
10	20	70	20	20	90	20
11	20	77	20	20	99	20
12	20	84	20	20	108	20
13	20	91	20	20	117	20
14	20	98	20	20	126	20
15	20	105	20	20	135	20

15 kVA UPS

Number of battery strings ⁵	Settings with 7 Ah Batteries (E3SBT4) @ 0.1C			Settings with 9 Ah Batteries (E3SBTH4) @ 0.1C		
	Batt number per string	Batt cap (AH)	Batt charge %	Batt number per string	Batt cap (AH)	Batt charge %
1	20	7	2	20	9	2
2	20	14	3	20	18	4
3	20	21	4	20	27	5
4	20	28	6	20	36	7
5	20	35	7	20	45	9
6	20	42	8	20	54	10
7	20	49	10	20	63	12
8	20	56	11	20	72	14
9	20	63	12	20	81	16
10	20	70	13	20	90	17
11	20	77	15	20	99	19
12	20	84	16	20	108	20
13	20	91	17	20	117	20
14	20	98	19	20	126	20
15	20	105	20	20	135	20
16	20	112	20	20	144	20
17	20	119	20	20	153	20
18	20	126	20	20	162	20
19	20	133	20	20	171	20

5. Total number of battery strings in UPS and modular battery cabinet.

15 kVA UPS (Continued)

Number of battery strings ⁶	Settings with 7 Ah Batteries (E3SBT4) @ 0.1C			Settings with 9 Ah Batteries (E3SBTH4) @ 0.1C		
	Batt number per string	Batt cap (AH)	Batt charge %	Batt number per string	Batt cap (AH)	Batt charge %
20	20	140	20	20	180	20
21	20	147	20	20	189	20
22	20	154	20	20	198	20
23	20	161	20	20	207	20
24	20	168	20	20	216	20
25	20	175	20	20	225	20
26	20	182	20	20	234	20
27	20	189	20	20	243	20
28	20	196	20	20	252	20

20 kVA UPS

Number of battery strings ⁶	Settings with 7 Ah Batteries (E3SBT4) @ 0.1C			Settings with 9 Ah Batteries (E3SBTH4) @ 0.1C		
	Batt number per string	Batt cap (AH)	Batt charge %	Batt number per string	Batt cap (AH)	Batt charge %
1	20	7	1	20	9	2
2	20	14	2	20	18	3
3	20	21	3	20	27	4
4	20	28	4	20	36	5
5	20	35	5	20	45	7
6	20	42	6	20	54	8
7	20	49	7	20	63	9
8	20	56	8	20	72	11
9	20	63	9	20	81	12
10	20	70	10	20	90	13
11	20	77	11	20	99	14
12	20	84	12	20	108	16
13	20	91	13	20	117	17
14	20	98	14	20	126	18
15	20	105	15	20	135	19
16	20	112	16	20	144	20
17	20	119	17	20	153	20
18	20	126	18	20	162	20
19	20	133	19	20	171	20
20	20	140	20	20	180	20
21	20	147	20	20	189	20
22	20	154	20	20	198	20
23	20	161	20	20	207	20
24	20	168	20	20	216	20
25	20	175	20	20	225	20
26	20	182	20	20	234	20
27	20	189	20	20	243	20
28	20	196	20	20	252	20

6. Total number of battery strings in UPS and modular battery cabinet.

Set the Life Cycle Monitoring

NOTICE

RISK OF EQUIPMENT DAMAGE

Only trained personnel following the required training course may undertake modifications to UPS system parameters.

Failure to follow these instructions can result in equipment damage.



1. On the display, select  and then select **LCM Set**.
2. You now have the following options:

Back	←	LCM SET	→	Next
<p>Set dust filter expiration:</p> <p>XX months</p>				

- Select **Set dust filter expiration** to set the service life of the dust filter.

Settings

Setting	Default Value	Available Settings
LCD contrast	60	0 to 100
Date and Time	05/07/2013 08:55:55	Year > 2000
Language	English	Chinese simplified, English, Italian, German, Russian, Spanish, Portuguese Brazilian, and French
Input voltage	400 V	200 V/208 V/220 V or 380 V/400 V/415 V
Bypass voltage	400 V for 3:3 UPSs 230 V for 3:1 UPSs	200 V/208 V/220 V or 380 V/400 V/415 V for 3:3 UPSs 220 V/230 V/240 V for 3:1 UPSs
Input frequency	50 Hz	60 Hz
Output voltage	400 V for 3:3 UPSs 230 V for 3:1 UPSs	200 V/208 V/220 V or 380 V/400 V/415 V for 3:3 UPSs 220 V/230 V/240 V for 3:1 UPSs
Output frequency	50 Hz	60 Hz
Output phase	3 for 3:3 UPSs 1 for 3:1 UPSs	3/1
Auto boost	disable	enable
Auto maint	disable	enable
System mode	single	parallel/ECO/parallel ECO/self aging
Unit number	1	1 to 4
System ID	0	0 to 3
Adjusted output voltage	400 V for 3:3 UPSs 230 V for 3:1 UPSs	Output voltage ± 10 V

Setting	Default Value	Available Settings
Frequency slew rate	2 Hz/s	0.1 to 5.0 Hz/s
Frequency synchronization window	3 Hz	0.5 to 5.0 Hz
Monochrome LCD time (min)	10	1/3/5/10/20/30
Bypass voltage upper limit (%)	15	10/20/25
Bypass voltage lower limit (%)	-20	-10/-15/-30/-40
Bypass frequency limited (Hz)	±5	±1/±3/±5
System restart mode after end of discharge	Normal	bypass only/ no output
Fan maintenance period	34560 hours (48 months)	0 to 60000 hours
DC capacitor maintenance period	34560 hours (48 months)	0 to 60000 hours
warranty period	9 months	1 to 36 months
AC capacitor maintenance period	120 months	60 to 120 months
APS maintenance period	84 months	36 to 120 months
Dust filter maintenance period	3 months	0/3/4/5/12 months
Battery maintenance period	4 years	2 to 10 years
Battery number	32 for UPSs for external batteries 40 for UPSs with internal batteries	20/32/34/36/38/40
Battery AH	1	1 to 30000
Float charge voltage/cell (V)	2.25	2.10 to 2.35
Boost charge voltage/cell (V)	2.25	2.20 to 2.45
End of discharge voltage/cell, at 3 C current (V)	1.6	1.50 to 1.85
End of discharge voltage/cell, at 0.05 C current (V)	1.75	1.55 to 1.90
Charge current percent limit (%)	10	1 to 20
Battery temperature compensation	0	0 to 5 mV/°C
Boost charge time limit	12 hours	1 to 48 hours
Auto boost period	2160 hours (3 months)	720 to 30000 hours, available when auto boost is enabled
Auto maintenance discharge period	6480 hours (9 months)	720 to 30000 hours, available when auto maintenance is enabled
Critical battery temperature	45 °C	25 °C to 70 °C
Critical ambient temperature	40 °C	25 °C to 70 °C

Tests

Perform a Battery Maintenance Test

NOTICE

RISK OF EQUIPMENT DAMAGE

Do not perform a battery maintenance test without load connected.

Failure to follow these instructions can result in equipment damage.

Prerequisite:

- The bypass supply must be within specifications.
- The battery capacity must be above 25%.

The battery maintenance test is used to test the condition of the batteries.

During the battery maintenance test, the system transfers to battery mode and discharges the batteries until the battery low voltage alarm is reached.



1. On the display, select  and then select **Maint test**.

NOTE: If you wish to manually stop the battery test, select **Stop test**.

If the battery maintenance test is passed, **Battery maintenance OK** will be recorded in the log. If the battery maintenance test is not passed, **Batt maint incomplete** will be recorded in the log.

Perform a Battery Test


The purpose of the battery test is to verify the connection of the batteries and to check the battery capacity.

Prerequisite:

- The bypass supply must be within specifications.
- The battery capacity must be above 25%.
- The battery voltage must be above 95% of the float voltage.

During the battery test, the system transfers to battery mode for approximately 30 seconds and then returns to normal mode.



1. On the display, select  and then select **Battery test**.

Maintenance

Parts Replacement

Determine if you need a Replacement Part

To determine if you need a replacement part, contact Schneider Electric and follow the procedure below so that the representative can assist you promptly:

1. In the event of an alarm condition, scroll through the alarm lists, record the information, and provide it to the representative.
2. Write down the serial number of the unit so that you will have it easily accessible when you contact Schneider Electric.
3. If possible, call Schneider Electric from a telephone that is within reach of the display so that you can gather and report additional information to the representative.
4. Be prepared to provide a detailed description of the problem. A representative will help you solve the problem over the telephone, if possible, or will assign a return material authorization (RMA) number to you. If a module is returned to Schneider Electric, this RMA number must be clearly printed on the outside of the package.
5. If the unit is within the warranty period and has been started up by Schneider Electric, repairs or replacements will be performed free of charge. If it is not within the warranty period, there will be a charge.
6. If the unit is covered by a Schneider Electric service contract, have the contract available to provide information to the representative.


Replace the Dust Filter

1. Lift the front panel free of the UPS cabinet.


NOTE: Be careful not to disconnect the cable on the rear side of the front panel.

2. Loosen the screws and remove the metal brackets and the manual box..

UPS for External Batteries

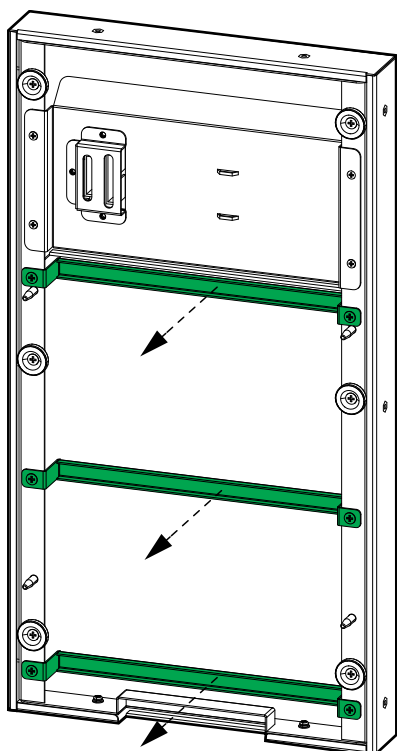


UPS with Internal Batteries

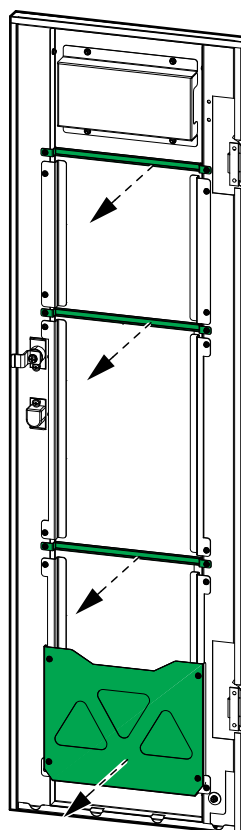


3. Replace the dust filter.

UPS for External Batteries

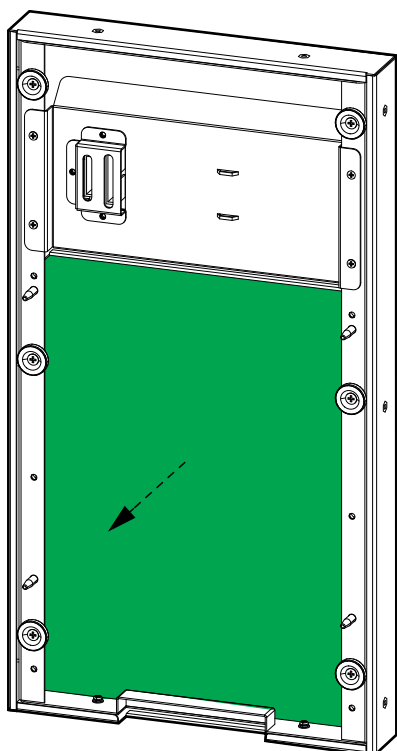

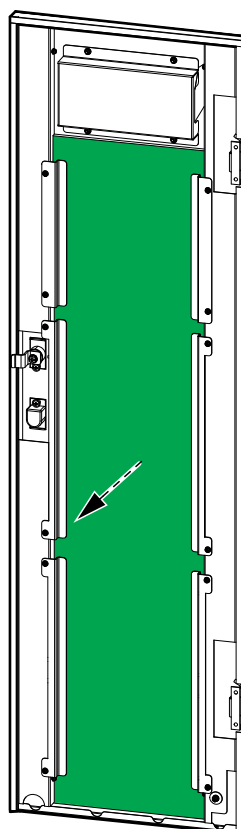


UPS with Internal Batteries



4. Reinstall the metal brackets and fasten with the screws.
5. Reinstall the front panel.
6. Reset the dust filter time in the display. See [Set the Life Cycle Monitoring](#), page 47 for more information.


Troubleshooting

View the Active Alarms

1. On the display select .
See [Status and Alarm Messages](#), page 53 for a list of alarm messages and corrective actions.
2. Use  and  to go through the list of active alarms.

Buzzer

NOTE: The buzzer turns on as soon as an alarm condition is detected. The buzzer makes two short beeps and a long beep for general system alarms. The buzzer makes a continuous beep for critical alarms. It can be turned off by

selecting  on the home screen.

Status and Alarm Messages

This section lists status and alarm messages from the display. The display messages are listed in alphabetical order, and a suggested corrective action is listed with the display alarm message to help you troubleshoot problems.

Display text	Description	Corrective action
Battery boost charging	The batteries are charged with the configured boost charge voltage.	
Battery connected	The batteries are connected.	
Battery discharging	The load is drawing more power than the UPS can draw from the input, causing the UPS to draw power from the batteries.	Reduce the load. Please contact Schneider Electric.
Battery disconnected	The batteries are not connected.	Connect the batteries.
Battery expired	The battery service life has expired.	Replace the battery.
Battery end of discharge	The battery capacity is below the minimum acceptable value.	Recharge the batteries.
Battery float charging	The batteries are charged with the configured float charge voltage.	
Battery log reset	Reset the battery log.	
Batt maint incomplete	The battery maintenance test was not passed.	
Battery maintenance	Start the battery maintenance test.	
Battery maintenance OK	The battery maintenance test has been successfully completed.	
Battery temperature high	The battery temperature is too high.	Check the battery temperature.

Display text	Description	Corrective action
Battery test	Start the battery test.	
Battery test incomplete	The battery test was not passed.	
Battery test OK	The battery test has been successfully completed.	
Battery voltage low	Low voltage on battery.	Check the battery.
Battery wiring incorrect	The battery wiring is incorrect.	Check the battery wiring. Please contact Schneider Electric.
Battery/charger inoperable	The battery or charger is inoperable.	Check the battery. Check the charger. Please contact Schneider Electric.
Byp freq exceeds limits	The bypass frequency exceeds the limit.	Check the status of the bypass source. Please contact Schneider Electric.
Bypass fan inoperable	The UPS has one or more inoperable fans.	Check the fans.
Bypass fan time reset	Reset the service life timer for the fan.	
Bypass out of tolerance	The bypass voltage is out of tolerance.	Check the status of the bypass source. Please contact Schneider Electric.
Bypass overload	The load is drawing more power than the bypass source can supply.	Reduce the load. Please contact Schneider Electric.
Bypass overload timeout	The UPS can no longer sustain a Bypass overload situation.	Reduce the load. Please contact Schneider Electric.
Bypass sequence incorrect	The phase rotation on bypass is incorrect.	Check the status of the bypass source. Please contact Schneider Electric.
Bypass unavailable	The bypass source is not available.	Check the status of the bypass source. Please contact Schneider Electric.
Capacitor expired	Capacitor service life has expired.	Replace the capacitor.
Capacitor time reset	Capacitor service life timer has been reset.	
Clear log	Clear the log.	
DC bus overvoltage	Overvoltage on the DC bus.	
Dust filter expired	The dust filter service life has expired.	Replace the Dust Filter, page 50.
EPO	An EPO (emergency power off) device is activated.	Deactivate the EPO (emergency power off) device.
Fan expired	Fan service life has expired.	Replace the fan.
Fan inoperable	The UPS has one or more inoperable fans.	Check the fans. Please contact Schneider Electric.
Fan time reset	The fan service life timer has been reset.	
Firmware incompatible	The firmware is detected as incompatible with the rest of the system.	Perform a firmware update.
Generator input	Generator is supplying the UPS.	

Display text	Description	Corrective action
Inhibit transfer to inv.	Inhibit transfer to inverter operation.	
Inlet temperature high	Air inlet temperature is too high.	Check the status of the air inlet. Reduce the room temperature.
Inlet/outlet temp	Air inlet and outlet temperature.	
Input current unbalanced	Input current is unbalanced.	Check the status of the input source. Please contact Schneider Electric.
Input neutral unavailable	Input neutral is not available.	Check the status of the input neutral. Please contact Schneider Electric.
Input out of tolerance	The input voltage is out of tolerance.	Check the status of the input source. Please contact Schneider Electric.
Input overcurrent timeout	The UPS can no longer sustain an Input overcurrent situation.	Check the status of the input source. Please contact Schneider Electric.
Input SCR fan inoperable	Input SCR fan is inoperable.	Check the status of the input SCR fan. Please contact Schneider Electric.
Input SCR temp high	Input SCR temperature is too high.	Check the status of the input SCR fan. Please contact Schneider Electric.
Inverter high temp	Inverter temperature is too high.	Check the status of the inverter. Please contact Schneider Electric.
Inverter IGBT inoperable	The inverter IGBT is inoperable.	Check the status of the inverter IGBT. Please contact Schneider Electric.
Inverter inoperable	The inverter is inoperable.	Check the status of the inverter. Please contact Schneider Electric.
Inverter overload timeout	The UPS can no longer sustain an Inverter overload situation.	Check the status of the inverter. Please contact Schneider Electric.
Inverter shutdown	The inverter is shutting down.	
Inv DATA CAN incorrect	Inverter DATA CAN is incorrect.	
Inv firmware upgrade	The inverter firmware has been upgraded.	
Inv IO CAN incorrect	Inverter IO CAN is incorrect.	
Load on bypass	The UPS is in static bypass mode and the load is supplied by the bypass source.	
Load disconnected	The load has been disconnected or the unit output breaker UOB is open.	Check the load. Close the unit output breaker UOB.
Load on inverter	The UPS is in inverter operation mode and the load is supplied by the UPS.	
Low battery shutdown	The UPS is shutting down due to battery end of discharge	Recharge the batteries and restart the UPS. If auto-restart mode is configured, the UPS will start automatically restart when the mains return.
Man. transfer to inverter	Manual transfer to inverter operation.	

Display text	Description	Corrective action
Manual shutdown	Manual shutdown.	
MBB closed	The maintenance bypass breaker MBB is closed, supplying the load with unprotected power from the bypass source.	
MBB open	The maintenance bypass breaker is open.	
Module ID duplicate	The module ID has a duplicate. The module ID must be unique.	Check the ID of the modules.
No inlet temp sensor	No inlet temperature sensor present.	Check the status of the inlet temperature sensor.
No input temp sensor	No input temperature sensor present.	Check the status of the input temperature sensor.
No outlet temp sensor	No outlet temperature sensor present.	Check the status of the outlet temperature sensor.
Nom power out of tolerance	The nominal power does not match the UPS hardware.	Check the status of the input source. Please contact Schneider Electric.
Outlet temperature high	Air outlet temperature is too high.	Check the status of the air outlet. Please contact Schneider Electric.
Output short circuit	A short circuit is present on the output.	Check the status of the output. Please contact Schneider Electric.
Output overload	The load is drawing more power than the UPS system can supply.	Reduce the load. Contact Schneider Electric.
Parallel cabling incorrect	The parallel cabling is incorrect.	Check the status of the parallel cables. Please contact Schneider Electric.
Power sharing incorrect	The power sharing between the UPS units is incorrect.	Please check the load sharing on the UPS units. Redistribute the load between UPS units. Please contact Schneider Electric.
PWM sync unavailable	The PWM synchronization is unavailable.	Check the status of the PWM sync. Please contact Schneider Electric.
Rec firmware upgrade	The rectifier firmware has been upgraded.	
Rec soft start unavailable	The rectifier soft start is unavailable.	Check the status of the rectifier. Please contact Schneider Electric.
Rectifier high temp	The rectifier temperature is too high.	Check the status of the rectifier. Please contact Schneider Electric.
Rectifier inoperable	The rectifier is inoperable.	Check the status of the rectifier. Please contact Schneider Electric.
Relay disconnected	A relay is disconnected.	Check the status of the relays. Please contact Schneider Electric.
Relay short-circuit	A relay has short-circuited.	Check the status of the relays. Please contact Schneider Electric.
Room temp high	The room temperature is high.	Reduce the room temperature.
Save settings	Settings have been changed.	
Shutdown	UPS shutdown.	
Signal cable disconnect	Signal cable is disconnected.	Check the signal cable.

Display text	Description	Corrective action
Sync pulse unavailable	Sync pulse is unavailable. The UPS is not able to synchronize.	Check the sync pulse. Please contact Schneider Electric.
System overload	The load is drawing more power than the UPS system can supply.	Reduce the load. Contact Schneider Electric.
System setting incorrect	The system settings are incorrect.	Check the system settings. Contact Schneider Electric.
Technical check recommended	A technical check is recommended.	Contact Schneider Electric.
Transfer to bypass	Transfer the UPS to static bypass mode.	
Transfer to inverter	Transfer the UPS to inverter operation.	
Transfers exceed limits	There have been too many transfers between operation modes in a given time period.	Contact Schneider Electric.
Warranty expiring soon	Warranty is expiring soon.	Contact Schneider Electric.

Appendix: Switch/Breaker Details

3:1 UPS

	Model	Switch/Breaker	Description	Switch or Breaker
10 kVA	UIB	OSMC65H4C32	32A 4P	Breaker
	SIB	OSMC65H4C32	32A 4P	Breaker
	UOB	A9S68263	63A 2P	Switch
	MBB	A9S68163	63A 1P	Switch
	BB	A9S68332	32A 3P	Switch (for UPSs with internal batteries)
15 kVA	UIB	OSMC65H4C40	40A 4P	Breaker
	SIB	OSMC65H4C40	40A 4P	Breaker
	UOB	A9S68280	80A 2P	Switch
	MBB	A9S68180	80A 1P	Switch
	BB	A9S68363	63A 3P	Switch (for UPSs with internal batteries)
20 kVA	UIB	OSMC65H4C63	63A 4P	Breaker
	SIB	OSMC65H4C63	63A 4P	Breaker
	UOB	A9S68292	125A 2P	Switch
	MBB	A9S68192	125A 1P	Switch
	BB	A9S68363	63A 3P	Switch (for UPSs with internal batteries)
30 kVA	UIB	A9S68480	500VAC 80A 4P	Switch
	SIB	A9S68491	100A 4P	Switch
	UOB	A9S68491	100A 4P	Switch
	MBB	A9S68280	80A 2P	Switch
	BB	A9S68391	100A 3P	Switch (for UPSs with internal batteries)

3:3 UPS

	Model	Switch/Breaker	Description	Switch or Breaker
10 kVA	UIB	OSMC65H4C32	32A 4P	Breaker
	SIB	OSMC65H4C32	32A 4P	Breaker
	UOB	A9S68432	32A 4P	Switch
	MBB	OSMC65H3C32	32A 3P	Breaker
	BB	A9S68332	32A 3P	Switch (for UPSs with internal batteries)
15 kVA	UIB	OSMC65H4C40	40A 4P	Breaker
	SIB	OSMC65H4C40	40A 4P	Breaker
	UOB	A9S68440	40A 4P	Switch
	MBB	OSMC65H3C40	40A 3P	Breaker
	BB	A9S68363	63A 3P	Switch (for UPSs with internal batteries)
20 kVA	UIB	OSMC65H4C63	63A 4P	Breaker
	SIB	OSMC65H4C63	63A 4P	Breaker
	UOB	A9S68463	63A 4P	Switch
	MBB	OSMC65H3C50	50A 3P	Breaker
	BB	A9S68363	63A 3P	Switch (for UPSs with internal batteries)

30 kVA	UIB	A9S68480	500VAC 80A 4P	Switch
	SIB	A9S68480	500VAC 80A 4P	Switch
	UOB	A9S68480	500VAV 80A 4P	Switch
	MBB	A9S68363	500VAC 63A 3P	Switch
	BB	A9S68391	100A 3P	Switch (for UPSs with internal batteries)
40 kVA	UIB	A9S68492	125A 4P	Switch
	SIB	A9S68492	125A 4P	Switch
	UOB	A9S68492	125A 4P	Switch
	MBB	A9S68380	80A 3P	Switch
	BB	A9S68392	125A 3P	Switch (for UPSs with internal batteries)

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison
France

+ 33 (0) 1 41 29 70 00

www.schneider-electric.com



* 9 9 0 - 9 1 0 7 9 J - 0 0 1 *

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2017 – 2025 Schneider Electric. All rights reserved.

990-91079J-001