
# **Battery Circuit Breaker Kit**

# For Easy UPS 3S, Easy UPS 3S Pro

# Installation

Latest updates are available on the Schneider Electric website E3SOPT008

09/2025

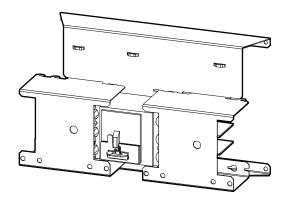



# **Legal Information**

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.

# **Table of Contents**

mportant Safety Instructions — SAVE THESE	
NSTRUCTIONS	5
Electromagnetic Compatibility	6
Safety Precautions	6
Electrical Safety	8
Battery Safety	9
Specifications	11
Battery Circuit Breaker Kit E3SOPT008 Specifications	11
Trip Settings	11
Recommended Cable Sizes for 400 V Systems	12
Torque Specifications	12
Environment	12
nstallation Procedure	13
Mount the Battery Circuit Breaker Kit in a Grounded Metal Box	13
Mount the Battery Circuit Breaker in the Empty Battery Cabinet – Bottom	
Cable Entry	14
Mount the Battery Circuit Breaker in the Empty Battery Cabinet – Top	
Cable Entry	15
Connect the Signal Cables for Easy UPS 3S	15
Connect the Signal Cables for Easy UPS 3S Pro	18
Connect the Power Cables	21

# Important Safety Instructions — SAVE THESE INSTRUCTIONS

Read these instructions carefully and look at the equipment to become familiar with it before trying to install, operate, service or maintain it. The following safety messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a "Danger" or "Warning" safety message indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages with this symbol to avoid possible injury or death.

## **ADANGER**

**DANGER** indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

Failure to follow these instructions will result in death or serious injury.

## **AWARNING**

**WARNING** indicates a hazardous situation which, if not avoided, **could result** in death or serious injury.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

# **ACAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

Failure to follow these instructions can result in injury or equipment damage.

## **NOTICE**

**NOTICE** is used to address practices not related to physical injury. The safety alert symbol shall not be used with this type of safety message.

Failure to follow these instructions can result in equipment damage.

# Please Note

Electrical equipment should only be installed, operated, serviced, and maintained by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Per IEC 62040-1: "Uninterruptible power systems (UPS) -- Part 1: Safety Requirements," this equipment, including battery access, must be inspected, installed and maintained by a skilled person.

The skilled person is a person with relevant education and experience to enable him or her to perceive risks and to avoid hazards which the equipment can create (reference IEC 62040-1, section 3.102).

# **Electromagnetic Compatibility**

## NOTICE

#### RISK OF ELECTROMAGNETIC DISTURBANCE

This is a product Category C3 according to IEC 62040-2. This is a product for commercial and industrial applications in the second environment - installation restrictions or additional measures may be needed to prevent disturbances. The second environment includes all commercial, light industry, and industrial locations other than residential, commercial, and light industrial premises directly connected without intermediate transformer to a public low-voltage mains supply. The installation and cabling must follow the electromagnetic compatibility rules, e.g.:

- the segregation of cables,
- the use of shielded or special cables when relevant,
- the use of grounded metallic cable tray and supports.

Failure to follow these instructions can result in equipment damage.

# **Safety Precautions**

## **AADANGER**

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Read all instructions in the installation manual before installing or working on this product.

Failure to follow these instructions will result in death or serious injury.

# **AADANGER**

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not install the product until all construction work has been completed and the installation room has been cleaned.

Failure to follow these instructions will result in death or serious injury.

# **AADANGER**

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The product must be installed according to the specifications and requirements as defined by Schneider Electric. It concerns in particular the external and internal protections (upstream disconnect devices, battery disconnect devices, cabling, etc.) and environmental requirements. No responsibility is assumed by Schneider Electric if these requirements are not respected.

Failure to follow these instructions will result in death or serious injury.

# **AADANGER**

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The UPS system must be installed according to local and national regulations. Install the UPS system according to:

- IEC 60364 (including 60364-4-41 protection against electric shock, 60364-4-42 protection against thermal effect, and 60364-4-43 protection against overcurrent), or
- NEC NFPA 70, or
- Canadian Electrical Code (C22.1, Part 1)

depending on which one of the standards apply in your local area.

Failure to follow these instructions will result in death or serious injury.

## **AADANGER**

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Install the product in a temperature controlled indoor environment free of conductive contaminants and humidity.
- Install the product on a non-flammable, level and solid surface (e.g. concrete) that can support the weight of the system.

Failure to follow these instructions will result in death or serious injury.

### **AADANGER**

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The product is not designed for and must therefore not be installed in the following unusual operating environments:

- Damaging fumes
- Explosive mixtures of dust or gases, corrosive gases, or conductive or radiant heat from other sources
- · Moisture, abrasive dust, steam or in an excessively damp environment
- · Fungus, insects, vermin
- Salt-laden air or contaminated cooling refrigerant
- Pollution degree higher than 2 according to IEC 60664-1
- Exposure to abnormal vibrations, shocks, and tilting
- · Exposure to direct sunlight, heat sources, or strong electromagnetic fields

Failure to follow these instructions will result in death or serious injury.

## **AADANGER**

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not drill or cut holes for cables or conduits with the gland plates installed and do not drill or cut holes in close proximity to the UPS system.

Failure to follow these instructions will result in death or serious injury.

## **AADANGER**

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not make mechanical changes to the product (including removal of cabinet parts or drilling/cutting of holes) that are not described in the installation manual.

Failure to follow these instructions will result in death or serious injury.

## **NOTICE**

#### **RISK OF OVERHEATING**

Respect the space requirements around the product and do not cover the ventilation openings when the product is in operation.

Failure to follow these instructions can result in equipment damage.

# **Electrical Safety**

## **AADANGER**

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Electrical equipment must be installed, operated, serviced, and maintained only by qualified personnel.
- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- Turn off all power supplying the UPS system before working on or inside the equipment.
- Before working on the UPS system, check for hazardous voltage between all terminals including the protective earth.
- The UPS contains an internal energy source. Hazardous voltage can be
  present even when disconnected from the utility/mains supply. Before
  installing or servicing the UPS system, ensure that the units are OFF and
  that utility/mains and batteries are disconnected. Wait five minutes before
  opening the UPS to allow the capacitors to discharge.
- A disconnection device (e.g. disconnection circuit breaker or switch) must be installed to enable isolation of the system from upstream power sources in accordance with local regulations. This disconnection device must be easily accessible and visible.
- The UPS must be properly earthed/grounded and due to a high leakage current, the earthing/grounding conductor must be connected first.

Failure to follow these instructions will result in death or serious injury.

# **AADANGER**

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

In systems where backfeed protection is not part of the standard design, an automatic isolation device (backfeed protection option or other device meeting the requirements of IEC/EN 62040–1 **or** UL1778 4th Edition – depending on which of the two standards apply to your local area) must be installed to prevent hazardous voltage or energy at the input terminals of the isolation device. The device must open within 15 seconds after the upstream power supply fails and must be rated according to the specifications.

Failure to follow these instructions will result in death or serious injury.

When the UPS input is connected through external isolators that, when opened, isolate the neutral or when the automatic backfeed isolation is provided external to the equipment or is connected to an IT power distribution system, a label must be fitted at the UPS input terminals, and on all primary power isolators installed remote from the UPS area and on external access points between such isolators and the UPS, by the user, displaying the following text (or equivalent in a language which is acceptable in the country in which the UPS system is installed):

# **AA** DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Risk of Voltage Backfeed. Before working on this circuit: Isolate the UPS and check for hazardous voltage between all terminals including the protective earth.

Failure to follow these instructions will result in death or serious injury.

# **Battery Safety**

### A A DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery disconnect devices must be installed according to the specifications and requirements as defined by Schneider Electric.
- Servicing of batteries must only be performed or supervised by qualified personnel knowledgeable of batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect charging source prior to connecting or disconnecting battery terminals.
- Do not dispose of batteries in a fire as they can explode.
- Do not open, alter, or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.

Failure to follow these instructions will result in death or serious injury.

### **AA** DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Batteries can present a risk of electric shock and high short-circuit current. The following precautions must be observed when working on batteries

- Remove watches, rings, or other metal objects.
- Use tools with insulated handles.
- Wear protective glasses, gloves and boots.
- · Do not lay tools or metal parts on top of batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.
- Determine if the battery is inadvertently grounded. If inadvertently grounded, remove source from ground. Contact with any part of a grounded battery can result in electric shock. The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance (applicable to equipment and remote battery supplies not having a grounded supply circuit).

Failure to follow these instructions will result in death or serious injury.

# **AADANGER**

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

When replacing batteries, always replace with the same type and number of batteries or battery packs.

Failure to follow these instructions will result in death or serious injury.

# **A**CAUTION

#### **RISK OF EQUIPMENT DAMAGE**

- Mount the batteries in the UPS system, but do not connect the batteries until
  the UPS system is ready to be powered up. The time duration from battery
  connection until the UPS system is powered up must not exceed 72 hours or
  3 days.
- Batteries must not be stored more than six months due to the requirement of recharging. If the UPS system remains de-energized for a long period, we recommend that you energize the UPS system for a period of 24 hours at least once every month. This charges the batteries, thus avoiding irreversible damage.

Failure to follow these instructions can result in injury or equipment damage.

# **Specifications**

# **NOTICE**

#### **HAZARD OF EQUIPMENT DAMAGE**

Refer to the UPS installation manual for detailed specifications for the UPS system.

Failure to follow these instructions can result in equipment damage.

# **Battery Circuit Breaker Kit E3SOPT008 Specifications**

### **AADANGER**


#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The battery circuit breaker kit (E3SOPT008) must only be used with Easy UPS 3S and Easy UPS 3S Pro.

Failure to follow these instructions will result in death or serious injury.

Battery circuit breaker	LV438118+LV438135 <b>or</b> LV438880
Maximum configuration	4 hour runtime
Battery type	VRLA
Number of blocks	32–40
Maximum battery short-circuit level (kA)	10

# **Trip Settings**

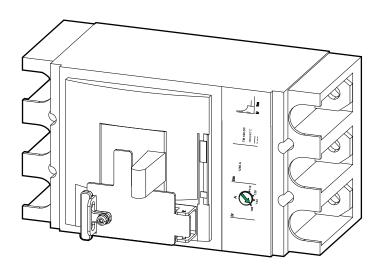

	400 V Systems				208 V Systems			
	10 kW	15 kW	20 kW	30 kW	40 kW	10 kW	15 kW	20 kW
Ir setting	112	112	112	112	144	112	112	144
Im setting	1250				1250			

# **Recommended Cable Sizes for 400 V Systems**

## **▲ DANGER**

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

All wiring must comply with all applicable national and/or electrical codes.

Failure to follow these instructions will result in death or serious injury.

**NOTE:** Overcurrent protection is to be provided by others.

Cable sizes in this manual are based on table B.52.5 of IEC 60364–5–52 with the following assertions:

- 90 °C conductors
- · An ambient temperature of 30 °C
- Use of copper or aluminum conductors
- · Installation method C

If the ambient temperature is greater than 30 °C, larger conductors are to be selected in accordance with the correction factors of the IEC.

	10 kVA	15 kVA	20 kVA	30 kVA	40 kVA
Battery (mm²)	8	8	25	25	35
PE (mm²)	6	6	10	16	16

**NOTE:** For Easy UPS 3S Pro, the maximum allowable cable size is 16 mm<sup>2</sup> (10 – 20 kVA UPS), 25 mm<sup>2</sup> (30 kVA UPS), or 35 mm<sup>2</sup> (40 kVA UPS).

# **Torque Specifications**


Bolt size	Torque
M6	5 Nm (3.69 lb-ft)
M10	30 Nm (22 lb-ft)

# **Environment**

	Operation	Storage
Temperature	0 °C to 40 °C (32 °F to 104 °F)	-25 °C to 55 °C (-13 °F to 131 °F)

# **Installation Procedure**

**NOTE:** The illustrations in this manual shows installation in a 700 mm empty battery cabinet. The battery circuit breaker kit can also be installed in a 1100 mm empty battery cabinet or in a grounded metal box.

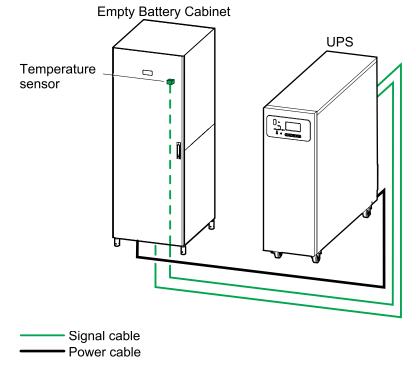

**NOTE:** The distance between the battery bank and the UPS must not exceed 200 m. Contact Schneider Electric for installations with a longer distance.

- 1. Mount the battery circuit breaker kit. Follow one of the procedures:
  - Mount the Battery Circuit Breaker in the Empty Battery Cabinet Bottom Cable Entry, page 14, or
  - Mount the Battery Circuit Breaker in the Empty Battery Cabinet Top Cable Entry, page 15.
- 2. Connect the Signal Cables for Easy UPS 3S, page 15 or Connect the Signal Cables for Easy UPS 3S Pro, page 18.
- 3. Connect the Power Cables, page 21.


# **Mount the Battery Circuit Breaker Kit in a Grounded Metal Box**

# **ACAUTION**

#### **RISK OF EQUIPMENT DAMAGE**

Mount the battery circuit breaker in a grounded metal box.

Failure to follow these instructions can result in injury or equipment damage.

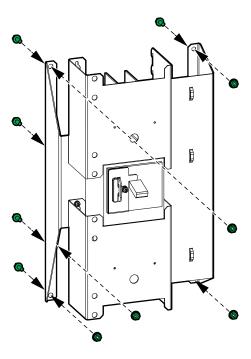


- 1. Measure and mark the holes for mounting the battery circuit breaker kit in the metal box.
- 2. Drill holes in each of the marked locations.
- 3. Mount the battery circuit breaker kit in the metal box.

# **Mount the Battery Circuit Breaker in the Empty Battery Cabinet – Bottom Cable Entry**

1. Install the battery breaker circuit kit in the bottom of the empty battery cabinet.


#### Front View of the Empty Battery Cabinet

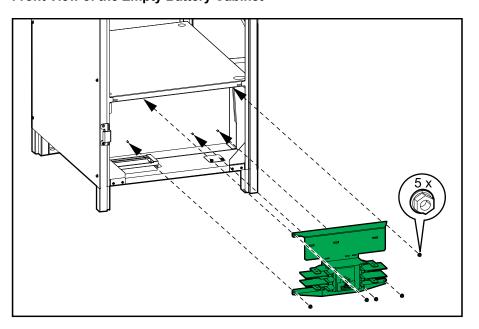

# **Mount the Battery Circuit Breaker in the Empty Battery Cabinet – Top Cable Entry**

1. Install the battery circuit breaker kit in the top of the empty battery cabinet.

#### **Front View of the Empty Battery Cabinet**

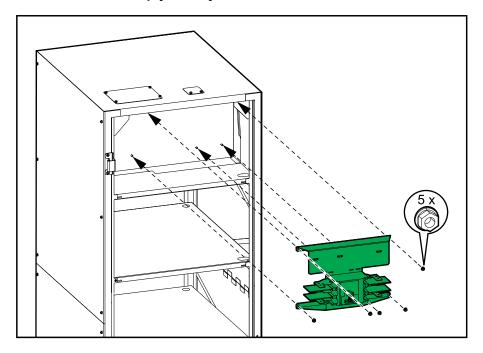

# **Connect the Signal Cables for Easy UPS 3S**

**NOTE:** Route the signal cables separately from the power cables.

**NOTE:** The illustrations in this procedure show a bottom cable entry system. The procedure is the same for a top cable entry system.

1. Install the temperature sensor from the optional installation kit E3SOPT003.

# **AWARNING**


#### **HAZARD OF FIRE**

Position the temperature sensor as described to ensure correct temperature measurements.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

**NOTE:** The length of the temperature sensor cable is 5.8 meter.

#### Front View of the Empty Battery Cabinet

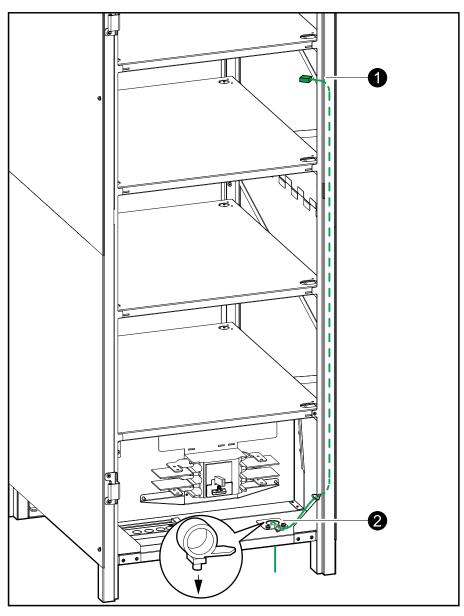


2. Route the battery temperature sensor cables through the top or the bottom of the empty battery cabinet to the UPS dry contact terminal J2–1 and J2–2 and connect as shown.

**Easy UPS 3S Battery Temperature Sensor Connection** 




- 3. Route the signal cables through the top or bottom of the empty battery cabinet to the battery circuit breaker.
- 4. Remove the cover from the battery circuit breaker.

#### Front View of the Battery Circuit Breaker

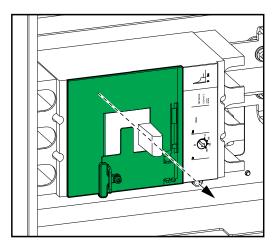


5. Connect the signal cables:

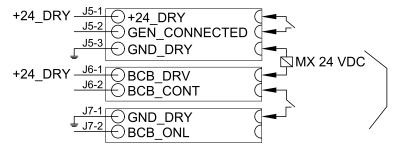

 a. Connect the Aux switch signal cables from the empty battery cabinet to J6–2 and J7–1 in the UPS.



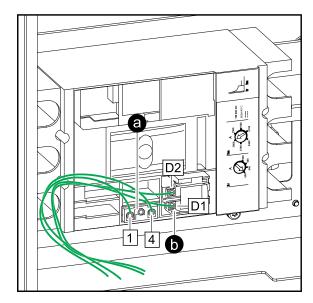

- b. Connect the shunt trip coil signal cables from the empty battery cabinet to J5–3 and J6–1 in the UPS.
- 6. Reinstall the cover on the battery circuit breaker.

# **Connect the Signal Cables for Easy UPS 3S Pro**

**NOTE:** Route the signal cables separately from the power cables.

**NOTE:** The illustrations in this procedure show a bottom cable entry system. The procedure is the same for a top cable entry system.

1. Install the temperature sensor from the optional installation kit E3SOPT003.

# **AWARNING**


#### **HAZARD OF FIRE**

Position the temperature sensor as described to ensure correct temperature measurements.

Failure to follow these instructions can result in death, serious injury, or equipment damage.


**NOTE:** The length of the temperature sensor cable is 5.8 meter.

#### Front View of the Empty Battery Cabinet

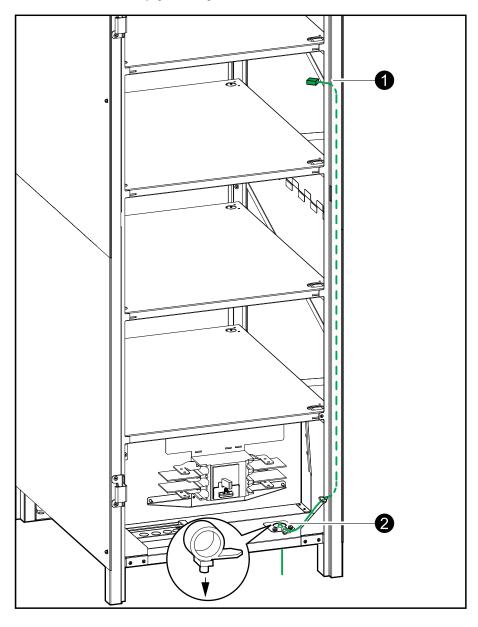


2. Route the battery temperature sensor cables through the top or the bottom of the empty battery cabinet to the UPS dry contact terminal J4–1 and J4–2 and connect as shown.

#### **Easy UPS 3S Pro Battery Temperature Sensor Connection**

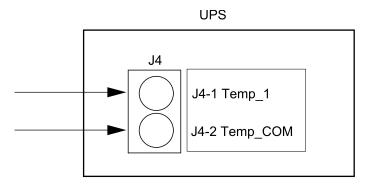


- 3. Route the signal cables through the top or bottom of the empty battery cabinet to the battery circuit breaker.
- 4. Remove the cover from the battery circuit breaker.



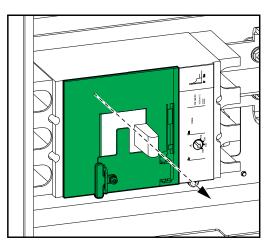


990-91202A-001

5. Connect the signal cables:

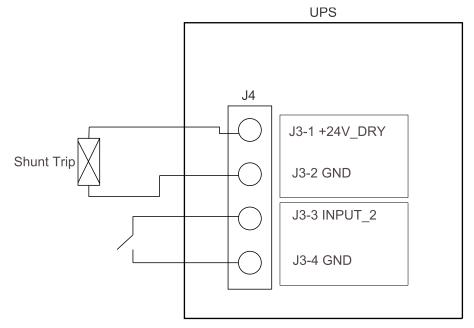

a. Connect the Aux switch signal cables from empty battery cabinet to J3-3 and J3-4. Configure J3-3 (input dry contact 2) as **BB status** by the display or Tuner.

#### Front View of the Battery Circuit Breaker

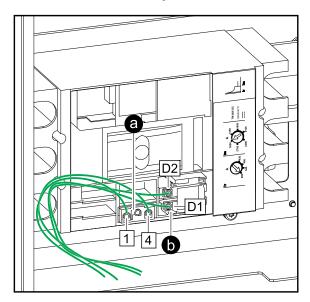

- b. Connect the shunt trip coil signal cables from the empty battery cabinet to J3-1 and J3-2 in the UPS.
- 6. Reinstall the cover on the battery circuit breaker.

## **Connect the Power Cables**

# **AA** DANGER


#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Perform a total power off of the UPS system before connecting the battery cables to the battery circuit breaker.


Failure to follow these instructions will result in death or serious injury.

1. Lockout/Tagout the battery circuit breaker in the OFF position.

#### **Empty Battery Cabinet – Bottom Cable Entry**

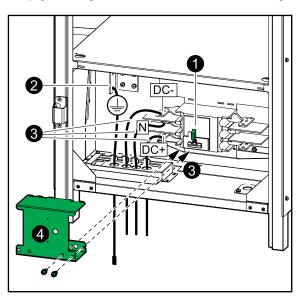

#### **Empty Battery Cabinet - Top Cable Entry**

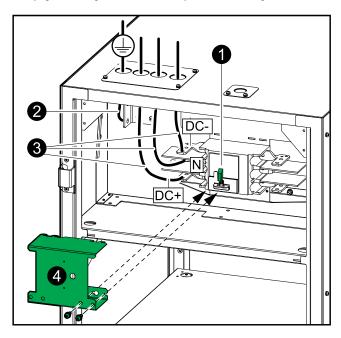



- 2. Connect the PE cable.
- 3. Connect the DC cables (DC+, N, DC-) from the UPS.
- 4. Install the protection cover over the terminals on the left side of the battery circuit breaker.
- 5. Install the batteries as described in the installation manual supplied with the empty battery cabinet.

6. Connect the battery cables (Batt+, N, Batt-) from the batteries in the empty battery cabinet to the battery circuit breaker.

#### **Empty Battery Cabinet – Bottom Cable Entry**



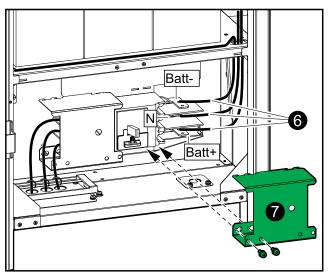

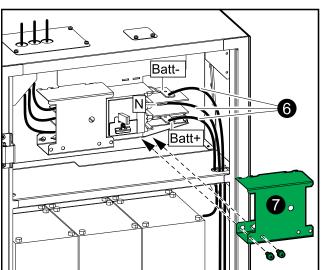

7. Install the protection cover over the terminals on the right side of the battery circuit breaker.

22 990-91202A-001

Schneider Electric 35 rue Joseph Monier 92500 Rueil Malmaison France

+ 33 (0) 1 41 29 70 00



As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.  $\frac{1}{2} \int_{-\infty}^{\infty} \frac{1}{2} \int_{-\infty}^{\infty} \frac{$ 

© 2018 – 2025 Schneider Electric. All rights reserved.

990-91202A-001