

# Galaxy PDU

400-500 kVA

## Technical Specifications

Latest updates are available on the Schneider Electric website  
6/2025



# Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

**To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.**

---

## Access to Your Product Manuals Online

### Find the Manuals, Submittal Drawings, and Other Documentation for Your Specific Product Here:

In your web browser, type in <https://www.go2se.com/ref=> and the commercial reference for your product.

Example: <https://www.go2se.com/ref=PMM400-ALAX>

### Find the Power Distribution Unit Manuals:

Scan the code to go to the online manual portal:



<https://www.productinfo.schneider-electric.com/galaxypdu/>

Here you can find your receiving and unpacking manual, installation manual, operation manual, and technical specifications.

This online manual portal is available on all devices and offers digital pages, search functionality across the different documents in the portal, and PDF download for offline use.

### Learn More About the Power Distribution Units Here:

Go to <https://www.se.com/ww/en/product-range/61801> to learn more about this product.



# Table of Contents

Important Safety Instructions — SAVE THESE	
INSTRUCTIONS .....	7
FCC Statement .....	8
Safety Precautions .....	8
Technical Data .....	11
Model List .....	11
System Overview .....	12
Efficiency .....	14
Facility Planning .....	15
Specifications .....	15
Communication and Management .....	18
Physical .....	19
Shipping Weights and Dimensions .....	19
Weights and Dimensions .....	19
Clearance .....	20
Environment .....	21
Compliance .....	21
Drawings .....	22
One Line Diagrams .....	22
Options .....	25
Hardware Options .....	25
Branch Circuit Breaker Trip Curves .....	29
Limited Factory Warranty .....	35



# Important Safety Instructions — SAVE THESE INSTRUCTIONS

Read these instructions carefully and look at the equipment to become familiar with it before trying to install, operate, service or maintain it. The following safety messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety message indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages with this symbol to avoid possible injury or death.

## DANGER

**DANGER** indicates a hazardous situation which, if not avoided, **will result in death or serious injury.**

**Failure to follow these instructions will result in death or serious injury.**

## WARNING

**WARNING** indicates a hazardous situation which, if not avoided, **could result in death or serious injury.**

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## CAUTION

**CAUTION** indicates a hazardous situation which, if not avoided, **could result in minor or moderate injury.**

**Failure to follow these instructions can result in injury or equipment damage.**

## NOTICE

**NOTICE** is used to address practices not related to physical injury. The safety alert symbol shall not be used with this type of safety message.

**Failure to follow these instructions can result in equipment damage.**

## Please Note

Electrical equipment should only be installed, operated, serviced, and maintained by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

## FCC Statement

**NOTE:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Safety Precautions

### **⚠ DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

All safety instructions in this document must be read, understood and followed.

**Failure to follow these instructions will result in death or serious injury.**

### **⚠ DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

Read all instructions in this manual before installing or working on this product.

**Failure to follow these instructions will result in death or serious injury.**

### **⚠ DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

Do not install the product until all construction work has been completed and the installation room has been cleaned.

**Failure to follow these instructions will result in death or serious injury.**

### **⚠ DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- The product must be installed according to the specifications and requirements as defined by Schneider Electric. It concerns in particular the external and internal protections (upstream disconnect devices, battery disconnect devices, cabling, etc.) and environmental requirements. No responsibility is assumed by Schneider Electric if these requirements are not respected.
- After the product has been electrically wired, do not start up the system. Start-up must only be performed by Schneider Electric.

**Failure to follow these instructions will result in death or serious injury.**

## **⚠ DANGER**

### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

The product must be installed according to local and national regulations. Install the product according to:

- NEC NFPA 70, **or**
- Canadian Electrical Code (C22.1, Part 1)

depending on which one of the standards apply in your local area.

**Failure to follow these instructions will result in death or serious injury.**

## **⚠ DANGER**

### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- Install the product in a temperature controlled indoor environment free of conductive contaminants and humidity.
- Install the product on a non-flammable, level and solid surface (e.g. concrete) that can support the weight of the system.

**Failure to follow these instructions will result in death or serious injury.**

## **⚠ DANGER**

### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

The product is not designed for and must therefore not be installed in the following unusual operating environments:

- Damaging fumes
- Explosive mixtures of dust or gases, corrosive gases, or conductive or radiant heat from other sources
- Moisture, abrasive dust, steam or in an excessively damp environment
- Fungus, insects, vermin
- Salt-laden air or contaminated cooling refrigerant
- Pollution degree higher than 2 according to IEC 60664-1
- Exposure to abnormal vibrations, shocks, and tilting
- Exposure to direct sunlight, heat sources, or strong electromagnetic fields

**Failure to follow these instructions will result in death or serious injury.**

## **⚠ DANGER**

### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

Do not drill or cut holes for cables or conduits with the gland plates installed and do not drill or cut holes in close proximity to the product.

**Failure to follow these instructions will result in death or serious injury.**

## **⚠ WARNING**

### **HAZARD OF ARC FLASH**

Do not make mechanical changes to the product (including removal of cabinet parts or drilling/cutting of holes) that are not described in this manual.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

***NOTICE*****RISK OF OVERHEATING**

Respect the space requirements around the product and do not cover the ventilation openings when the product is in operation.

**Failure to follow these instructions can result in equipment damage.**

# Technical Data

## Model List



### 400 kVA PDU

- 400 kVA Galaxy PDU with aluminum transformer with limited configurable options (PMM400-ALAX)
- 400 kVA Galaxy PDU with aluminum transformer with a wide range of configurable options (PMM400-ALA)
- 400 kVA Galaxy PDU with copper transformer with a wide range of configurable options (PMM400-CUB)

### 500 kVA PDU

- 500 kVA Galaxy PDU with aluminum transformer with limited configurable options (PMM500-ALAX)
- 500 kVA Galaxy PDU with aluminum transformer with a wide range of configurable options (PMM500-ALA)
- 500 kVA Galaxy PDU with copper transformer with a wide range of configurable options (PMM500-CUB)

## System Overview

### Overview of Model Options

Commercial reference		PMM500-ALAX	PMM400-ALAX	PMM500-ALA	PMM400-ALA	PMM500-CUB	PMM400-CUB
Output voltage option	208 V	+	+	+	+	+	+
	216 V	+		+			
	400 V	+	+	+	+		
	415 V	+		+		+	
Branch circuit breaker	Injection-tested circuit breaker	+	+	+	+	+	+
	Standard circuit breaker	+	+	+	+	+	+
Main input device	800 A switch	+	+	+	+	+	+
	800 A circuit breaker	+	+	+	+	+	+
Main input device terminals	Mechanical lugs			+	+	+	+
	Compression lugs	+	+	+	+	+	+
Cable entry	Top	+	+	+	+	+	+
	Bottom	+	+	+	+	+	+
Main output circuit breaker						+	+
Transformer thermostats	High temp alarm	+	+	+	+	+	+
	High temp trip	+	+	+	+	+	+
EM4914A 14 channel monitoring		+	+	+	+	+	+
Input monitoring	None			+	+	+	+
	EM3550	+	+	+	+	+	+
	PM5563			+	+	+	+
Output monitoring	EM3550	+	+	+	+	+	+
	PM5563			+	+	+	+
	PM8244 / PM8344			+	+	+	+

**Overview of Model Options (Continued)**

Commercial reference		PMM500-ALAX	PMM400-ALAX	PMM500-ALA	PMM400-ALA	PMM500-CUB	PMM400-CUB
Input and output monitoring	EM3550 input and EM3550 output	+	+	+	+	+	+
	EM3550 input and PM5563 output			+	+	+	+
	PM5563 input and EM3550 output			+	+	+	+
	PM5563 input and PM5563 output			+	+	+	+
	EM3550 input and PM8244 / PM8344 output			+	+	+	+
	PM5563 input and PM8244 / PM8344 output			+	+	+	+
HDMP6000 (METSEHDPM6S480VC) with 42 channel retro unit (METSEHDPM6R42WF)		+	+	+	+	+	+
Input monitoring	None	+		+	+	+	+
	EM3550		+	+	+	+	+
	PM5563			+	+	+	+
Output monitoring	HDPM6000	+	+	+	+	+	+
	PM8244 / PM8344			+	+	+	+
Input and output monitoring	EM3550 input and HDPM6000 output		+	+	+	+	+
	PM5563 input and HDPM6000 output			+	+	+	+
	EM3550 input and PM8244 / PM8344 output			+	+	+	+
	PM5563 input and PM8244 / PM8344 output			+	+	+	+
Manual restart				+	+	+	+
Color	APC raven black	+	+			+	
	White			+	+		+

**Overview of Model Options (Continued)**

Commercial reference		PMM500-ALAX	PMM400-ALAX	PMM500-ALA	PMM400-ALA	PMM500-CUB	PMM400-CUB
Emergency power off button on PDU				+	+	+	+
Surge protective device	208 V	+	+	+	+	+	+
	216 V	+		+			
	400 V	+	+	+	+		
	415 V	+		+		+	

All options and configurations are selected on ordering and factory-installed to deliver a PDU that meets your requirements. See [Hardware Options](#), page 25 for feature details.

**Efficiency**

Commercial reference	PMM400-ALAX PMM400-ALA	PMM400-CUB	PMM500-ALAX PMM500-ALA	PMM500-CUB
<b>kVA</b>	<b>400</b>	<b>400</b>	<b>500</b>	<b>500</b>
100% load	> 97.5%	> 97.5%	> 97.5%	> 97.5%

# Facility Planning

## Specifications

### Input Specifications

<b>Commercial reference</b>	<b>PMM400-ALAX PMM400-ALA PMM400-CUB</b>	<b>PMM500-ALAX PMM500-ALA PMM500-CUB</b>
<b>kVA</b>	<b>400</b>	<b>500</b>
Connections	3-wire (3P + PE)	
Input voltage (V)	480	
Input current (A)	493	617
Frequency (Hz)	60	
Maximum short circuit rating	65 kA RMS symmetrical at 480 V	

### Output Specifications

<b>Commercial reference</b>	<b>PMM400-ALAX PMM400-ALA</b>	<b>PMM400-CUB</b>	<b>PMM500-ALAX PMM500-ALA</b>	<b>PMM500-CUB</b>
<b>kVA</b>	<b>400</b>		<b>500</b>	
Connections	4-wire (3P + N + PE)			
Output voltage (V)	400 or 208	208	400 or 208 415 or 216	415 or 208
Output current (A)	1110 at 208 V 577 at 400 V	1110 at 208 V	1388 at 208 V 1336 at 216 V 722 at 400 V 696 at 415 V	1388 at 208 V 696 at 415 V
Frequency (Hz)	60			
Output current protection (A)	250-600			
Branch output (A)	250, 400, 600			

## Required Upstream Protection for PDU Systems with a Main Input Switch MIS

**⚡⚠ DANGER**

**HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

For PDU systems with a main input switch MIS, it is mandatory to install an upstream OCPD. Refer to the following table for the recommended upstream OCPD model or use an upstream OCPD that is rated to comply with the maximum current setting specified.

**Failure to follow these instructions will result in death or serious injury.**

Commercial reference	PMM400-ALAX	PMM400-ALA	PMM400-CUB	PMM500-ALAX	PMM500-ALA	PMM500-CUB
kVA	400			500		
Upstream OCPD	PJX36080UXXX (Ir=504A max)			PJX36080UXXX (Ir=640A max)		

## Recommended Cables Sizes

**⚡⚠ DANGER**

**HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

All wiring must comply with all applicable national and/or electrical codes.

- All field wiring connections to be made with UL listed wire connectors suitable for the size and type of wire involved.
- Conduit openings to be installed only in designated terminal compartment area.
- Equipment must be field grounded using equipment grounding conductors EGC sized in accordance with NEC based on the main input device MID maximum rating.

**Failure to follow these instructions will result in death or serious injury.**

### Input and Output

Device	Main input device MID		Main output device MOD	
	3-pole, switch (MIS) for 400/500 kVA	3-pole, circuit breaker (MIB) for 400/500 kVA	3-pole, circuit breaker (MOB) for 400 kVA	3-pole, circuit breaker (MOB) for 500 kVA
Rating	800 A, 600 V	800 A, 600 V at 80%	1200 A, 600 V at 100%	1600 A, 600 V at 100%
Brand	Square D by Schneider Electric			
Model	PJF36000S80	PJF36080U33A	RJF36120CU33A	RJF36160CU33A
(Standard) Mechanical terminal wire range (aluminum/copper)	3 x 3/0 AWG to 500 kcmil		NA	NA
Mechanical wire bending space	363.22 mm (14.3 in)		NA	NA
(Option) Compression terminal wire range (aluminum/copper)	2 x 250 kcmil, NEMA 2 hole (1/2 inch bolt) - wire bending space: 279.4 mm (11 in)  2 x 350 kcmil NEMA 2 hole (1/2 inch bolt) - wire bending space: 269.24 mm (10.6 in)  2 x 500 kcmil NEMA 2 hole (3/8 inch bolt) - wire bending space: 279.4 mm (11 in)		NA	NA


**Branch Circuit Breaker**

Rating	Branch circuit breaker	Breaking capacity		Terminal wire range (aluminum/copper)	Wire bending space
		240 V	480 V		
250 A at 80%	JDA36250U33X	25 kA	18 kA	3/0 AWG to 350 kcmil	487.68 mm (19.2 in)
250 A at 100% <sup>(1)</sup>	JDA36250CU33X				
250 A at 80%	JGA36250U33X	65 kA	35 kA		
250 A at 100% <sup>(1)</sup>	JGA36250CU33X				
400 A at 100%	LGA36400CU33X	25 kA	18 kA	2 x 3/0 AWG to 500 kcmil	386.08 mm (15.2 in)
400 A at 80%	LDA36400U33X				
400 A at 80%	LDA36400U33X	25 kA	18 kA		
400 A at 100%	LDA36400CU33X				
600 A at 80%	LGA36600U33X	65 kA	35 kA		
600 A at 80%	LDA36600U33X	25 kA	18 kA		


**Conduit Area**

Cable entry system	Conduit area mm (in)
Top cable entry incoming cables	321 x 212 (12.64 x 8.34)
Top cable entry outgoing cables (distribution)	200 x 957 (7.8 x 37.6)
Bottom cable entry incoming cables	127 x 280 (11 x 5)
Bottom cable entry outgoing cables (distribution)	181 x 934 (7.1 x 36.78)

**Bottom Cable Entry System**

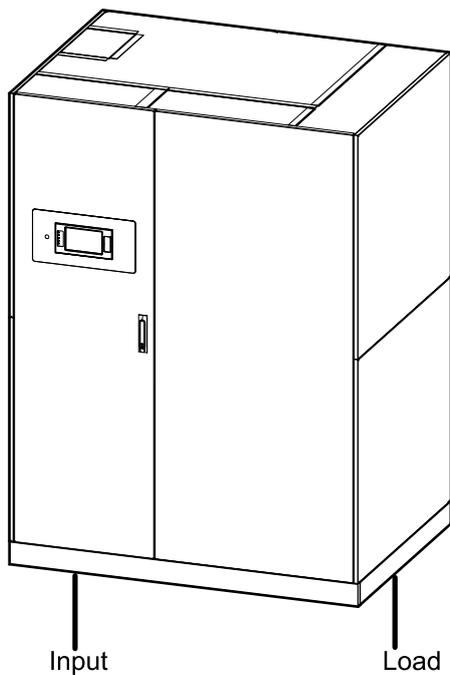

**Top Cable Entry System**

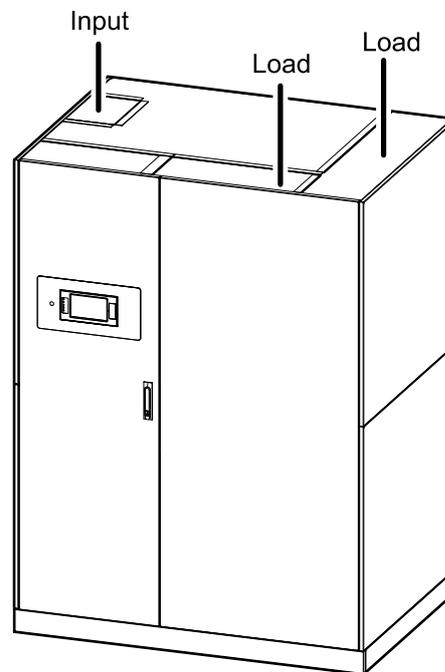

<sup>(1)</sup> Copper lugs for use with copper cables only.

## Communication and Management

Local area network	100 Mps
Communication protocols	Modbus TCP/IP, Ethernet, RS485, SNMP, BACnet through additional gateway
Control panel	7-inch touchscreen display
Audible alarm	Yes
Emergency power off (EPO)	Yes
Connectivity	StruxureWare for data center operation

# Physical

## Shipping Weights and Dimensions

Commercial reference	Weight kg (lbs)	Height mm (in)	Width mm (in)	Depth mm (in)
PMM400-ALAX PMM400-ALA	2450 (5400)	2425 (95.5)	1860 (73.2)	1450 (57.1)
PMM400-CUB	2500 (5510)			
PMM500-ALAX PMM500-ALA	2550 (5620)			
PMM500-CUB	2917 (6400)			

## Weights and Dimensions


Commercial reference	Weight kg (lbs)	Height mm (in)	Width mm (in)	Depth mm (in)
PMM400-ALAX PMM400-ALA	2118 (4670)	2043.7 (80.46)	1511.3 (59.5)	1092.2 (43)
PMM400-CUB	2168 (4780)			
PMM500-ALAX PMM500-ALA	2218 (4890)			
PMM500-CUB	2585 (5700)			

# Clearance


**NOTE:** Clearance dimensions are published for airflow and service access only. Consult with the local safety codes and standards for additional requirements in your local area.

**NOTE:** 914 mm (36 in) left side clearance is only required for non-routine transformer service such as transformer tap changes and main current transformer replacement. For routine operation and maintenance of the PDU, there is no side clearance required.

**Front View of the PDU – Standard Unit**

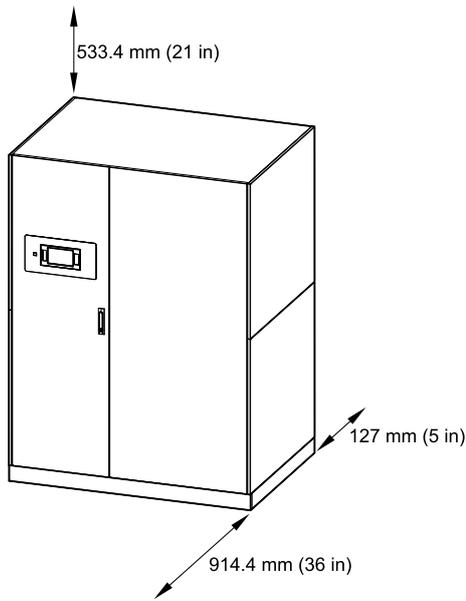

**Front View of the PDU – With the Infrared Window**

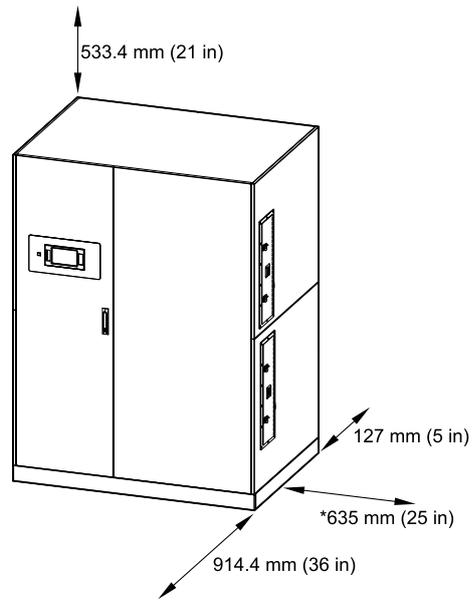

\*For PDUs installed with the optional infrared window, a right side clearance of 635 mm (25 in) is required.

## Environment

	Operating	Storage
Temperature	-10 °C to 40 °C (14 °F to 104 °F)	-25 °C to 55 °C (-13 °F to 131 °F)
Relative humidity	10 to 70% non-condensing	10 to 90% non-condensing
Elevation	0 m to 2011 m (0 feet to 6600 feet) above sea level	152 m below to 7620 m above sea level (500 feet below to 25,000 feet above sea level)
Protection class	NEMA type 1, solid roof, external doors with inner dead front panels	
Cooling	Front and rear ventilation (top and bottom)	
Color	RAL 9003 white and APC raven black	
Accessibility	Front access for: <ul style="list-style-type: none"> <li>• Display</li> <li>• Fuse panel</li> <li>• Communication and monitoring</li> <li>• Adding/replacing branch circuit breakers</li> </ul>	

## Heat Dissipation

Commercial reference	PMM400-ALAX PMM400-ALA	PMM400-CUB	PMM500-ALAX PMM500-ALA	PMM500-CUB
kVA	400		500	
Heat dissipation in BTU/hr	16018	14592	20616	18450

## Compliance

Safety	UL 60950-1, 2nd Edition (Information Technology Equipment) CSA C22.2 No. 60950-1-07, 2nd Edition (Information Technology Equipment) UL 891, 11th Edition (Switchboard) C22.2 No. 244-05, First Edition (Switchboard)
EMC	FCC Part 15, Subpart B, Class A
Marking	cULus
Performance <sup>(2)</sup>	Transformer DOE2016 / NRCan

<sup>(2)</sup> Applicable for PDUs with transformers only, in accordance with NEMA ST-20.


# Drawings

**NOTE:** A comprehensive set of drawings is available on [www.se.com](http://www.se.com).


**NOTE:** These drawings are for reference ONLY – subject to change without notice.

## One Line Diagrams


### PDU with Main Input Circuit Breaker MIB

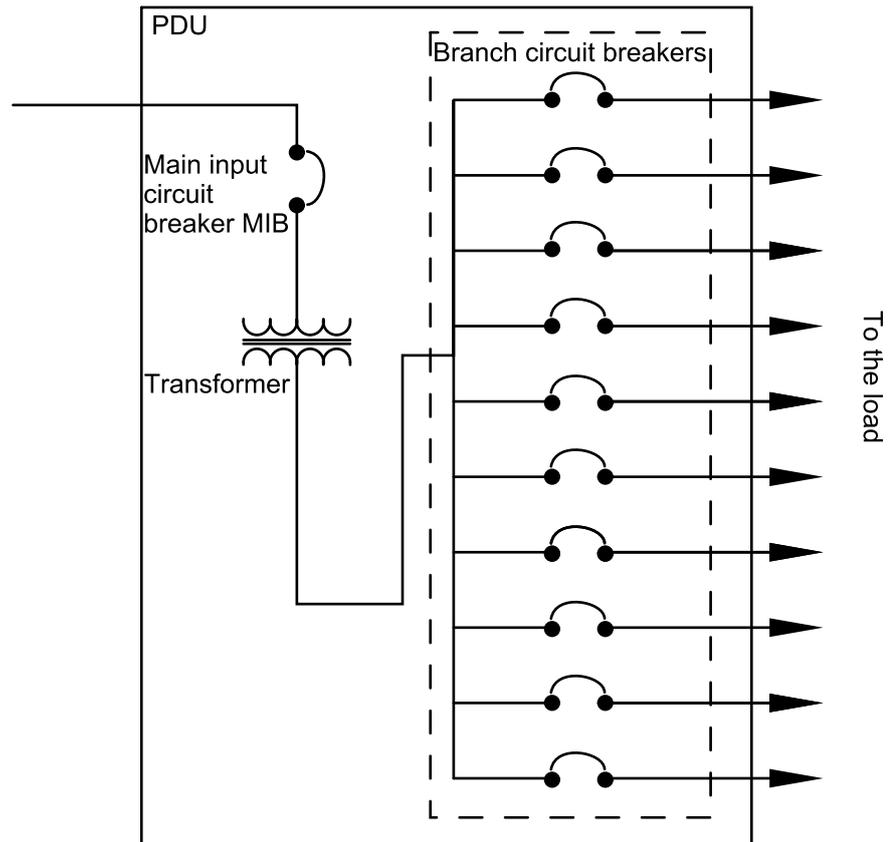


## PDU with Main Input Circuit Breaker MIB and Main Output Circuit Breaker MOB

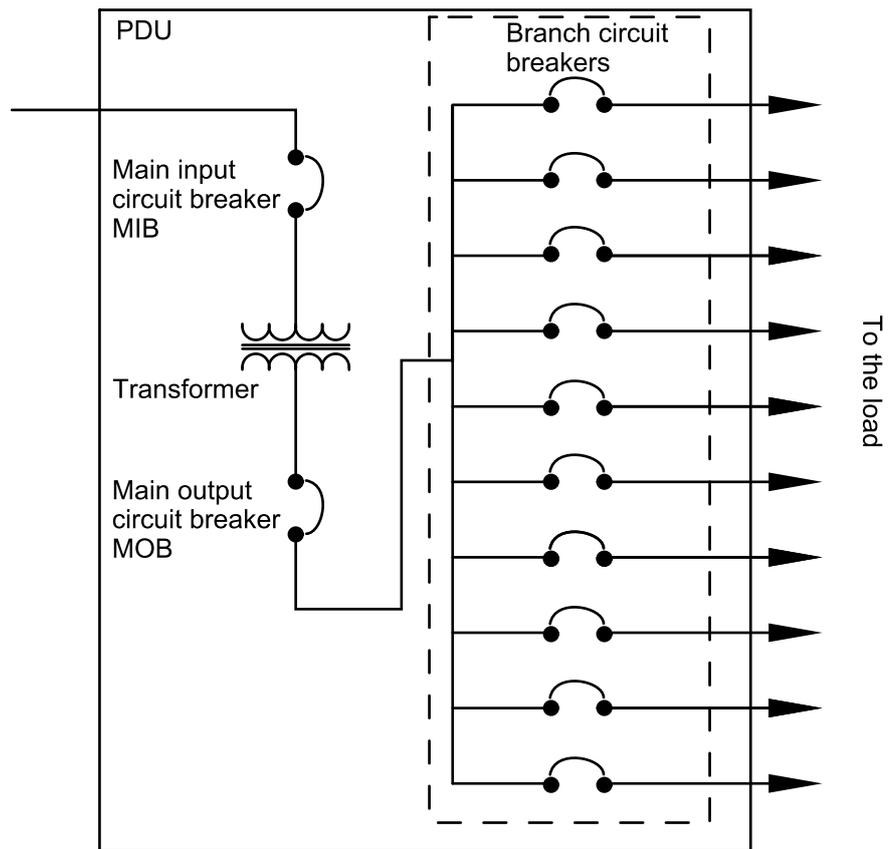

## PDU with Main Input Switch MIS

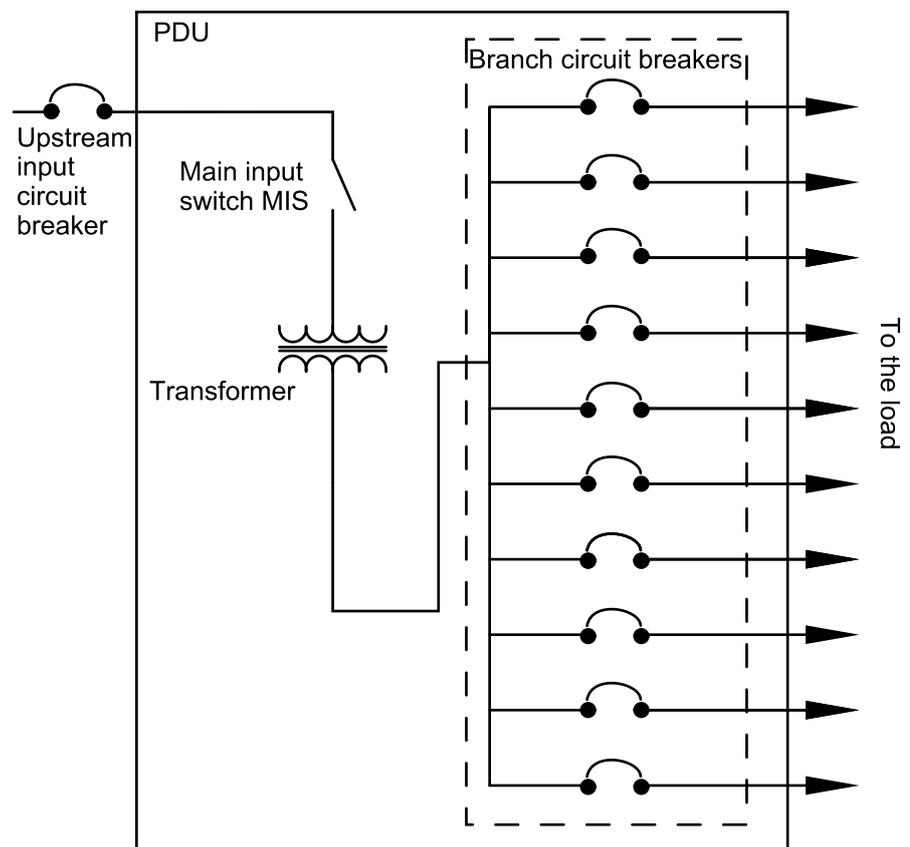

# PDU with Main Input Switch MIS and Main Output Circuit Breaker MOB

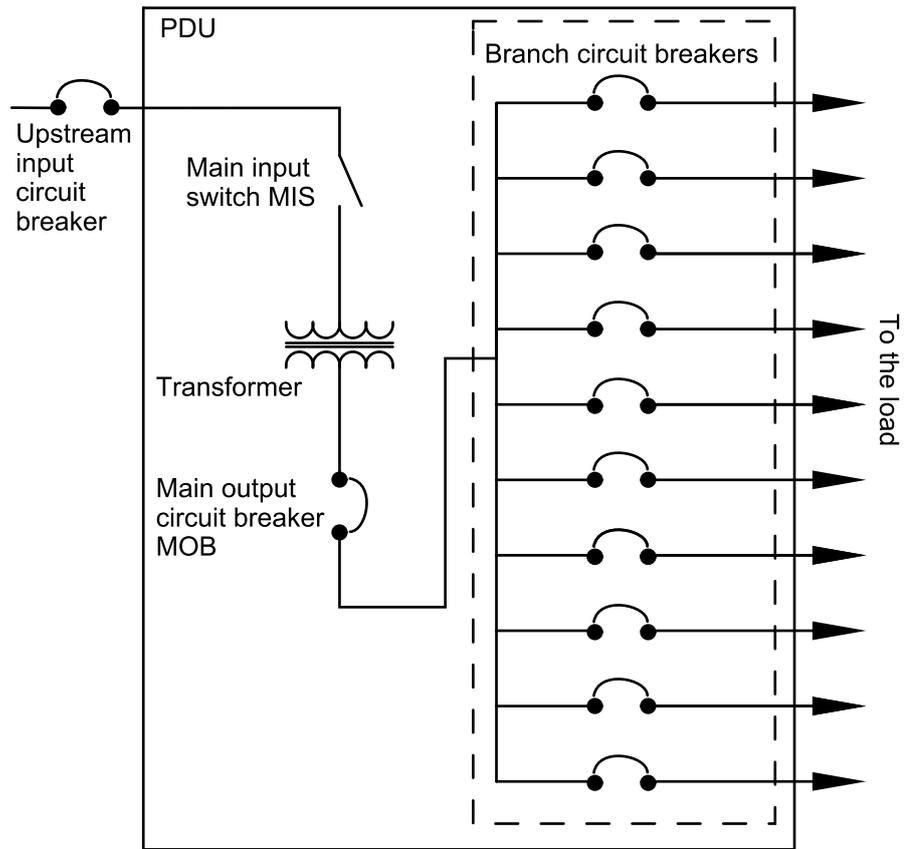

# Options

## Hardware Options

All options must be specified at the time of the original order for factory installation. Branch circuit breakers can be field installed; contact your Schneider Electric certified service partner for further information.

## Transformer

### Transformer Specifications

Commercial reference	PMM400-ALAX (aluminum) PMM400-ALA (aluminum)	PMM400-CUB (copper)	PMM500-ALAX (aluminum) PMM500-ALA (aluminum)	PMM500-CUB (copper)
kVA	400		500	
Input voltage (V)	480 Delta			
Output voltage (V)	208/120 WYE or 400/230 WYE	208/120 WYE	208/120 WYE or 216/125 WYE or 400/230 WYE or 415/240 WYE	208/120 WYE or 415/240 WYE
Frequency (Hz)	60			
Impedance	Minimum 3.4% at 400 V Minimum 4.5% at 208 V	Minimum 4%	Minimum 4% at 400V / 415V Minimum 5.2% at 208 V / 216 V	Minimum 7.5% at 415 V Minimum 10% at 208 V
K-factor	K9	K13	K9	K13
Conductor material	Aluminum	Copper	Aluminum	Copper
Taps	FCAN = Full capacity above normal (taps): 2.5%, 5.0% FCBN = Full capacity below normal (taps): 2.5%, 5.0%, 7.5%, 10%			
Temperature rise	150 °C			
Insulation class	220(R)			
Inrush	Not exceed 10 times nominal RMS input current			Not exceed 5 times nominal RMS input current
Vector	Delta - WYE			
Audible noise (db)	As per NEMA ST-20 standard			

## Main Input Disconnect Device

Commercial reference	PMM400-ALAX	PMM400-ALA	PMM400-CUB	PMM500-ALAX	PMM500-ALA	PMM500-CUB
kVA	400			500		
Main input disconnect device	PJF36080U33A Circuit Breaker 80% rated, or PJF36080U33A Circuit Breaker with Injection tested, or PJF36000S80 molded case switch					
In setting	800	800	800	800	800	800
Ir setting	504	504	504	640	640	640

Commercial reference	PMM400-ALAX	PMM400-ALA	PMM400-CUB	PMM500-ALAX	PMM500-ALA	PMM500-CUB
kVA	400			500		
Optional terminals for compression NEMA 2 hole lug	2 x 250 kcmil (1/2 inch bolt) 2 x 350 kcmil (1/2 inch bolt) 2 x 500 kcmil (3/8 inch bolt)					
Optional terminals for mechanical lug	3 x 3/0 AWG to 500 kcmil (Not applicable for PMM400-ALAX and PMM500-ALAX)					

## Branch Circuit Breakers

The I-Line panelboard allows the installation of 14 J-frame circuit breakers or 10 L-frame circuit breaker. Only 3-pole circuit breakers are accepted. A combination between L and J frame circuit breakers is acceptable.

- UL-listed L-frame circuit breaker from Schneider Electric:
  - 400 A 80% rated circuit breaker
  - 400 A 100% rated circuit breaker
  - 600 A 80% rated circuit breaker
- UL-listed J-frame circuit breaker from Schneider Electric:
  - 250 A 80% rated circuit breaker
  - 250 A 100% rated circuit breaker

Rating	Branch circuit breaker	Breaking capacity	
		240 V	480 V
250 A at 80%	JDA36250U33X	25 kA	18 kA
250 A at 100%	JDA36250CU33X	25 kA	18 kA
250 A at 80%	JGA36250U33X	65 kA	35 kA
250 A at 100%	JGA36250CU33X	65 kA	35 kA
400 A at 80%	LDA36400U33X	25 kA	18 kA
400 A at 100%	LDA36400CU33X	25 kA	18 kA
400 A at 80%	LGA36400U33X	65 kA	35 kA
400 A at 100%	LGA36400CU33X	65 kA	35 kA
600 A at 80%	LGA36600U33X	65 kA	35 kA
600 A at 80%	LDA36600U33X	25 kA	18 kA

## Main Output Circuit Breaker (MOB)

Commercial reference	PMM400-ALAX	PMM400-ALA	PMM400-CUB	PMM500-ALAX	PMM500-ALA	PMM500-CUB
kVA	400			500		
Main output circuit breaker	NA	NA	RJF36120C-U33A, 100% rated	NA	NA	RJF36160C-U33A, 100% rated
In (A)	NA	NA	1200	NA	NA	1600
I <sub>r</sub> (A) at 208 V	NA	NA	1200	NA	NA	1440
I <sub>r</sub> (A) at 216 V	NA	NA	NA	NA	NA	NA
I <sub>r</sub> (A) at 400 V	NA	NA	NA	NA	NA	NA
I <sub>r</sub> (A) at 415 V	NA	NA	NA	NA	NA	800

## Power Meters

- PowerLogic energy meter EM3500 series
- PowerLogic multi-circuit meter EM4900 series
- PowerLogic Power and branch meter HDPM6000 series
- PowerLogic power meter PM5500 series
- PowerLogic power meter PM8000 series

Meter	Main input	Main output	Distribution output	Accuracy	Data output
EM3500	Yes (optional)	Yes (default)	No	Class 0.5S	Standard
EM4914A	No	No	Yes (default)	Class 0.5	Standard
HDPM6000 (METSEHDPM6S480VC)	No	Yes (default)	Yes (default)	Class 0.5	Standard + power quality and THD available through meter ports
PM5563 (Advanced)	Yes (optional)	Yes (optional)	No	Class 0.2	Standard + power quality and THD available through meter ports
PM8244 / PM8344	No	Yes (optional)	No	Class 0.2	Standard + power quality and THD available through meter ports

Standard data output	Alarms
kWh energy consumption	Overvoltage
kW real power	Undervoltage
kVA apparent power	Overcurrent
Power factor total	Undercurrent
Voltage, L-L, average of three phases	Over kVA
Voltage, L-N, average of three phases	Under kVA
Current, average of three phases	Phase loss L1
kW real power, phase L1, L2, L3	Phase loss L2
Power factor, phase L1, L2, L3	Phase loss L3
Line-to-line voltage, phase L1-L2	Circuit breaker trip indicator common for all branch circuit breakers
Line-to-line voltage, phase L2-L3	
Line-to-line voltage, phase L1-L3	
Line-to-neutral voltage, phase L1-N	
Line-to-neutral voltage, phase L2-N	
Line-to-neutral voltage, phase L3-N	
Current, phase L1, L2, L3	
kW average	
kW minimum	
Frequency (measured from phase L1)	

## Emergency Power Off (EPO)

- Emergency power off button (EPO) installed in the PDU
- Remote emergency power off device (REPO) installed in the PDU location

## Transformer Thermoswitches

- Three U/R thermoswitches (195 °C trip)
- Three U/R thermoswitches (180 °C alarm)

## Current Transformers

- 5 A split core 3090SCCT, Schneider Electric
- 0.33 V split core LVCT0XXXXXS, Schneider Electric
- 0.25 V split core METSEHDXXXXXXXX, Schneider Electric

## Surge Protective Device (SPD)

- SurgeLogic Surge protective device for I-Line.

Service voltage	Peak surge current rating per phase	Catalog numbers
208/120 V, 3-phase, 4-wire + ground WYE	240 kA	HL2IMA24C
480/277 V, 3-phase, 4-wire + ground WYE	240 kA	HL4IMA24C


## Infrared Window Kit

- Infrared window kit L3-0M-PMMIRW / L3-0M-PMMIRW-WH

Commercial reference	Color	Components	Notes
L3-0M-PMMIRW	APC raven black	12" infrared window x 1	Can only be installed to the incoming main input device area
		24" infrared window x 2	Can only be installed to the branch circuit breaker area
L3-0M-PMMIRW-WH	White	12" infrared window x 1	Can only be installed to the incoming main input device area
		24" infrared window x 2	Can only be installed to the branch circuit breaker area

# Branch Circuit Breaker Trip Curves

## J-Frame Circuit Breakers 250 A

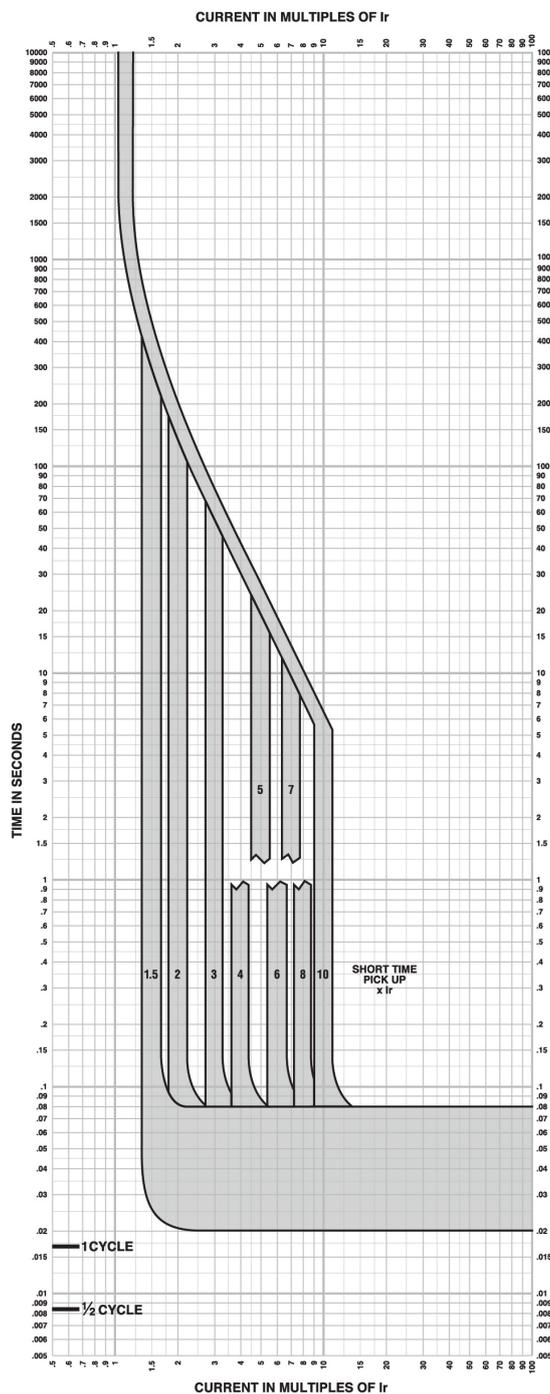

MICROLOGIC™ ELECTRONIC TRIP UNITS  
 Micrologic™ 3.2S and 3.2S-W  
 Long Time/Short Time Trip Curve  
 250A J-Frame


The time-current curve information is to be used for application and coordination purposes only.

Notes:

1. There is a thermal-imaging effect that can act to shorten the long-time delay. The thermal imaging effect comes into play if a current above the long-time delay pickup value exists for a time and then is cleared by the tripping of a downstream device or the circuit breaker itself. A subsequent overload will cause the circuit breaker to trip in a shorter time than normal. The amount of time delay reduction is inverse to the amount of time that has elapsed since the previous overload. Approximately 20 minutes is required between overloads to completely reset thermal-imaging.
2. Total clearing times shown include the response times of the trip unit, the circuit breaker opening, and the extinction of the current.

Curves apply from -35°C to +70°C (-31°F to +158°F) ambient temperature.

### J-Frame Circuit Breakers 250 A

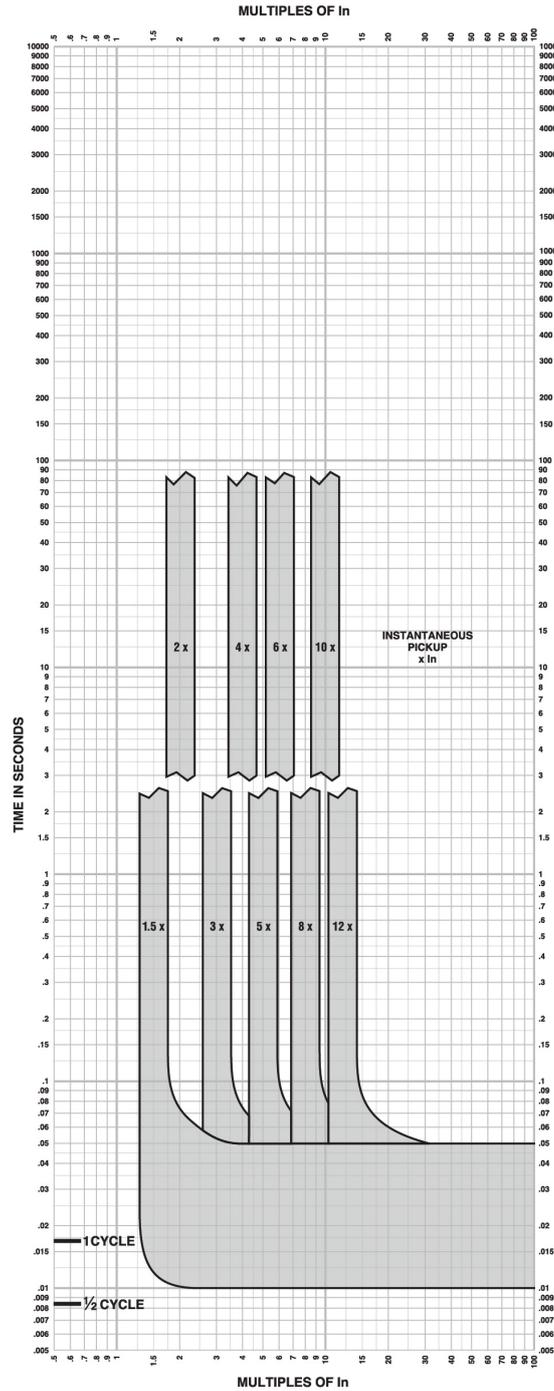


MICROLOGIC™ ELECTRONIC TRIP UNITS  
 Micrologic™ 3.2, 3.2-W, 3.2S, 3.2S-W, 5.2A,  
 5.2A-W, 5.2E, 5.2E-W, 6.2A, 6.2A-W,  
 6.2E, and 6.2E-W  
 Instantaneous Trip Curve  
 250A J-Frame

The time-current curve information is to be used for application and coordination purposes only.

Notes:

1. There is a thermal-imaging effect that can act to shorten the long-time delay. The thermal imaging effect comes into play if a current above the long-time delay pickup value exists for a time and then is cleared by the tripping of a downstream device or the circuit breaker itself. A subsequent overload will cause the circuit breaker to trip in a shorter time than normal. The amount of time delay reduction is inverse to the amount of time that has elapsed since the previous overload. Approximately 20 minutes is required between overloads to completely reset thermal-imaging.
  2. Total clearing times shown include the response times of the trip unit, the circuit breaker opening, and the extinction of the current.
  3. In = Maximum dial setting of Ir.  
 250A J-Frame: In = 250A = Max Ir setting
- Curves apply from -35°C to +70°C (-31°F to +158°F) ambient temperature.

# L-Frame Circuit Breakers 400 A

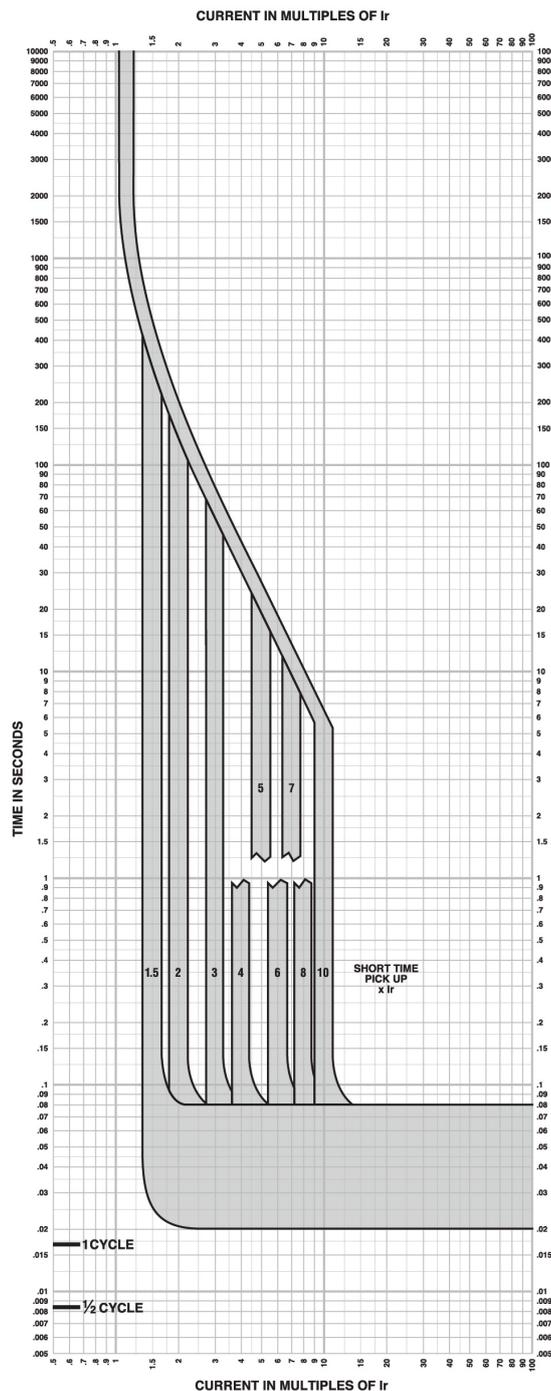

MICROLOGIC™ ELECTRONIC TRIP UNITS  
 Micrologic™ 3.3S and 3.3S-W  
 Long Time/Short Time Trip Curve  
 250A, 400A L-Frame


The time-current curve information is to be used for application and coordination purposes only.

Notes:

1. There is a thermal-imaging effect that can act to shorten the long-time delay. The thermal imaging effect comes into play if a current above the long-time delay pickup value exists for a time and then is cleared by the tripping of a downstream device or the circuit breaker itself. A subsequent overload will cause the circuit breaker to trip in a shorter time than normal. The amount of time delay reduction is inverse to the amount of time that has elapsed since the previous overload. Approximately 20 minutes is required between overloads to completely reset thermal-imaging.
2. Total clearing times shown include the response times of the trip unit, the circuit breaker opening, and the extinction of the current.

Curves apply from -35°C to +70°C (-31°F to +158°F) ambient temperature.

### L-Frame Circuit Breakers 400 A

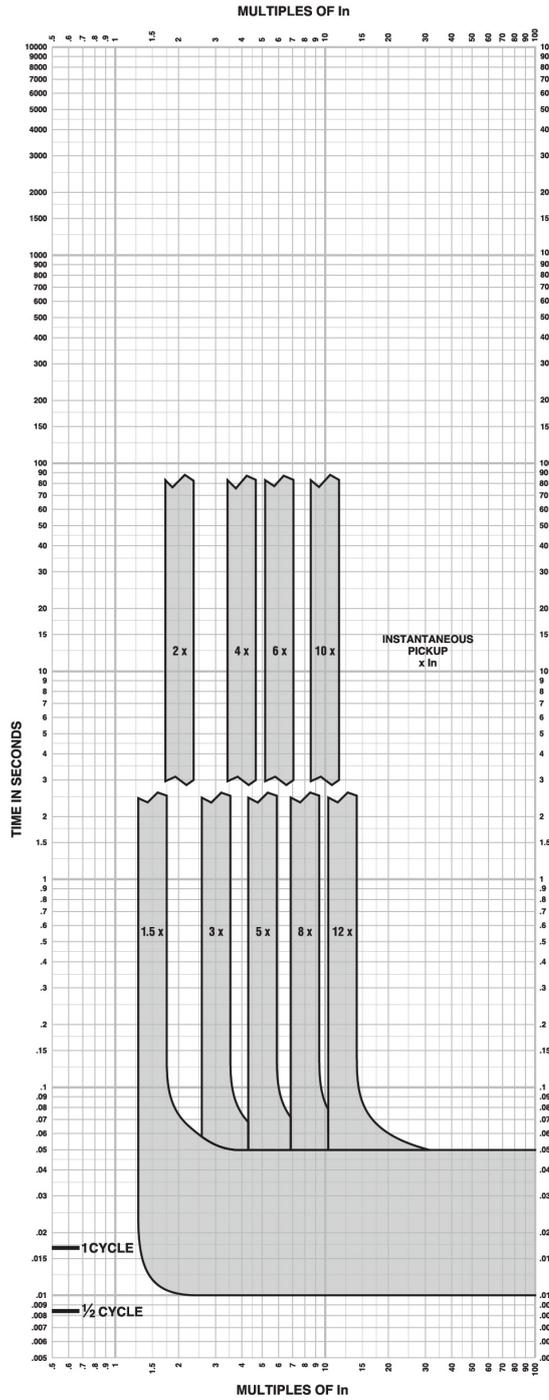


MICROLOGIC™ ELECTRONIC TRIP UNITS  
 Micrologic™ 3.3, 3.3-W, 3.3S, 3.3S-W,  
 5.3A, 5.3A-W, 5.3E, 5.3E-W, 6.3A, 6.3A-W,  
 6.3E, and 6.3E-W  
 Instantaneous Trip Curve  
 400A L-Frame

The time-current curve information is to be used for application and coordination purposes only.

Notes:

1. There is a thermal-imaging effect that can act to shorten the long-time delay. The thermal imaging effect comes into play if a current above the long-time delay pickup value exists for a time and then is cleared by the tripping of a downstream device or the circuit breaker itself. A subsequent overload will cause the circuit breaker to trip in a shorter time than normal. The amount of time delay reduction is inverse to the amount of time that has elapsed since the previous overload. Approximately 20 minutes is required between overloads to completely reset thermal-imaging.
  2. Total clearing times shown include the response times of the trip unit, the circuit breaker opening, and the extinction of the current.
  3. In = Maximum dial setting of Ir.  
 400A L-Frame: In = 400A = Max Ir setting
- Curves apply from -35°C to +70°C (-31°F to +158°F) ambient temperature.

# L-Frame Circuit Breakers 600 A

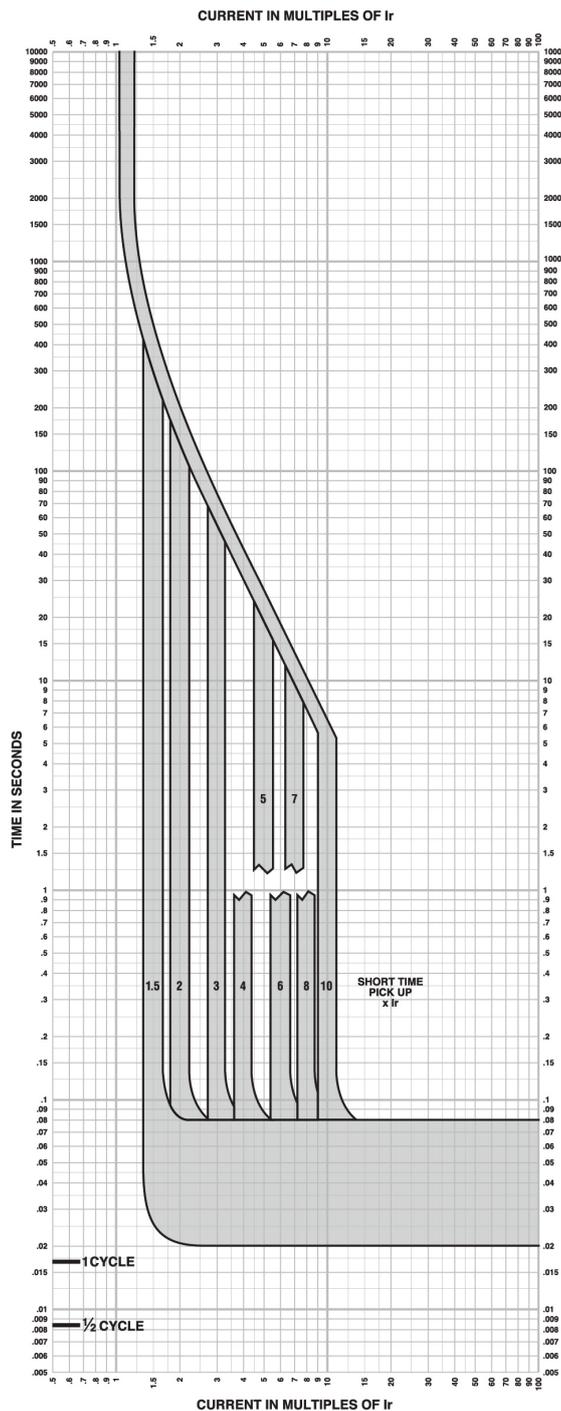

MICROLOGIC™ ELECTRONIC TRIP UNITS  
 Micrologic™ 3.3S and 3.3S-W  
 Long Time/Short Time Trip Curve  
 600A L-Frame


The time-current curve information is to be used for application and coordination purposes only.

Notes:

1. There is a thermal-imaging effect that can act to shorten the long-time delay. The thermal imaging effect comes into play if a current above the long-time delay pickup value exists for a time and then is cleared by the tripping of a downstream device or the circuit breaker itself. A subsequent overload will cause the circuit breaker to trip in a shorter time than normal. The amount of time delay reduction is inverse to the amount of time that has elapsed since the previous overload. Approximately 20 minutes is required between overloads to completely reset thermal-imaging.
2. Total clearing times shown include the response times of the trip unit, the circuit breaker opening, and the extinction of the current.

Curves apply from -35°C to +70°C (-31°F to +158°F) ambient temperature.

### L-Frame Circuit Breakers 600 A

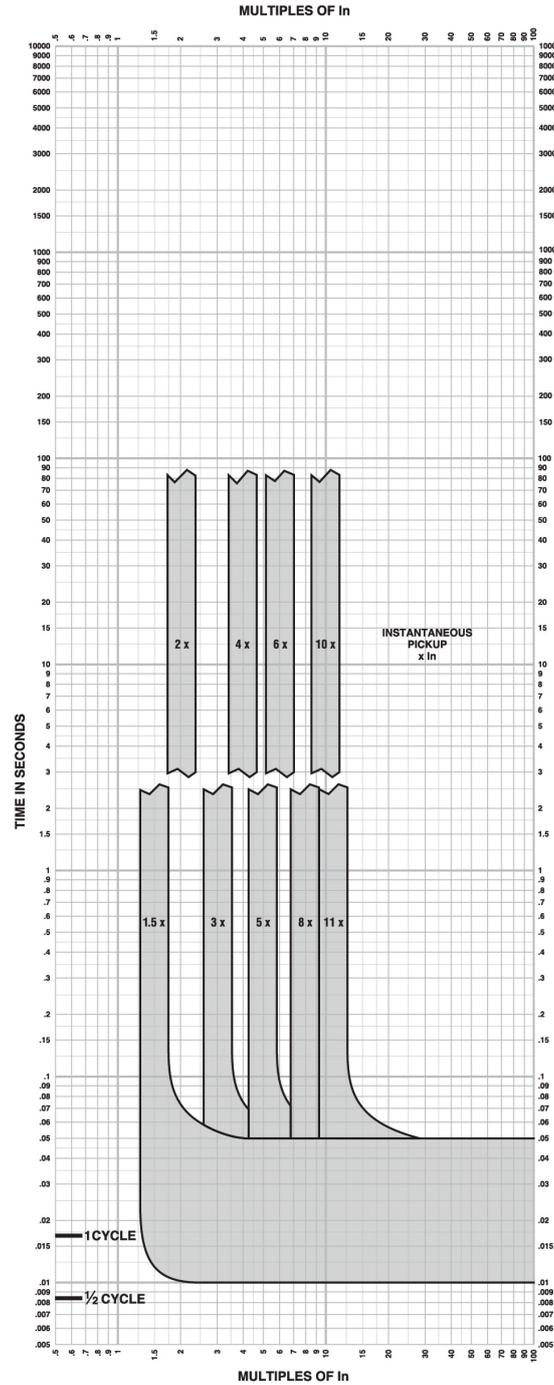

MICROLOGIC™ ELECTRONIC TRIP UNITS  
 Micrologic™ 3.3, 3.3-W, 3.3S, 3.3S-W,  
 5.3A, 5.3A-W, 5.3E, 5.3E-W, 6.3A, 6.3A-W,  
 6.3E, and 6.3E-W  
 Instantaneous Trip Curve  
 600A L-Frame

The time-current curve information is to be used for application and coordination purposes only.

Notes:

1. There is a thermal-imaging effect that can act to shorten the long-time delay. The thermal imaging effect comes into play if a current above the long-time delay pickup value exists for a time and then is cleared by the tripping of a downstream device or the circuit breaker itself. A subsequent overload will cause the circuit breaker to trip in a shorter time than normal. The amount of time delay reduction is inverse to the amount of time that has elapsed since the previous overload. Approximately 20 minutes is required between overloads to completely reset thermal-imaging.
  2. Total clearing times shown include the response times of the trip unit, the circuit breaker opening, and the extinction of the current.
  3. In = Maximum dial setting of Ir.  
 600A L-Frame: In = 600A = Max Ir setting
- Curves apply from -35°C to +70°C (-31°F to +158°F) ambient temperature.

# Limited Factory Warranty

## One-Year Factory Warranty

The limited warranty provided by Schneider Electric in this Statement of Limited Factory Warranty applies only to products you purchase for your commercial or industrial use in the ordinary course of your business.

## Terms of Warranty

Schneider Electric warrants that the product shall be free from defects in materials and workmanship for a period of one year from the date of product start-up, when start-up is performed by Schneider Electric-authorized service personnel, or within 18 months from the shipment date from Schneider Electric, whichever occurs first. This warranty covers repairing or replacing any defective parts including on-site labor and travel. In the event that the product fails to meet the foregoing warranty criteria, the warranty covers repairing or replacing defective parts at the sole discretion of Schneider Electric for a period of one year from the shipment date.

## Non-transferable Warranty

This warranty is extended to the first person, firm, association or corporation (herein referred to by "You" or "Your") for whom the Schneider Electric product specified herein has been purchased. This warranty is not transferable or assignable without the prior written permission of Schneider Electric.

## Assignment of Warranties

Schneider Electric will assign you any warranties which are made by manufacturers and suppliers of components of the Schneider Electric product and which are assignable. Any such warranties are assigned "AS IS" and Schneider Electric makes no representation as to the effectiveness or extent of such warranties, assumes no responsibility for any matters which may be warranted by such manufacturers or suppliers and extends no coverage under this Warranty to such components.

## Drawings, Descriptions

Schneider Electric warrants for the warranty period and on the terms of the warranty set forth herein that the Schneider Electric product will substantially conform to the descriptions contained in the Schneider Electric Official Published Specifications or any of the drawings certified and agreed to by contract with Schneider Electric if applicable thereto ("Specifications"). It is understood that the Specifications are not warranties of performance and not warranties of fitness for a particular purpose.

## Exclusions

Schneider Electric shall not be liable under the warranty if its testing and examination disclose that the alleged defect in the product does not exist or was

caused by end user or any third person misuse, negligence, improper installation or testing. Further, Schneider Electric shall not be liable under the warranty for unauthorized attempts to repair or modify wrong or inadequate electrical voltage or connection, inappropriate on-site operation conditions, corrosive atmosphere, repair, installation, start-up by non-Schneider Electric designated personnel, a change in location or operating use, exposure to the elements, Acts of God, fire, theft, or installation contrary to Schneider Electric recommendations or specifications or in any event if the Schneider Electric serial number has been altered, defaced, or removed, or any other cause beyond the range of the intended use.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE, OF PRODUCTS SOLD, SERVICED OR FURNISHED UNDER THIS AGREEMENT OR IN CONNECTION HEREWITH. SCHNEIDER ELECTRIC DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTION AND FITNESS FOR A PARTICULAR PURPOSE. SCHNEIDER ELECTRIC EXPRESS WARRANTIES WILL NOT BE ENLARGED, DIMINISHED, OR AFFECTED BY AND NO OBLIGATION OR LIABILITY WILL ARISE OUT OF, SCHNEIDER ELECTRIC RENDERING OF TECHNICAL OR OTHER ADVICE OR SERVICE IN CONNECTION WITH THE PRODUCTS. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES. THE WARRANTIES SET FORTH ABOVE CONSTITUTE SCHNEIDER ELECTRIC SOLE LIABILITY AND PURCHASER'S EXCLUSIVE REMEDY FOR ANY BREACH OF SUCH WARRANTIES. SCHNEIDER ELECTRIC WARRANTIES RUN ONLY TO PURCHASER AND ARE NOT EXTENDED TO ANY THIRD PARTIES.

IN NO EVENT SHALL SCHNEIDER ELECTRIC, ITS OFFICERS, DIRECTORS, AFFILIATES OR EMPLOYEES BE LIABLE FOR ANY FORM OF INDIRECT, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, ARISING OUT OF THE USE, SERVICE OR INSTALLATION, OF THE PRODUCTS, WHETHER SUCH DAMAGES ARISE IN CONTRACT OR TORT, IRRESPECTIVE OF FAULT, NEGLIGENCE OR STRICT LIABILITY OR WHETHER SCHNEIDER ELECTRIC HAS BEEN ADVISED IN ADVANCE OF THE POSSIBILITY OF SUCH DAMAGES. SPECIFICALLY, SCHNEIDER ELECTRIC IS NOT LIABLE FOR ANY COSTS, SUCH AS LOST PROFITS OR REVENUE, LOSS OF EQUIPMENT, LOSS OF USE OF EQUIPMENT, LOSS OF SOFTWARE, LOSS OF DATA, COSTS OF SUBSTITUANTS, CLAIMS BY THIRD PARTIES, OR OTHERWISE.

NO SALESMAN, EMPLOYEE OR AGENT OF SCHNEIDER ELECTRIC IS AUTHORIZED TO ADD TO OR VARY THE TERMS OF THIS WARRANTY. WARRANTY TERMS MAY BE MODIFIED, IF AT ALL, ONLY IN WRITING SIGNED BY AN SCHNEIDER ELECTRIC OFFICER AND LEGAL DEPARTMENT.

## Warranty Claims

Customers with warranty claims issues may access the SCHNEIDER ELECTRIC worldwide customer support network through the SCHNEIDER ELECTRIC web site: <http://www.schneider-electric.com>. Select your country from the country selection pull-down menu. Open the Support tab at the top of the web page to obtain contact information for customer support in your region.



Schneider Electric  
35 rue Joseph Monier  
92500 Rueil Malmaison  
France

+ 33 (0) 1 41 29 70 00

[www.se.com](http://www.se.com)

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2018 – 2025 Schneider Electric. All rights reserved.

990-5937H-001