Galaxy VX

UPS with 1500 kW I/O Cabinet

Installation

380 V, 400 V, 415 V, 440 V, and 480 V

1100 kW/kVA and 1100 kW/kVA N+1 500 kW/kVA, 750 kW/kVA, and 1000 kW/kVA Expandable to 1250 kW/kVA, 1250 kW/kVA, 1250 kW/kVA, 1250 kW/kVA N+1 500 kW/kVA, 750 kW/kVA, 1000 kW/kVA, and 1250 kW/kVA Expandable to 1500 kW/kVA, 1500 kW/kVA, 1500 kW/kVA N+1

Latest updates are available on the Schneider Electric website

11/2024





Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.

Access to Your Product Manuals Online

Find the UPS Manuals, Submittal Drawings, and Other Documentation for Your Specific UPS Here:

In your web browser, type in https://www.go2se.com/ref= and the commercial reference for your product.

Example: https://www.go2se.com/ref=GVX1250K1250NHS

Example: https://www.go2se.com/ref=GVX1500K1500GS

Find the UPS Manuals, Relevant Auxiliary Product Manuals, and Option Manuals Here:

Scan the QR code to go to the Galaxy VX online manual portal:

IEC (380/400/415/440 V)



https://www.productinfo.schneider-electric.com/galaxyvx_iec/

UL (480 V)



https://www.productinfo.schneider-electric.com/galaxyvx_ul/

Here you can find your UPS installation manual, UPS operation manual, and UPS technical specifications, and you can also find installation manuals for your auxiliary products and options.

This online manual portal is available on all devices and offers digital pages, search functionality across the different documents in the portal, and PDF download for offline use.

Learn More About the Galaxy VX Here:

Go to *https://www.se.com/ww/en/product-range/63732* to learn more about this product.

Table of Contents

Important Safety Instructions — SAVE THESE	
INSTRUCTIONS	7
FCC Statement	8
Electromagnetic Compatibility	8
Safety Precautions	9
Electrical Safety	11
Battery Safety	12
Specifications	14
Overview of Configurations	14
Overview of UPSs with 1500 kW I/O Cabinet – Single Utility/	
Mains	
Overview of UPSs with 1500 kW I/O Cabinet – Dual Utility/Mains	
Parallel System	
Specifications for 500 kW UPS	
Specifications for 750 kW UPS	
Specifications for 1000 kW UPS	
Specifications for 1100 kW UPS	
Specifications for 1250 kW UPS	
Specifications for 1500 kW UPS	
Recommended Upstream Protection and Cable Sizes – IEC Recommended Bolt and Lug Sizes for IEC	
Recommended Upstream Protection and Cable Sizes – UL	
Recommended Upstream Protection and Cable Sizes for 1500 kW	
UPS	32
Recommended Bolt and Lug Sizes for Copper Cables	
Recommended Bolt and Lug Sizes for Aluminium Cables	
Inverter Short–Circuit Capabilities (Bypass not Available)	
Torque Specifications	
Environment	37
Compliance	38
Weights and Dimensions for UPSs with 1500 kW I/O Cabinet	39
Clearance for UPSs with 1500 kW I/O Cabinet	39
Guidance for Organizing Battery Cables	40
Overview of Supplied Installation Kits	41
Installation Kits Shipped with the I/O Cabinet	41
Installation Kits Shipped with the Power Cabinet	46
Installation Procedure	48
Mechanical Installation	49
Mount the Rear Anchoring Brackets	
Position the Cabinets	51
Connect the Power Cables	62
Prepare the I/O Cabinet for Power Cables in Top Cable Entry	
Systems	62
Prepare the I/O Cabinet for Power Cables in Bottom Cable Entry	
Systems	63
Install the Single Utility/Mains Installation Kit 0H-9161	64

Connect the Power Cables in a 380 V, 400 V, 415, and 440 V	
System	65
Connect the Power Cables in a 480 V System	68
Mount the Front Anchoring Brackets	70
Signal Cables	71
Route the Signal Cables between the I/O Cabinet and the Power	
Cabinets	71
Prepare for External Signal Cables	76
Signal Cable Connections to the Switchgear (Boards 0P6547,	
0P6548, 0P6549)	80
Signal Cable Connections to Classic Battery Cabinets (Boards	
0P6547, 0P6549, 0P6552)	81
Signal Cable Connections to Battery Breaker Cabinet (Boards	
0P6547, 0P6548, 0P6549)	82
Connect the Emergency Power Off (EPO)	
Connect External Synchronization	83
Signal Cable Connections for Basic UPS Synchronization to a Fixed	
Voltage Source (Boards 0P6548, 0P6549)	83
Signal Cable Connections for Dual UPS Synchronization with a	
Floating Synchronization Master (Boards 0P6548, 0P6549)	84
Signal Cable Connections for Fixed Parallel Synchronization Master	
(Boards 0P6548, 0P6549)	
Connect Equipment to Input Contacts and Output Relays	
Overview of Input Contacts and Output Relays	
Route the PBUS Cables between Parallel UPS Units	
External Communication	
Connect the Modbus Cables	
Final Mechanical Assembly	
Final Mechanical Assembly of the I/O Cabinet	
Final Mechanical Assembly of the Power Cabinets	96
Decommission or Move the UPS to a New Location	97

Important Safety Instructions — SAVE THESE INSTRUCTIONS

Read these instructions carefully and look at the equipment to become familiar with it before trying to install, operate, service or maintain it. The following safety messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a "Danger" or "Warning" safety message indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages with this symbol to avoid possible injury or death.

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

Failure to follow these instructions will result in death or serious injury.

WARNING indicates a hazardous situation which, if not avoided, **could result** in death or serious injury.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

Failure to follow these instructions can result in injury or equipment damage.

NOTICE

NOTICE is used to address practices not related to physical injury. The safety alert symbol shall not be used with this type of safety message.

Failure to follow these instructions can result in equipment damage.

Please Note

Electrical equipment should only be installed, operated, serviced, and maintained by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Per IEC 62040-1: "Uninterruptible power systems (UPS) -- Part 1: Safety Requirements," this equipment, including battery access, must be inspected, installed and maintained by a skilled person.

The skilled person is a person with relevant education and experience to enable him or her to perceive risks and to avoid hazards which the equipment can create (reference IEC 62040-1, section 3.102).

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Electromagnetic Compatibility

NOTICE

RISK OF ELECTROMAGNETIC DISTURBANCE

This is a product Category C3 according to IEC 62040-2. This is a product for commercial and industrial applications in the second environment - installation restrictions or additional measures may be needed to prevent disturbances. The second environment includes all commercial, light industry, and industrial locations other than residential, commercial, and light industrial premises directly connected without intermediate transformer to a public low-voltage mains supply. The installation and cabling must follow the electromagnetic compatibility rules, e.g.:

- the segregation of cables,
- · the use of shielded or special cables when relevant,
- the use of grounded metallic cable tray and supports.

Failure to follow these instructions can result in equipment damage.

Safety Precautions

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

All safety instructions in this document must be read, understood and followed.

Failure to follow these instructions will result in death or serious injury.

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Read all instructions in the Installation Manual before installing or working on this UPS system.

Failure to follow these instructions will result in death or serious injury.

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not install the UPS system until all construction work has been completed and the installation room has been cleaned.

Failure to follow these instructions will result in death or serious injury.

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- The product must be installed according to the specifications and requirements as defined by Schneider Electric. It concerns in particular the external and internal protections (upstream breakers, battery breakers, cabling, etc.) and environmental requirements. No responsibility is assumed by Schneider Electric if these requirements are not respected.
- After the UPS system has been electrically wired, do not start up the system. Start-up must only be performed by Schneider Electric.

Failure to follow these instructions will result in death or serious injury.

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The UPS system must be installed according to local and national regulations. Install the UPS according to:

- IEC 60364 (including 60364–4–41- protection against electric shock, 60364– 4–42 - protection against thermal effect, and 60364–4–43 - protection against overcurrent), or
- NEC NFPA 70, or
- Canadian Electrical Code (C22.1, Part 1)

depending on which one of the standards apply in your local area.

Failure to follow these instructions will result in death or serious injury.

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Install the UPS system in a temperature controlled indoor environment free of conductive contaminants and humidity.
- Install the UPS system on a non-flammable, level and solid surface (e.g. concrete) that can support the weight of the system.

Failure to follow these instructions will result in death or serious injury.

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The UPS is not designed for and must therefore not be installed in the following unusual operating environments:

- Damaging fumes
- Explosive mixtures of dust or gases, corrosive gases, or conductive or radiant heat from other sources
- Moisture, abrasive dust, steam or in an excessively damp environment
- Fungus, insects, vermin
- Salt-laden air or contaminated cooling refrigerant
- Pollution degree higher than 2 according to IEC 60664-1
- Exposure to abnormal vibrations, shocks, and tilting
- · Exposure to direct sunlight, heat sources, or strong electromagnetic fields

Failure to follow these instructions will result in death or serious injury.

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not drill or cut holes for cables or conduits with the gland plates installed and do not drill or cut holes in close proximity to the UPS.

Failure to follow these instructions will result in death or serious injury.

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not make mechanical changes to the product (including removal of cabinet parts or drilling/cutting of holes) that are not described in the Installation Manual.

Failure to follow these instructions will result in death or serious injury.

NOTICE

RISK OF OVERHEATING

Respect the space requirements around the UPS system and do not cover the product's ventilation openings when the UPS system is in operation.

Failure to follow these instructions can result in equipment damage.

NOTICE

RISK OF EQUIPMENT DAMAGE

Do not connect the UPS output to regenerative load systems including photovoltaic systems and speed drives.

Failure to follow these instructions can result in equipment damage.

Electrical Safety

This manual contains important safety instructions that should be followed during the installation and maintenance of the UPS system.

A A DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Electrical equipment must be installed, operated, serviced, and maintained only by qualified personnel.
- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- Disconnection devices for AC and DC must be provided by others, be readily accessible, and the function of the disconnect device marked for its function.
- Turn off all power supplying the UPS system before working on or inside the equipment.
- Before working on the UPS system, check for hazardous voltage between all terminals including the protective earth.
- The UPS contains an internal energy source. Hazardous voltage can be present even when disconnected from the mains supply. Before installing or servicing the UPS system, ensure that the units are OFF and that mains and batteries are disconnected. Wait five minutes before opening the UPS to allow the capacitors to discharge.
- The UPS must be properly earthed/grounded and due to a high touch current/leakage current, the earthing/grounding conductor must be connected first.

Failure to follow these instructions will result in death or serious injury.

The label below must be added if:

- 1. The UPS input is connected through external isolators that, when opened, isolate the neutral, OR
- 2. The UPS input is connected via an IT power system.

The label must be placed adjacent to all upstream power disconnection devices that isolate the neutral.

The label below must be also added if backfeed protection is provided external to the equipment. See for more details. The label must be placed adjacent to all upstream power disconnection devices.

A A DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Risk of voltage backfeed. Before working on this circuit: Isolate the UPS and check for hazardous voltage between all terminals including the protective earth.

Failure to follow these instructions will result in death or serious injury.

ADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Always perform correct Lockout/Tagout before working on the UPS.

- A UPS with autostart enabled will automatically restart when the mains supply returns.
- If autostart is enabled on the UPS, a label must be added on the UPS to warn about this functionality.

Failure to follow these instructions will result in death or serious injury.

Add the label below on the UPS if autostart has been enabled:

ADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Autostart is enabled. The UPS will automatically restart when the mains supply returns.

Failure to follow these instructions will result in death or serious injury.

ADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

This product can cause a DC current in the PE conductor. If a residual currentoperated protective device (RCD) is used for protection against electrical shock, only an RCD of Type B is allowed on the supply side of this product.

Failure to follow these instructions will result in death or serious injury.

Battery Safety

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery circuit breakers must be installed according to the specifications and requirements as defined by Schneider Electric.
- Servicing of batteries must only be performed or supervised by qualified personnel knowledgeable of batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect charging source prior to connecting or disconnecting battery terminals.
- Do not dispose of batteries in a fire as they can explode.
- Do not open, alter, or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.

Failure to follow these instructions will result in death or serious injury.

A A DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Batteries can present a risk of electric shock and high short-circuit current. The following precautions must be observed when working on batteries

- Remove watches, rings, or other metal objects.
- Use tools with insulated handles.
- · Wear protective glasses, gloves and boots.
- Do not lay tools or metal parts on top of batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.
- Determine if the battery is inadvertently grounded. If inadvertently grounded, remove source from ground. Contact with any part of a grounded battery can result in electric shock. The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance (applicable to equipment and remote battery supplies not having a grounded supply circuit).

Failure to follow these instructions will result in death or serious injury.

A A D A N G E R

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

When replacing batteries, always replace with the same type and number of batteries or battery packs.

Failure to follow these instructions will result in death or serious injury.

RISK OF EQUIPMENT DAMAGE

- Mount the batteries in the UPS system, but do not connect the batteries until the UPS system is ready to be powered up. The time duration from battery connection until the UPS system is powered up must not exceed 72 hours or 3 days.
- Batteries must not be stored more than six months due to the requirement of recharging. If the UPS system remains de-energized for a long period, we recommend that you energize the UPS system for a period of 24 hours at least once every month. This charges the batteries, thus avoiding irreversible damage.

Failure to follow these instructions can result in injury or equipment damage.

Specifications


Overview of Configurations

Breakers in the System

UIB	Unit input breaker
SSIB	Static switch input breaker
ВВ	Battery breaker
MBB	Maintenance bypass breaker
UOB	Unit output breaker
BF2	Backfeed protection switch

Overview of UPSs with 1500 kW I/O Cabinet – Single Utility/Mains

The illustration shows a 1500 kW UPS. The principle is the same for the other UPSs with the 1500 kW I/O cabinet.

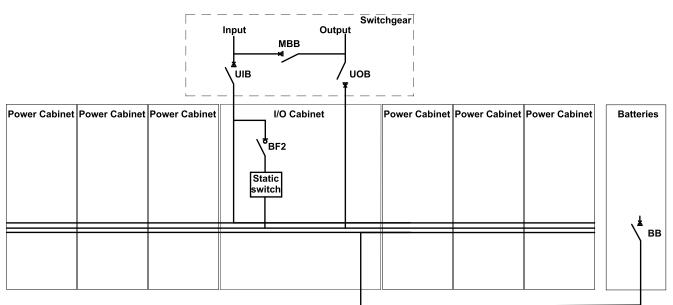


Galaxy VX 1500 kW UPS

Overview of UPSs with 1500 kW I/O Cabinet – Dual Utility/Mains

The illustration shows a 1500 kW UPS. The principle is the same for the other UPSs with the 1500 kW I/O cabinet.

Galaxy VX 1500 kW UPS

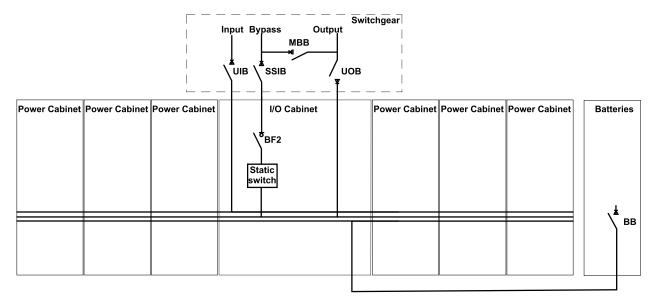

Parallel System

Galaxy VX can support up to 4+0 UPSs in parallel for capacity and up to 4+1 UPSs in parallel for redundancy.

NOTE: Note that for systems over 4 MW it can be difficult to find appropriate breakers/switches in the correct size for the switchgear.

Specifications for 500 kW UPS

	Voltage (V)	380	400	415	440	480			
	Connections		IEC: L1, L2, L3, PE ¹ UL: L1, L2, L3 + G ²						
	Input voltage range (V)3	340-456	340-480	353-498	374-528	408-576			
	Frequency (Hz)	40-70	40-70						
	Nominal input current (A)	816	775	746	699	646			
	Maximum input current (A)4	921	885	852	798	757			
ut	Input current limitation (A)	890			832	760			
Input	Minimum short circuit rating		Dependent on upstream protection. See section for ' Recommended upstream protection and cable sizes – IEC' for details.						
	Maximum short circuit rating	100 kA RMS	100 kA RMS						
	Total harmonic distortion (THDI)	<3% at 100%	<3% at 100% load, <4% at 50% load, <9% at 25% load						
	Input power factor	0.99 at >40%	0.99 at >40% load, 0.98 at >20% load, 0.97 at >10% load						
	Protection	Contactors	Contactors						
	Ramp-in	Adaptive 1-3	Adaptive 1-300 seconds						
	Connections	UL 1250 kW	IEC 1250 kW I/O and 1500 kW I/O: L1, L2, L3, N, PE or L1, L2, L3, PE ⁵ UL 1250 kW I/O: L1, L2, L3, G or L1, L2, L3, N, G UL 1500 kW I/O ⁶ : L1, L2, L3, G						
	Bypass voltage range (V)	342-418	360-440	374-457	396-484	432-528			
	Frequency (Hz)	50 or 60	50 or 60						
	Frequency range (Hz)	Programmab	le: ±0.1, ±3, ±1	0. Default is ±3					
	Nominal bypass current (A)	813	773	745	703	642			
ň	Minimum short circuit rating	Dependent o protection a	n upstream pro nd cable sizes	tection. See sec – IEC' for detai	tion for ' Recom ls.	mended upstream			
Bypass	Maximum short circuit rating	1250 kW I/O 1500 kW I/O magnetic trip	100 kA RMS (conditioned by a	in internal molde	ed switch with 90 kA peak			
	Thyristor I²t (kA*s²)	1250 kW I/O 1500 kW I/O				1250 kW I/O: 9165 1500 kW I/O: 16245			
	BF2 magnetic trip	1250 kW I/O 1500 kW I/O							
	Protection	backfeed pro 1250 kW I/O protection 1500 kW I/O	1250 kW I/O with preinstalled backfeed breaker BF2: Molded switch with trip for backfeed protection 1250 kW I/O with GVXOPT001 installed: Molded switch with trip for backfeed protection 1500 kW I/O with preinstalled backfeed breaker BF2: Molded switch with trip for backfeed protection						

^{1.} 2. 3. 4. 5. 6.

TN, TT, and IT power distribution systems are supported. WYE source – solid grounded and high resistance grounded sources are supported. Corner (line) grounding is not permitted. The system can operate at 600 V for 1 minute. At nominal input voltage and full charge. TN, TT, and IT power distribution systems with no earthed line conductors are supported. 4-wire connection with neutral is not compliant per FCC regulations for the 1500 kW I/O cabinet.

	Voltage (V)	380	400	415	440	480			
	Connections	UL 1250 kw I/0	IEC 1250 kW I/O and 1500 kW I/O: L1, L2, L3, N, PE or L1, L2, L3, PE UL 1250 kw I/O: L1, L2, L3, G, GEC ⁷ or L1, L2, L3, N, G UL 1500 kW I/O ⁸ : L1, L2, L3, G, GEC ⁷						
	Overload capacity	Battery operat Bypass operat	Normal operation: 150% for 1 minute, 125% for 10 minutes Battery operation: 128% for 10 seconds, 115% for 1 minute Bypass operation: 110% ⁹ continuous, 1000% for 60 milliseconds for systems with 1250 kW I/O cabinet, and 1000% for 100 milliseconds for systems with 1500 kW I/O cabinet						
	Output voltage tolerance	Balanced load: ±1%, Unbalanced load: ±3%							
	Dynamic load response	±5% after 2 ms, ±1% after 50 ms							
	Output power factor	1							
	Nominal output current (A)	760	722	696	656	601			
Output	Minimum short circuit rating ¹⁰	Dependent on protection an	Dependent on upstream protection. See section for ' Recommended upstream protection and cable sizes – IEC' for details.						
	Maximum short circuit rating ¹¹	100 kA RMS							
	Inverter output short circuit capabilities	Varies with time. See graph and table values in Inverter Short–Circuit Capabilities (Bypass not Available), page 33.							
	Total harmonic distortion (THDU)	<2% at 100% linear load, <3% at 100% non-linear load							
	Output frequency (Hz)	50/60 (synchronized to bypass), 50/60 Hz ±0.1% (free-running)							
	Slew rate (Hz/sec)	Programmable: 0.25, 0.5, 1, 2, 4, 6							
	Output performance classification (according to IEC/ EN62040-3)	Double-conversion: VFI-SS-111							
	Load crest factor	Up to 3 (THDU < 5%)							
	Load power factor	0.7 leading to 0.5 lagging without derating							
	Charging power in % of output power	35% at ≤ 80%	load, 12% at 10	0% load		40% at ≤ 80% load, 15% at 100% load			
	Maximum charging power (kW)	60 at 100% loa	ad, 175 at <80%	load		75 at 100% load, 200 at 80% load			
	Nominal battery voltage (VDC)	480							
	Nominal float voltage (VDC)	546							
	End of discharge voltage (full load) (VDC)	384							
	End of discharge voltage (no load) (VDC)	420							
(VRLA	Battery current at full load and nominal battery voltage (A)	1090							
Battery (VRLA)	Battery current at full load and minimum battery voltage (A)	1362							
"	Maximum short circuit rating	50 kA							
	Maximum battery backup time	Unlimited							
	Temperature compensation (per cell)	-3.3 mV per °C	C for T ≥ 25 °C, 0) mV per °C for	T < 25 °C				
	Ripple current	< 5% C20 (5-n	ninute backup tir	me)					
	Battery test	Manual/autom	atic (selectable)	1					
	Deep discharge protection	Yes							
	Recharge according to battery temperature	Yes							

^{7.}

Per NEC 250.30. 4-wire connection with neutral is not compliant per FCC regulations for the 1500 kW I/O cabinet. 125% for 480 V. 8.

^{9.}

Minimum short circuit rating for output takes backfeeding energy through the bypass of parallel UPSs into consideration.
 Maximum short circuit rating for output takes backfeeding energy through the bypass of parallel UPSs into consideration.

Specifications for 750 kW UPS

	Voltage (V)	380	400	415	440	480			
	Connections		IEC: L1, L2, L3, PE ¹² UL: L1, L2, L3 + G ¹³						
	Input voltage range (V)14	340-456	340-480	353-498	374-528	408-576			
	Frequency (Hz)	40-70	40-70						
	Nominal input current (A)	1225	1162	1119	1050	969			
	Maximum input current (A) ¹⁵	1381	1327	1278	1199	1136			
Input	Input current limitation (A)	1335			1248	1140			
dul	Minimum short circuit rating		Dependent on upstream protection. See section for ' Recommended upstream protection and cable sizes – IEC' for details.						
	Maximum short circuit rating	100 kA RMS	100 kA RMS						
	Total harmonic distortion (THDI)	<3% at 100%	<3% at 100% load, <4% at 50% load, <9% at 25% load						
	Input power factor	0.99 at >40%	0.99 at >40% load, 0.98 at >20% load, 0.97 at >10% load						
	Protection	Contactors	Contactors						
	Ramp-in	Adaptive 1-3	Adaptive 1-300 seconds						
	Connections	UL 1250 kW	IEC 1250 kW I/O and 1500 kW I/O: L1, L2, L3, N, PE or L1, L2, L3, PE ¹⁶ UL 1250 kW I/O: L1, L2, L3, G or L1, L2, L3, N, G UL 1500 kW I/O ¹⁷ : L1, L2, L3, G						
	Bypass voltage range (V)	342-418	360-440	374-457	396-484	432-528			
	Frequency (Hz)	50 or 60	50 or 60						
	Frequency range (Hz)	Programma	ble: ±0.1, ±3, ±1	0. Default is ±3					
	Nominal bypass current (A)	1220	1159	1117	1054	964			
s	Minimum short circuit rating			tection. See sec – IEC ' for detai		mended upstream			
Bypass	Maximum short circuit rating			conditioned by a	n internal molde	ed switch with 90 kA peak			
	Thyristor I²t (kA*s²)	1250 kW I/C 1500 kW I/C				1250 kW I/O: 9165 1500 kW I/O: 16245			
	BF2 magnetic trip	1250 kW I/O: 39 kA 1500 kW I/O: 39 kA							
	Protection	backfeed pro 1250 kW I/C protection 1500 kW I/C	1250 kW I/O with preinstalled backfeed breaker BF2: Molded switch with trip for backfeed protection 1250 kW I/O with GVXOPT001 installed: Molded switch with trip for backfeed						

^{12.}

TN, TT, and IT power distribution systems are supported. WYE source – solid grounded and high resistance grounded sources are supported. Corner (line) grounding is not permitted. The system can operate at 600 V for 1 minute. At nominal input voltage and full charge. TN, TT, and IT power distribution systems with no earthed line conductors are supported. 13.

^{14.}

^{15.}

^{16.}

⁴⁻wire connection with neutral is not compliant per FCC regulations for the 1500 kW I/O cabinet. 17.

	Voltage (V)	380	400	415	440	480			
	Connections	UL 1250 kw l/0	IEC 1250 kW I/O and 1500 kW I/O: L1, L2, L3, N, PE or L1, L2, L3, PE UL 1250 kw I/O: L1, L2, L3, G, GEC ¹⁸ or L1, L2, L3, N, G UL 1500 kW I/O ¹⁹ : L1, L2, L3, G, GEC ¹⁸						
	Overload capacity	Battery operat Bypass operat	Normal operation: 150% for 1 minute, 125% for 10 minutes Battery operation: 128% for 10 seconds, 115% for 1 minute Bypass operation: 110% ²⁰ continuous, 1000% for 60 milliseconds for systems with 1250 kW I/O cabinet, and 1000% for 100 milliseconds for systems with 1500 kW I/O cabinet						
	Output voltage tolerance	Balanced load: ±1%, Unbalanced load: ±3%							
	Dynamic load response	±5% after 2 ms, ±1% after 50 ms							
	Output power factor	1							
	Nominal output current (A)	1140	1083	1043	984	902			
Output	Minimum short circuit rating ²¹		Dependent on upstream protection. See section for 'Recommended upstream protection and cable sizes – IEC' for details.						
	Maximum short circuit rating ²²	100 kA RMS							
	Inverter output short circuit capabilities	Varies with time. See graph and table values in Inverter Short–Circuit Capabilities (Bypass not Available), page 33.							
	Total harmonic distortion (THDU)	<2% at 100% linear load, <3% at 100% non-linear load							
	Output frequency (Hz)	50/60 (synchronized to bypass), 50/60 Hz ±0.1% (free-running)							
	Slew rate (Hz/sec)	Programmable: 0.25, 0.5, 1, 2, 4, 6							
	Output performance classification (according to IEC/ EN62040-3)	Double-conversion: VFI-SS-111							
	Load crest factor	Up to 3 (THDU < 5%)							
	Load power factor	0.7 leading to 0.5 lagging without derating							
	Charging power in % of output power	35% at ≤ 80%	load, 12% at 10	0% load		40% at ≤ 80% load, 15% at 100% load			
	Maximum charging power (kW)	90 at 100% loa	ad, 262 at <80%	load		112.5 at 100% load, 300 at 80% load			
	Nominal battery voltage (VDC)	480							
	Nominal float voltage (VDC)	546							
	End of discharge voltage (full load) (VDC)	384							
	End of discharge voltage (no load) (VDC)	420							
(VRLA	Battery current at full load and nominal battery voltage (A)	1634							
Battery (VRLA)	Battery current at full load and minimum battery voltage (A)	2043							
	Maximum short circuit rating	50 kA							
	Maximum battery backup time	Unlimited							
	Temperature compensation (per cell)	-3.3 mV per °C	C for T ≥ 25 °C, 0	mV per °C for	Г < 25 °С				
	Ripple current	< 5% C20 (5-n	ninute backup tir	me)					
	Battery test	Manual/autom	atic (selectable)						
	Deep discharge protection	Yes							
L	Recharge according to battery temperature	Yes							

Per NEC 250.30.
 4-wire connection with neutral is not compliant per FCC regulations for the 1500 kW I/O cabinet.
 125% for 480 V.
 Minimum short circuit rating for output takes backfeeding energy through the bypass of parallel UPSs into consideration.
 Maximum short circuit rating for output takes backfeeding energy through the bypass of parallel UPSs into consideration.

Specifications for 1000 kW UPS

	Voltage (V)	380	400	415	440	480			
	Connections		IEC: L1, L2, L3, PE ²³ UL: L1, L2, L3 + G ²⁴						
	Input voltage range (V) ²⁵	340-456	340-480	353-498	374-528	408-576			
	Frequency (Hz)	40-70	40-70						
	Nominal input current (A)	1633	1549	1492	1397	1291			
	Maximum input current (A) ²⁶	1842	1770	1704	1595	1514			
Input	Input current limitation (A)	1780			1664	1520			
dul	Minimum short circuit rating		Dependent on upstream protection. See section for ' Recommended upstream protection and cable sizes – IEC' for details.						
	Maximum short circuit rating	100 kA RMS	100 kA RMS						
	Total harmonic distortion (THDI)	<3% at 100%	<3% at 100% load, <4% at 50% load, <9% at 25% load						
	Input power factor	0.99 at >40%	0.99 at >40% load, 0.98 at >20% load, 0.97 at >10% load						
	Protection	Contactors	Contactors						
	Ramp-in	Adaptive 1-30	Adaptive 1-300 seconds						
	Connections	UL 1250 kW	IEC 1250 kW I/O and 1500 kW I/O: L1, L2, L3, N, PE or L1, L2, L3, PE ²⁷ UL 1250 kW I/O: L1, L2, L3, G or L1, L2, L3, N, G UL 1500 kW I/O ²⁸ : L1, L2, L3, G						
	Bypass voltage range (V)	342-418	360-440	374-457	396-484	432-528			
	Frequency (Hz)	50 or 60	•	-	•				
	Frequency range (Hz)	Programmab	le: ±0.1, ±3, ±1	0. Default is ±3					
	Nominal bypass current (A)	1627	1545	1489	1405	1284			
ŵ	Minimum short circuit rating			tection. See sec – IEC' for detai		mended upstream			
Bypass	Maximum short circuit rating	1250 kW I/O: 1500 kW I/O: magnetic trip	100 kA RMS (0	conditioned by a	in internal molde	ed switch with 90 kA peak			
	Thyristor I²t (kA*s²)	1250 kW I/O: 1500 kW I/O:				1250 kW I/O: 9165 1500 kW I/O: 16245			
	BF2 magnetic trip	1250 kW I/O: 1500 kW I/O:							
	Protection	backfeed pro 1250 kW I/O protection 1500 kW I/O	1250 kW I/O with preinstalled backfeed breaker BF2: Molded switch with trip for backfeed protection 1250 kW I/O with GVXOPT001 installed: Molded switch with trip for backfeed protection 1500 kW I/O with preinstalled backfeed breaker BF2: Molded switch with trip for backfeed protection						

^{23.}

TN, TT, and IT power distribution systems are supported. WYE source – solid grounded and high resistance grounded sources are supported. Corner (line) grounding is not permitted. The system can operate at 600 V for 1 minute. At nominal input voltage and full charge. TN, TT, and IT power distribution systems with no earthed line conductors are supported.

^{23.} 24. 25. 26. 27.

^{28.} 4-wire connection with neutral is not compliant per FCC regulations for the 1500 kW I/O cabinet.

	Voltage (V)	380	400	415	440	480		
	Connections	UL 1250 kw I/0	IEC 1250 kW I/O and 1500 kW I/O: L1, L2, L3, N, PE or L1, L2, L3, PE UL 1250 kw I/O: L1, L2, L3, G, GEC ²⁹ or L1, L2, L3, N, G UL 1500 kW I/O ³⁰ : L1, L2, L3, G, GEC ²⁹					
	Overload capacity	Battery operat Bypass operat	Normal operation: 150% for 1 minute, 125% for 10 minutes Battery operation: 128% for 10 seconds, 115% for 1 minute Bypass operation: 110% ³¹ continuous, 1000% for 60 milliseconds for systems with 1250 kW I/O cabinet, and 1000% for 100 milliseconds for systems with 1500 kW I/O cabinet					
	Output voltage tolerance	Balanced load: ±1%, Unbalanced load: ±3%						
	Dynamic load response	±5% after 2 ms, ±1% after 50 ms						
	Output power factor	1						
	Nominal output current (A)	1519	1443	1391	1312	1203		
Output	Minimum short circuit rating ³²		upstream protec d cable sizes –			ended upstream		
	Maximum short circuit rating ³³	100 kA RMS						
	Inverter output short circuit capabilities	Varies with time. See graph and table values in Inverter Short–Circuit Capabilities (Bypass not Available), page 33.						
	Total harmonic distortion (THDU)	<2% at 100% linear load, <3% at 100% non-linear load						
	Output frequency (Hz)	50/60 (synchronized to bypass), 50/60 Hz $\pm 0.1\%$ (free-running)						
	Slew rate (Hz/sec)	Programmable: 0.25, 0.5, 1, 2, 4, 6						
	Output performance classification (according to IEC/ EN62040-3)	Double-conversion: VFI-SS-111						
	Load crest factor	Up to 3 (THDU < 5%)						
	Load power factor	0.7 leading to 0.5 lagging without derating						
	Charging power in % of output power	35% at ≤ 80%	load, 12% at 10	0% load		40% at ≤ 80% load, 15% at 100% load		
	Maximum charging power (kW)	120 at 100% lo	oad, 350 at <80%		150 at 100% load, 400 at <80% load			
	Nominal battery voltage (VDC)	480						
	Nominal float voltage (VDC)	546						
	End of discharge voltage (full load) (VDC)	384						
~	End of discharge voltage (no load) (VDC)	420						
(VRLA	Battery current at full load and nominal battery voltage (A)	2179						
Battery (VRLA)	Battery current at full load and minimum battery voltage (A)	2724						
ш	Maximum short circuit rating	50 kA						
	Maximum battery backup time	Unlimited						
	Temperature compensation (per cell)	-3.3 mV per °C	C for T ≥ 25 °C, 0) mV per °C for ⁻	T < 25 °C			
	Ripple current	< 5% C20 (5-n	ninute backup tir	me)				
	Battery test	Manual/autom	atic (selectable)					
	Deep discharge protection	Yes						
	Recharge according to battery temperature	Yes						

Per NEC 250.30.
 4-wire connection with neutral is not compliant per FCC regulations for the 1500 kW I/O cabinet.
 125% for 480 V.

Minimum short circuit rating for output takes backfeeding energy through the bypass of parallel UPSs into consideration.
 Maximum short circuit rating for output takes backfeeding energy through the bypass of parallel UPSs into consideration.

Specifications for 1100 kW UPS

	Voltage (V)	380	400	415	440	480			
	Connections		IEC: L1, L2, L3, PE ³⁴ UL: L1, L2, L3 + G ³⁵						
	Input voltage range (V) ³⁶	340-456	340-480	353-498	374-528	408-576			
	Frequency (Hz)	40-70	40-70						
	Nominal input current (A)	1796	1704	1641	1540	1421			
	Maximum input current (A) ³⁷	2026	1947	1874	1759	1666			
Input	Input current limitation (A)	1958			1830	1672			
dul	Minimum short circuit rating		Dependent on upstream protection. See section for ' Recommended upstream protection and cable sizes – IEC' for details.						
	Maximum short circuit rating	100 kA RMS							
	Total harmonic distortion (THDI)	<3% at 100% load, <4% at 50% load, <9% at 25% load							
	Input power factor	0.99 at >40% load, 0.98 at >20% load, 0.97 at >10% load							
	Protection	Contactors	Contactors						
	Ramp-in	Adaptive 1-30	Adaptive 1-300 seconds						
	Connections	UL 1250 kW I	IEC 1250 kW I/O and 1500 kW I/O: L1, L2, L3, N, PE or L1, L2, L3, PE ³⁸ UL 1250 kW I/O: L1, L2, L3, G or L1, L2, L3, N, G UL 1500 kW I/O ³⁹ : L1, L2, L3, G						
	Bypass voltage range (V)	342-418	360-440	374-457	396-484	432-528			
	Frequency (Hz)	50 or 60	50 or 60						
	Frequency range (Hz)	Programmabl	e: ±0.1, ±3, ±10	. Default is ±3					
	Nominal bypass current (A)	1789	1700	1639	1545	1412			
SS	Minimum short circuit rating		n upstream prote id cable sizes -			nended upstream			
Bypass	Maximum short circuit rating	1500 kW I/O:	1250 kW I/O: 100 kA Icw 1500 kW I/O: 100 kA RMS (conditioned by an internal molded switch with 90 kA peak magnetic trip)						
	Thyristor I²t (kA*s²)	9680 (1250 k\	N I/O)			9165 (1250 kW I/O)			
	BF2 magnetic trip		1250 kW I/O: 39 kA 1500 kW I/O: 39 kA						
	Protection	1250 kW I/O with preinstalled backfeed breaker BF2: Molded switch with trip for backfeed protection 1250 kW I/O with GVXOPT001 installed: Molded switch with trip for backfeed protection 1500 kW I/O with preinstalled backfeed breaker BF2: Molded switch with trip for backfeed protection							

^{34.}

TN, TT, and IT power distribution systems are supported. WYE source – solid grounded and high resistance grounded sources are supported. Corner (line) grounding is not permitted. The system can operate at 600 V for 1 minute. At nominal input voltage and full charge. TN, TT, and IT power distribution systems with no earthed line conductors are supported. 35. 36. 37. 38.

^{39.} 4-wire connection with neutral is not compliant per FCC regulations for the 1500 kW I/O cabinet.

	Voltage (V)	380	400	415	440	480		
	Connections	UL 1250 kw I/0	/O and 1500 kW D: L1, L2, L3, G, O ⁴¹ : L1, L2, L3,	GEC40 or L1, L	, N, PE or L1, L2 2, L3, N, G	2, L3, PE		
	Overload capacity	Battery operat Bypass operat	Normal operation: 150% for 1 minute, 125% for 10 minutes Battery operation: 128% for 10 seconds, 115% for 1 minute Bypass operation: 110% ⁴² continuous, 1000% for 60 milliseconds for systems with 1250 kW I/O cabinet, and 1000% for 100 milliseconds for systems with 1500 kW I/O cabinet					
	Output voltage tolerance	Balanced load: ±1%, Unbalanced load: ±3%						
	Dynamic load response	±5% after 2 ms, ±1% after 50 ms						
	Output power factor	1						
	Nominal output current (A)	1671	1588	1530	1443	1323		
Output	Minimum short circuit rating ⁴³		upstream prote d cable sizes –			ended upstream		
	Maximum short circuit rating ⁴⁴	100 kA RMS						
	Inverter output short circuit capabilities	Varies with time. See graph and table values in Inverter Short–Circuit Capabilities (Bypass not Available), page 33.						
	Total harmonic distortion (THDU)	<2% at 100% linear load, <3% at 100% non-linear load						
	Output frequency (Hz)	50/60 (synchronized to bypass), 50/60 Hz ±0.1% (free-running)						
	Slew rate (Hz/sec)	Programmable: 0.25, 0.5, 1, 2, 4, 6						
	Output performance classification (according to IEC/ EN62040-3)	Double-conversion: VFI-SS-111						
	Load crest factor	Up to 3 (THDU < 5%)						
	Load power factor	0.7 leading to 0.5 lagging without derating						
	Charging power in % of output power	35% at ≤ 80%	load, 12% at 10	0% load		40% at ≤ 80% load, 15% at 100% load		
	Maximum charging power (kW)	132 at 100% lo	oad, 385 at <80%	% load		165 at 100% load, 440 at <80% load		
	Nominal battery voltage (VDC)	480						
	Nominal float voltage (VDC)	546						
	End of discharge voltage (full load) (VDC)	384						
_	End of discharge voltage (no load) (VDC)	420						
(VRLA	Battery current at full load and nominal battery voltage (A)	2397						
Battery (VRLA)	Battery current at full load and minimum battery voltage (A)	2996						
ш	Maximum short circuit rating	50 kA						
	Maximum battery backup time	Unlimited						
	Temperature compensation (per cell)	-3.3 mV per °C	C for T ≥ 25 °C, 0	mV per °C for	Г < 25 °С			
	Ripple current	< 5% C20 (5-n	ninute backup tir	me)				
	Battery test	Manual/autom	atic (selectable)					
	Deep discharge protection	Yes						
	Recharge according to battery temperature	Yes						

^{40.} Per NEC 250.30.
41. 4-wire connection with neutral is not compliant per FCC regulations for the 1500 kW I/O cabinet.
42. 125% for 480 V.

^{43.} Minimum short circuit rating for output takes backfeeding energy through the bypass of parallel UPSs into consideration.
44. Maximum short circuit rating for output takes backfeeding energy through the bypass of parallel UPSs into consideration.

Specifications for 1250 kW UPS

	Voltage (V)	380	400	415	440	480			
	Connections	IEC: L1, L2, L UL: L1, L2, L3							
	Input voltage range (V)47	340-456	340-480	353-498	374-528	408-576			
	Frequency (Hz)	40-70	40-70						
	Nominal input current (A)	2041	1937	1865	1750	1615			
	Maximum input current (A)48	2303	2212	2130	1999	1893			
Input	Input current limitation (A)	2225			2080	1900			
dul	Minimum short circuit rating		Dependent on upstream protection. See section for ' Recommended upstream protection and cable sizes – IEC' for details.						
	Maximum short circuit rating	100 kA RMS	100 kA RMS						
	Total harmonic distortion (THDI)	<3% at 100%	<3% at 100% load, <4% at 50% load, <9% at 25% load						
	Input power factor	0.99 at >40%	0.99 at >40% load, 0.98 at >20% load, 0.97 at >10% load						
	Protection	Contactors	Contactors						
	Ramp-in	Adaptive 1-30	Adaptive 1-300 seconds						
	Connections	UL 1250 kW	IEC 1250 kW I/O and 1500 kW I/O: L1, L2, L3, N, PE or L1, L2, L3, PE ⁴⁹ UL 1250 kW I/O: L1, L2, L3, G or L1, L2, L3, N, G UL 1500 kW I/O ⁵⁰ : L1, L2, L3, G						
	Bypass voltage range (V)	342-418	360-440	374-457	396-484	432-528			
	Frequency (Hz)	50 or 60							
	Frequency range (Hz)	Programmab	le: ±0.1, ±3, ±10). Default is ±3					
	Nominal bypass current (A)	2033	1931	1862	1756	1605			
ŵ	Minimum short circuit rating			tection. See sec – IEC' for detai		mended upstream			
Bypass	Maximum short circuit rating	1250 kW I/O: 1500 kW I/O: magnetic trip)	100 kA RMS (d	conditioned by a	n internal molde	ed switch with 90 kA peak			
	Thyristor I ² t (kA*s²)	1250 kW I/O: 1500 kW I/O:				1250 kW I/O: 9165 1500 kW I/O: 16245			
	BF2 magnetic trip	1250 kW I/O: 1500 kW I/O:							
	Protection	backfeed pro 1250 kW I/O protection 1500 kW I/O	1250 kW I/O with preinstalled backfeed breaker BF2: Molded switch with trip for backfeed protection 1250 kW I/O with GVXOPT001 installed: Molded switch with trip for backfeed protection 1500 kW I/O with preinstalled backfeed breaker BF2: Molded switch with trip for backfeed protection						

^{45.}

TN, TT, and IT power distribution systems are supported. WYE source – solid grounded and high resistance grounded sources are supported. Corner (line) grounding is not permitted. The system can operate at 600 V for 1 minute. At nominal input voltage and full charge. TN, TT, and IT power distribution systems with no earthed line conductors are supported. 46.

^{47.} 48.

^{49.}

⁴⁻wire connection with neutral is not compliant per FCC regulations for the 1500 kW I/O cabinet. 50.

	Voltage (V)	380	400	415	440	480			
	Connections	UL 1250 kw I/0	/O and 1500 kW D: L1, L2, L3, G, O ⁵² : L1, L2, L3,	GEC ⁵¹ or L1, L	, N, PE or L1, L2 2, L3, N, G	2, L3, PE			
	Overload capacity	Battery operat Bypass operat	ion: 150% for 1 i ion: 128% for 10 ion: 110% ⁵³ con abinet, and 1000	seconds, 115% tinuous, 1000%	for 1 minute for 60 milliseco	nds for systems with ems with 1500 kW I/O			
	Output voltage tolerance	Balanced load	: ±1%, Unbaland	ced load: ±3%					
	Dynamic load response	±5% after 2 ms	s, ±1% after 50 r	ns					
	Output power factor	1			_				
	Nominal output current (A)	1899	1804	1739	1640	1504			
Output	Minimum short circuit rating ⁵⁴		upstream protec d cable sizes –			ended upstream			
	Maximum short circuit rating ⁵⁵	100 kA RMS							
	Inverter output short circuit capabilities		e. See graph an vailable), page 3		n Inverter Short-	-Circuit Capabilities			
	Total harmonic distortion (THDU)	<2% at 100%	linear load, <3%	at 100% non-lir	near load				
	Output frequency (Hz)	1% (free-running	(free-running)						
	Slew rate (Hz/sec)	Programmable: 0.25, 0.5, 1, 2, 4, 6							
	Output performance classification (according to IEC/ EN62040-3)	Double-conversion: VFI-SS-111							
	Load crest factor	Up to 3 (THDU	J < 5%)						
	Load power factor	0.7 leading to 0.5 lagging without derating							
	Charging power in % of output power	35% at ≤ 80%	load, 12% at 10	0% load		40% at ≤ 80% load, 15% at 100% load			
	Maximum charging power (kW)	150 at 100% lo	oad, 437 at <80%	% load		187.5 at 100% load, 500 at <80% load			
	Nominal battery voltage (VDC)	480							
	Nominal float voltage (VDC)	546							
	End of discharge voltage (full load) (VDC)	384							
_	End of discharge voltage (no load) (VDC)	420							
(VRLA)	Battery current at full load and nominal battery voltage (A)	2724							
Battery (VRLA)	Battery current at full load and minimum battery voltage (A)	3405							
ш	Maximum short circuit rating	50 kA							
	Maximum battery backup time	1 hour							
	Temperature compensation (per cell)	-3.3 mV per °C for T \ge 25 °C, 0 mV per °C for T < 25 °C							
	Ripple current	< 5% C20 (5-n	ninute backup tir	me)					
	Battery test	Manual/automatic (selectable)							
	Deep discharge protection	Yes							
	Recharge according to battery temperature	Yes							

Per NEC 250.30.
 4-wire connection with neutral is not compliant per FCC regulations for the 1500 kW I/O cabinet.
 125% for 480 V.

^{54.} Minimum short circuit rating for output takes backfeeding energy through the bypass of parallel UPSs into consideration.
55. Maximum short circuit rating for output takes backfeeding energy through the bypass of parallel UPSs into consideration.

Specifications for 1500 kW UPS

	Voltage (V)	380	400	415	440	480					
	Connections	IEC: L1, L2, UL: L1, L2, L									
	Input voltage range (V)58	340-456	340-480	353-498	374-528	408-576					
	Frequency (Hz)	40-70	40-70								
	Nominal input current (A)	2449	2325	2238	2100	1937					
	Maximum input current (A)59	2763	2654	2555	2398	2271					
Input	Input current limitation (A)	2670			2496	2280					
lnp	Minimum short circuit rating			tection. See sec – IEC' for detai		mended upstream					
	Maximum short circuit rating	100 kA RMS									
	Total harmonic distortion (THDI)	<3% at 100%	5 load, <4% at 5	i0% load, <9% a	at 25% load						
	Input power factor	0.99 at >40%	0.99 at >40% load, 0.98 at >20% load, 0.97 at >10% load								
	Protection	Contactors	Contactors								
	Ramp-in	Adaptive 1-3	00 seconds								
	Connections	UL 1250 kW	IEC 1250 kW I/O and 1500 kW I/O: L1, L2, L3, N, PE or L1, L2, L3, PE ⁶⁰ UL 1250 kW I/O: L1, L2, L3, G or L1, L2, L3, N, G UL 1500 kW I/O ⁶¹ : L1, L2, L3, G								
	Bypass voltage range (V)	342-418	360-440	374-457	396-484	432-528					
	Frequency (Hz)	50 or 60	·		·	·					
	Frequency range (Hz)	Programmat	ole: ±0.1, ±3, ±1	0. Default is ±3							
	Nominal bypass current (A)	2440	2318	2234	2107	1926					
SS	Minimum short circuit rating			tection. See sec – IEC' for detai		mended upstream					
Bypass	Maximum short circuit rating	1250 kW I/O 1500 kW I/O magnetic trip	100 kA RMS (conditioned by a	an internal molde	ed switch with 90 kA peak					
	Thyristor I ² t (kA*s ²)	16245 (1500	kW I/O)								
	BF2 magnetic trip		1250 kW I/O: 39 kA 1500 kW I/O: 39 kA								
	Protection	backfeed pro 1250 kW I/O protection	vitection with GVXOPT(with preinstalle	001 installed: Mo	olded switch with	ed switch with trip for n trip for backfeed ed switch with trip for					

^{56.}

TN, TT, and IT power distribution systems are supported. WYE source – solid grounded and high resistance grounded sources are supported. Corner (line) grounding is not permitted. The system can operate at 600 V for 1 minute. At nominal input voltage and full charge. TN, TT, and IT power distribution systems with no earthed line conductors are supported.

^{57.} 58. 59.

^{60.}

⁴⁻wire connection with neutral is not compliant per FCC regulations for the 1500 kW I/O cabinet. 61.

	Voltage (V)	380	400	415	440	480			
	Connections	UL 1250 kw l/	I I/O and 1500 kW O: L1, L2, L3, G O ⁶³ : L1, L2, L3,	, GEC ⁶² or L1, l	L 5, N, PE or L1, L2 _2, L3, N, G	2, L3, PE			
	Overload capacity	115% for 1 mi	nute, 125% for 1 nute (battery ope ous,1000% for 1	eration)	mal operation) : (bypass operati	on)			
	Output voltage tolerance	Balanced load	: ±1%, Unbalan	ced load: ±3%					
	Dynamic load response	±5% after 2 m	s, ±1% after 50 i	ms					
	Output power factor	1							
	Nominal output current (A)	2279	2165	2087	1968	1804			
Output	Minimum short circuit rating ⁶⁴		upstream prote d cable sizes –			ended upstream			
o	Maximum short circuit rating65	100 kA RMS							
	Inverter output short circuit capabilities		ne. See graph ar vailable), page 3		n Inverter Short-	-Circuit Capabilities			
	Total harmonic distortion (THDU)	<2% at 100%	linear load, <3%	at 100% non-li	near load				
	Output frequency (Hz)	50/60 (synchro	onized to bypass	s), 50/60 Hz ±0.	1% (free-running	g)			
	Slew rate (Hz/sec)	Programmable: 0.25, 0.5, 1, 2, 4, 6							
	Output performance classification (according to IEC/ EN62040-3)	Double-conversion: VFI-SS-111							
	Load crest factor	Up to 3 (THDU < 5%)							
	Load power factor	0.7 leading to	0.5 lagging with	out derating					
	Charging power in % of output power	35% at ≤ 80%	load, 12% at 10		40% at ≤ 80% load, 15% at 100% load				
	Maximum charging power (kW)	525 at < 80%	load, 180 at 100	% load,		600 at <80% load, 225 at 100% load			
	Nominal battery voltage (VDC)	480							
	Nominal float voltage (VDC)	546							
	End of discharge voltage (full load) (VDC)	384							
_	End of discharge voltage (no load) (VDC)	420							
(VRLA	Battery current at full load and nominal battery voltage (A)	3269							
Battery (VRLA)	Battery current at full load and minimum battery voltage (A)	4086							
	Maximum short circuit rating	50 kA							
	Maximum battery backup time	1 hour							
	Temperature compensation (per cell)	-3.3 mV per °0	C for T ≥ 25 °C, () mV per °C for	T < 25 °C				
	Ripple current	< 5% C20 (5-r	ninute backup ti	me)					
	Battery test	Manual/automatic (selectable)							
	Deep discharge protection	Yes							
	Recharge according to battery temperature	Yes							

^{62.} Per NEC 250.30.63. 4-wire connection

Per NEC 250.30.
 4-wire connection with neutral is not compliant per FCC regulations for the 1500 kW I/O cabinet.
 Minimum short circuit rating for output takes backfeeding energy through the bypass of parallel UPSs into consideration.
 Maximum short circuit rating for output takes backfeeding energy through the bypass of parallel UPSs into consideration.

Recommended Upstream Protection and Cable Sizes – IEC

A A DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

An easily accessible breaker is required for upstream protection. Maximum fault current disconnection time: 46 seconds at 200% input.

Failure to follow these instructions will result in death or serious injury.

NOTE: Overcurrent protection is to be provided by others.

Cable sizes in this manual are based on table B.52.12 and B.52.13 of IEC 60364-5-52 with the following assertions:

- 90 °C conductors
- An ambient temperature of 30 °C
- Use of copper or aluminum conductors
- Installation method F4 for DC cables and installation method F5 for AC cables, corrected for single layer in perforated cable tray.

PE cables are sized in accordance with IEC 60364-5-54 table 54.2 Minimum cross-sectional area of protective conductors.

NOTE: Always consider the PE size according to the complete electrical installation. Minimum size of the PE conductor must comply with local safety regulations for high PE conductor current equipment.

If the ambient temperature is greater than 30 °C, larger conductors are to be selected in accordance with the correction factors of the IEC.

NOTE: The use of aluminum conductors can limit the number of parallel Lithium-ion battery cabinets. Contact Schneider Electric for more information.

NOTICE

RISK OF EQUIPMENT DAMAGE

To ensure correct load sharing in bypass operation in a parallel system, the following recommendations apply:

- The bypass cables must be of the same length for all UPSs.
- The output cables must be of the same length for all UPSs.
- The input cables must be of the same length for all UPSs in a single mains system.
- · Cable formation recommendations must be followed.
- The reactance of busbar layout in the bypass/input and output switchgear must be the same for all UPSs.

If the above recommendations are not followed the result can be uneven load sharing in bypass and overload of individual UPSs.

Failure to follow these instructions can result in equipment damage.

NOTICE

RISK OF UNINTENTIONAL DEVICE OPERATION

If a residual current-operated protective device (RCD-B) is used upstream as ground fault protection, then the RCD-B shall be sized to not trip on the leakage current of this product, which can be up to 200 mA.

Failure to follow these instructions can result in equipment damage.

Upstream Protection for IEC and Minimum Prospective Phase-To-Earth Short Circuit at the UPS Input/Bypass Terminals

AADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The upstream overcurrent protective device (and its settings) must be sized to ensure a disconnecting time within 0.2 seconds for a minimum prospective phase-to-earth short circuit current calculated or measured at the input/bypass terminals of the UPS.

Failure to follow these instructions will result in death or serious injury.

If the upstream overcurrent protective device is a breaker with adjustable short time protection, then it is possible to adjust the short time protection current and short time delay (if present) to meet the requirement of 0.2 seconds for a calculated or measured phase-to-earth prospective short circuit current at the input/bypass terminals of the UPS.

Recommended Upstream Protection and Cable Sizes for 1250 kW UPS

NOTE: For a 1250 I/O cabinet, it is preferred to use flexible copper power cables with as small a diameter as possible. The number of power cables needed for this kW rating will make large and inflexible power cables more difficult to install.

	Maximum OCPD (A)			Cable size per phase (mm²) Copper / Aluminum				PE cable size (mm²) Copper / Aluminum				
Voltage (V)	380	400	415	440	380	400	415	440	380	400	415	440
Input	2500	2500	2500	2500	5x240/	5x240/	5x240/	5x240/	3x240/	3x240/	3x240/	3x240/
	I _r =0.9	I _r =0.9	I _r =0.9	I _r =0.9	6x300	6x300	6x300	6x300	3x300	3x300	3x300	3x300
Bypass	2000	2000	2000	2000	4x300/	4x300/	4x240/	4x240/	2x300/	2x300/	2x240/	2x240/
	I _r =0.98	I _r =0.95	I _r =0.9	I _r =0.9	5x300	5x300	5x300	5x300	3x300	3x300	3x300	3x300
Output	2000	2000	2000	2000	4x300/	4x300/	4x240/	4x240/	2x300/	2x300/	2x240/	2x240/
	I _r =0.98	I _r =0.95	I _r =0.9	I _r =0.9	5x300	5x300	5x300	5x300	3x300	3x300	3x300	3x300
Battery	4000	4000	4000	4000	6x300/ 7x300	6x300/ 7x300	6x300/ 7x300	6x300/ 7x300	3x300/ 4x300	3x300/ 4x300	3x300/ 4x300	3x300/ 4x300

Recommended Upstream Protection and Cable Sizes for 1500 kW UPS

	Maximum OCPD (A)					Cable size per phase (mm²) Copper / Aluminum				PE cable size (mm²) Copper / Aluminum			
Voltage (V)	380	400	415	440	380	400	415	440	380	400	415	440	
Input	320066	320066	320066	250067	7x240/ 9x240	7x240/ 9x240	7x240/ 9x240	6x240/ 8x240	4x240/ 5x240	4x240/ 5x240	4x240/ 5x240	3x240/ 4x240	
Bypass	2500 ⁶⁸	2500 ⁶⁶	2500 ⁶⁶	200067	6x240/ 7x240	5x240/ 7x240	5x240/ 7x240	5x240/ 6x240	3x240/ 4x240	3x240/ 4x240	3x240/ 4x240	3x240/ 3x240	

^{66.} Long-time setting $(I_r) = 0.9$.

^{67.} Long-time setting $(I_r) = 1.0$.

^{68.} Long-time setting $(I_r) = 0.95$.

Maximum OCPD (A)					Cable size per phase (mm²) Copper / Aluminum				PE cable size (mm²) Copper / Aluminum			
Voltage (V)	380	400	415	440	380	400	415	440	380	400	415	440
Output	2500 ⁶⁹	250070	250070	200071	6x240/ 7x240	5x240/ 7x240	5x240/ 7x240	5x240/ 6x240	3x240/ 4x240	3x240/ 4x240	3x240/ 4x240	3x240/ 3x240
Battery	4000	4000	4000	4000	8x240/ 10x240	8x240/ 10x240	8x240/ 10x240	8x240/ 10x240	4x240/ 5x240	4x240/ 5x240	4x240/ 5x240	4x240/ 5x240

Recommended Bolt and Lug Sizes for IEC

Cable size mm ²	Bolt size	Cable lug type
16	M10 x 40 mm	TLK 16-10
25	M10 x 40 mm	TLK 25-10
35	M10 x 40 mm	TLK 35-10
50	M10 x 40 mm	TLK 50-10
70	M10 x 40 mm	TLK 70-10
95	M10 x 40 mm	TLK 95-10
120	M10 x 40 mm	TLK 120-10
150	M10 x 40 mm	TLK 150-10
185	M10 x 40 mm	TLK 185-10
240	M10 x 40 mm	TLK 240-10

Recommended Upstream Protection and Cable Sizes – UL

HAZARD OF FIRE

- Connect only to a circuit with the below specifications.
- Connect only to a circuit provided with a maximum branch circuit overcurrent protection, as specified in the UPS rating tables below, in accordance with the National Electrical Code, ANSI/NFPA70, and the Canadian Electrical Code, Part I, C22.1.

Failure to follow these instructions can result in injury or equipment damage.

NOTE: Overcurrent protection is to be provided by others.

NOTE: All wiring must comply with all applicable national and/or electrical code (National Electrical Code, ANSI/NFPA 70).

Cable sizes in this manual are based on Table 310.15 of the National Electrical Code 2014 (NEC) with the following assertions:

- 90 °C conductors (THHN) for 75 °C termination
- · Not more than 3 current carrying conductors in each conduit
- An ambient temperature of max. 30 °C
- · Use of copper or aluminium conductors
- 100% rated breakers
- Nominal operating conditions

If the ambient room temperature is greater than 30 °C, use larger or additional parallel conductors in accordance with the correction factors of the NEC. The maximum allowable conductor size is 600 kcmil.

Equipment Grounding Conductors (EGC) are sized in accordance with NEC Article 250.122 and Table 250.122 Minimum size equipment conductor for grounding equipment.

NOTE: Always consider the EGC size according to the complete electrical installation.

NOTE: The use of aluminium conductors can limit the number of parallel Lithium-ion battery cabinets. Contact Schneider Electric for more information.

NOTICE

RISK OF EQUIPMENT DAMAGE

To ensure correct load sharing in bypass operation in a parallel system, the following recommendations apply:

- The bypass cables must be of the same length for all UPSs.
- · The output cables must be of the same length for all UPSs.
- The input cables must be of the same length for all UPSs in a single mains system.
- · Cable formation recommendations must be followed.
- The reactance of busbar layout in the bypass/input and output switchgear must be the same for all UPSs.

If the above recommendations are not followed the result can be uneven load sharing in bypass and overload of individual UPSs.

Failure to follow these instructions can result in equipment damage.

Recommended Upstream Protection and Cable Sizes for 1500 kW UPS

	Maximum OCPD (A)	Cable size per phase (AWG/kcmil) Copper / Aluminum	EGC cable size (AWG/kcmil) ⁷² Copper / Aluminum
Input	2500 ⁷³	6x600/ 8x600	1x350 / 1x400
Bypass	2000 ⁷³	5x600/ 6x600	1x250 / 1x350
Output	2000 ⁷³	5x600/ 6x600	1x250 / 1x350
Battery	500074	11x600/ 14x600	1x700 kcmil/ –

Recommended Bolt and Lug Sizes for Copper Cables

Cable Size	Terminal Bolt Diameter	Cable Lug Type	Crimping Tool	Die
1/0 AWG	M12 x 35 mm	LCCF1/0-12-X	СТ930	CD-920–2/0 Black P45
2/0 AWG	M12 x 35 mm	LCCF2/0-12-X	СТ930	CD-920–3/0 Orange P50
3/0 AWG	M12 x 35 mm	LCCF3/0-12-X	СТ930	CD-920–4/0 Purple P54
250 kcmil	M12 x 35 mm	LCCF250-12-X	CT-940CH/CT-2940	CD-920-300 White P66
300 kcmil	M12 x 35 mm	LCCF300-12-6	CT-940CH/CT-2940	CD-920-350 Red P71
400 kcmil	M12 x 35 mm	LCCF400-12-6	CT-940CH/CT-2940	CD-920–500 Brown P87
500 kcmil	M12 x 35 mm	LCCF500-12-6	CT-940CH/CT-2940	CD-920–500A Pink P99
600 kcmil	M12 x 40 mm	LCCF600-12-6	CT-940CH/CT-2940	CD-920–750 Black P106

Recommended Bolt and Lug Sizes for Aluminium Cables


Cable Size	Terminal Bolt Diameter	Cable Lug Type	Crimping Tool	Die
2/0 AWG	M12 x 40 mm	LAB2/0-12-5	СТ930	Olive P54
3/0 AWG	M12 x 40 mm	LAB3/0-12-5	СТ930	Ruby P60
250 kcmil	M12 x 40 mm	LAB250-12-5	СТ930	Red P71
300 kcmil	M12 x 40 mm	LAB300-12-2	СТ930	Blue P76
400 kcmil	M12 x 40 mm	LAB400-12-2	СТ930	Green P94
500 kcmil	M12 x 40 mm	LAB500-12-2	СТ930	Pink P99
600 kcmil	M12 x 40 mm	LAB600-12-2	СТ930	Black P106

^{72.} If the conductors are run in conduits, there must be one conductor in each conduit.

^{73.} Long-time setting $(I_r) = 1.0$ 74. Long-time setting $(I_r) = 0.9$

Inverter Short-Circuit Capabilities (Bypass not Available)

IK1 – Short-Circuit between a Phase and Neutral

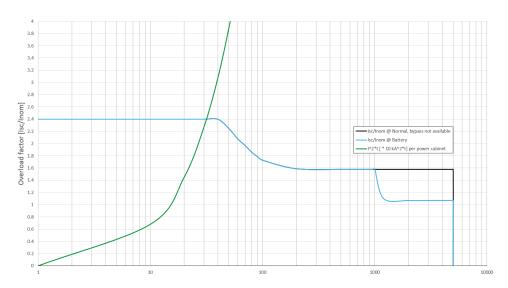

400 V IK1


S [kVA]	Ik10ms [A] Normal operation /Battery operation	Ik30ms [A] Normal operation /Battery operation	Ik100ms [A] Normal operation /Battery operation	Ik500ms [A] Normal operation /Battery operation	Ik1s [A] Normal operation /Battery operation	Ik5s [A] Normal operation /Battery operation	I ² t total [A ² s] Normal operation /Battery operation
250	840	820	610	550	550	550	1539100 /874180
	/840	/840	/640	/550	/550	/360	,
500	1680 /1680	1640 /1680	1220 /1280	1100 /1100	1100 /1100	1100	6156400 /3496720
						/720	/3490720
750	2520 /2520	2460 /2520	1830 /1920	1650 /1650	1650 /1650	1650 /1080	13851900 /7867620
1000	3360 /3360	3280 /3360	2440 /2560	2200 /2200	2200 /2200	2200 /1440	24625600 /13986880
1250	4200 /4200	4100 /4200	3050 /3200	2750 /2750	2750 /2750	2750 /1800	38477500 /21854500
1500	5040 /5040	4920 /5040	3660 /3840	3300 /3300	3300 /3300	3300 /2160	55407600 /31470480

S [kVA]	Ik10ms [A] Normal operation /Battery operation	Ik30ms [A] Normal operation /Battery operation	Ik100ms [A] Normal operation /Battery operation	Ik500ms [A] Normal operation /Battery operation	Ik1s [A] Normal operation /Battery operation	Ik5s [A] Normal operation /Battery operation	I ² t total [A ² s] Normal operation /Battery operation
250	-	-	-	-	-	-	-
	/810	/810	/570	/290	/290	/290	/493600
500	-	-	-	-	-	-	-
	/1620	/1620	/1140	/580	/580	/580	/1974400
750	-	-	-	-	-	-	-
	/2430	/2430	/1710	/870	/870	/870	/4442400
1000	-	-	-	-	-	-	-
	/3240	/3240	/2280	/1160	/1160	/1160	/7897600

480 V IK1 (Continued)

S [kVA]	Ik10ms [A] Normal operation /Battery operation	Ik30ms [A] Normal operation /Battery operation	Ik100ms [A] Normal operation /Battery operation	Ik500ms [A] Normal operation /Battery operation	Ik1s [A] Normal operation /Battery operation	Ik5s [A] Normal operation /Battery operation	l ² t total [A ² s] Normal operation /Battery operation
1250	-	-	-	-	-	-	-
	/4050	/4050	/2850	/1450	/1450	/1450	/12340000
1500	-	-	-	-	-	-	-
	/4860	/4860	/3420	/1740	/1740	/1740	/17769600

IK2 – Short-Circuit between Two Phases

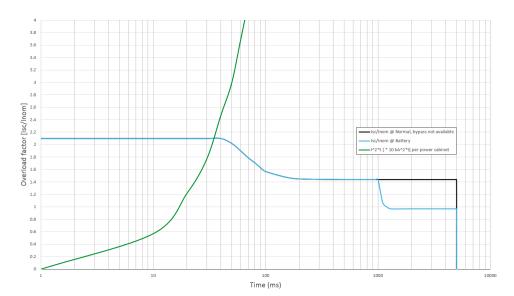


S [kVA]	lk10ms [A] Normal operation /Battery operation	Ik30ms [A] Normal operation /Battery operation	Ik100ms [A] Normal operation /Battery operation	Ik500ms [A] Normal operation /Battery operation	Ik1s [A] Normal operation /Battery operation	Ik5s [A] Normal operation /Battery operation	I ² t total [A ² s] Normal operation /Battery operation
250	780	780	600	510	510	510	1312100 /740520
	/780	/780	/600	/510	/510	/330	//40520
500	1560 /1560	1560 /1560	1200 /1200	1020 /1020	1020 /1020	1020	5248400 /2962080
						/660	
750	2340 /2340	2340 /2340	1800 / 1800	1530 /1530	1530 /1530	1530	11808900 /6664680
						/990	
1000	3120 /3120	3120 /3120	2400 /2400	2040 /2040	2040 /2040	2040 /1320	20993600 /11848320
1250	3900 /3900	3900 /3900	3000 /3000	2550 /2550	2550 /2550	2550 /1650	32802500 /18513000
1500	4680 /4680	4680 /4680	3600 /3600	3060 /3060	3060 /3060	3060 /1980	47235600 /26658720

480 V IK2

S [kVA]	Ik10ms [A] Normal operation /Battery operation	Ik30ms [A] Normal operation /Battery operation	Ik100ms [A] Normal operation /Battery operation	Ik500ms [A] Normal operation /Battery operation	lk1s [A] Normal operation /Battery operation	lk5s [A] Normal operation /Battery operation	I ² t total [A ² s] Normal operation /Battery operation
250	790	770	550	430	430	280	606450
	/790	/770	/550	/280	/280	/280	/460820
500	1580 /1580	1540 /1540	1100 /1100	860	860	560	2425800
				/560	/560	/560	/1843280
750	2370 /2370	2310 /2310	1650 /1650	1290	1290	840	5458050 /4147380
				/840	/840	/840	
1000	3160 /3160	3080 /3080	2200 /2200	1720 /1120	1720 /1120	1120 /1120	9703200 /7373120
1250	3950 /3950	3850 /3850	2750 /2750	2150 /1400	2150 /1400	1400 /1400	15161250 /11520500
1500	4740 /4740	4620 /4620	3300 /3300	2580 /1680	2580 /1680	1680 /1680	21832200 /16589520

IK3 – Short-Circuit between All Three Phases

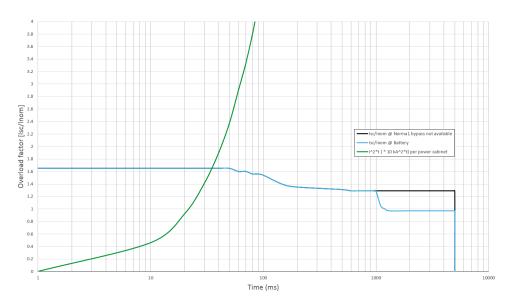

S [kVA]	Ik10ms [A] Normal operation /Battery operation	Ik30ms [A] Normal operation /Battery operation	Ik100ms [A] Normal operation /Battery operation	Ik500ms [A] Normal operation /Battery operation	Ik1s [A] Normal operation /Battery operation	Ik5s [A] Normal operation /Battery operation	I ² t total [A ² s] Normal operation /Battery operation
250	720	720	670	540	540	540	1507600
	/720	/720	/640	/360	/360	/360	/711360
500	1440 /1440	1440 /1440	1340 /1280	1080	1080	1080	6030400
				/720	/720	/720	/2845440
750	2160 /2160	2160 /2160	2010 /1920	1620 /1080	1620 /1080	1620 /1080	13568400 /6402240
1000	2880 /2880	2880 /2880	2680 /2560	2160 /1440	2160 /1440	2160 /1440	24121600 /11381760
1250	3600 /3600	3600 /3600	3350 /3200	2700 /1800	2700 /1800	2700 /1800	37690000 /17784000
1500	4320 /4320	4320 /4320	4020 /3840	3240 /2160	3240 /2160	3240 /2160	54273600 /25608960

S [kVA]	lk10ms [A] Normal operation /Battery operation	Ik30ms [A] Normal operation /Battery operation	Ik100ms [A] Normal operation /Battery operation	Ik500ms [A] Normal operation /Battery operation	lk1s [A] Normal operation /Battery operation	Ik5s [A] Normal operation /Battery operation	l ² t total [A ² s] Normal operation /Battery operation
250	670	670	610	440	360	300	580600
	/660	/660	/610	/440	/440	/300	/589380
500	1340 /1320	1340 /1320	1220 /1220	880	720	600	2322400
				/880	/880	/600	/2357520
650	1742 /1716	1742 /1716	1586 /1586	1144 /1144	936	780	3924856 /3984209
					/1144	/780	
1000	2680 /2640	2680 /2640	2440 /2440	1760 /1760	1440 /1760	1200 /1200	9289600 /9430080
1250	3350 /3300	3350 /3300	3050 /3050	2200 /2200	1800 /2200	1500 /1500	14515000 /14734500
1500	4020 /3960	4020 /3960	3660 /3660	2640 /2640	2160 /2640	1800 /1800	20901600 /21217680

Torque Specifications

HAZARD OF ELECTRIC SHOCK

All electrical connections must be torqued according to this table.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Bolt size	Torque
M6	5 Nm (3.69 lb-ft)
M8	17.5 Nm (12.91 lb-ft)
M10	30 Nm (22 lb-ft)
M12	50 Nm (36.87 lb-ft)

Environment

	Operating	Storage
Temperature	0 °C to 40 °C (32 °F to 104 °F) 0 °C to 50 °C (32 °F to 122 °F) when derated to 75% power ⁷⁵	-15 °C to 40 °C (5 °F to 104 °F) for systems with batteries -25 °C to 55 °C (-13 °F to 131 °F) for systems without batteries
Relative humidity	5-95% non-condensing	10-80% non-condensing
Elevation derating according to ANSI C57.96–1999 ⁷⁶	1000 m (3300 ft): 1.000 1500 m (5000 ft): 0.975 2000 m (6600 ft): 0.950 2500 m (8300 ft): 0.925 3000 m (10000 ft): 0.900	0-15000 m (0-50000 ft)
Audible noise one meter (three feet) from unit	62 dB at 70% load 69.5 dB at 100% load for 400 V systems 68 dB at 100% load for 480 V systems	
Protection class	IP20	
Color	RAL 9003 white	

^{75.} For temperatures between 40 °C (104 °F) and 50 °C (122 °F), the load power rating must be derated with 2.5% per °C of rated output power. Above 40 °C (104 °F) the minimum input voltage is 340 V, and from 380 V to 340 V, the charge power must be linearly derated from 12% to 1%.

^{76.} Maximum operation elevation is 3000 m (10000 ft).

Compliance

Safety	IEC 62040-1: 2017, Edition 2.0, Uninterruptible Power Systems (UPS) - Part 1: Safety requirements
	UL 1778 5th edition
EMC/EMI/RFI	IEC 62040-2: 2016, 3rd edition Uninterruptible Power Systems (UPS) - Part 2: Electromagnetic compatibility (EMC) requirements C2
	FCC 15B, class A
Performance	IEC 62040-3: 2011-03, 2nd edition Uninterruptible Power Systems (UPS) - Part 3: Method of specifying the performance and test requirements
Environmental	IEC 62040-4: 2013-04, 1st edition Uninterruptible Power Systems (UPS) - Part 4: Environmental aspects – Requirements and reporting
Markings	CE, C-Tick
	UL1778 Listing and CSA C22.2 NO.107.3
Transportation	ISTA 2B
	IEC 60721-4-2 Level 2M2
Seismic	OSHPD, IBC2012 and CBC2013 to S_{DS} = 1.83 g
Overvoltage category	111
Earthing system	TN, TT, IT
Protective class	1
Pollution degree	2

Weights and Dimensions for UPSs with 1500 kW I/O Cabinet


Commercial reference		Weight kg (lbs)	Height mm (in)	Width mm (in)	Depth mm (in)
GVX500K1500HSGVX500K1500GS	Total – Power cabinets – I/O cabinet	1956 (4312) 2 x 540 (2 x 1190) 876 (1931)	1970 (77.6)	3200 (126.0) 2 x 600 (2 x 23.6) 2000 (78.7)	900 (35.4)
GVX750K1500HSGVX750K1500GS	Total – Power cabinets – I/O cabinet	2496 (5503) 3 x 540 (3 x 1190) 876 (1931)	1970 (77.6)	3800 (149.6) 3 x 600 (3 x 23.6) 2000 (78.7)	900 (35.4)
GVX1000K1500HSGVX1000K1500GS	Total – Power cabinets – I/O cabinet	3036 (6693) 4 x 540 (4 x 1190) 876 (1931)	1970 (77.6)	4400 (173.2) 4 x 600 (4 x 23.6) 2000 (78.7)	900 (35.4)
GVX1250K1500HSGVX1250K1500GS	Total – Power cabinets – I/O cabinet	3576 (7884) 5 x 540 (5 x 1190) 876 (1931)	1970 (77.6)	5000 (196.9) 5 x 600 (5 x 23.6) 2000 (78.7)	900 (35.4)
GVX1500K1500HSGVX1500K1500GS	Total – Power cabinets – I/O cabinet	4116 (9074) 6 x 540 (6 x 1190) 876 (1931)	1970 (77.6)	5600 (220.5) 6 x 600 (6 x 23.6) 2000 (78.7)	900 (35.4)
GVX1750K1500HSGVX1750K1500GS	Total – Power cabinets – I/O cabinet	4656 (10265) 7 x 540 (7 x 1190) 876 (1931)	1970 (77.6)	6200 (244.1) 7 x 600 (7 x 23.6) 2000 (78.7)	900 (35.4)

Clearance for UPSs with 1500 kW I/O Cabinet

NOTE: Clearance dimensions are published for airflow and service access only. Consult with the local safety codes and standards for additional requirements in your local area.

NOTE: The UPS system can be placed up against a wall with no requirement for rear or side access.

Front View

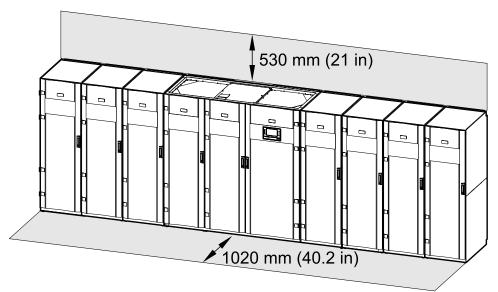

Guidance for Organizing Battery Cables

NOTE: For 3rd party batteries, use only high rate batteries for UPS applications.

NOTE: When the battery bank is placed remotely, the organizing of the cables is important to reduce voltage drop and inductance. The distance between the battery bank and the UPS must not exceed 200 m (656 ft). Contact Schneider Electric for installations with a longer distance.

NOTE: To minimize the risk of electromagnetic radiation, it is highly recommended to follow the below guidance and to use grounded metallic tray supports.

Cable Length				
<30 m	Not recommended	Acceptable	Recommended	Recommended
31–75 m	Not recommended	Not recommended	Acceptable	Recommended
76–150 m	Not recommended	Not recommended	Acceptable	Recommended
151–200 m	Not recommended	Not recommended	Not recommended	Recommended

Overview of Supplied Installation Kits

Installation Kits Shipped with the I/O Cabinet

Installation Kit 0M-816661

Part	Used in	Number of units
Jack	Follow the receiving and unpacking manual to remove the cabinets from the pallet using this installation kit.	1
Floor protection plate		1
Hexagonal socket for drilling machine		1

Installation Kit 0M-821667

NOTE: The rear anchoring bracket is shipped on the pallet.

Part	Used in	Number of units
Rear anchoring bracket	Mount the Rear Anchoring Brackets, page 49	1

Installation Kit 0H-9101

Part	Used in	Number of Units
Angle for left side of the rear anchoring bracket 870- 30411	Mount the Rear Anchoring Brackets, page 49	
Angle for right side of the rear anchoring bracket 870-		1
30412		
M8 x 20 hexagonal torx with washer		8
1 mm leveling shims		30

Part	Used in	Number of Units
EMC cover left 0M-82316	Position the Cabinets, page 51	1
EMC cover right 0M-98993		1
M6 nut with washer		22
Cable ties for signal cables	Signal Cables, page 71	50
Temperature sensor 0M-1160	Signal Cable Connections to Classic Battery Cabinets (Boards 0P6547, 0P6549, 0P6552), page 81	2 O
Terminator for modbus	Connect the Modbus Cables, page 90	2

Installation Kit 0H-9161 for Single Mains

Part	Used in	Number of Units
Vertical single mains busbar 880–99058 for L1	Install the Single Utility/Mains Installation Kit 0H-9161, page 64	1
Vertical single mains busbar 880–99059 for L2		1
Vertical single mains busbar 880–99057 for L3		1
Horizontal single mains busbars 880–99060		3
M10 nut with washer		24
M10 x 60 hexagonal torx with washer		36

Installation Kit 0H-1102

Part	Used in	Number of units
Neutral busbar 880-5501	Connect the Power Cables in a 380 V, 400 V, 415, and 440 V System, page 65	
M8 x 35 hexagonal torx with washer		4
Anchor bolt 0M-98831	Position the Cabinets, page 51	2

Installation Kit 0M-99259

Part	Used in	Number of Units
Front anchoring bracket for I/O cabinet	Mount the Front Anchoring Brackets, page 70	1

Installation Kit 0H-1074

Part	Used in	Number of Units
Optical fiber cable 0W7819	Route the Signal Cables between the I/O Cabinet and the Power Cabinets, page 71	1
Optical fiber cable 0W7822		1
Optical fiber cable 0W7827		1
		∎=====d ====∎=
Display cable 0W7853	Do not install. Installation must be performed by Schneider Electric.	1
Display cable 0W7858		1
Display cable 0W7859		1
		₽G

Installation Kit 0H-0889

Part	Used in	Number of Units
PBUS 1 cable 0W7995	Route the PBUS Cables between Parallel UPS Units, page 88	
PBUS 2 cable 0W7996		1

Installation Kit 0H-9097

NOTE: Save this installation kit for the field service representative. The busbars will be installed by Schneider Electric during assembly service.

Installation Kit 0H-9128

NOTE: Save this installation kit for the field service representative. The busbars will be installed by Schneider Electric during assembly service.

Installation Kit 0H-9096

NOTE: Save this installation kit for the field service representative. The busbars will be installed by Schneider Electric during assembly service.

Installation Kit 0H-9129

NOTE: Save this installation kit for the field service representative. The busbars will be installed by Schneider Electric during assembly service.

Installation Kit 0M-92449

NOTE: Save this installation kit for the field service representative. The display will be installed by Schneider Electric during assembly service.

Installation Kits Shipped with the Power Cabinet


Installation Kit 0H-9102

NOTE: These installation kit parts are shipped in the packaging of the power cabinet.

Part	Used in	Number of Units
Rear anchoring bracket for power cabinet 0M-818242	Mount the Rear Anchoring Brackets, page 49	
M8 x 20 hexagonal torx with washer		2
Front anchoring bracket for power cabinet 0M-816684	Mount the Front Anchoring Brackets, page 70	
Long top baying bracket 0M-821220	Position the Cabinets, page 51	1
M6 x 16 torx screw with washer		15
M10 nut with washer		24
M10 x 35 hexagonal torx with washer		12
1 mm leveling shims		10
Ground interconnection busbar 880-99027	Save for the field service representative. The busbars will be installed by Schneider Electric during assembly service.	
M8 nut with washer		4
M8 x 35 mm hexagonal torx with washer		4
Interconnection busbar 880-10146 and 880-9720 from power cabinet to power cabinet (neutral)		1
Interconnection busbar 0M-140035 power cabinet to power cabinet (battery +)		1

Part	Used in	Number of Units
Interconnection busbar 0M-97886 power cabinet to power cabinet (output)		3
Interconnection busbar 0M-819336 power cabinet to power cabinet (battery -)		1
Interconnection busbar 0M-97885 power cabinet to power cabinet (input)		3

Installation Procedure

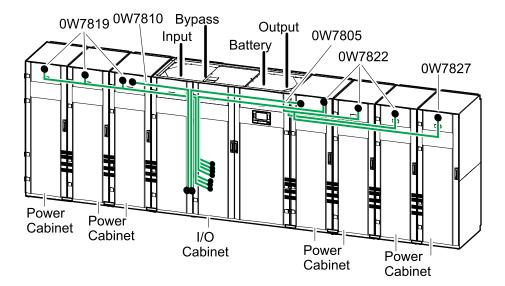

- 1. Follow the receiving and unpacking manual to remove the cabinets from the pallet.
- 2. Mount the Rear Anchoring Brackets, page 49.
- 3. Position the Cabinets, page 51.
- 4. Prepare the I/O cabinet for power cables. Follow one of the procedures:
 - Prepare the I/O Cabinet for Power Cables in Top Cable Entry Systems, page 62, OR
 - Prepare the I/O Cabinet for Power Cables in Bottom Cable Entry Systems, page 63.
- 5. For single mains systems only: Install the Single Utility/Mains Installation Kit 0H-9161, page 64.
- 6. Connect the power cables. Follow one of the procedures:
 - Connect the Power Cables in a 380 V, 400 V, 415, and 440 V System, page 65, OR
 - Connect the Power Cables in a 480 V System, page 68.
- 7. Mount the Front Anchoring Brackets, page 70.
- Route the Signal Cables between the I/O Cabinet and the Power Cabinets, page 71.
- 9. Prepare for External Signal Cables, page 76.
- 10. Connect the Emergency Power Off (EPO), page 82.
- 11. Only for external synchronization: Connect External Synchronization, page 83.
- 12. Connect Equipment to Input Contacts and Output Relays, page 86.
- 13. Only for parallel system: Route the PBUS Cables between Parallel UPS Units, page 88.
- 14. Connect the Modbus Cables, page 90.
- **15.** Final Mechanical Assembly, page 93.

For moving or decommissioning the UPS after installation has been completed, see Decommission or Move the UPS to a New Location, page 97.

Mechanical Installation

Mount the Rear Anchoring Brackets

HAZARD OF TILTING

All rear and front anchoring brackets must be installed.


Failure to follow these instructions will result in death or serious injury.

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH


Leave the UPS system covered while making anchoring holes to prevent dust or other conductive particles from entering the system.

Failure to follow these instructions will result in death or serious injury.

1. Use the rear anchoring bracket that was attached to the rear of the I/O cabinet pallet. Fasten the two plates from the installation kit 0H-9101 to the rear anchoring bracket of the I/O cabinet with M8 bolts. Note the direction of the plates.

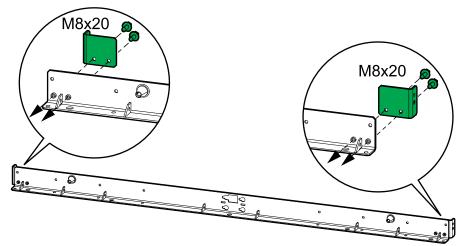

2. Place the rear anchoring brackets for the I/O cabinet and the power cabinets in the final installation area.

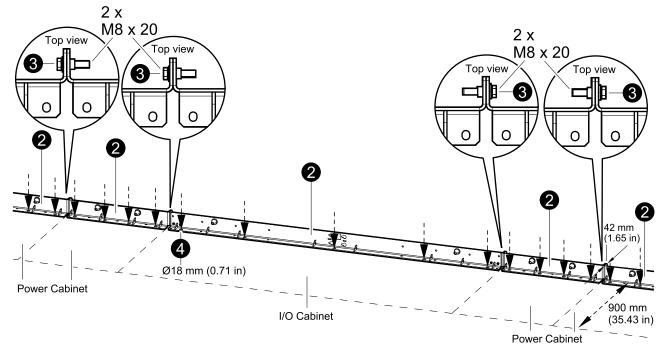

- 3. Interconnect the rear anchoring brackets using the provided screws and bolts.
- 4. Mark the hole locations.
- 5. Drill anchoring holes according to the national and local requirements.
- 6. Mount the rear anchoring brackets to the floor. Bolts are not supplied.
- 7. Use a bubble-leveler to ensure that the rear anchoring brackets are level. Use the provided leveling shims if necessary.

Position the Cabinets

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not step/walk on top of the cabinets.

Failure to follow these instructions will result in death or serious injury.


NOTE: The cabinets must be moved to the final installation area individually and cannot be moved after they have been interconnected.

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH


A minimum of one power cabinet and a maximum of four power cabinets must be placed on each side of the I/O cabinet.

Failure to follow these instructions will result in death or serious injury.

1. Install the cover 0M-98993 from the installation kit on the right-most power cabinet.

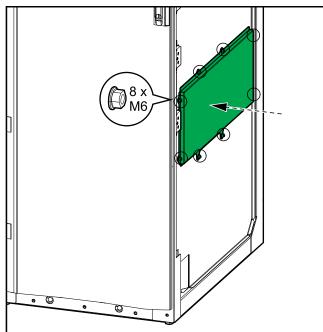

2. Install the interconnection cover 0M-82316 from the installation kit on the leftmost power cabinet.

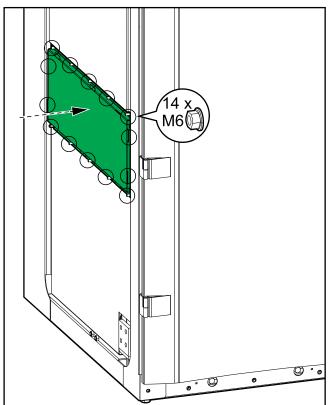


Remove the side panels from the I/O cabinet and install them on the left side of the left-most power cabinet and on the right side of the right-most power cabinet.


HAZARD OF ARC FLASH

- Do not make mechanical changes to the product (including removal of cabinet parts or drilling/cutting of holes) that are not described in the installation manual.
- Move and install the indicated side panels in all installation types (including parallel installations with no air gap between the frames or in installations where the right-most power cabinet and/or the left-most power cabinet is placed against a wall).


Failure to follow these instructions can result in death, serious injury, or equipment damage.

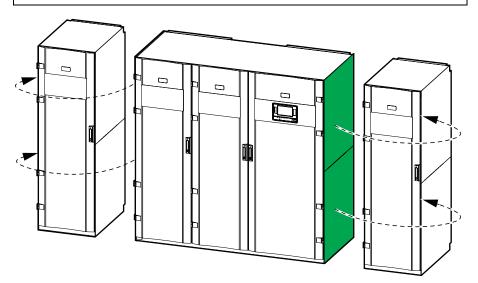


4. Remove and dispose of the indicated transport bracket from the left side of the I/O cabinet.

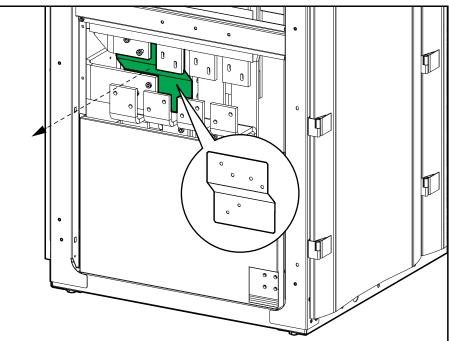


5. Remove and dispose of the indicated transport bracket from the right side of the I/O cabinet.

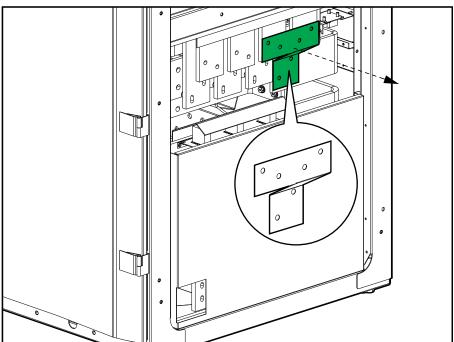


6. Remove and dispose of the indicated transport bracket from the right side of the I/O cabinet.

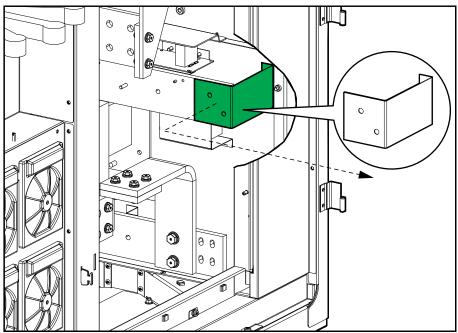

7. Remove the two metal plates from the I/O cabinet.

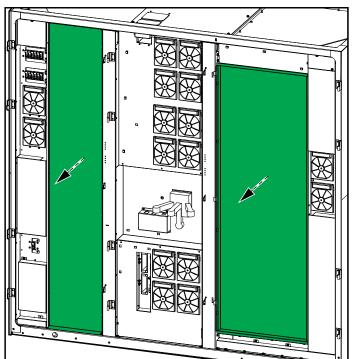

8. Push the I/O cabinet into position against the rear anchoring bracket – the I/O cabinet will connect to the conic outcroppings on the rear anchoring bracket.

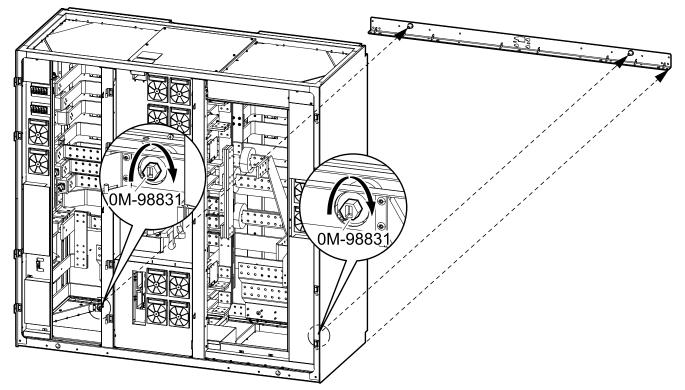


- 9. Fasten the cabinet to the rear anchoring bracket with the two anchor bolts from the installation kit. Torque to 50 Nm (36.87 lb-ft).
- Push the power cabinets one by one into position against the rear anchoring brackets – the cabinets will connect to the conic outcroppings on the brackets.

RISK OF EQUIPMENT DAMAGE


When pushing the power cabinet into position, push on the frame to avoid damaging the signal cables.

Failure to follow these instructions can result in injury or equipment damage.

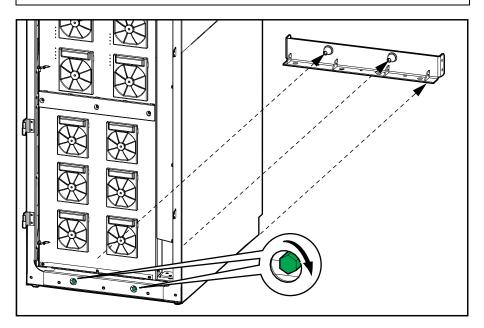


- 11. Fasten the cabinets to the rear anchoring brackets by tightening the bolts on the front of the cabinets. Torque to 50 Nm (36.87 lb-ft).
- 12. Lower the two front feet on all cabinets until they connect with the floor use a bubble-leveler to ensure that the cabinets are level. Use the provided levelling shims if necessary.
- 13. Install the top baying brackets on the top of the cabinets and fasten with the provided screws.


Front View of the I/O Cabinet and Two Power Cabinets

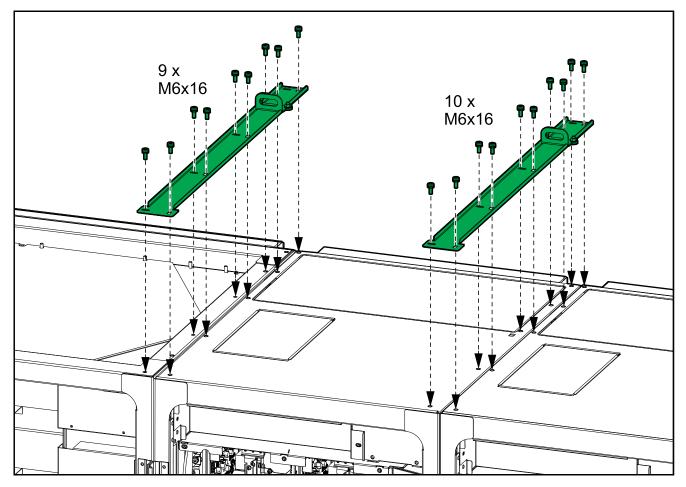

14. Remove the three indicated plates in the left side of the I/O cabinet.

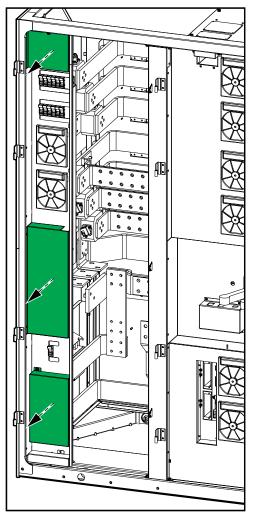


15. Remove the two indicated plates in the left side of the I/O cabinet.

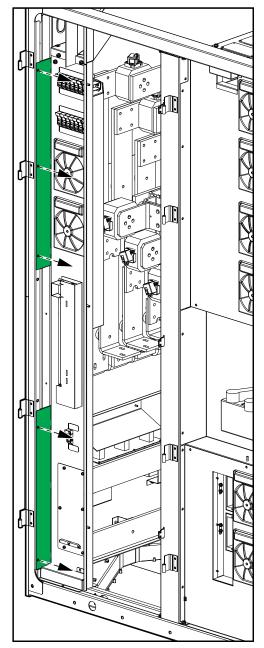


16. Mount the M6 screws from the installation kit from right to left in the four marked locations between the I/O cabinet and the power cabinet placed to the left of the I/O cabinet.

From the Power Cabinet on the Left Side of the I/O Cabinet to the I/O Cabinet

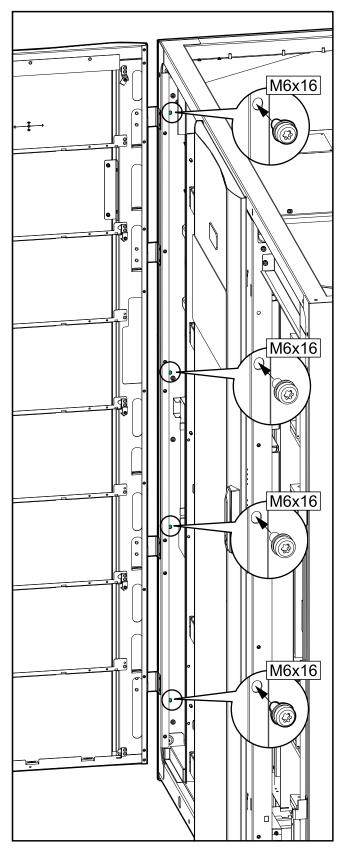


- 17. Mount the M6 screws from the installation kit from right to left to tighten the cabinets together:
 - in the five marked positions between the power cabinets.
 - in the four marked positions between the I/O cabinet and the power cabinet on the right side of the I/O cabinet.

From Power Cabinet to Power Cabinet

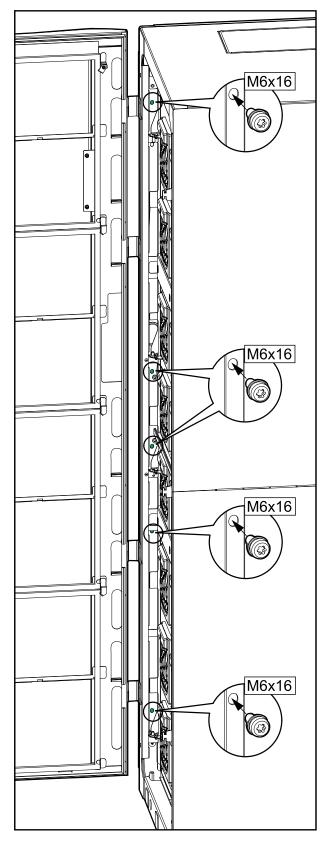


From Power Cabinet on the Right Side of the I/O Cabinet to the I/O Cabinet

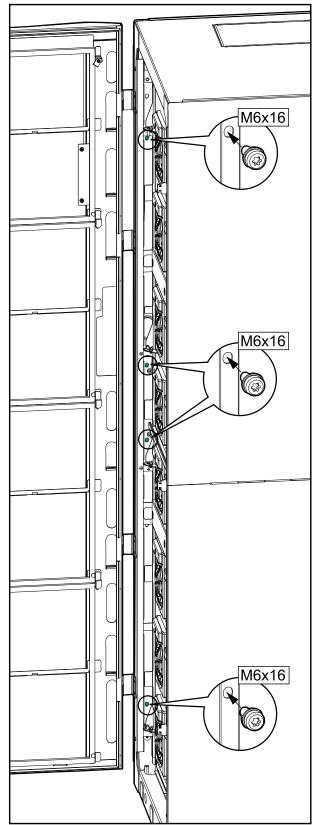

18. Verify that the right-most power cabinet and the left-most power cabinet for the I/O cabinet has the covers (0M-98993 and 0M-82316) and the side panels installed before continuing.



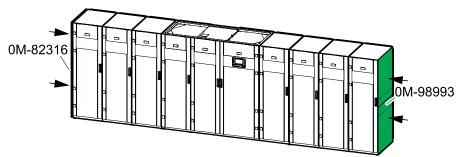

Connect the Power Cables

Prepare the I/O Cabinet for Power Cables in Top Cable Entry Systems


HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not drill/punch holes for cables or conduits with the gland plates installed and do not drill/punch holes in close proximity to the UPS.

Failure to follow these instructions will result in death or serious injury.

1. Loosen the bolts and remove the gland plates from the top of the I/O cabinet.

Front View of the I/O Cabinet

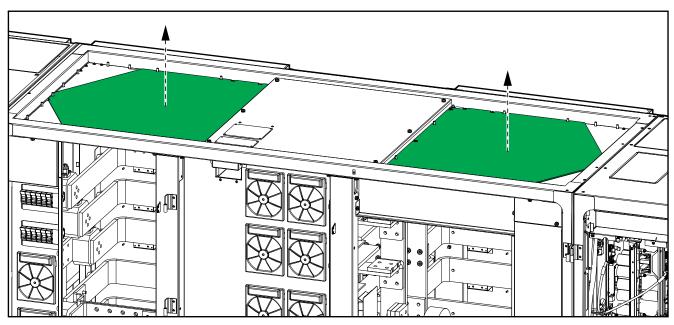

- 2. Drill or cut holes for cables/conduits in the top gland plate.
- 3. Install conduits and reinstall the top gland plate.

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Ensure that there are no sharp edges that can damage the cables.

Failure to follow these instructions will result in death or serious injury.

Prepare the I/O Cabinet for Power Cables in Bottom Cable Entry Systems


HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not drill/punch holes for cables or conduits with the gland plates installed and do not drill/punch holes in close proximity to the UPS.

Failure to follow these instructions will result in death or serious injury.

1. Loosen the bolts and remove the gland plates in the bottom of the I/O cabinet.

Front View of the I/O Cabinet

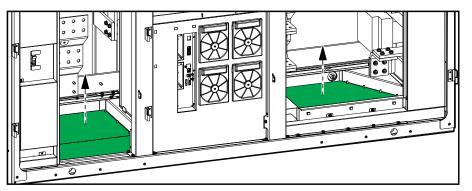

- 2. Drill or cut holes for cables/conduits in the bottom gland plate.
- 3. Install conduits and reinstall the bottom gland plate.

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Ensure that there are no sharp edges that can damage the cables.

Failure to follow these instructions will result in death or serious injury.


Install the Single Utility/Mains Installation Kit 0H-9161

NOTE: This procedure is only applicable to single utility/mains systems.

1. Install the single utility/mains installation kit 0H-9161 between the input and bypass busbars. Connect L1 to L1, L2 to L2, and L3 to L3.

NOTE: Two busbars are required for each connection.


Front View of the I/O Cabinet

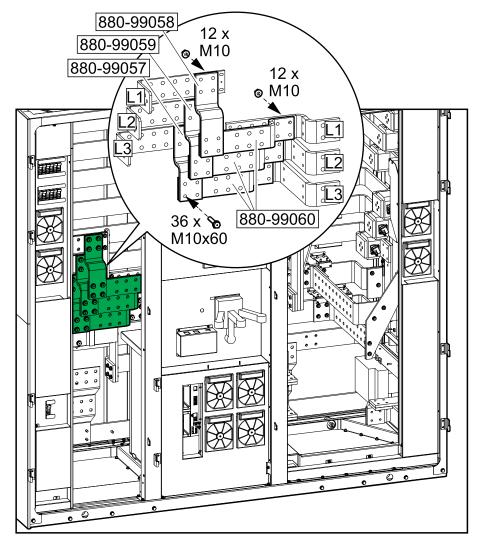


Connect the Power Cables in a 380 V, 400 V, 415, and 440 V System

1. Install the N busbar 880–5501 from the installation kit 0H-1102.


Front View of the I/O Cabinet

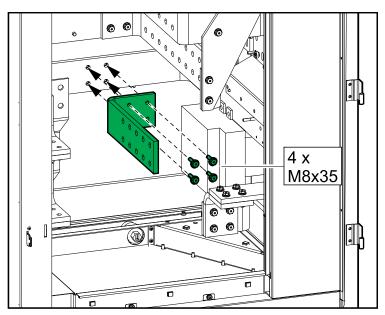


2. In installations with neutral connection only, remove the lexan plate from the N busbar.

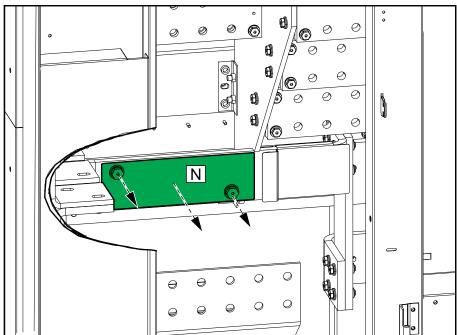

3. Connect the equipment earthing conductor/PE to the PE busbar.

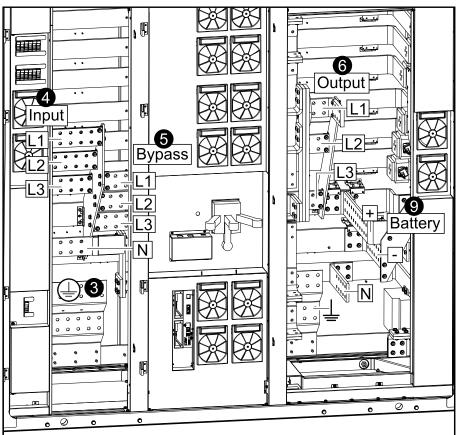


- 4. Connect the input cables.
- 5. Only applicable to dual mains systems: Connect the bypass cables.
- 6. Connect the output cables.
- 7. Only applicable to TNC systems: Install jumper cables (not provided) between the N busbar and the earthing terminal.

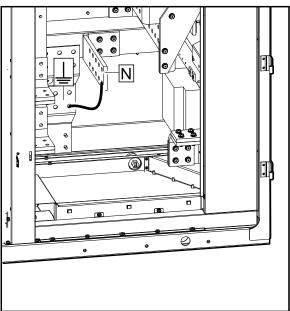

8. Only applicable to 4–wire systems: In an IT system, connect an external impedance between the N busbar and the earthing terminal.

NOTE: For IT systems, the installation must include a earth-fault detection circuitry.

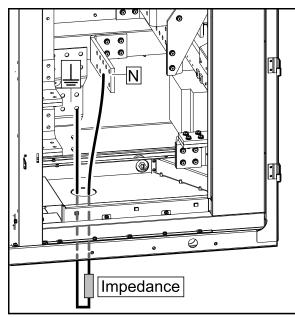


9. Connect the battery cables to the battery + and battery - terminals.

Connect the Power Cables in a 480 V System

The grounding electrode conductor must be installed per NEC 250.30 and sized per NEC 250.66.


1. Connect the equipment grounding conductor/PE to the PE busbar.

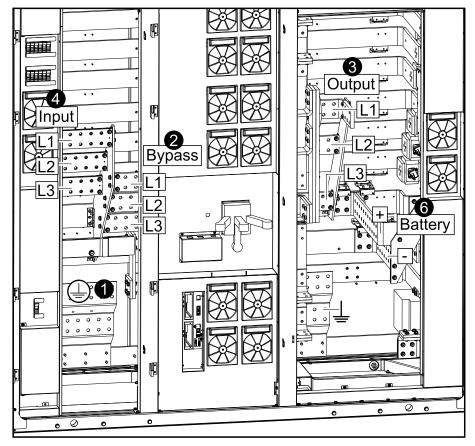

- 2. Only applicable to dual mains systems: Connect the bypass cables.
- 3. Connect the output cables.
- 4. Connect the input cables.

5. For high impedance grounding systems only:


NOTE: For high impedance grounding systems, the installation must include a ground-fault detection circuitry.

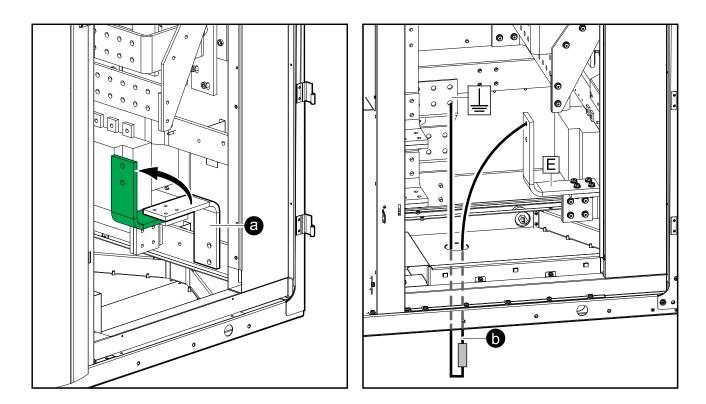

- a. Rotate the jumper busbar so it does not create a connection.
- b. Connect an external impedance between the "E" terminal and the equipment grounding conductor according to NEC 2014 article 250.36.
- 6. Connect the battery cables to the battery + and battery terminals.

Mount the Front Anchoring Brackets

1. Fasten the front anchoring brackets to the front of the cabinets using the provided bolts.

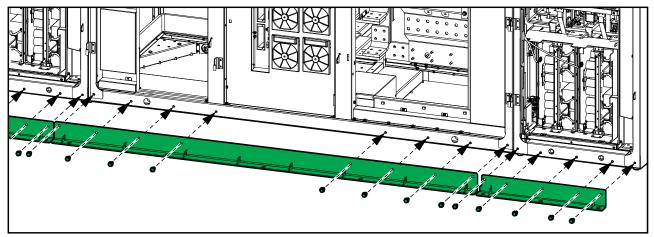

2. Anchor the front anchoring brackets to the floor.

NOTE: Floor anchoring bolts are not supplied.

Signal Cables

ACAUTION

RISK OF EQUIPMENT DAMAGE


- All Class 2/SELV signal cables shall be double insulated/jacket cable and minimum rated for 30 VDC. All non-Class 2/non-SELV signal cables shall be double insulated/jacket cable and minimum rated for 600 VAC.
- The cable supplying the shunt trip shall be a jacket cable and rated for 600 VAC. The cables shall be sized taking the cable voltage drop and the recommendation of the shunt trip manufacturer into consideration.

Failure to follow these instructions can result in injury or equipment damage.


Route the Signal Cables between the I/O Cabinet and the Power Cabinets

NOTE: Do not connect the signal cables. Signal cables will be connected by Schneider Electric during the assembly service.


Overview of Signal Cables between the Power Cabinets and the I/O Cabinet

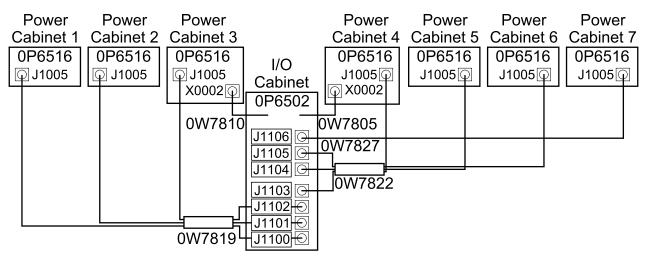


1. Remove the plate in the upper right corner of the I/O cabinet.

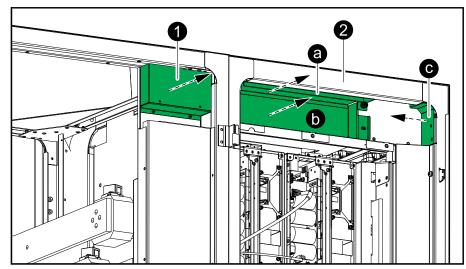


- 2. Remove the three plates (a-c) on all power cabinets.
- 3. Remove and dispose of all 0W11379 signal cables connected to the X0002 terminals of all power cabinets.
- 4. Route the signal cable connected in the left side of the I/O cabinet to the X0002 terminal in the power cabinet to the left of the I/O cabinet.

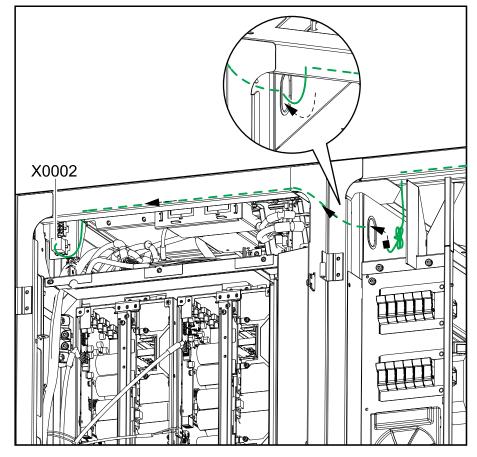

5. Route the signal cable connected in the right side of the I/O cabinet to the X0002 terminal in the power cabinet to the right of the I/O cabinet.

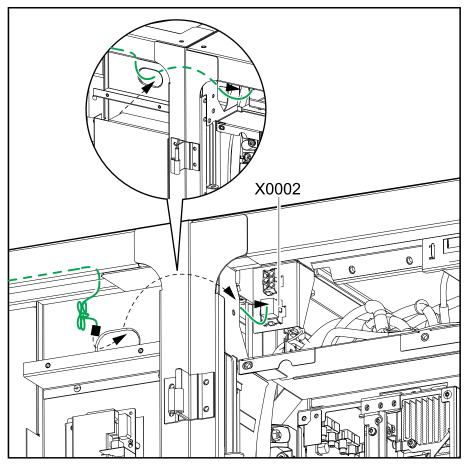

6. Route the signal cable 0W7819 from 0P6516 terminal J1005 in power cabinets 1–3 (on the left side of the I/O cabinet) and into the I/O cabinet as shown on the illustration and fasten the cable.

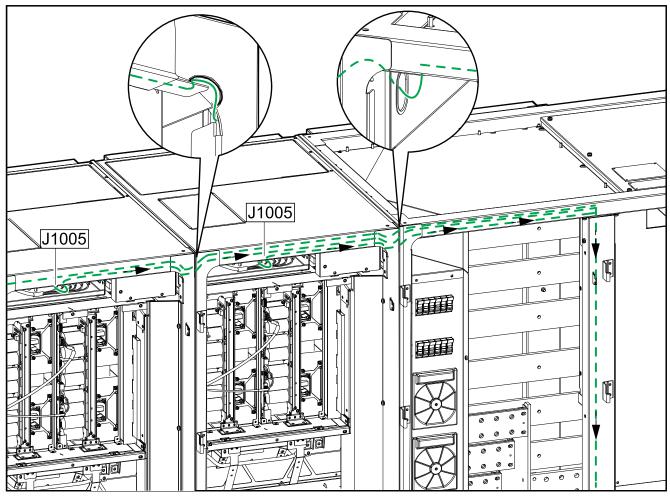

- 7. Route the signal cable 0W7822 from 0P6516 terminal J1005 in power cabinet 4 and power cabinets 5–6 if available (on the right side of the I/O cabinet) and into the I/O cabinet as shown on the illustration and fasten the cable.

8. In redundant systems only, route the signal cable 0W7827 from 0P6516 terminal J1005 in power cabinet 7 and into the I/O cabinet and fasten the cable.

Prepare for External Signal Cables

Class 2/SELV


Board	Terminal	Description	See
0P6548	J5502-J5506, J5508, J5510– J5512	Input contacts	Connect Equipment to Input Contacts and Output Relays, page 86
0P6548	J5520-J5525, J5528	Output relays	
0P6548	J5527	Kirk key control	Signal Cable Connections to the Switchgear (Boards 0P6547, 0P6548, 0P6549), page 80
0P6548	J5514	UOB lamp control	
0P6548	J5515	MBB lamp control	
0P6548	J5516	SIB lamp control	
0P6548	J5517	SSIB lamp control	
0P6548	J5509	UOB 2	
0P6547	J4931-J4932	24 V SELV supply	
0P6547	J4936-J4938	EPO	Connect the Emergency Power Off (EPO), page 82
0P3643	PBUS 1 and PBUS 2	PBUS	Route the PBUS Cables between Parallel UPS Units, page 88
0P6502		Modbus	Connect the Modbus Cables, page 90

Non-Class 2/Non-SELV


Board	Terminal	Description	See
0P6547	J4939-J4941 ⁷⁷	Output relays	Connect Equipment to Input Contacts and Output Relays, page 86
0P6549	J5607	MBB	Signal Cable Connections to the Switchgear (Boards 0P6547, 0P6548, 0P6549), page 80
0P6549	J5608	SIB	
0P6549	J5620	SSIB	
0P6549	J5621	UOB	
0P6549	J5622	UIB	
0P6549	J5611-J5613	External synchronization	Connect External Synchronization, page 83
0P6548	J5529	Battery temperature sensor 1	Signal Cable Connections to Classic Battery Cabinets (Boards 0P6547, 0P6549, 0P6552), page 81
0P6549	J5609	Battery breaker 1	
0P6549	J5610	Battery breaker 2	
0P6547	J4942-J4943	24 V supply 1	
0P6547	J4929-J4930	24 V supply 2	
0P6547	J4923	DC shunt trip 1	
0P6547	J4924	DC shunt trip 2	
0P6552	J9019	Battery breaker 3	
0P6552	J9020	Battery breaker 4	
0P6552	J9021	Battery temperature sensor 2	
0P6552	J9022-J9023	24 V supply 3	
0P6552	J9024-J9025	24 V supply 4	

77. These output relays can also be Class 2/SELV but the three output relays must have identical reference.


1. Remove the four indicated plates.

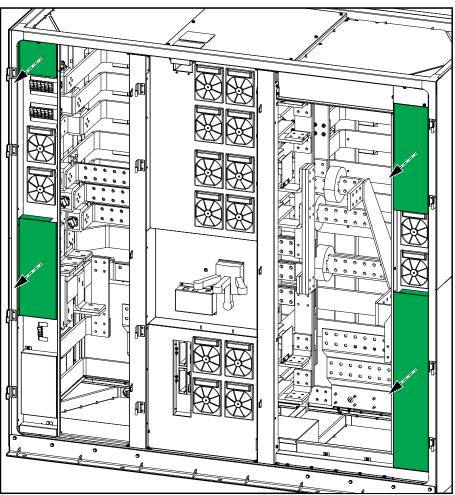


2. Remove the indicated plate for routing of non-Class 2/non-SELV cables.

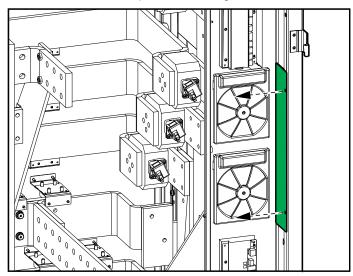


3. For bottom cable entry only: remove the plate in front of the cable channel for non-Class 2/non-SELV cables.

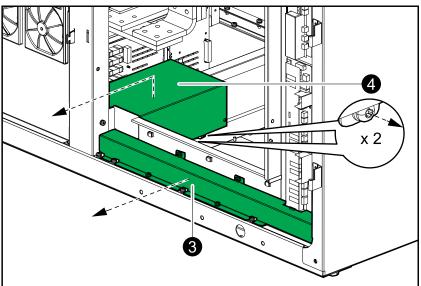

- 4. For bottom cable entry only: loosen the two screws on the right side of the box and remove the box.
- 5. For bottom cable entry only: loosen the two screws behind the box and lift out the box.

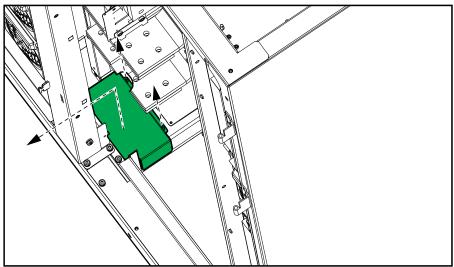

 Remove the two gland plates from either the top or the bottom of the I/O cabinet and drill holes for the applicable Class 2/SELV and non-Class 2/non-SELV cables in the table below. Install conduits and reinstall the plates.

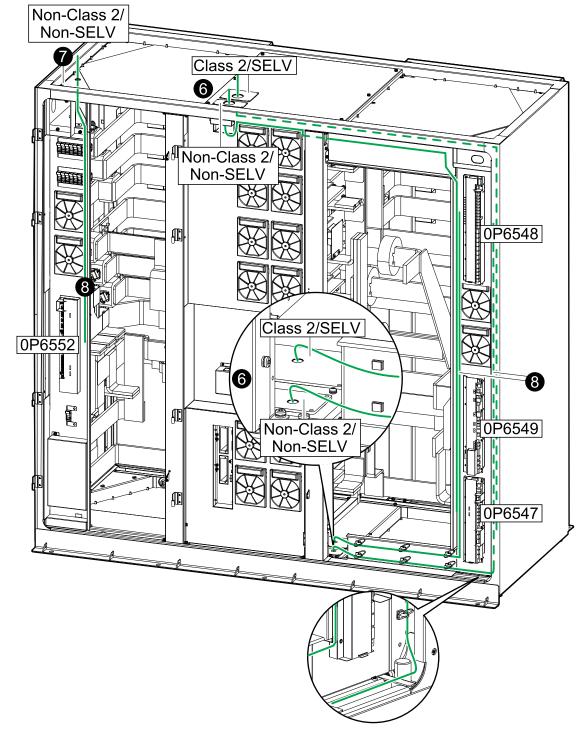

- 7. In installations with three or four battery banks, remove the top gland plate in the left corner of the I/O cabinet and drill holes for the applicable non-Class 2/ non-SELV cables below. Install conduits and reinstall the plates.
- 8. Route the cables through the top or bottom and to the boards as shown on the illustration.


NOTE: Do not connect the signal cables. Signal cables will be connected by Schneider Electric during the assembly service.

Signal Cable Connections to the Switchgear (Boards 0P6547, 0P6548, 0P6549)

NOTE: The unit output breaker UOB must include two separated AUX switches.


NOTE: The solenoid key release unit (SKRU) is only applicable to 480 V systems.

All circuits connected must have the same 0 V reference.

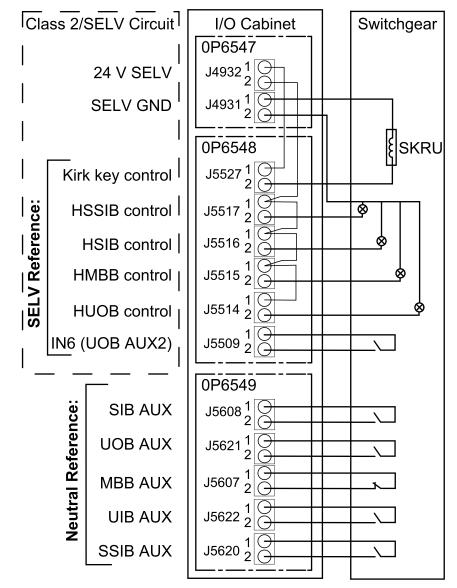


Signal Cable Connections to Classic Battery Cabinets (Boards 0P6547, 0P6549, 0P6552)


NOTE: The illustration below shows a system with four battery banks, each consisting of one classic battery cabinet. Connect signal cables according to the number of classic battery cabinets in your installation.

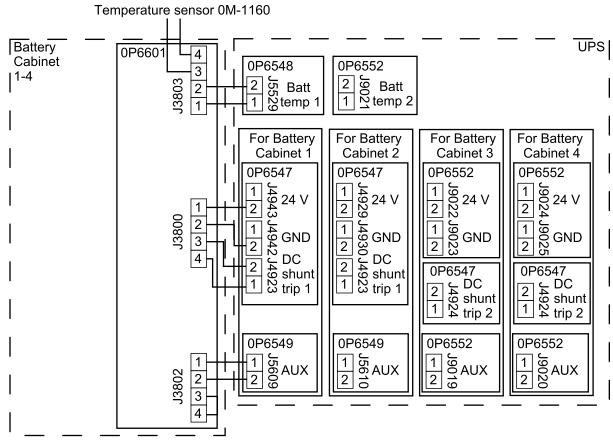

If the battery bank is consisting of two classic battery cabinets, connect signal cables between the two classic battery cabinets in one battery bank as shown.

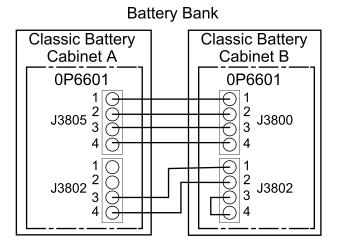

Signal Cable Connections to Battery Breaker Cabinet (Boards 0P6547, 0P6548, 0P6549)

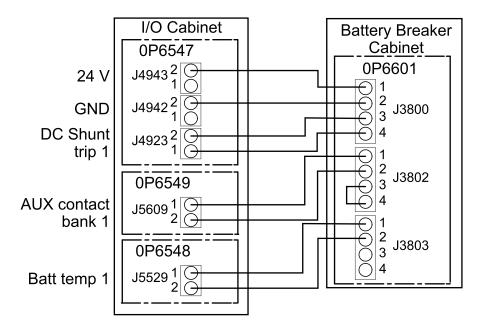


Connect the Emergency Power Off (EPO)

Do not connect any circuit to the EPO terminal block unless it can be confirmed that the circuit is Class 2/SELV.

All circuits connected must have the same 0 V reference.

The EPO input supports 24 VDC.

- 1. Route the cables from your EPO through the top or bottom of the I/O cabinet and to the EPO terminals J4936–J4938 on 0P6547 as shown in Prepare for External Signal Cables, page 76.
- 2. Connect the building EPO to the terminal block according to one of the options below.

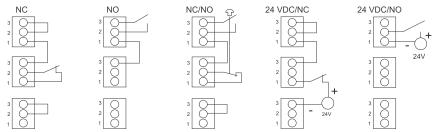

NOTE: Do not connect the terminal block to the board. Signal cables will be connected by Schneider Electric during the assembly service.

Connect External Synchronization

The maximum voltage for external synchronization is equal to the input voltage range given in the specifications. The non-Class 2/non-SELV cables for external synchronization shall be a jacket cable and rated for 600 VAC.


- 1. Route the external synchronization cables through the top or bottom of the I/O cabinet to 0P6549 as shown in Prepare for External Signal Cables, page 76.
- 2. Connect the three phases to the terminal block:

NOTE: The phases from the synchronization source must be protected by a fuse of maximum 0.5 A.


NOTE: Do not connect the terminal block to the board. Signal cables will be connected by Schneider Electric during the assembly service.

- a. Connect L1 to J5611 on 0P6549.
- b. Connect L2 to J5612 on 0P6549.
- c. Connect L3 to J5613 on 0P6549.


Signal Cable Connections for Basic UPS Synchronization to a Fixed Voltage Source (Boards 0P6548, 0P6549)

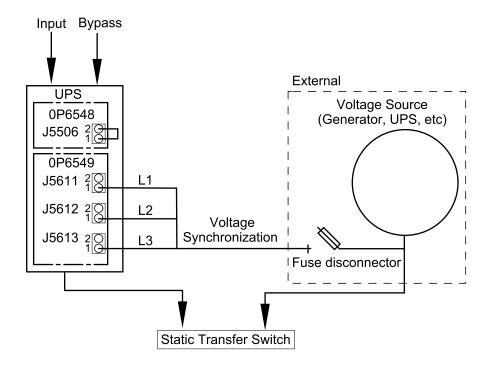

Signal Cable Connections for Dual UPS Synchronization with a Floating Synchronization Master (Boards 0P6548, 0P6549)

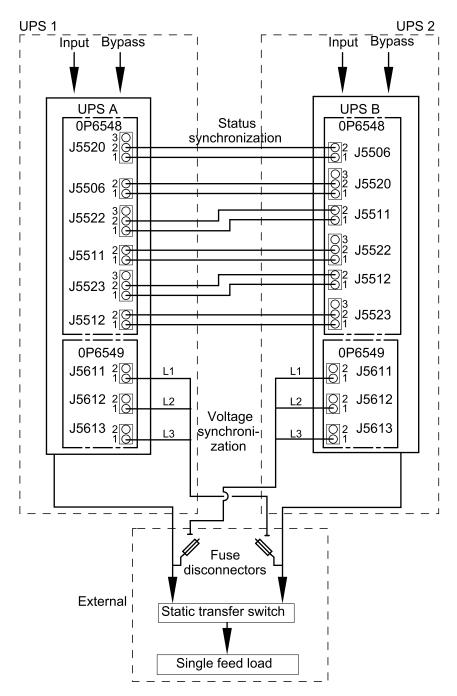

Signal Cable Connections for Fixed Parallel Synchronization Master (Boards 0P6548, 0P6549)

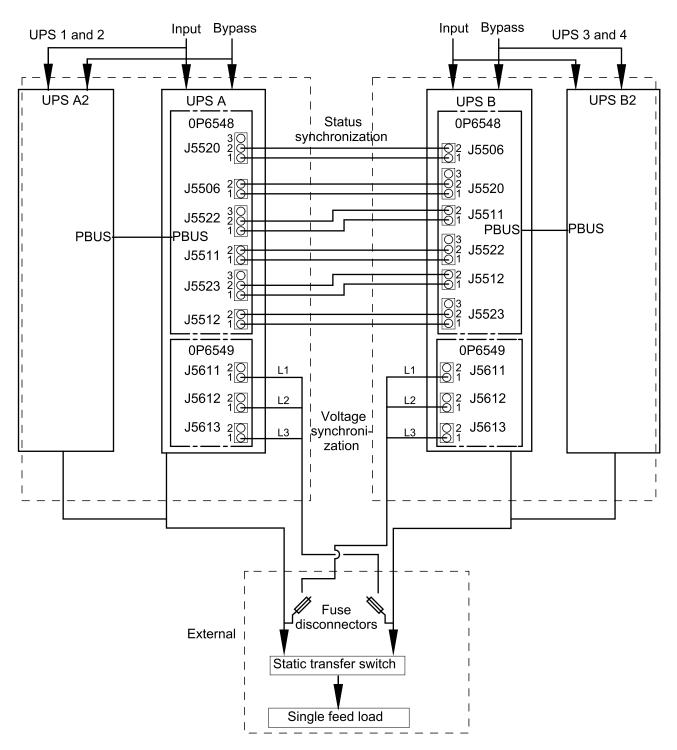

Connect Equipment to Input Contacts and Output Relays

- 1. Route the signal cables from your contacts/relays through the top or bottom of the I/O cabinet and to the boards in the right side of the I/O cabinet as shown in Prepare for External Signal Cables, page 76.
- 2. Connect your equipment to the terminal blocks of the input contacts and/or output relays. Make a clear identification of the signal cables connected.
 - **NOTE:** Do not connect the terminal block to the board. Signal cables will be connected by Schneider Electric during the assembly service.

Overview of Input Contacts and Output Relays


Input Contacts

Do not connect any circuit to the input contacts unless it can be confirmed that the circuit is Class 2/SELV.

All circuits connected must have the same 0 V reference.

The input contacts support 24 VDC 10 mA.

The switch SW5500 on 0P6548 is used to select between internal SELV supply for inputs (standard setting) and external supply⁷⁸. If external supply is selected, the supply must be connected to J5530.



Name	Description	Location
IN 1 (Contact 1)	Configurable input contact	0P6548 terminal J5502 ⁷⁹
IN 2 (Contact 2)	Configurable input contact	0P6548 terminal J5503 ⁷⁹
IN 3 (Contact 3)	Configurable input contact	0P6548 terminal J5504 ⁷⁹
IN 4 (Contact 4)	Configurable input contact	0P6548 terminal J5505 ⁷⁹
IN 5 (Contact 5)	Configurable input contact	0P6548 terminal J5510 ⁷⁹
IN 6	UOB redundant AUX contact	0P6548 terminal J5509 ⁷⁹
IN 7	Transformer temperature switch	0P6548 terminal J5508 ⁷⁹
IN 8	External bonding contact	0P6548 terminal J5507 ⁷⁹
IN 9	Forced external synchronization input	0P6548 terminal J5506 ⁷⁹
IN 10	External synchronization requested	0P6548 terminal J5511 ⁷⁹
IN 11	Use static bypass standby	0P6548 terminal J5512 ⁷⁹
IN 14	MegaTie	0P6552 terminal J9027 ⁷⁹


Output Relays

NOTE: Maximum 250 VAC 5 A must be connected to the output relays.

^{78.} An external supply is useful in parallel systems where inputs are connected between different UPSs. This is to have a common reference and to avoid cross currents.

^{79.} Class 2/SELV wiring

All external circuitry must be fused with maximum 5 A fast acting fuses.

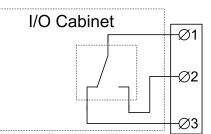

Output relay connection Max 5 A/250 VAC Max 5 A/24 VDC

Name	Description	Location
OUT 1 (Relay 1)	Configurable output relay	0P6547 terminal J4939
OUT 2 (Relay 2)	Configurable output relay	0P6547 terminal J4940
OUT 3 (Relay 3)	Configurable output relay	0P6547 terminal J4941
OUT 4	Forced external synchronization output	0P6548 terminal J5520 ⁸⁰
OUT 5	MegaTie	0P6548 terminal J5521 ⁸⁰
OUT 6	External synchronization requested output	0P6548 terminal J5522 ⁸⁰
OUT 7	UPS in inverter ON	0P6548 terminal J5523 ⁸⁰
OUT 8 (Relay 4)	Configurable output relay	0P6548 terminal J5524 ⁸⁰
OUT 9 (Relay 5)	Configurable output relay	0P6548 terminal J5525 ⁸⁰
OUT 10 (Relay 6)	Configurable output relay	0P6548 terminal J5528 ⁸⁰
OUT 14	Bonding contactor	0P6552 terminal J9029 ⁸⁰

NOTE: Refer to the operation manual for configuration options.


^{80.} Class 2/SELV wiring

Route the PBUS Cables between Parallel UPS Units

NOTE: Do not connect the PBUS cables. PBUS cables will be connected by Schneider Electric during the assembly service.


Top Cable Entry Systems

Bottom Cable Entry Systems

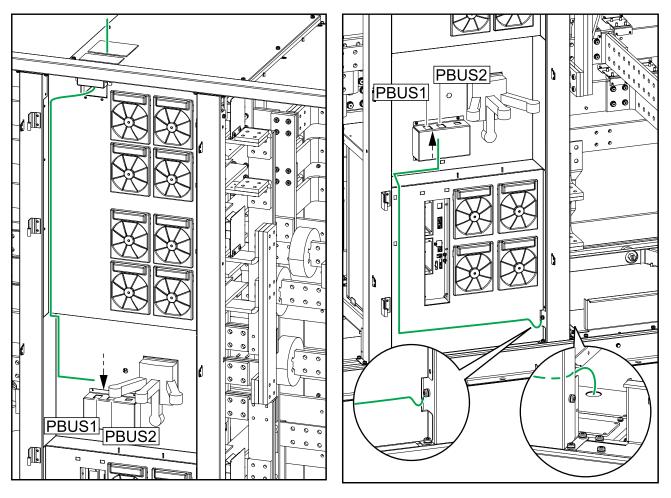

- 1. Route the PBUS cables from the installation kit 0H-0889 through either the top or the bottom of the I/O cabinet according to the principle below.
 - **NOTE:** The PBUS 1 cables are white and the PBUS 2 cables are red. **NOTE:** The total length of the PBUS cables must not exceed 60 m (197 ft).

Example of System with Three UPSs in Parallel

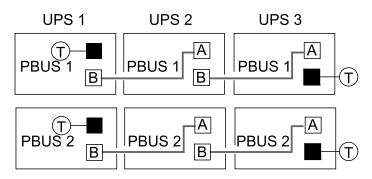

External Communication


The following interfaces are supported:

A. Two smart slots for optional network management cards (AP9630, AP9631, AP9635CH).

NOTE: If the input dry contact AP9810 is connected to AP9631 or AP9635CH, the total length of cables for connected equipment must not exceed 30 m (98 ft). Use the plate for shielding.

- B. Modbus and modbus dip switch settings.
- C. Network/ethernet.

Front View of the I/O Cabinet

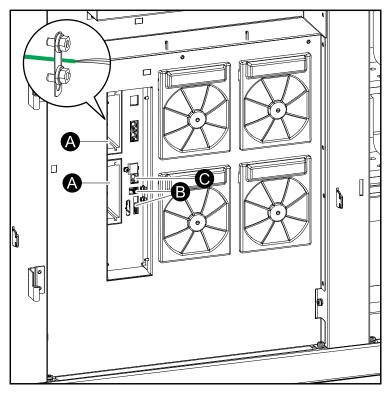


Connect the Modbus Cables

NOTE: Terminators for Modbus connection is provided in the installation kit 0H-9101.

Front View of the I/O Cabinet in Top Cable Entry Systems



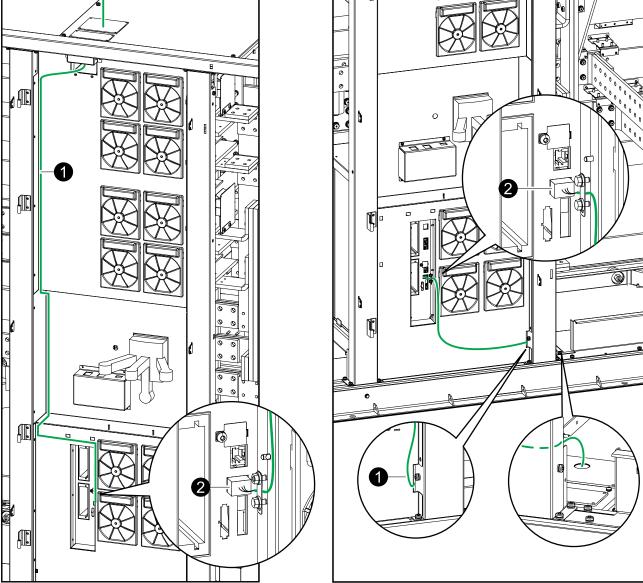


1. Route the cables as shown on the illustrations.


2. Connect the Modbus cables. Use either 2-wire or 4-wire connection. Shield the cables as shown.

NOTE: Shielded cables must be used for Modbus connections. The shield connection to the ground must be as short as possible (ideally below 1 cm). All Modbus signal cables shall be double insulated/jacket cable and minimum rated for 30 VDC.


2-Wire Connection with One UPS

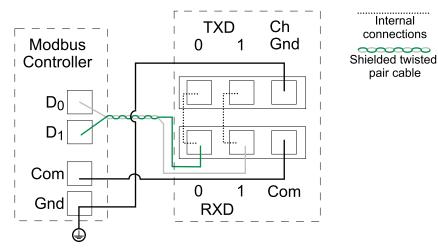


Example: 2-Wire Connection with Two UPSs

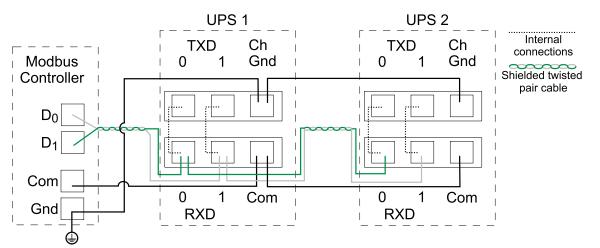

Example: 4-Wire Connection with One UPS

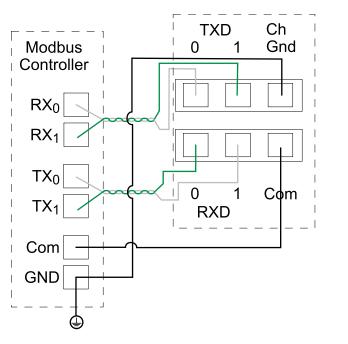


Example: 4-Wire Connection with Two UPSs

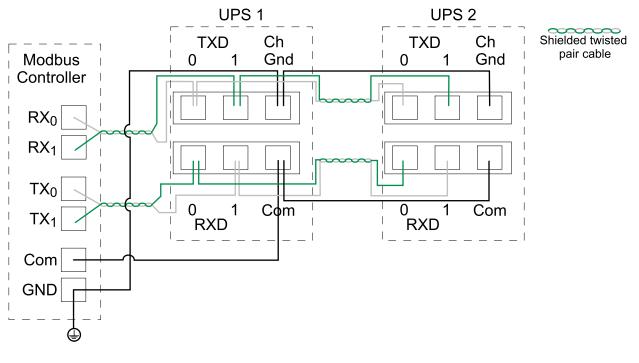

Shielded twisted

pair cable

3. Set the Modbus dip switches to match your installation.



Final Mechanical Assembly

Final Mechanical Assembly of the I/O Cabinet

A A DANGER


HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

All panels and covers must be properly reinstalled prior to energizing the UPS.

Failure to follow these instructions will result in death or serious injury.


1. Lift up the Class 2/SELV cables.

Front View of the I/O Cabinet

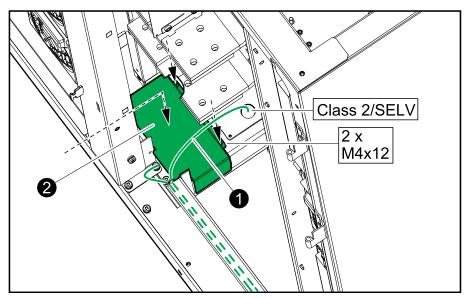

- 2. Reinstall the indicated box over the non-Class 2/non-SELV cables.
- 3. Reinstall the indicated box over Class 2/SELV cables.


Front View of the I/O Cabinet

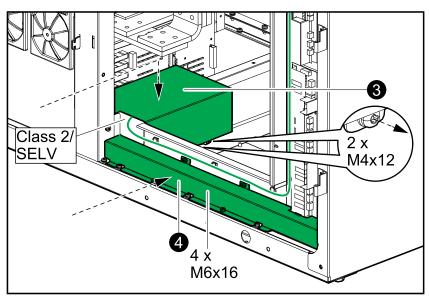

4. Reinstall the plate over the cable channel for non-Class 2/non-SELV cables.


5. Reinstall the two plates in the left side.

Front View of the I/O Cabinet

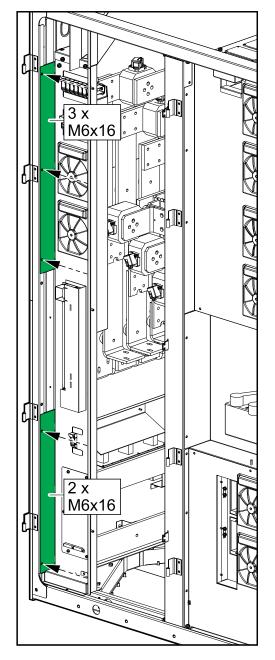


6. Reinstall the plate in the right side.

Front View of the I/O Cabinet

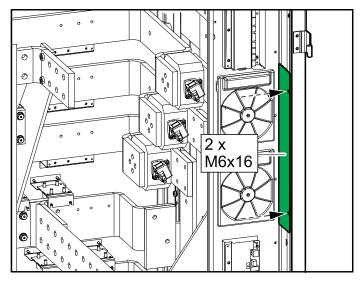


7. Reinstall the six plates in the left and right sides of the I/O cabinet.

Front View of the I/O Cabinet

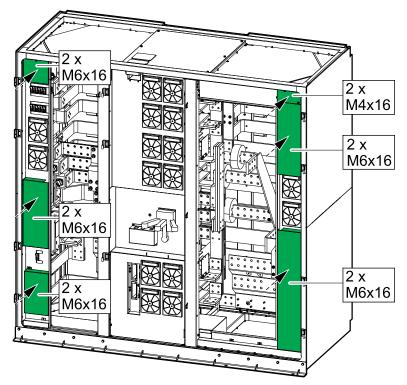

8. Reinstall the two metal plates.

Front View of the I/O Cabinet

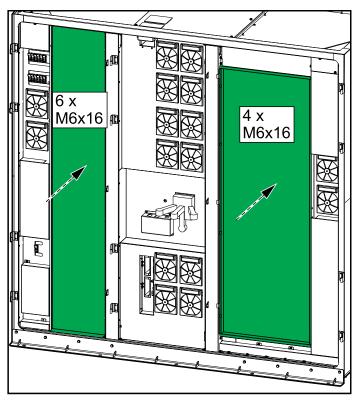

9. Close the front doors.

Final Mechanical Assembly of the Power Cabinets


A A DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

All panels and covers must be properly reinstalled prior to energizing the UPS.

Failure to follow these instructions will result in death or serious injury.


1. Reinstall the three plates in the given order (a-c) on each power cabinet.

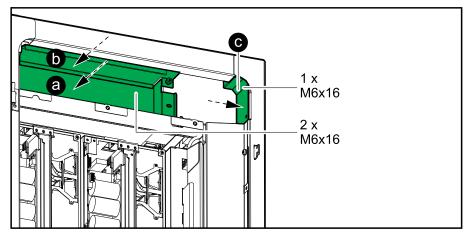

Decommission or Move the UPS to a New Location

NOTE: Contact Schneider Electric for removal of the interconnection busbars between the cabinets.

- 1. Shut down the UPS completely follow the instructions in the UPS operation manual.
- 2. Lockout/Tagout all breakers in the switchgear in the OFF (open) position.
- 3. Lockout/Tagout all battery breakers in the switchgear/battery solution in the OFF (open) position.
- 4. Open the front door of the UPS.
- 5. If present, Lockout/Tagout the backfeed breaker BF2 in the OFF (open) position.
- 6. Open the front door of the I/O cabinet and the power cabinets.
- 7. Remove the two metal plates from the I/O cabinet.

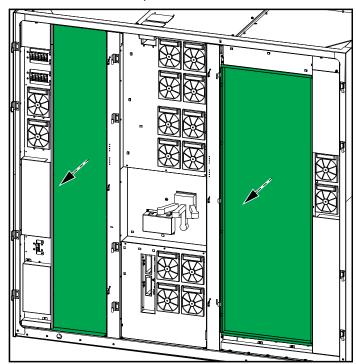

8. Measure for and verify ABSENCE of voltage on each input/bypass/output/DC busbar before continuing.


A A DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Measure for and verify ABSENCE of voltage on each input/bypass/output/ DC busbar before proceeding.

Failure to follow these instructions will result in death or serious injury.

Front View of the I/O Cabinet

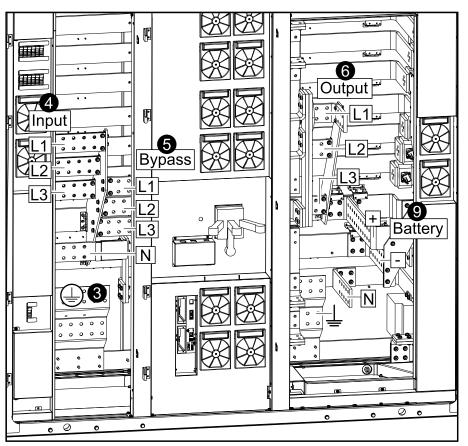

- 9. Disconnect and remove all power cables from the I/O cabinet. See Connect the Power Cables in a 380 V, 400 V, 415, and 440 V System, page 65 or Connect the Power Cables in a 480 V System, page 68 for details.
- 10. Disconnect and remove all signal cables from the I/O cabinet. See Signal Cables, page 71 for details.
- 11. Contact Schneider Electric for removal of the interconnection busbars between the cabinets. The interconnections busbars must only be removed by a Schneider Electric-certified field service representative or service partner.
- 12. Remove the seismic front anchoring brackets from the cabinets. Save for reinstallation. See Mount the Front Anchoring Brackets, page 70 for details.
- Remove the top baying brackets and interconnection screws from the cabinets. Release the cabinets from the rear anchoring brackets by loosening the bolts on the front of the cabinets. SeePosition the Cabinets, page 51 for details.
- 14. Reinstall all removed plates and covers in the cabinets. See Final Mechanical Assembly of the I/O Cabinet, page 93 and Final Mechanical Assembly of the Power Cabinets, page 96 for details.

- 15. Close and lock the front door of the cabinets.
- 16. Raise the feet of the cabinets until the casters have full contact with the floor.
- 17. You can now move each cabinet individually by rolling it over the floor on the casters.

AWARNING

TIPPING HAZARD

- The casters of the cabinet are exclusively for transport on flat, even, hard, and horizontal surfaces.
- The casters of the cabinet are intended for transport over short distances (i.e. inside the same building).
- Move at a slow pace and pay close attention on the floor conditions and the balance of the cabinet.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

18. Remove the rear anchoring brackets from the floor. Save for reinstallation. See Mount the Rear Anchoring Brackets, page 49 for details.

19. For transport over longer distances or in conditions that are not suitable for the casters of the cabinet:

TIPPING HAZARD

For transport over longer distances or in conditions that are not suitable for the casters of the UPS, ensure:

- that personnel performing the transport have necessary skills and have received adequate training;
- to use appropriate tools to safely lift and transport the cabinet;
- to protect the product against damage by using appropriate protection (like wrapping or packaging).

Failure to follow these instructions can result in death, serious injury, or equipment damage.

AWARNING

TOP-HEAVY CABINET

The power cabinet is top-heavy. Take appropriate precautions during handling and preparation for transport/shipment.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Transportation requirements:

- Mount the cabinet in a vertical position in the center of a suitable pallet. The pallet must be suitable for the weight of the cabinet. The I/O cabinet weighs 876 kg (1931 lbs). The power cabinet weighs 540 kg (1190 lbs).
- Use appropriate means of fixation to mount the cabinet to the pallet.

TIPPING HAZARD

- The cabinet must be appropriately fixed to the pallet immediately after being placed on the pallet.
- The fixation hardware must be strong enough to withstand vibrations and shocks during loading, transport, and unloading.

Failure to follow these instructions will result in death or serious injury.

UNEXPECTED EQUIPMENT BEHAVIOR

Do not lift the cabinet with a forklift/pallet truck directly on the frame as it may bend or damage the frame.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

- 20. Perform one of the following:
 - Decommission the cabinets, OR
 - Move the the I/O cabinet/power cabinet to a new location to install it.

21. **Only for installing the UPS in a new location**: Follow the installation manual to install the I/O cabinet and power cabinets in the new location. See Installation Procedure, page 48 for installation overview. Startup must only be performed by Schneider Electric.

AADANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Startup must only be performed by Schneider Electric.

Failure to follow these instructions will result in death or serious injury.

Schneider Electric 35 rue Joseph Monier 92500 Rueil Malmaison France

+ 33 (0) 1 41 29 70 00

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

 $\ensuremath{\textcircled{O}}$ 2016 – 2024 Schneider Electric. All rights reserved.

990-5783J-001