

ELKO - Wiser 16 A Relay for Temperature Control

Wiser Home Device user guide

Information about features and functionality of the device.

10/2025



Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.

Table of Contents

Safety Information.....	4
About the Document.....	5
Wiser 16 A Relay for Temperature Control	8
About the device.....	8
Installing the device	9
Pairing the device with the Wiser hub	10
Configuring the device	13
Renaming the device	13
Setting the device location	13
Setting the device control	15
Selecting the floor sensor	16
Offsetting the floor sensor.....	17
Setting the floor sensor Upper/Lower limit.....	18
Identifying the device	19
Using the device.....	21
Setting the room temperature using the app.....	21
Emergency Heating	24
Creating a moment	24
Creating an automation	27
Removing the device	35
Resetting the device	35
LED indications	36
Troubleshooting	37
Technical Data	38

Safety Information

Important Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that accompany this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

Failure to follow these instructions will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

About the Document

Document Scope

This document provides detailed instructions for installing, configuring, and using the Wiser 16 A Relay for temperature control in electric heating systems. It explains how to pair the relay with the Wiser Hub, set up device location and control types, select and calibrate floor sensors, and manage room temperature through the Wiser Home app. Users can create schedules, moments, and automations for personalized heating control. The guide also covers troubleshooting, technical specifications, device resetting, and integration with other Wiser system components for enhanced home automation.

Validity Note

The characteristics of the products described in this document are intended to match the characteristics that are available on elko.no. As part of our corporate strategy for constant improvement, we may revise the content over time to enhance clarity and accuracy. If you see a difference between the characteristics in this document and the characteristics on elko.no, consider elko.no to contain the latest information.

For your safety

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Safe electrical installation must be carried out only by skilled professionals. Skilled professionals must prove profound knowledge in the following areas:

- Connecting to installation networks.
- Connecting several electrical devices.
- Laying electric cables.
- Safety standards, local wiring rules and regulations.

Failure to follow these instructions will result in death or serious injury.

DANGER

RISK OF FATAL INJURY FROM ELECTRIC SHOCK

The output may carry electrical current even when the load is switched off.

Disconnect the device from the supply by means of the fuse in the incoming circuit before working on the device.

Failure to follow these instructions will result in death or serious injury.

NOTICE

HAZARD OF CONDUCTOR DAMAGE

- For installations with loads of 16 A a minimum of 2.5 mm² conductor should be used.
- When inserting the conductors into the connector blocks make sure that the screws are tightened.

Failure to follow these instructions can result in equipment damage.

NOTICE

RISK OF DAMAGE TO DEVICE

Always operate the product in compliance with the specified technical data.

Failure to follow these instructions can result in equipment damage.

General Cybersecurity Information

In recent years, the growing number of networked machines and production plants has seen a corresponding increase in the potential for cyber threats, such as unauthorized access, data breaches, and operational disruptions. You must, therefore, consider all possible cybersecurity measures to help protect assets and systems against such threats.

To help keep your Schneider Electric products secure and protected, it is in your best interest to implement the cybersecurity best practices as described in the Cybersecurity Best Practices document.

Schneider Electric provides additional information and assistance:

- Subscribe to the Schneider Electric security newsletter.
- Visit the Cybersecurity Support Portal web page to:
 - Find Security Notifications.
 - Report vulnerabilities and incidents.
- Visit the Schneider Electric Cybersecurity and Data Protection Posture web page to:
 - Access the cybersecurity posture.
 - Learn more about cybersecurity in the cybersecurity academy.
 - Explore the cybersecurity services from Schneider Electric.

Environmental Data

Find and download comprehensive environmental data about your products, including RoHS compliance and REACH declarations as well as Product Environmental Profile (PEP), End-of-Life instructions (EOLI) and much more.

<https://www.se.com/myschneider>



General information about Schneider Environmental Data Program

Click the link below to read about Schneider Electric's Environmental Data Program.

<https://www.se.com/ww/en/about-us/sustainability/environmental-data-program/>



Declaration of Conformity

Hereby, Schneider Electric Industries SAS, declares that this product is in compliance with the essential requirements and other relevant provisions of RADIO EQUIPMENT DIRECTIVE 2014/53/EU.

Declaration of conformity can be downloaded on:

- <https://go2se.com/ref=CCTFR6700>

Available Languages of the Document

The document is available in these languages:

- English
- Norwegian

Information on Non-Inclusive or Insensitive Terminology

As a responsible, inclusive company, Schneider Electric is constantly updating its communications and products that contain non-inclusive or insensitive terminology. However, despite these efforts, our content may still contain terms that are deemed inappropriate by some customers.

Trademarks

- Zigbee® is a registered trademark of the Connectivity Standards Alliance.
- Wiser™ is a trademark and the property of Schneider Electric, its subsidiaries and affiliated companies.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

Other brands and registered trademarks are the property of their respective owners.

Wiser 16 A Relay for Temperature Control



CCTFR6700

Related Topics

- About the device
- Installing the device
- Pairing the device with the Wiser hub
- Configuring the device
- Using the device
- Removing the device
- Resetting the device
- LED indications
- Troubleshooting
- Technical Data

About the device

The Wiser 16 A Relay (hereinafter referred to as **Relay**) is used to control electrical heaters or electric underfloor heating with On/Off commands or Fil Pilote commands. The fil pilote is a single control wire interface for controlling multiple heaters from a Relay. It can control heaters up to 3000 W.

TIP: Pair with ELKO - Wiser Room Thermostat to control electric heaters or electric underfloor heating.


Features of the Relay:

- Remotely control electrical heating using the Wiser Home app.
- Boost the room temperature using the ELKO - Wiser Room Thermostat center button.

Diagram of operating elements

A. Set button

B. LED

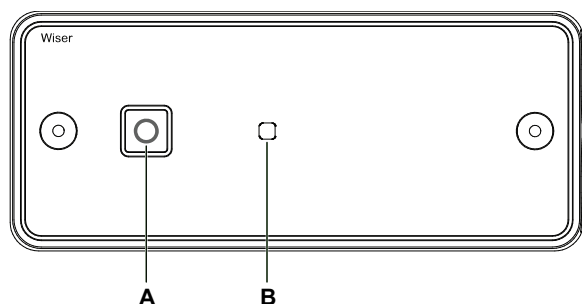

Related Topics

- Wiser 16 A Relay for Temperature Control (Parent Topic)

Installing the device

Refer to the installation instruction supplied with this product.
See installation instructions.

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The device is not a Safety Extra Low Voltage (SELV) device. The sensors lines are on mains (230 VAC) line.

- Only use sensors with double insulated cables.

Failure to follow these instructions will result in death or serious injury.

Choosing Suitable Location to Install:

Device positioning

The Relay has to be installed below or to the side of any heat source. It should not be installed behind or above a wall-mounted heater.



Preparation of the mounting surface

TIP: Breakout tabs can be removed to provide 4x extra mounting holes and 2x larger holes for rear cover cable entry.

Floor sensor installation

It is important that the floor sensor is fitted in the correct location in order to read an accurate floor temperature.

- Floor sensor must be 1 m from edge of the floor, halfway between pipes.
- Make sure the sensor is not sitting on top of heating pipes.
- Assemble sensor cable in a plastic conduit with inside diameter of minimum 16 mm.
- Fix tape to the end of the conduit, cut a slice in the tape to ensure condensation can come out of the conduit.

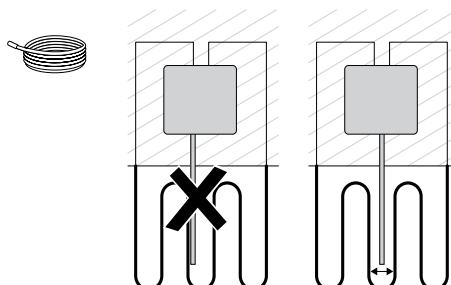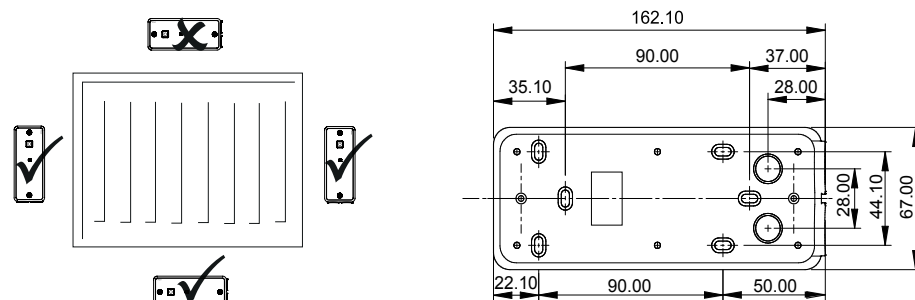

Related Topics

- Wiser 16 A Relay for Temperature Control (Parent Topic)

Pairing the device with the Wiser hub


Using the Wiser Home app, pair your relay with the **Wiser Hub** to access and control the relay.

- On the **Home** screen, tap .
- Tap **Devices** >  and tap **Climate** > **16A**.

TIP: You can also navigate by tapping **Control** tab >  > **Climate** > **16A**.


- Tap **Scan QR code** and allow the Wiser Home app to access your camera. Then, scan the QR code located on the device.

NOTE: If you are unable to find the correct QR code, tap **I can't find the correct QR code** to pair the device manually and proceed to step 4.

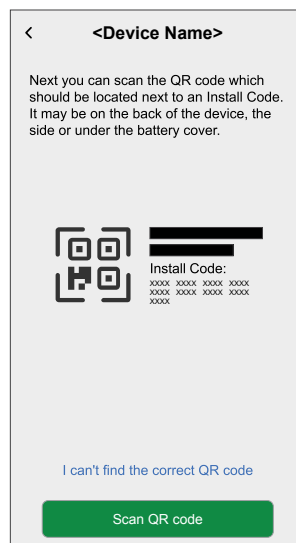


If the QR code is incorrect, a message **Incorrect QR code scanned** will appear. Tap **I can't scan the QR code** and choose one of the following options:


- (A):** Enter the **Mac Address/EUI-64** and **Install Code**, then tap **Connect**. The app will verify if the Mac Address/EUI-64 and Install code are valid.
- (B):** Tap this option if you are unable to find the Mac Address/EUI-64 and Install code.

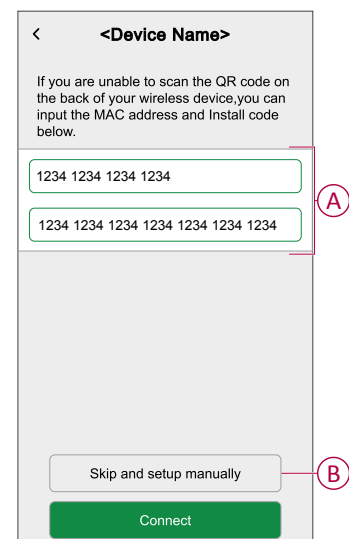

4. Once the device is validated, tap **Next**, press the Set button until the LED flashes green/amber.

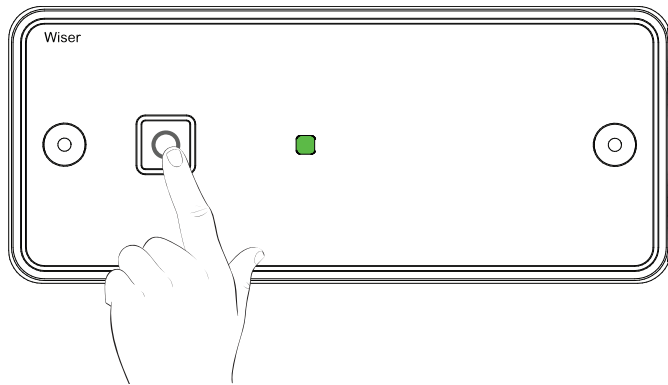

Wait for a few seconds until the LED turns green and the app confirms that the relay is joined.

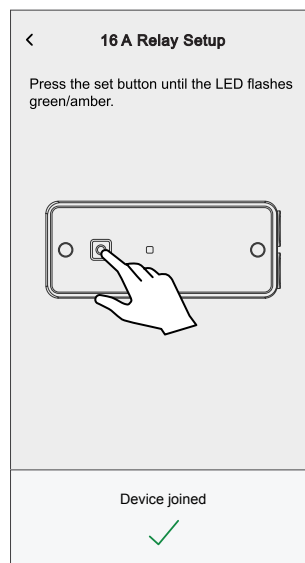


5. On the **16A Relay Setup** page, select the control type **Relay** or **Pilot wire**.

6. Tap **Next** to enter the relay name and assign it to new room or an existing room and tap **Submit**.

After you pair the device, a success screen appears with the following options:

- **+ Add New Device**: Tap to continue pairing more devices.
- **Start Using Your Device**: Tap to start using the paired device.

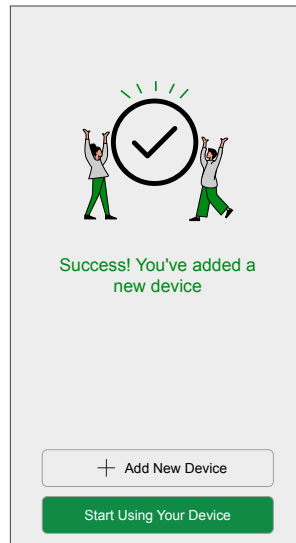

NOTE: The success screen appears only if you are logged in as a **Home Owner**.

The relay is now listed on the **Control** tab under the **All** and the specific room tabs.

Related Topics

- [Wiser 16 A Relay for Temperature Control \(Parent Topic\)](#)


Configuring the device

Renaming the device

You can rename the device using the Wiser Home app.

1. On the **Home** screen, tap .
2. Tap **Devices > Climate > 16A Relay > Name (A)** to rename the device.

NOTE: **Type** and icon (B) are both assigned automatically, based on whether you have radiators or floor heating. You will be able to view this only after the pairing is completed.

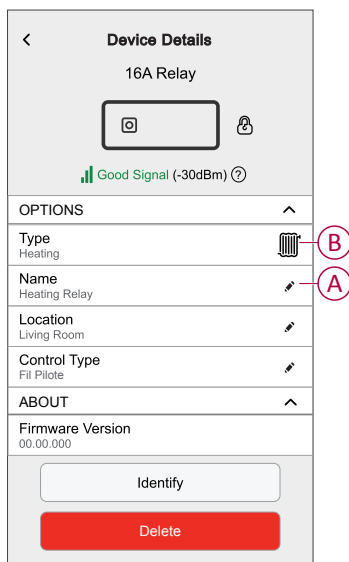

Related Topics

- Configuring the device (Parent Topic)

Setting the device location

Using the Wiser Home app, you can assign the Relay in the room (such as bedroom, living room, dining room etc.).
To assign the Relay location:

1. On the **Home** screen, tap .

2. Tap **Devices > Climate > 16A Relay > Location (A)** to assign the Relay to the existing room or a new room (B) and tap **Submit**.

NOTE: You can configure up to 4 Relays in the same room.

Device Details

16A Relay

Good Signal (-30dBm) ?

OPTIONS

Type	Heating	
Name	Heating Relay	
Location	Living Room	
Control Type	Fill Pilot	

ABOUT

Firmware Version
00.00.000

Identify

Delete

16A Relay Setup

Where does this device control?

New room name

Living Room	3 Devices	✓
Kitchen	2 Devices	
Bathroom	1 Device	
Bedroom	2 Devices	

Remove from Room

Submit

Related Topics



- Configuring the device (Parent Topic)

Setting the device control

Using the Wiser Home app, you can control the electrical heaters or electric underfloor heating by selecting Relay or Pilot Wire.

To set the Relay control:

1. On the **Home** screen, tap .
2. Tap **Devices > Climate > 16A Relay > Control type (A)** and select **Relay** or **Pilot Wire**.
3. Tap **OK (B)**.

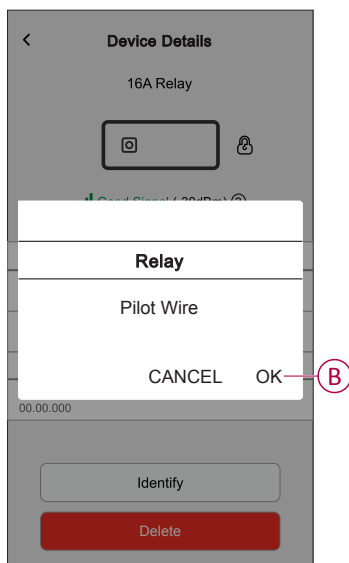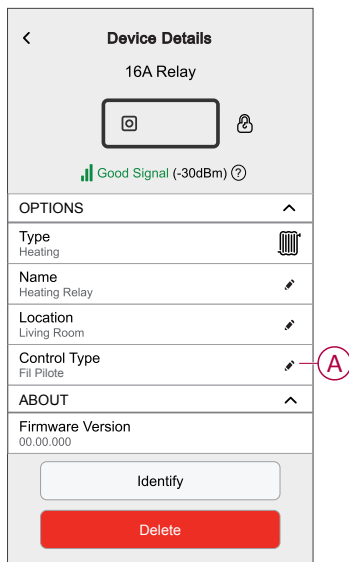

Related Topics

- [Configuring the device \(Parent Topic\)](#)

Selecting the floor sensor

Using the Wiser Home app, you can select the type of floor sensor that you have installed in case of using electric underfloor heating. The floor sensor measures the floor temperature and displays in the app. This option appears only if you have selected the **Relay** as **Control Type**.

DANGER

RISK OF FATAL INJURY FROM ELECTRIC SHOCK

The device is not a Safety Extra Low Voltage (SELV) device. The sensors lines are on mains (230 VAC) line.

- Only use sensors with the appropriate insulation rating.


Failure to follow these instructions will result in death or serious injury.

To select the floor Sensor:

1. On the **Home** screen, tap .
2. Tap **Devices > Climate > 16A Relay > Floor Sensor (A)** and select the sensor from the list.
 - **NTC 10K**
 - **NTC 12K**
 - **NTC 15K**
 - **NTC 33K**
 - **NTC 47K**


NOTE: **Not fitted** is selected by default.

3. Tap **OK**.

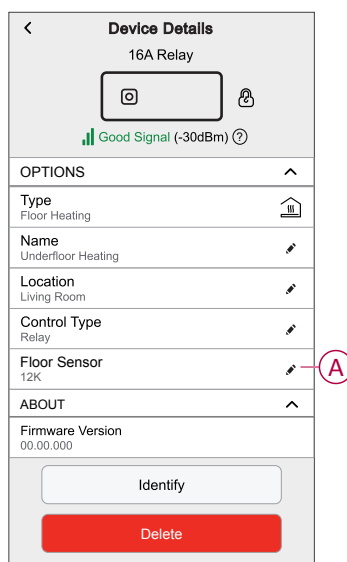

Once the floor sensor is selected, new options (B) appear in the app.

- **Floor Temperature** - It shows the temperature of the floor measured by the floor sensor.
- **Floor Sensor Offset** - Allows you to calibrate the floor sensor to match the actual temperature of the floor.
- **Floor Sensor Upper Limit** - The upper limit is set to maintain the floor temperature below the set limit.
- **Floor Sensor Lower Limit** - The lower limit is set to maintain the floor temperature above the set limit.

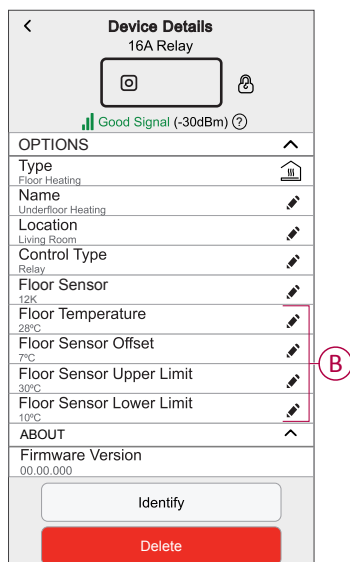

Related Topics

- Configuring the device (Parent Topic)

Offsetting the floor sensor


Using Wiser Home app, the **Floor Sensor Offset** option allows you to calibrate the floor sensor to match the actual temperature measured by an external device. To offset the floor sensor:

1. On the **Home** screen, tap .
2. Tap **Devices > Climate > 16A Relay > Floor Sensor Offset** (A) and select the temperature that is required for offsetting, to match the actual temperature.

3. Tap **OK**.**NOTE:**

- The allowed temperature range to offset the floor sensor is 9 °C to -9 °C.
- The floor temperature shows the final temperature of the floor including any offset that is applied.

TIP: Offsetting the floor sensor is not required, if the floor temperature measured by the floor sensor and an external device are same. You can set it to 0 °C.

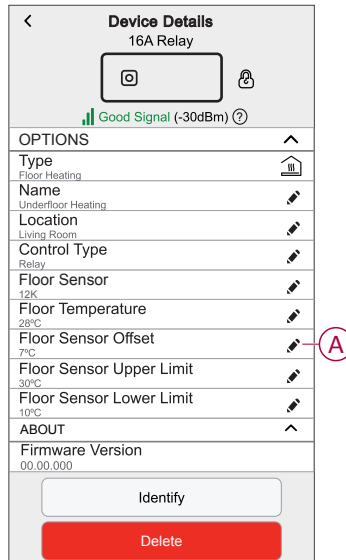**Related Topics**

- Configuring the device (Parent Topic)

Setting the floor sensor Upper/Lower limit

Using the Wiser Home app, you can switch on/off the electrical underfloor heater by setting lower/upper temperature limit. This allows you to maintain the floor temperature within the set limits.

To set the floor sensor temperature limit:


1. On the **Home** screen, tap .
2. Tap **Devices > Climate > 16A Relay**.
3. Tap **Floor Sensor Upper Limit/ Floor Sensor Lower Limit (A)** and set the upper/lower temperature limit.

NOTE:

- Upper limit range is 5 °C to 40 °C.
- Lower limit range is 4 °C to 39 °C.

4. Tap **OK**.

TIP: You can select **Disabled**, if setting the floor sensor limit is not required.

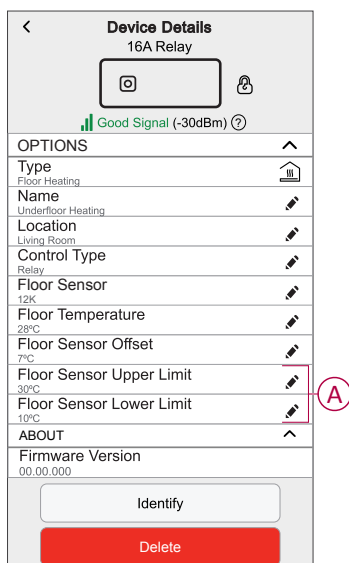

Related Topics

- Configuring the device (Parent Topic)

Identifying the device


Using the Wiser Home app, you can identify the Relay from the other available devices in the room.

To identify the Relay:

- On the **Home** screen, tap .
- Tap **Devices > 16A Relay > Identify** (A) to rename the Relay.

NOTE:

- This feature flashes the Relay LED, so you can identify the actual device.
- The Relay LED will continue to flash until you tap **OK**.

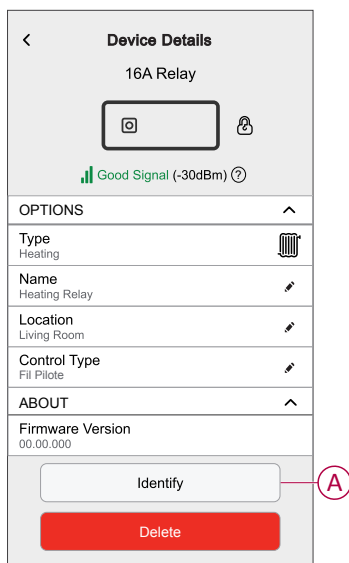

Related Topics

- [Configuring the device \(Parent Topic\)](#)

Using the device

Related Topics

- Wiser 16 A Relay for Temperature Control (Parent Topic)
- Setting the room temperature using the app
- Emergency Heating
- Creating a moment
- Creating an automation

Setting the room temperature using the app

Using the Wiser Home app, you can adjust, set or boost the room temperature.


Pre-requisite: Add a ELKO - Wiser Room Thermostat/ELKO - SmartSensor Climate Wireless in the same room where 16A Relay is located.

Adjusting the room temperature

On the **Control** tab, tap  or  in the  **Heating** section of the concerned room to adjust its temperature.


TIP: You can also adjust the room temperature:

- By tapping  of the concerned room on the **Control** tab and using the slider in the device control screen to adjust the room temperature.

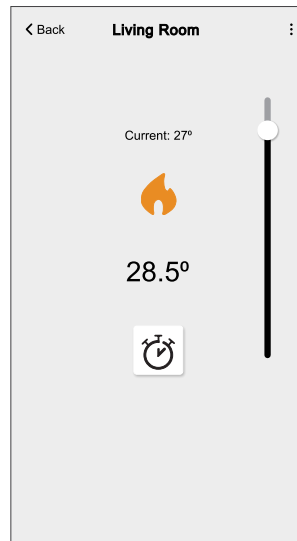

IMPORTANT:

- Once the boost time is set, the set-point temperature automatically increases by 2° C for the set boost time. After the boost time is over, the set-point temperature returns to the current scheduled event or to the previous set-point temperature.
- Moving the slider control to the bottom of the bar activates **Frost Protection** mode. In this mode, the system maintains the room temperature at a constant 5 °C to prevent freezing.

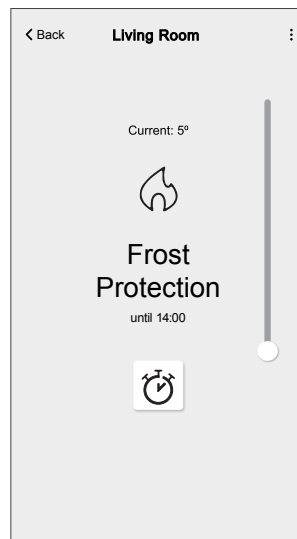

- When you add it to your **Favourites**. To know more about **Favourite**, refer to the **Managing Favourite** topic in the respective System User Guide.

NOTE: If you only have a single device in the Wiser System, the **Control** tab will not be visible. All functions will be accessible through the **Home** screen.

Boosting the room temperature

On the device control screen, tap  to set the boost time.

TIP: You can boost the room temperature using the ELKO - Wiser Room Thermostat center button.

IMPORTANT: Once the boost time is set, the set-point temperature automatically increases by 2 °C for the set boost time. After the boost time is over, the set-point temperature returns to the current scheduled event or to the previous set-point temperature.

NOTE: Boost can be stopped at any time by tapping the  and selecting it **off**.


IMPORTANT: If you have installed both PowerTag and Relay, you can monitor the power flow and energy consumption in the **Energy** tab.

Related Topics

- Using the device (Parent Topic)

Emergency Heating

You can do emergency heating by pressing the Relay Set button when the Hub is not working or the Wiser Home app heating control is not responding.

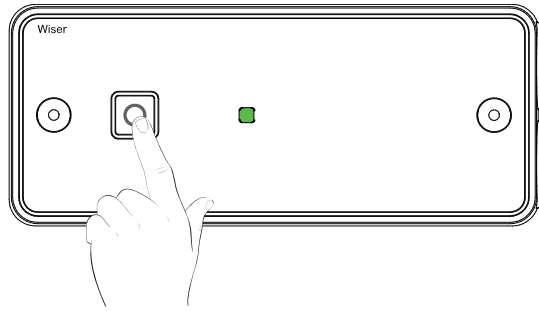

Related Topics

- Using the device (Parent Topic)

Creating a moment


A Moment allows you to group multiple actions that are usually performed together. By using the Wiser Home app, you can create moments based on your needs.

To create a moment:


1. On the **Home** screen, tap .
2. Go to **Moments** >  to create a moment.
3. Enter the name of the moment (A).

TIP: You can choose the cover image that best represents your moment by tapping .

4. Tap **Add actions** (B) to select the list of devices.

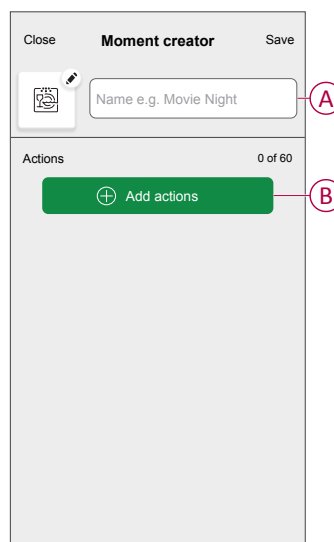


5. In the **Add actions** menu, you can select the devices (C).

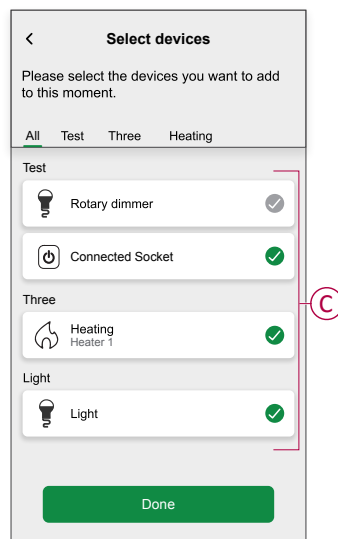

6. Once all the device are selected, tap **Done**.
7. On the **Moment creator** page, tap the device to set the condition. For example, select heating.
- Set the required temperature using sliding control (D).

NOTE: When you put the slider control (D) at the bottom of the bar for the moment, the Frost Protection mode is activated. In the frost protection mode, the system maintains the room temperature at 5 °C.

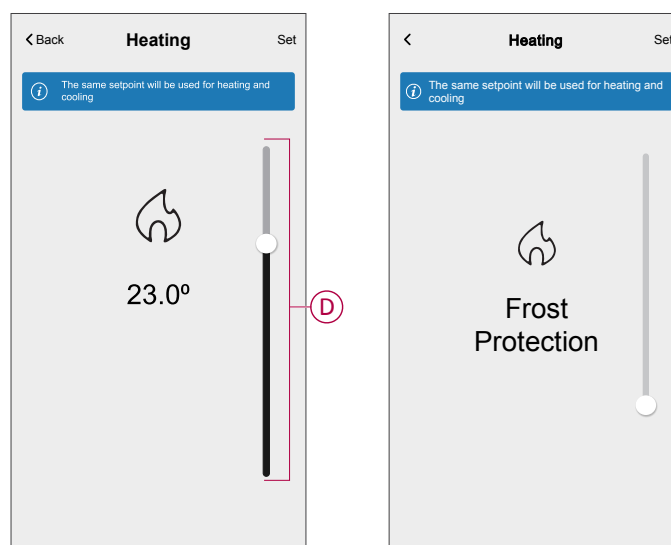

When the desired condition is set, tap **Set**.

8. Once all conditions are set, tap **Save**.

Once the moment is saved, it is visible on the **Moments** tab. You can tap on the moment to enable it.

TIP:


- If you want to see the created moments on the **Home** screen, go to **Home** >  > **Home** screen > **Moments**. Enable the toggle button to view moments on the **Home** screen.
- You can also rearrange the moments by tapping **Edit** from the **Moments** tab on the **Home** screen, or by tapping **Automation** > **Moments** > **Reorder**.

Related Topics

- Using the device (Parent Topic)
- Editing a moment
- Deleting a moment

Editing a moment

1. On the **Home** screen, tap **Automations** .
2. Go to **Moments**, locate the moment you want to edit and tap .
3. On the **Moment editor** screen, you can perform following changes:
 - Change the icon .
 - Rename the moment.
 - Tap each action to change the settings.
 - To remove an action, slide the action to the left and then tap  (A) to delete it.
 - Tap  **Add actions** (B) to add new action.

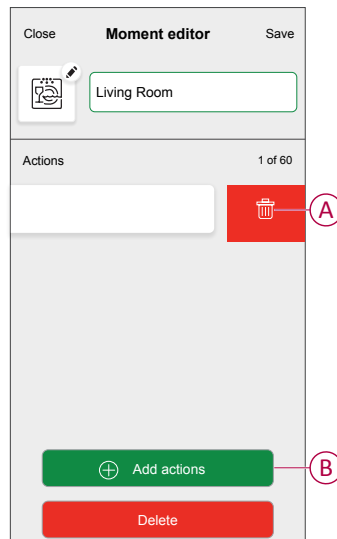

4. Tap **Save** to save the changes.


Related Topics

- Creating a moment (Parent Topic)

Deleting a moment

1. On the **Home** screen, tap **Automations** .
2. Go to **Moments**, locate the moment you want to delete and tap .

- On the **Moment editor** screen, tap **Delete** (A) and then tap **OK** (B).

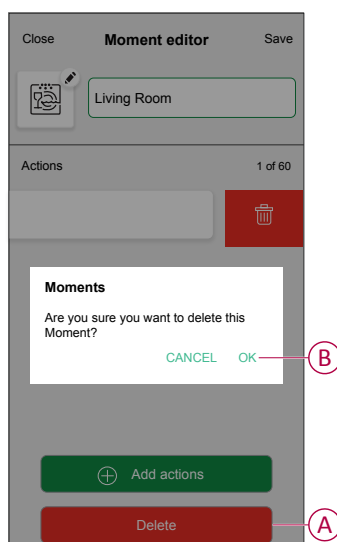


Related Topics

- Creating a moment (Parent Topic)

Creating an automation


An automation allows you to group multiple actions that are usually done together, triggered automatically or at scheduled times. By using the Wiser Home app, you can create automations based on your needs.

- On the **Home** screen, tap .
- Go to **Automation** >  to create an automation.
NOTE: Maximum 10 automations can be added.
- Tap **If** (A) and select any of the following conditions (B):
 - All conditions:** This triggers an action only when all conditions are met.
 - Any condition:** This triggers an action when at least one condition is met.

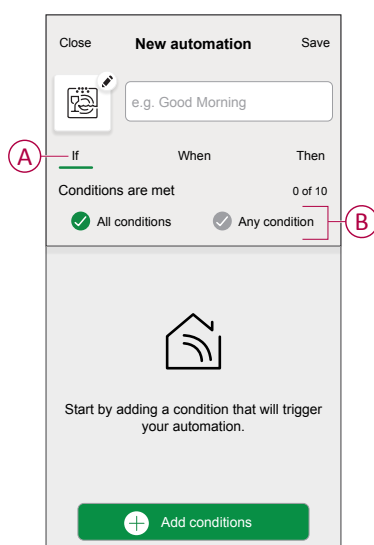


4. Tap **Add conditions** and select any of the following (C):
- **Device status change**: Select a device to enable automation.
 - **Away Mode**: Enable/Disable away mode to trigger an action.

TIP: Away mode can also be used as a trigger to turn off the lights, dimmer or closing the shutter etc. For more information about , refer to the system user guide.

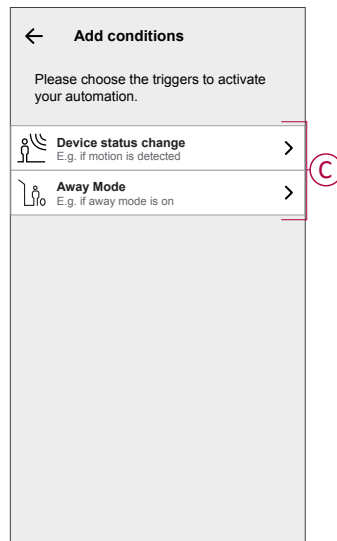

5. Tap **Device status change** > . Set the temperature using sliding bar (D) and select the condition (E) (less than / more than), then tap **Set**.


NOTE: When the slider control is set to the bottom for the automation, Frost Protection mode is automatically activated at the start of the automation. In this mode, the system maintains the room temperature at 5 °C to prevent freezing.

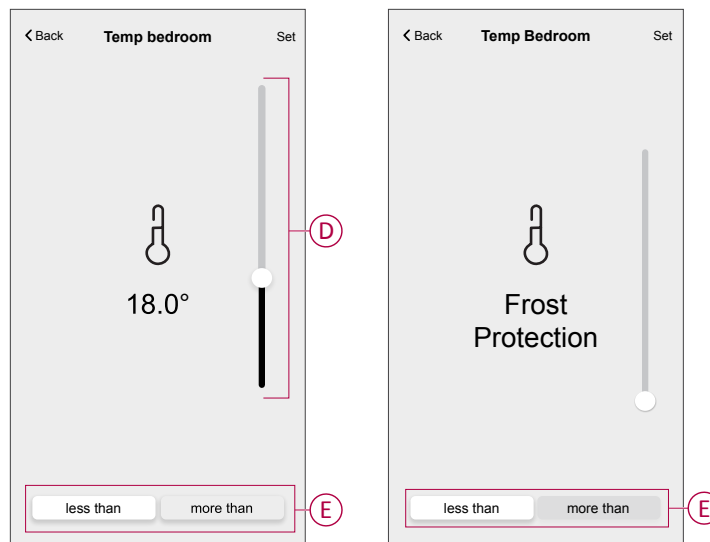

NOTE:


- Maximum 10 conditions can be added.
- To remove an added condition, swipe left and tap .

6. To set a specific time for your automation, tap **When > Add time** and select any of the following (F):
- **Specific time of the day: Sunrise, Sunset, Custom.**
 - **Period of time: Daytime, Night time, Custom.**

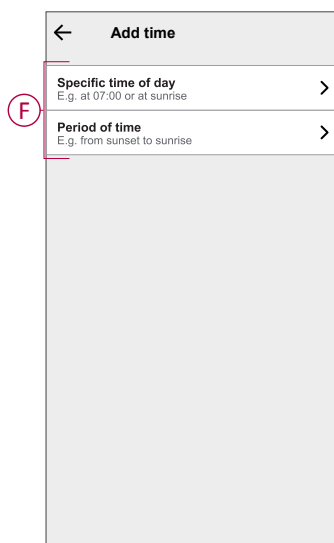
**NOTE:**

- Maximum 10 entries can be added
- To remove a specific time, swipe left and tap .


7. To add an action, tap **Then > Add an action** and select any of the following (G):
- **Control a device:** Select a devices that you want to trigger.
 - **Send notification:** Turn on the notification for the automation.
 - **Activate a moment:** Select the moment that you want to trigger.
 - **Wait:** This option allows you to add a delay in an automation sequence. You can set the wait time in increments of 1 hour and 1 minute, up to a maximum of 24 hours. This feature is useful for delaying actions within an automation.

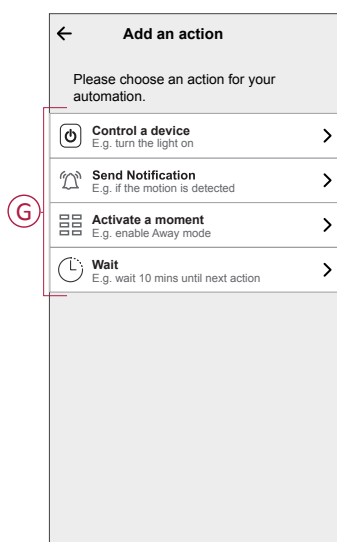

8. Tap **Control a device** > **Heating** and select any of the following (H):
- **Boost**: Set the duration to increase the temperature by 2 °C.
 - **Setpoint**: Set the desired temperature.

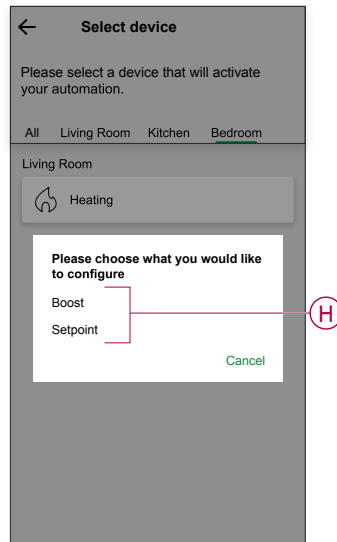

9. Tap **Setpoint**, set the required temperature using vertical sliding bar (I), then tap **Set**.

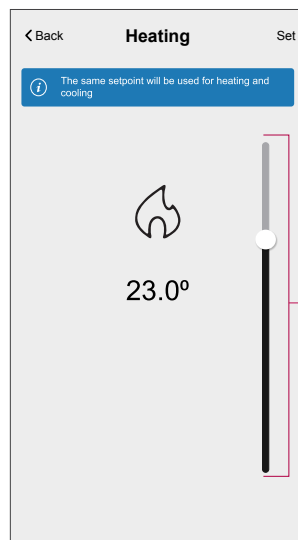


NOTE:

- Maximum 10 actions can be added.
- To remove an action, swipe it left on the action and then tap .


10. Enter the automation name (J).

You can choose the cover image that represents your automation by tapping

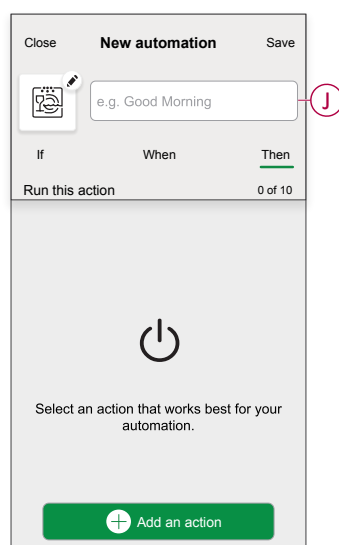11. Tap **Save**.

Once the automation is saved, it is visible on the **Automation** tab.

Using the  (K) you can enable and disable the automation.

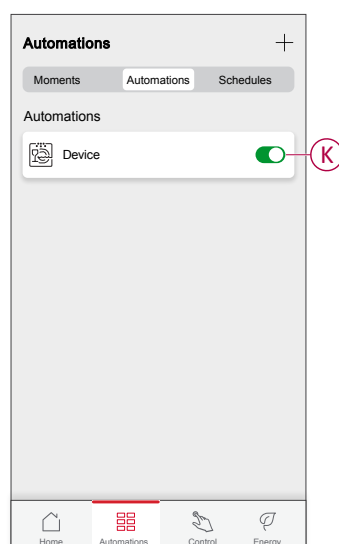

Related Topics

- Using the device (Parent Topic)
- Example of an automation
- Editing an automation
- Deleting an automation

Example of an automation


This demonstration guides you through setting up an automation that activates heating to a set temperature of 20 °C when the room temperature drops below 18 °C.

NOTE: To ensure proper heating control, you must create two separate automations:


- Automation 1: Boost the heating when a presence is detected in the room.
- Automation 2: Turn off the heater when the room temperature reaches 25 °C or higher.

The room heater will not turn off automatically until you create another automation.

1. Go to **Automation** >  to create an automation.
2. To add a condition, tap **Add Condition** > **Device status change** > **Temperature/Humidity Sensor** > **Temperature**.
3. Set the temperature as 18 °C (A) and the condition as **less than** (B) and tap **Set**.

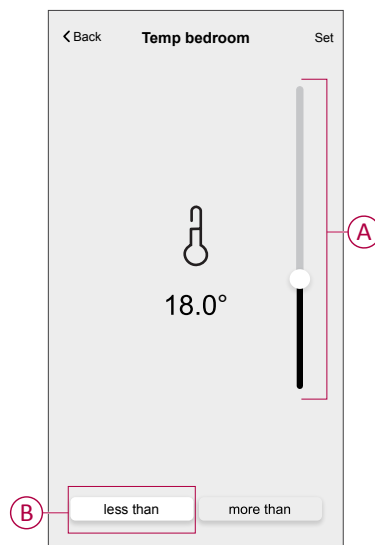


4. Read the information and tap **OK**.
5. To add an action, tap **Then** > **Add an action** > **Control a device** > **Heating** > **Setpoint**. Set the temperature to 20 °C (C), then tap **Set**.

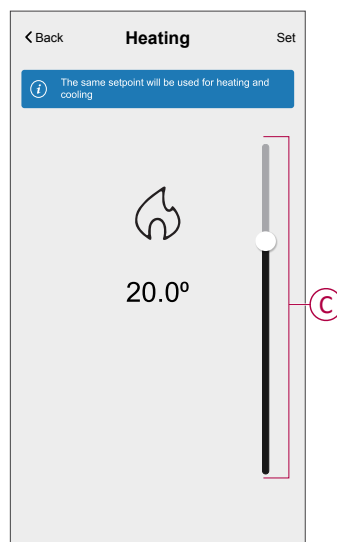

6. Read the information and tap **OK**.
7. Enter the name of the automation.

TIP: You can choose the cover image that represents your automation by tapping .

8. Tap **Save**.
Once the automation is saved, it is visible on the **Automation** tab.

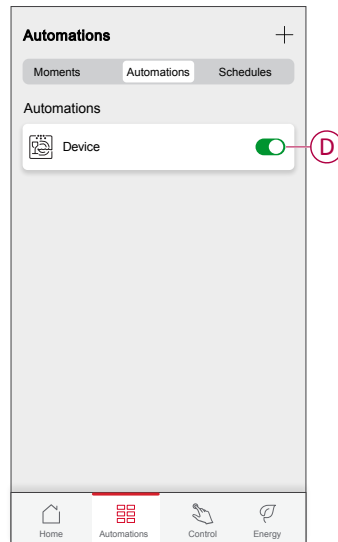

NOTE: You can enable or disable saved automations on the **Automations** tab by using  (D).

Related Topics


- Creating an automation (Parent Topic)

Editing an automation

1. On the **Home** screen, tap **Automations** .
2. Go to **Automation**, tap the automation you want to edit.

3. On the **Edit automation** screen, you can perform the following changes:

- Change the icon .
- Rename the automation.
- Tap each condition to change the settings.
 - To remove a condition, slide the condition towards left and then tap  (A) to delete it.
 - Tap  **Add conditions** (B) to add new condition.
- To change the order of actions, tap the **Then** option, and hold an action, then drag and drop to the desired position.

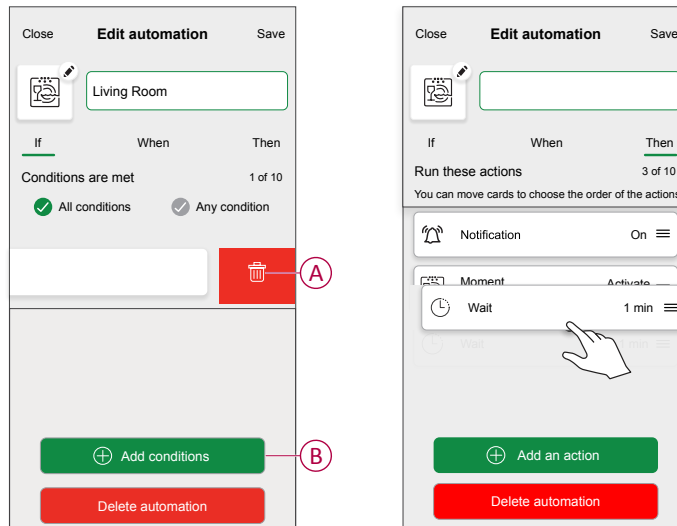

4. Tap **Save** to save the changes.


Related Topics

- Creating an automation (Parent Topic)

Deleting an automation

1. On the **Home** screen, tap **Automations** .
2. Go to **Automation**, tap the automation you want to delete.

- On the **Edit automation** screen, tap **Delete automation** (A) and read the confirmation message and then tap **OK** (B).

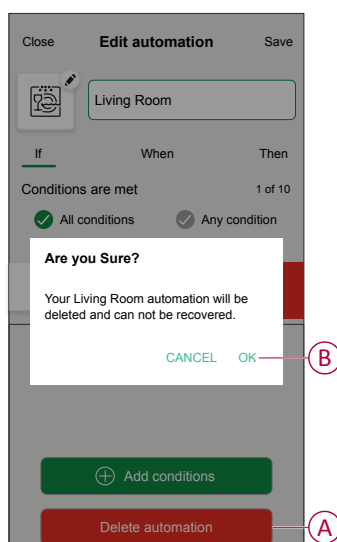


Related Topics

- Creating an automation (Parent Topic)

Removing the device

Using the Wiser home app, you can remove the relay from the Wiser system. To remove the relay:

- On the **Home** screen, tap .
- Tap **Devices > 16A Relay > Delete** (A).

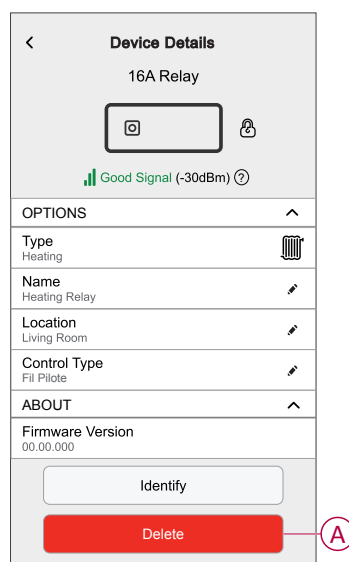

Related Topics

- Wiser 16 A Relay for Temperature Control (Parent Topic)


Resetting the device

You can reset the Relay to the factory default. It can be reset manually at any time, e.g., when the Hub is replaced.

To reset the Relay:

1. Press and hold the Set button for > 20 seconds.

After 15 seconds, the LED flashes red.

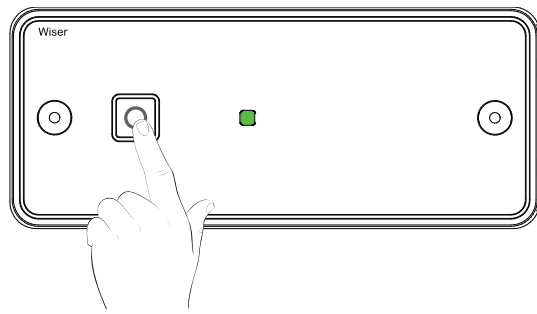

2. When the LED stops flashing red, release the Set button.
The LED stops flashing upon successful reset of the Relay.

Related Topics

- Wiser 16 A Relay for Temperature Control (Parent Topic)

LED indications

Normal use

Status	User Interaction	Description
Power on		Flashing orange
In connection with the Wifi gateway		Off: heating off Steady
		green: heating on
Pairing in progress		Alternating orange and green flashing
Not paired		Off: heating off
		Steady orange: heating on
Degraded mode (no connection with the thermostat or with the hub)		Flashing red: heating off
		Steady red: heating on
Manual Test / Forcing		Flashing green: heating on due to forcing

Related Topics

- [Wiser 16 A Relay for Temperature Control \(Parent Topic\)](#)

Troubleshooting

Symptom	Possible cause	Solution
The relay displays offline in the app or the LED flashing or solid red.	1. Weak or no signal between the Wiser Hub and the relay. 2. The relay is working in degraded mode.	1. Check Hub is online. 2. Check signal strength.
The relay is flashing green.	Emergency heat is active.	Press the button to cancel the emergency heat function.

Related Topics

- [Wiser 16 A Relay for Temperature Control \(Parent Topic\)](#)

Technical Data

Rated voltage:	230 V, 50 Hz (AC ONLY)
Power consumption:	7.3 W
Purpose of control:	Electrical Control, Manual + Automatic Control, Sensing Control
Type of load and rated current:	16 A Resistive or (3A) Inductive Load Circuit for pilot load (FP) IMPORTANT: Not suitable for plinth heaters.
IP rating:	IP44
Terminals and Wiring:	Suitable for conductor sizes 1.0 - 2.5 mm ² Insulation strip length 6.5 mm
Operating Temperature:	0 °C to 60 °C
Storage Temperature:	-20 °C to 65 °C
Class of control:	Class II
Method of mounting control:	Independently mounted control
Method of providing earthing control:	The control is not earthed Terminals are provided for linking external earthing conductors.
Method of attachment for nondetachable cords:	Type Y attachments
Extent of sensing element: (if installed)	External temperature sensor temperature setting range of 5 °C to 30 °C ±5%
Operating Value:	User variable time control of electrical/heating system (only at system level through Hub controllers)
Degree of pollution:	2
Rated impulse voltage:	4 kV
Ball pressure test:	115 °C
Software class:	A
Radio Technology/ Frequency:	2.4 GHz
Radio signal range:	30 m in free space
Maximum radio frequency power transmitted:	+13 dBm (20 mW)
Product dimensions: (H x W x D)	162 x 67 x 30 mm
Communication protocol:	Zigbee 3.0 certified
Compatible floor sensors in case of electric underfloor heating:	• 33kΩ Schneider Electric Reference 616790 or MEG5775-0003 • 33kΩ Drayton Reference 193720 • 15kΩ Devi Reference 140F1091 • 10kΩ Elko Reference 5491605

Related Topics

- [Wiser 16 A Relay for Temperature Control \(Parent Topic\)](#)

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison
France

elko.no/contact
www.se.com

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2025 – 2025 Schneider Electric. All rights reserved.

DUG_ELKO - Wiser 16 A Relay for Temperature Control_WH-00