

Unica - Connected Relay Switch 10 A

Device user guide

Information about features and functionality of the devices
03/2025

Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.

Table of Contents

Safety Information.....	4
Unica - Connected Relay Switch 10 A.....	5
For your safety	5
About the device.....	5
Installing the device	6
Quick Home Connect.....	7
Pairing Wireless Switch with Relay Switch	8
Operating a Relay Switch	8
Resetting the Device in Quick Home Connect	9
LED Indications in Quick Home Connect.....	9
Troubleshooting in Quick Home Connect	9
Pairing the device with the Wiser Gateway	10
Pairing device manually.....	10
Pairing device with auto scan	12
Configuring the device	13
Changing the device icon	13
Renaming the device	14
Changing the device location	14
Removing the device	15
Resetting the device	15
Using the device.....	15
Switching On/Off the device manually.....	16
Switching on/off the device using app	16
Creating a schedule	17
Backlight mode	18
Creating a moment	19
Creating an automation	21
LED Indication.....	26
Technical Data	27
Compliance.....	29
Product Environmental Data.....	29
Trademarks.....	29

Safety Information

Important Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that accompany this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

Failure to follow these instructions will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.


CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Unica - Connected Relay Switch 10 A

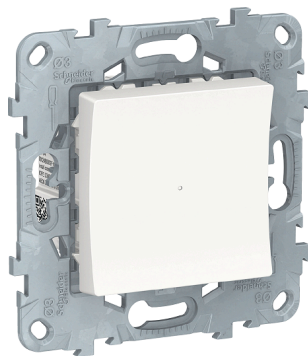

NU5538xx



NU3538xx
NU3537xxW

For your safety

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Safe electrical installation must be carried out only by skilled professionals. Skilled professionals must prove profound knowledge in the following areas:

- Connecting to installation networks.
- Connecting several electrical devices.
- Laying electric cables.
- Safety standards, local wiring rules and regulations.

Failure to follow these instructions will result in death or serious injury.

About the device

The Connected Relay Switch 10 A (hereinafter referred to as **Relay Switch**) is a push button device that can be used to switch LED, ohmic, inductive or capacitive loads manually or remotely.

Control options

Home control: To control the relay switch through the Wiser app you will need the Wiser Gateway.

Direct operation: The relay switch can always be controlled directly on-site. You can also connect any number of mechanical push-buttons.

Installing the device

Refer to the installation instruction supplied with this product.

See Connected Relay Switch 10A.

Quick Home Connect

Quick Home Connect is a wireless connectivity solution for Zigbee devices without the need for a Hub/Gateway or smartphone application. Quick Home Connect is your starting point for wireless home automation. It performs functions like switching, dimming and shutter control using the Connected Wireless Switch (hereinafter referred to as Wireless switch) via a Zigbee network.

The **Wireless switch** is a battery-powered wireless push-button switch that is used to control Zigbee devices (such as dimmer, shutter, switch, and socket) within the same Zigbee network.


Limitations

- Quick Home Connect serves only as a room control solution.
- With a 1-gang Wireless switch, you cannot mix lighting and shutter control. However, with a 2-gang Wireless switch, you can assign one gang for dimming/switching and the other for shutter control, or vice versa.
- This solution does not support remote control, smartphone app usage, or scheduling features.

Pairing Wireless Switch with Relay Switch


1. Short press the upper push button 5 times in quick succession on the Wireless switch.

The status LED blinks green.

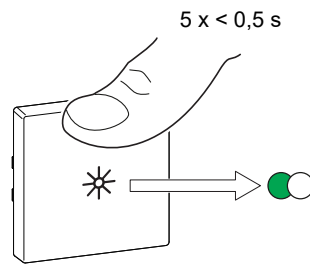

2. Short press the push-button of the Relay Switch 5 times in quick succession.

The status LED blinks green.

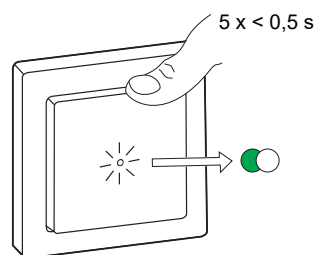


The light connected to the Relay Switch blinks for a few times. The status LED stops blinking green on the Wireless switch and the Relay Switch. The Relay Switch can now be controlled by the Wireless switch.

Operating a Relay Switch

You can turn the light ON/OFF using the paired Wireless switch.

Short press the top or bottom of the Wireless switch (< 0,5 s) to turn ON/OFF the light.

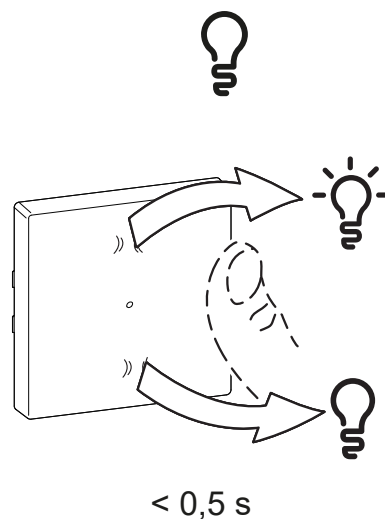

Resetting the Device in Quick Home Connect

It is necessary to reset the devices in the following scenarios:



- Unpair the device in Quick Home Connect:
- Refer to
 - Resetting the Wireless switch
 - Resetting the Relay switch

When reset is done successfully. The Wireless switch and device returns to factory default.

- Integrating into Wiser System
 - If you wish to integrate the devices into Wiser System, reset all the devices in Quick Home Connect and refer to pairing the device with Wiser Hub/ Gateway.

LED Indications in Quick Home Connect

Pairing the device in Quick Home Connect

User Action	LED Indication	Status
Press the push button 5 times in quick succession.	LED blinks green, once per second. 	Pairing mode is active for 60 seconds. When pairing is completed, LED stops blinking. 

Troubleshooting in Quick Home Connect

Symptom	Possible cause	Solution
LED displays amber on the device.	Pairing not completed and returned to factory default.	Pair the Wireless switch and the device again. Refer to <ul style="list-style-type: none"> • Relay switch, page 8
Wireless switch not able to control the device reliably.	The Wireless switch and the device are too far away from each other.	Place the Wireless switch in a position closer to the device.
	The Wireless switch lost pairing.	Pair the device again. Refer to <ul style="list-style-type: none"> • Relay switch, page 8
	The Wireless switch battery is discharged.	Replace the battery of the Wireless switch


Scenario	Procedure
Control multiple devices with one Wireless switch.	To control multiple devices with a single Wireless switch, start by pairing it with one device. Then, use the same Wireless switch to pair with additional devices. NOTE: You can pair up to 7 devices to a single Wireless switch.
1-gang FLS with devices (relay switch, dimmer, shutter control, or socket outlet).	Pair the Wireless switch with any of the devices (relay switch, dimmer, shutter control, or socket outlet).
2-gang FLS with devices (relay switch, dimmer, shutter control, or socket outlet).	Pair either left or right Wireless switch with any of the devices (relay switch, dimmer, shutter control, or socket outlet). You can also pair another rocker of the Wireless switch with another device.


Pairing the device with the Wiser Gateway

Using the Wiser app, pair your device with the **Gateway/Hub** to access and control the device. You can either add the device manually or do an auto-scan to pair it.

Pairing device manually

To pair the device manually:

1. On **Home** page, tap **+**.
2. Tap , select the required **Wiser Hub** on the slide-up menu.
3. Select an option to add the device(A):
 - **Add Device with Install Code**
 - **Add Device without Install Code**

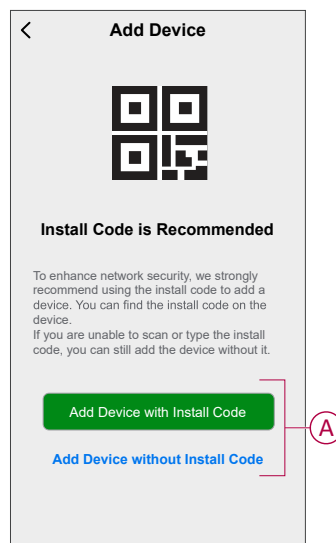


TIP: It is highly recommended to add the device with install code.


4. To pair the device with an install code, tap **Add Device with Install Code** to display the slide-up menu. Select any one of the options (B):
 - **Scan Install Code** - you can scan the device for the install code.
 - **Enter Install Code Manually** - you can manually enter the install code from the device.

TIP: Install code is located on the rear side of the device.

After scanning or entering the install code, proceed to **Step 6**.

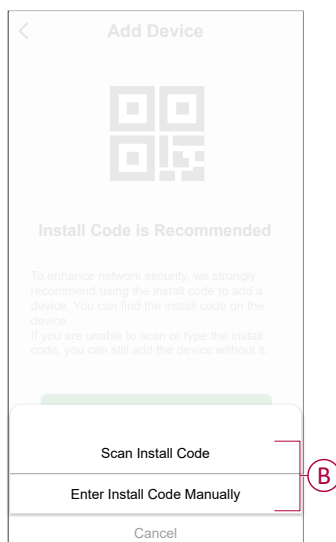


5. To pair the device without Install Code, tap **Add Device without Install Code**.
6. Short press the upper part of the push button 3 times ($< 0,5$ s) on the device.

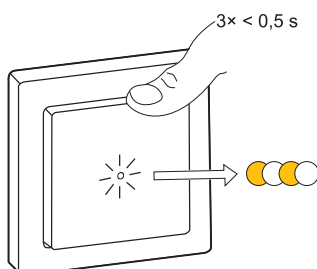


The LED blinks amber.

7. In the app, select **Confirm LED is blinking amber** and tap **Start configuration (C)**.

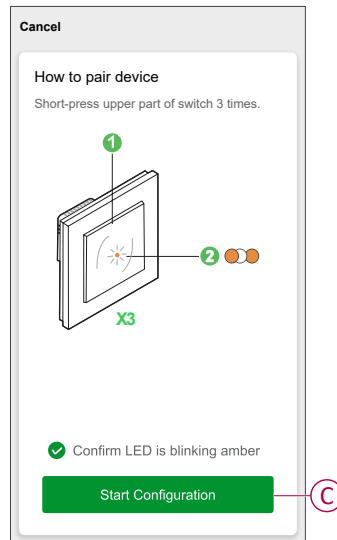

After a few seconds, a solid green LED indicates that the device has been successfully paired to the **Gateway/Hub**.

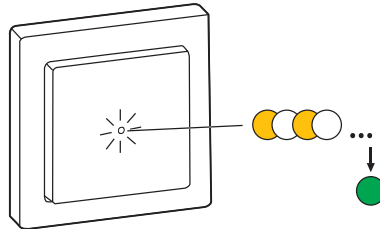

8. Tap **Done** when the pairing is successful.

Pairing device with auto scan

Pairing the device with auto scan automatically discovers the device when the corresponding device is powered on.

1. On the **Home** page, tap **+**.
2. Tap **Auto scan > Confirm**.
3. Enable permissions to **Access location** and **Wi-Fi** for scanning device and tap **Start scanning**.


NOTE: If you have multiple hubs, do Step 4 or proceed to Step 5.

4. Tap **Select hub** and select the Wiser hub from the slide-up menu.
5. Short press upper part of the push button 3 times (< 0,5 s) and wait for a few seconds until the device search is complete.

The LED blinks amber.

TIP: If you want to pair multiple devices at once, perform step 5 on each device and wait for a few seconds for them to be detected.

6. Tap **Next** (A) and select **Connected Relay Switch 10A**.

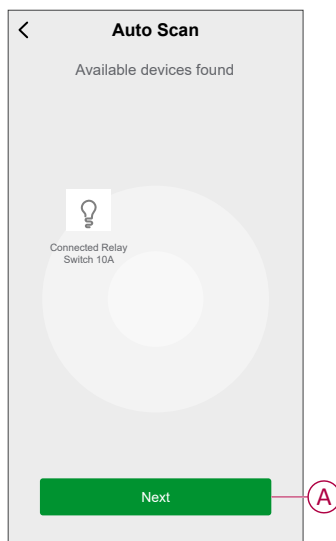




7. Once the device is added successfully, tap **Done**.

Configuring the device

Changing the device icon



You can change the device icon using the Wiser app.

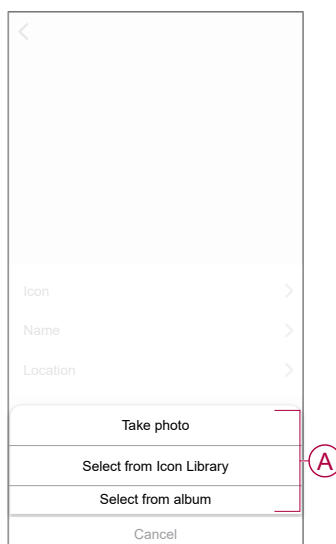
1. On the **Home** page, select the device for which you wish to change the icon.
2. At the top-right corner of the screen, tap .
3. Tap edit  next to the device name.
4. Tap **Icon** to view the menu.
5. In the slide-up menu, select any one of the following (A) to change the device icon:
 - **Take photo**: Allows you to take a photo with your mobile camera.
 - **Select from Icon Library**: Allows you to select an icon from the app library.
 - **Select from album**: Allows you to select a photo from the mobile gallery.



Renaming the device



You can rename the device using the Wiser app.

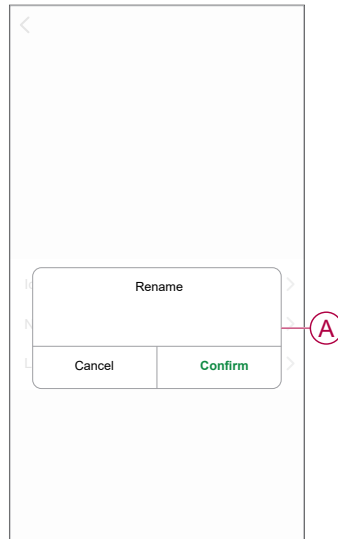
1. On the **Home** page, select the device for which you wish to rename.
2. At the top-right corner of the screen, tap .
3. Tap edit  next to the device name.
4. Tap **Name**, enter the new name (A) and then tap **Confirm**.



Changing the device location


You can change the device location using the Wiser app.


1. On the **Home** page, select the device for which you wish to change the location.
2. At the top-right corner of the screen, tap .
3. Tap edit  next to the device name.
4. Tap **Location**.
5. Select the desired location from the list (A) and then tap **Save**.

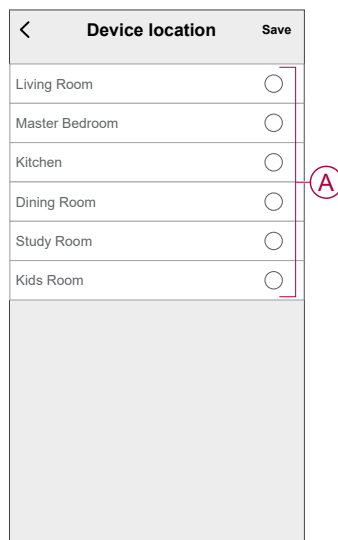

Removing the device

Using the Wiser app, you can remove a device from the device list.

1. On the **Home** page, tap **All devices** > **Connected Relay Switch**.
2. Tap  to display more details.
3. Tap **Remove and Factory Reset Device** (A).

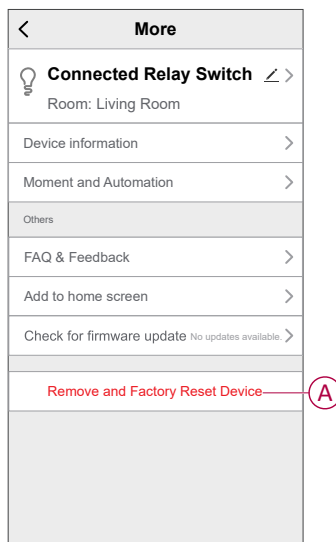

TIP: Alternatively, you can long tap **Connected Relay Switch** on the **Home** page to remove the device.

NOTE: By removing the device, you will reset the device. If you still have a problem with the reset, then refer to [resetting the device](#), page 15.

Resetting the device


You can reset the device to factory default manually.

Short-press the push button 3 times (<0.5 s) and then long-press the push button once (>10 s).

The LED blinks red after 10 s, and then release the push button.

Upon successful reset, the LED stops blinking. Then, the device restarts and blinks green for a few seconds.

NOTE: After reset, the LED turns amber indicating that it is ready for pairing.

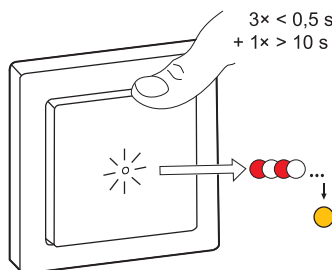


Using the device

The Control Panel allows you to switch the turn on/off the relay switch and control various settings.

On the **Home** page, tap **All devices** > **Connected Relay Switch** to access the control panel.

On the control panel page, you can see the following:


- The current state of the Relay Switch (A)
- Schedule, page 17 (B)
- Settings, page 18 (C)

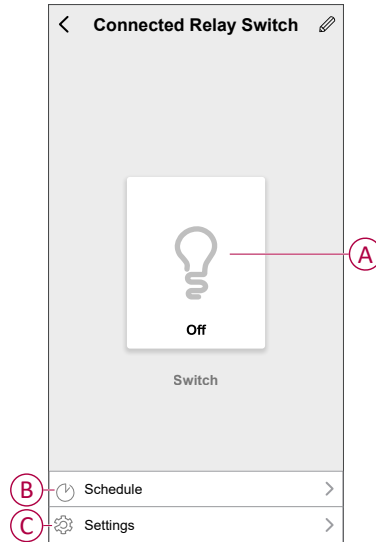

Switching On/Off the device manually

You can turn On/Off the device manually. The device powers the electrical appliances connected to it.


Short press the push button once to turn On/Off the relay switch.

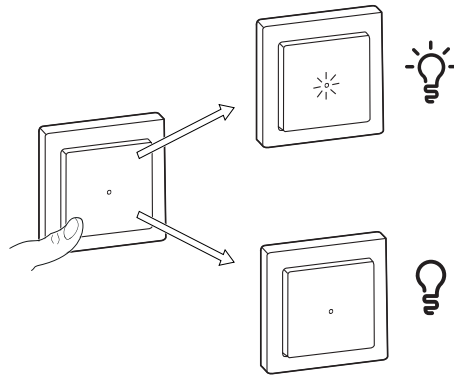


Switching on/off the device using app

By using the Wiser app, you can turn on/off the device.

On the **Home** page, tap the power button (A) to turn on/off the Relay Switch.

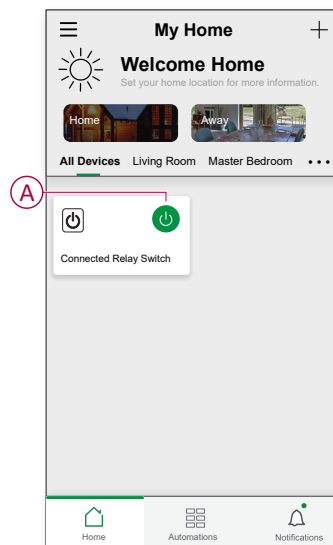

Alternatively, you can navigate to the control panel, page 15 of the device and tap  to turn on/off the Relay Switch.

NOTE: The control panel shows the current state of the Relay Switch.

Creating a schedule

The Relay Switch can be controlled and triggered by a schedule. Once the schedule is set, your system will follow the active schedule. You can create or modify the schedules at any time.

1. On the **Home** page, tap **All devices** > **Connected Relay Switch**.
2. Tap **Schedule** > **Add schedule** to add a schedule.
3. Set the time (A).
4. Tap **Repeat** (B) to select the days you want to set the schedule.
5. Tap **Note** (C), enter the note and tap **Confirm**.
6. Tap the toggle switch (D) to turn on the **Notification** for the schedule. The app will send a notification that the scheduled task is executed at the time of schedule.

7. Tap **Switch** (E) and select one of the options:

- **On** - Turns on the Relay Switch on the scheduled time
- **Off** - Turns off the Relay Switch on the scheduled time

The screenshot shows the 'Add Schedule' screen. At the top, there is a back arrow, the title 'Add Schedule', and a 'Save' button. Below the title is a time selection interface with two rows: 'AM 05 59' and 'PM 06 00'. A red bracket labeled 'A' groups these two rows. Below the time selection are four options, each with a red circle label: 'B' for 'Repeat' (set to 'Once'), 'C' for 'Note', 'D' for 'Notification' (a toggle switch), and 'E' for 'Switch' (set to 'On'). At the bottom, there is a note: 'Note - The Schedule works according to the time zone where device is located.'

8. Tap **Save**.


Backlight mode

Using the Wisir app, you can select the LED indicator mode for easy identification of the device status.

To set the Backlight modes:

1. On the **Home** page, tap **All devices** > **Connected Relay Switch**.
2. On the device control panel page, tap **Settings**.

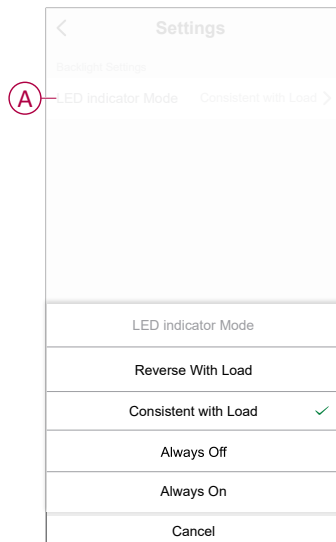


3. Tap **Backlight Mode** (A) and select any one of the following:
 - **Reverse With Load:** The LED on the Relay Switch is On when the device is Off.
 - **Consistent With Load:** The LED on the Relay Switch is On when the device is On.
 - **Always Off:** The LED on the Relay Switch is always Off.
 - **Always On:** The LED on the Relay Switch is always On.




For information on LED color during each modes, refer to **LED Indication**, page 26.


Creating a moment


A Moment allows you to group multiple actions that are usually done together. Using the Wiser app, you can create moments based on your needs (such as movie night).

1. On the **Home** page, tap .
2. Go to **Moment** > **+** to create a moment.
3. Tap **Edit name** , enter the name of the moment (A) and tap **Confirm**.
TIP: You can choose the cover image that represents your moment by tapping .

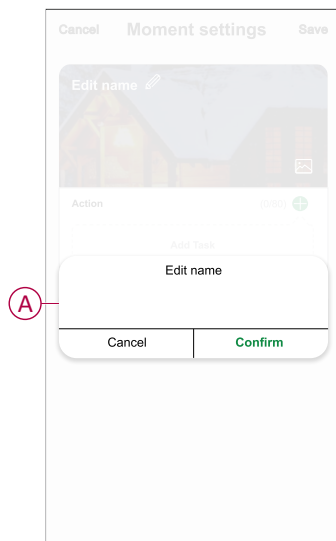


4. In the **Action** section, tap **Add task** (B) to open the slide-up menu.
5. In the **Add task** menu, you can do either or all of the following actions (C):
 - **Run the device**: select the devices that you want in a moment.
 - **Select Automation**: select the automation that you want to enable or disable.
 - **Delay**: set the delay time.


NOTE: You can add one or more actions using .

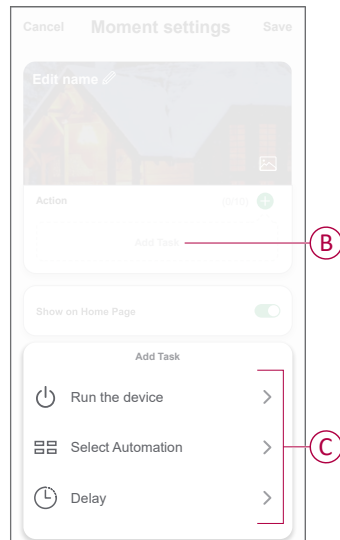

6. Tap **Run the device** > **Connected Relay Switch** > **Switch** to select either or all of the functions to add in the moment:
 - **On**: turns on the switch (D).
 - **Off**: turns off the switch (E).
 - **Reverse Switch**: toggle the last state of switch (F).

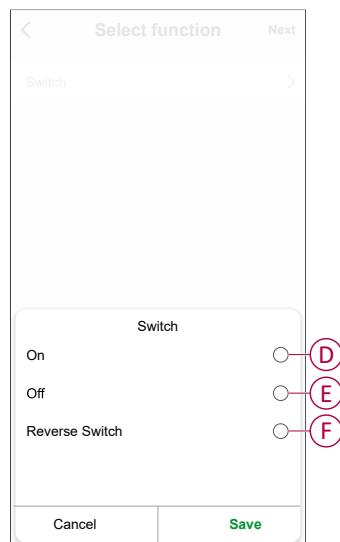


- Set all actions and tap **Save**.

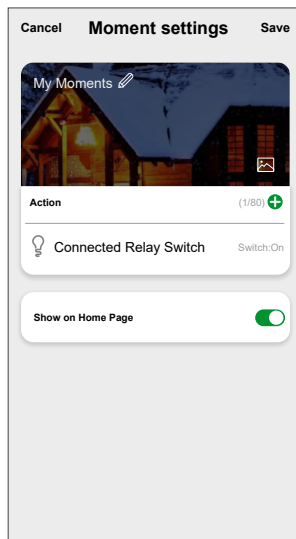

Editing a moment

- On the **Moment** tab, locate the moment you want to edit and tap ●●●.
- On the **Edit** page, you can tap each item (such as dimmer, shutter, delay, temperature, etc.) to change the settings.

TIP:

- You can add one or more actions using .
- To delete an existing action, slide each item towards left and tap **Delete**.

Deleting a moment


To delete a moment:



- On the **Moment** tab, locate the moment that you want to delete and then tap ●●●.
- Tap **Delete** and then tap **Ok**.


NOTE: After deleting a moment, the device action can no longer be triggered.

Creating an automation


An automation allows you to group multiple actions that are usually done together, triggered automatically or at scheduled times. By using the Wiset app, you can create automations based on your needs.

- On the **Home** page, tap the .
- Go to **Automation** > **+** to create an automation.

3. Tap **Edit name** , enter the name of the automation (A) and tap **Confirm**.
TIP: You can choose the cover image that represents your automation by tapping .

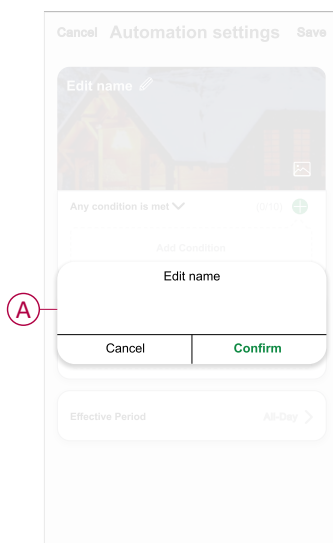


4. Tap **Any condition is met** to select any one of the condition type (B):
- **All conditions are met:** the automation is triggered when all the conditions are met.
 - **Any condition is met:** the automation is triggered when at least one condition is met.

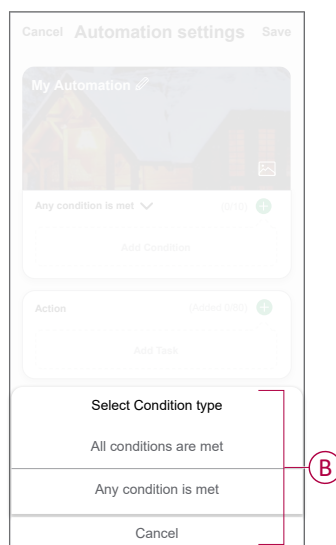


5. Tap **Add Condition** to display the slide-up menu.

6. In the **Add Condition** menu, you can do either or all of the following options (C):


- **When weather changes:** select the various weather settings.
- **Schedule:** set the time and day.
- **When device status changes:** select the device and it's function.

NOTE: You can add one or more conditions using .

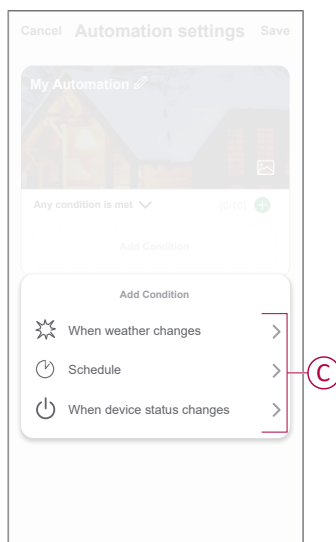


7. Tap **When device status changes > Connected Relay Switch > Switch** and select either functions:


- **On:** turns on the switch (D).
- **Off:** turns off the switch (E).

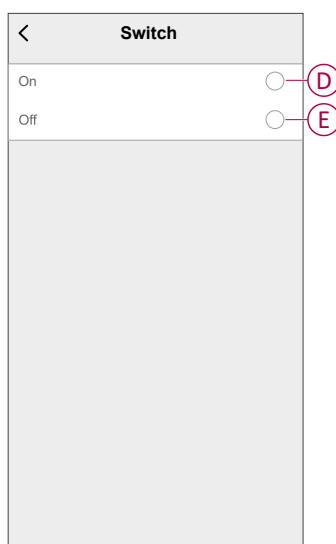


8. Tap **Add task** to display the slide-up menu.

9. In the **Add task** menu, you can do either or all of the following options (F):
- **Run the device:** select the devices that you want to trigger.
 - **Moment or Automation:** select the moment which you want to trigger or select the automation that you want to enable or disable.
 - **Send notification:** turn on notification for the automation.
 - **Delay :** set the delay time.

NOTE: You can add one or more actions using .

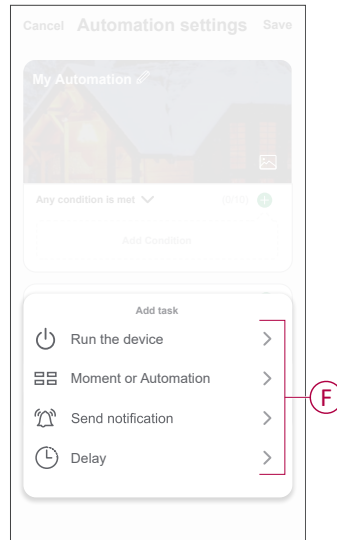

10. Tap on Effective period to set the time range for the automation. You can select any one of the following (G):
- **All-day - 24 hours**
 - **Daytime - From sunrise to sunset**
 - **Night - From sunset to sunrise**
 - **Custom - User defined time period**

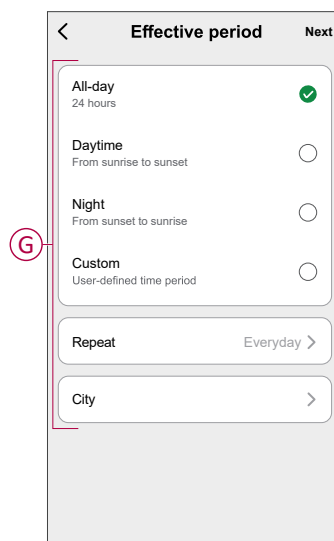




11. Set all actions and conditions, then tap **Save**.

Automation is now available under **Automation** tab. Use toggle switch to enable/disable automation.


Example of an automation

This demonstration shows you how to create an automation to switch on the light at the scheduled time.

1. Go to **Automation** > **+** to create an automation.
2. Tap **Edit name** , enter the name of the automation and tap **Confirm**.
TIP: You can choose the cover image that represents your automation by tapping .
3. Tap **Add Condition** > **Schedule**.
 - Tap **Repeat** (A), select the days you want to set the schedule and tap **Save**.
 - Set the time (B) at which the automation must start and tap **Next**.

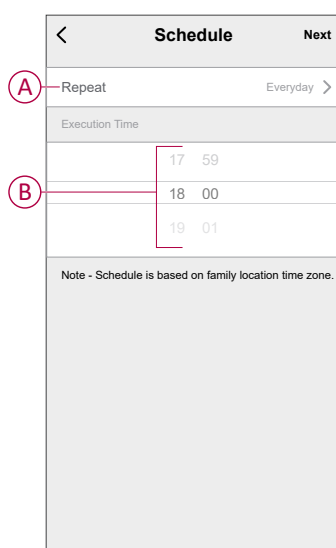


4. Tap **Add task** > **Run the device** > **Connected Relay Switch**.
5. Tap **Switch** > **On** (C) and tap **Save**.

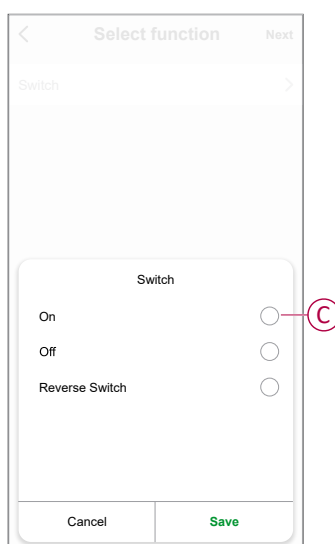

6. Tap **Next**.

7. In the **Automation Settings** page, tap **Save**.

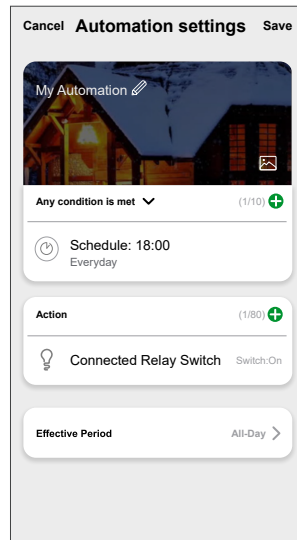


Once the automation is saved, it is visible on the **Automation** tab. You can tap the toggle switch on the automation to enable/disable it.

Editing an automation

1. On the **Automation** tab, locate the automation you want to edit and tap ●●●.
2. On the **Edit** page, you can tap each item (such as dimmer, shutter, delay, temperature, etc.) to change the settings.

TIP:

- You can add one or more condition or actions using .
- To delete an existing condition or action, slide each item towards left and tap **Delete**.



Deleting an automation

1. On the **Automation** tab, locate the automation that you want to delete and then tap ●●●.
2. Tap **Delete** and then tap **Ok**.



NOTE: After deleting an automation, the device action can no longer be triggered.

LED Indication





Pairing

User Action	LED Indication	Status
Press the push-button 3 times	LED blinks amber per second. 	Pairing mode is active for 30 seconds. When pairing is completed, LED glows green for some time before turning off. 









Resetting

User Action	LED Indication	Status
Press the push-button 3 times and hold it down once for > 10 s.	After 10 s, the LED blinks red. 	The device is in reset mode. It is reset to the factory settings after 10 seconds. The device then restarts and the LED blinks green for a few seconds and then stays amber. 

LED Indicator Mode/Backlight Mode

Load Status	ON	OFF
Reverse with load	No LED	
Consistent with load		No LED
Always Off	No LED	No LED
Always On		

Technical Data

Nominal voltage	AC 230 V, 50 Hz		
Nominal power	Load type	Load name	Load value
	 LED	LED	200 W
		Motor	1000 VA
		Iron core transformer	500 VA
		Incandescent lamp	2200 W
		Halogen lamp	2000 W
		Fluorescent lamp	200 W
		Electronic step-down converter	1050 VA
		Capacitive load	10 A, 140µF
Standby	Maximum 0.4 W		
Connecting Terminals	Screw terminals for max. 2 x 2.5 mm ² , 0.5 Nm		
Extension unit	Single Push-button, unlimited number, max. 50 m		
Fuse protection	16 A circuit breaker		
Nominal current	10 A, cosφ = 0.6		
Operating frequency	2405 - 2480 MHz		

Max. radio-frequency power transmitted	< 10 mW
Communication protocol	Zigbee 3.0 certified

Compliance

Product Environmental Data

Find and download comprehensive environmental data about your products, including RoHS compliance and REACH declarations as well as Product Environmental Profile (PEP), End-of-Life instructions (EOLi) and much more.

<https://www.se.com/myschneider>



General information about Schneider Environmental Data Program

Click the link below to read about Schneider Electric's Environmental Data Program.

<https://www.se.com/ww/en/about-us/sustainability/environmental-data-program/>



Trademarks

This guide makes reference to system and brand names that are trademarks of their relevant owners.

- Zigbee® is a registered trademark of the Connectivity Standards Alliance.
- Apple® and App Store® are brand names or registered trademarks of Apple Inc.
- Google Play™ Store and Android™ are brand names or registered trademarks of Google Inc.
- Wi-Fi® is a registered trademark of Wi-Fi Alliance®.
- Wiser™ is a trademark and the property of Schneider Electric, its subsidiaries and affiliated companies.

Other brands and registered trademarks are the property of their respective owners.

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison
France

+ 33 (0) 1 41 29 70 00

www.se.com

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2021 – 2025 Schneider Electric. All rights reserved.

DUG_Unica - Relay Switch_WSE-03